


B59e

B59b

B59f

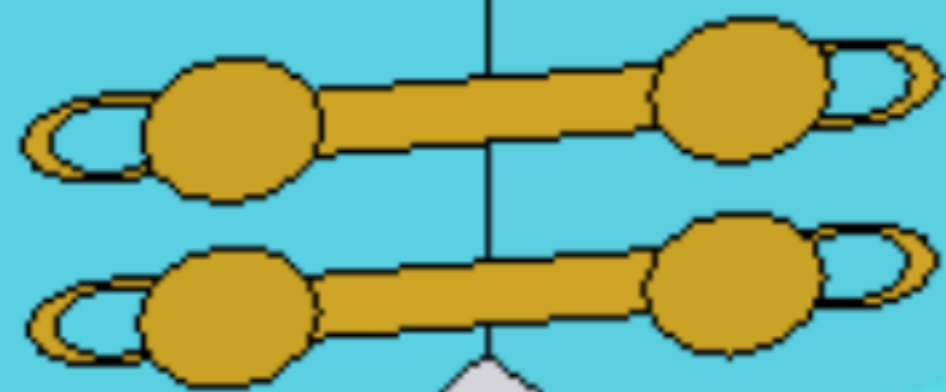


B59

B59a

B60


B60a

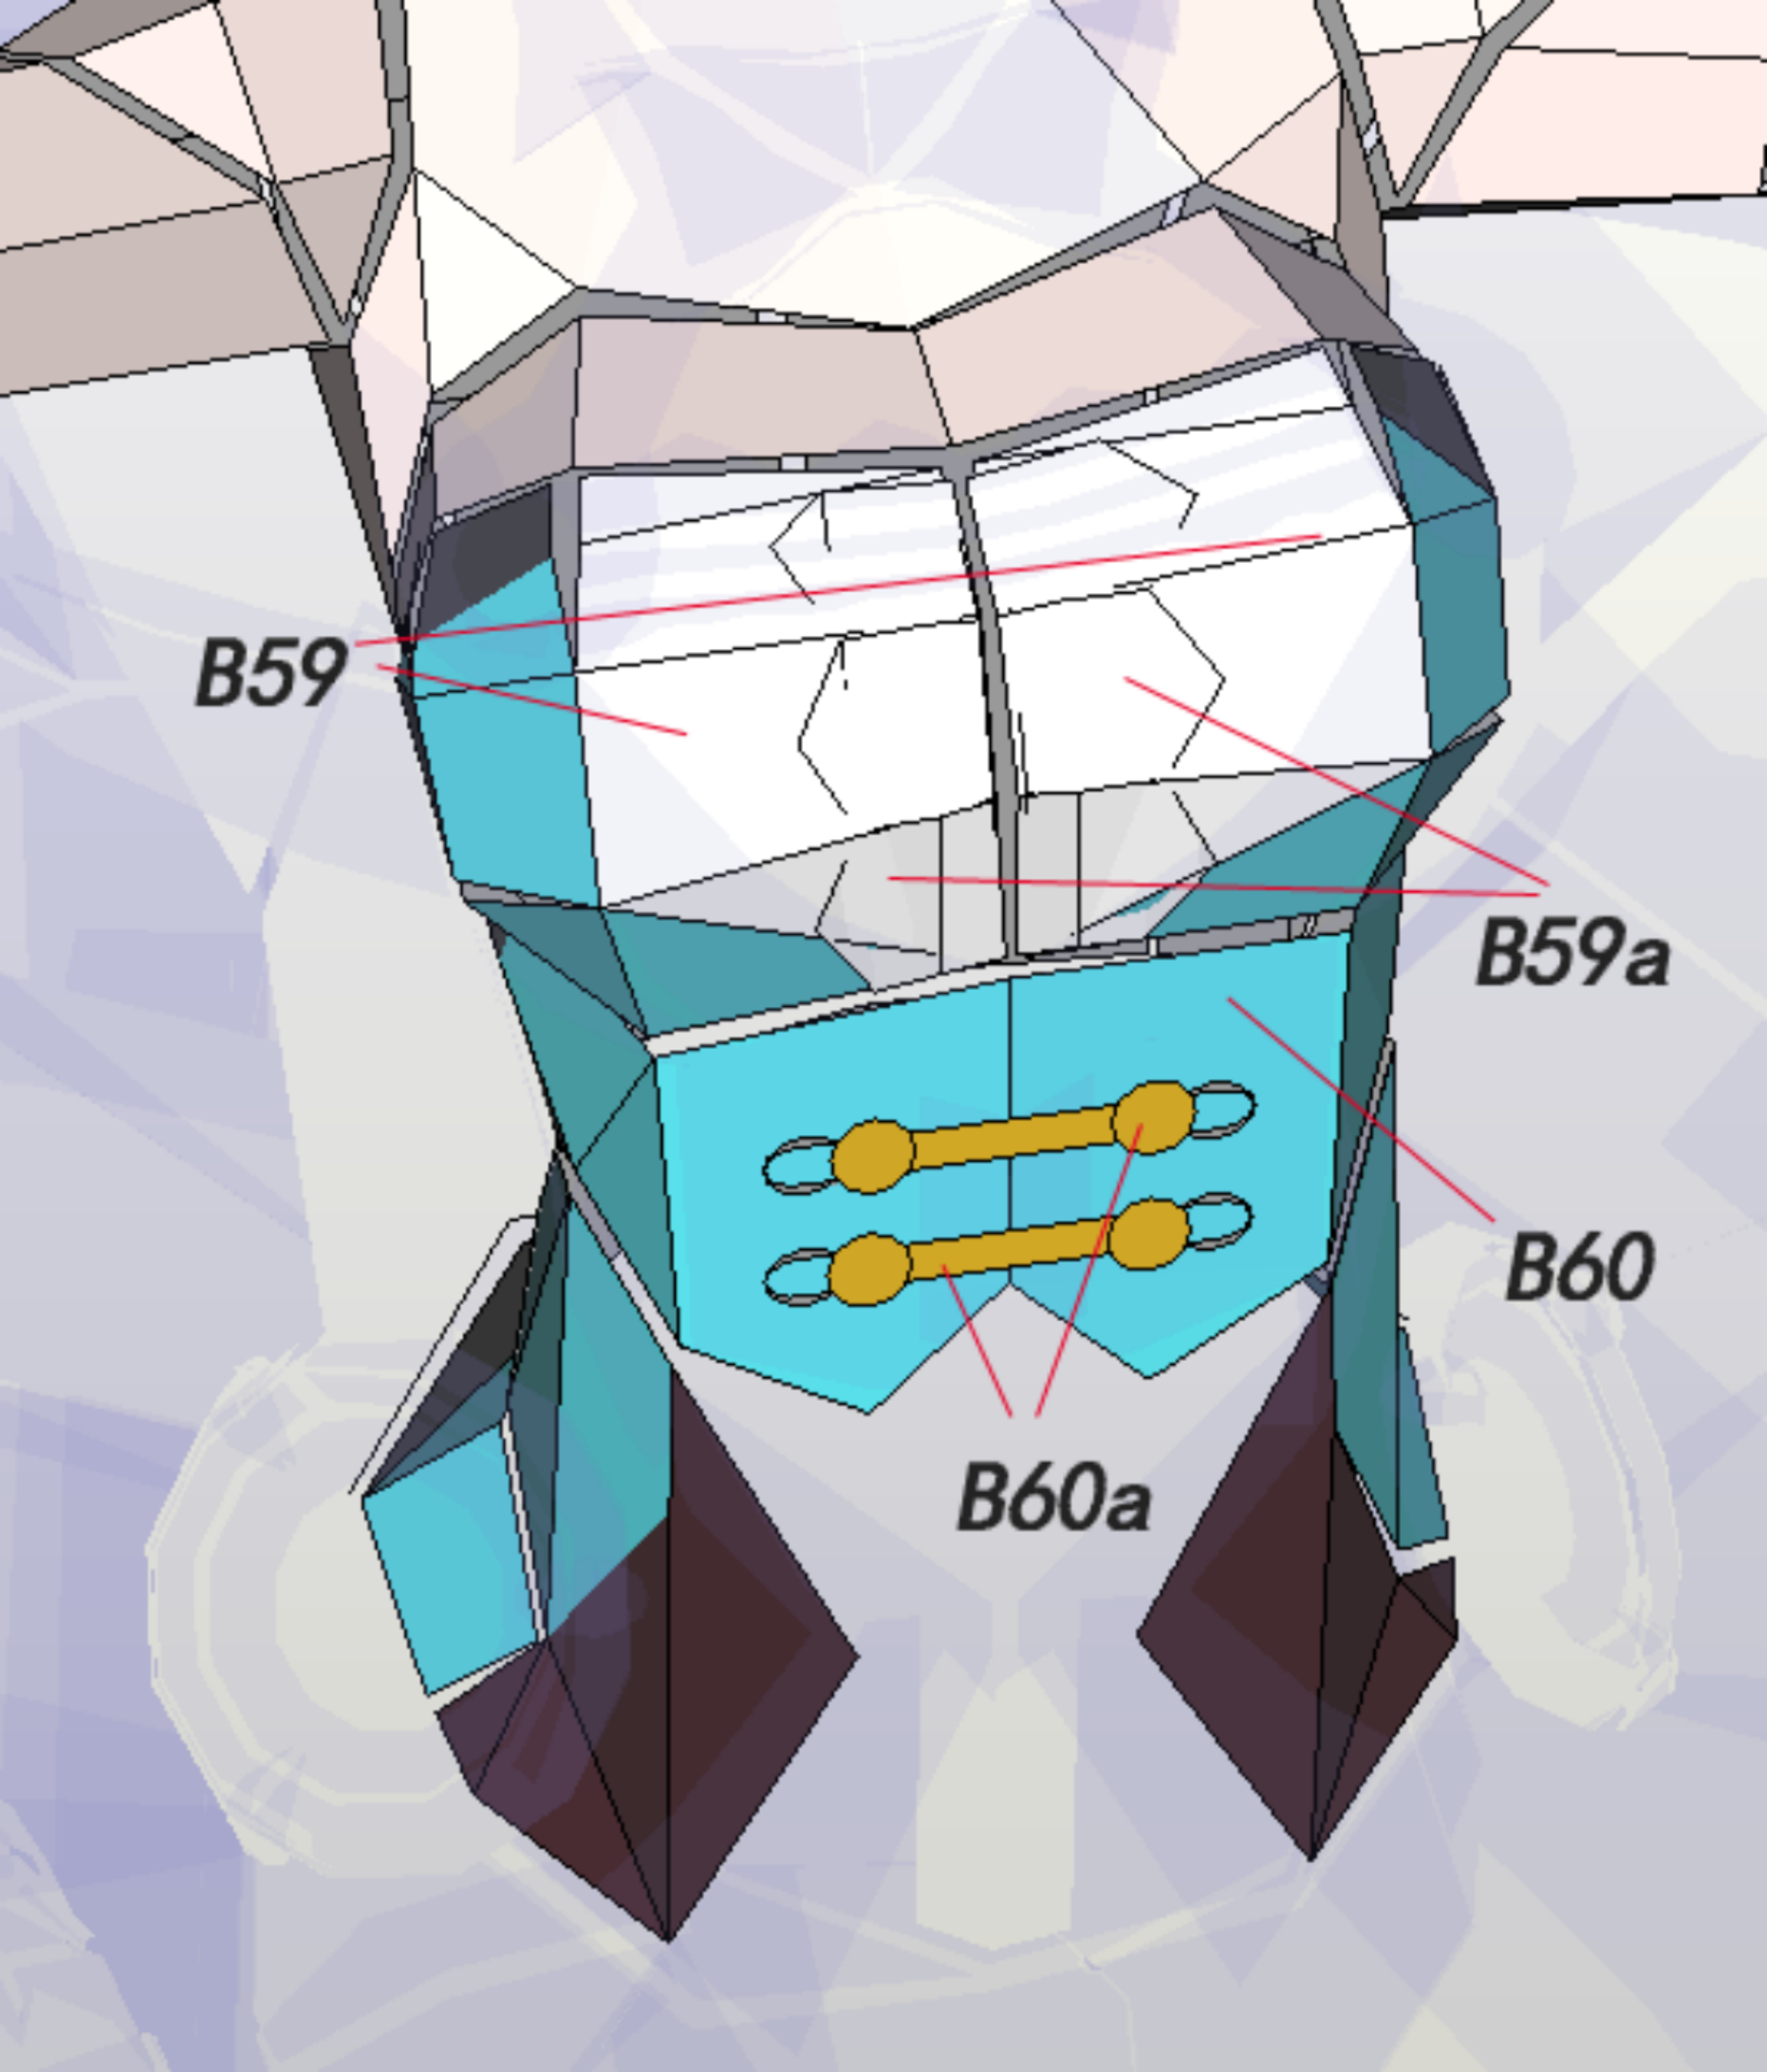


红色圆圈处为粘点

B59b


B59c

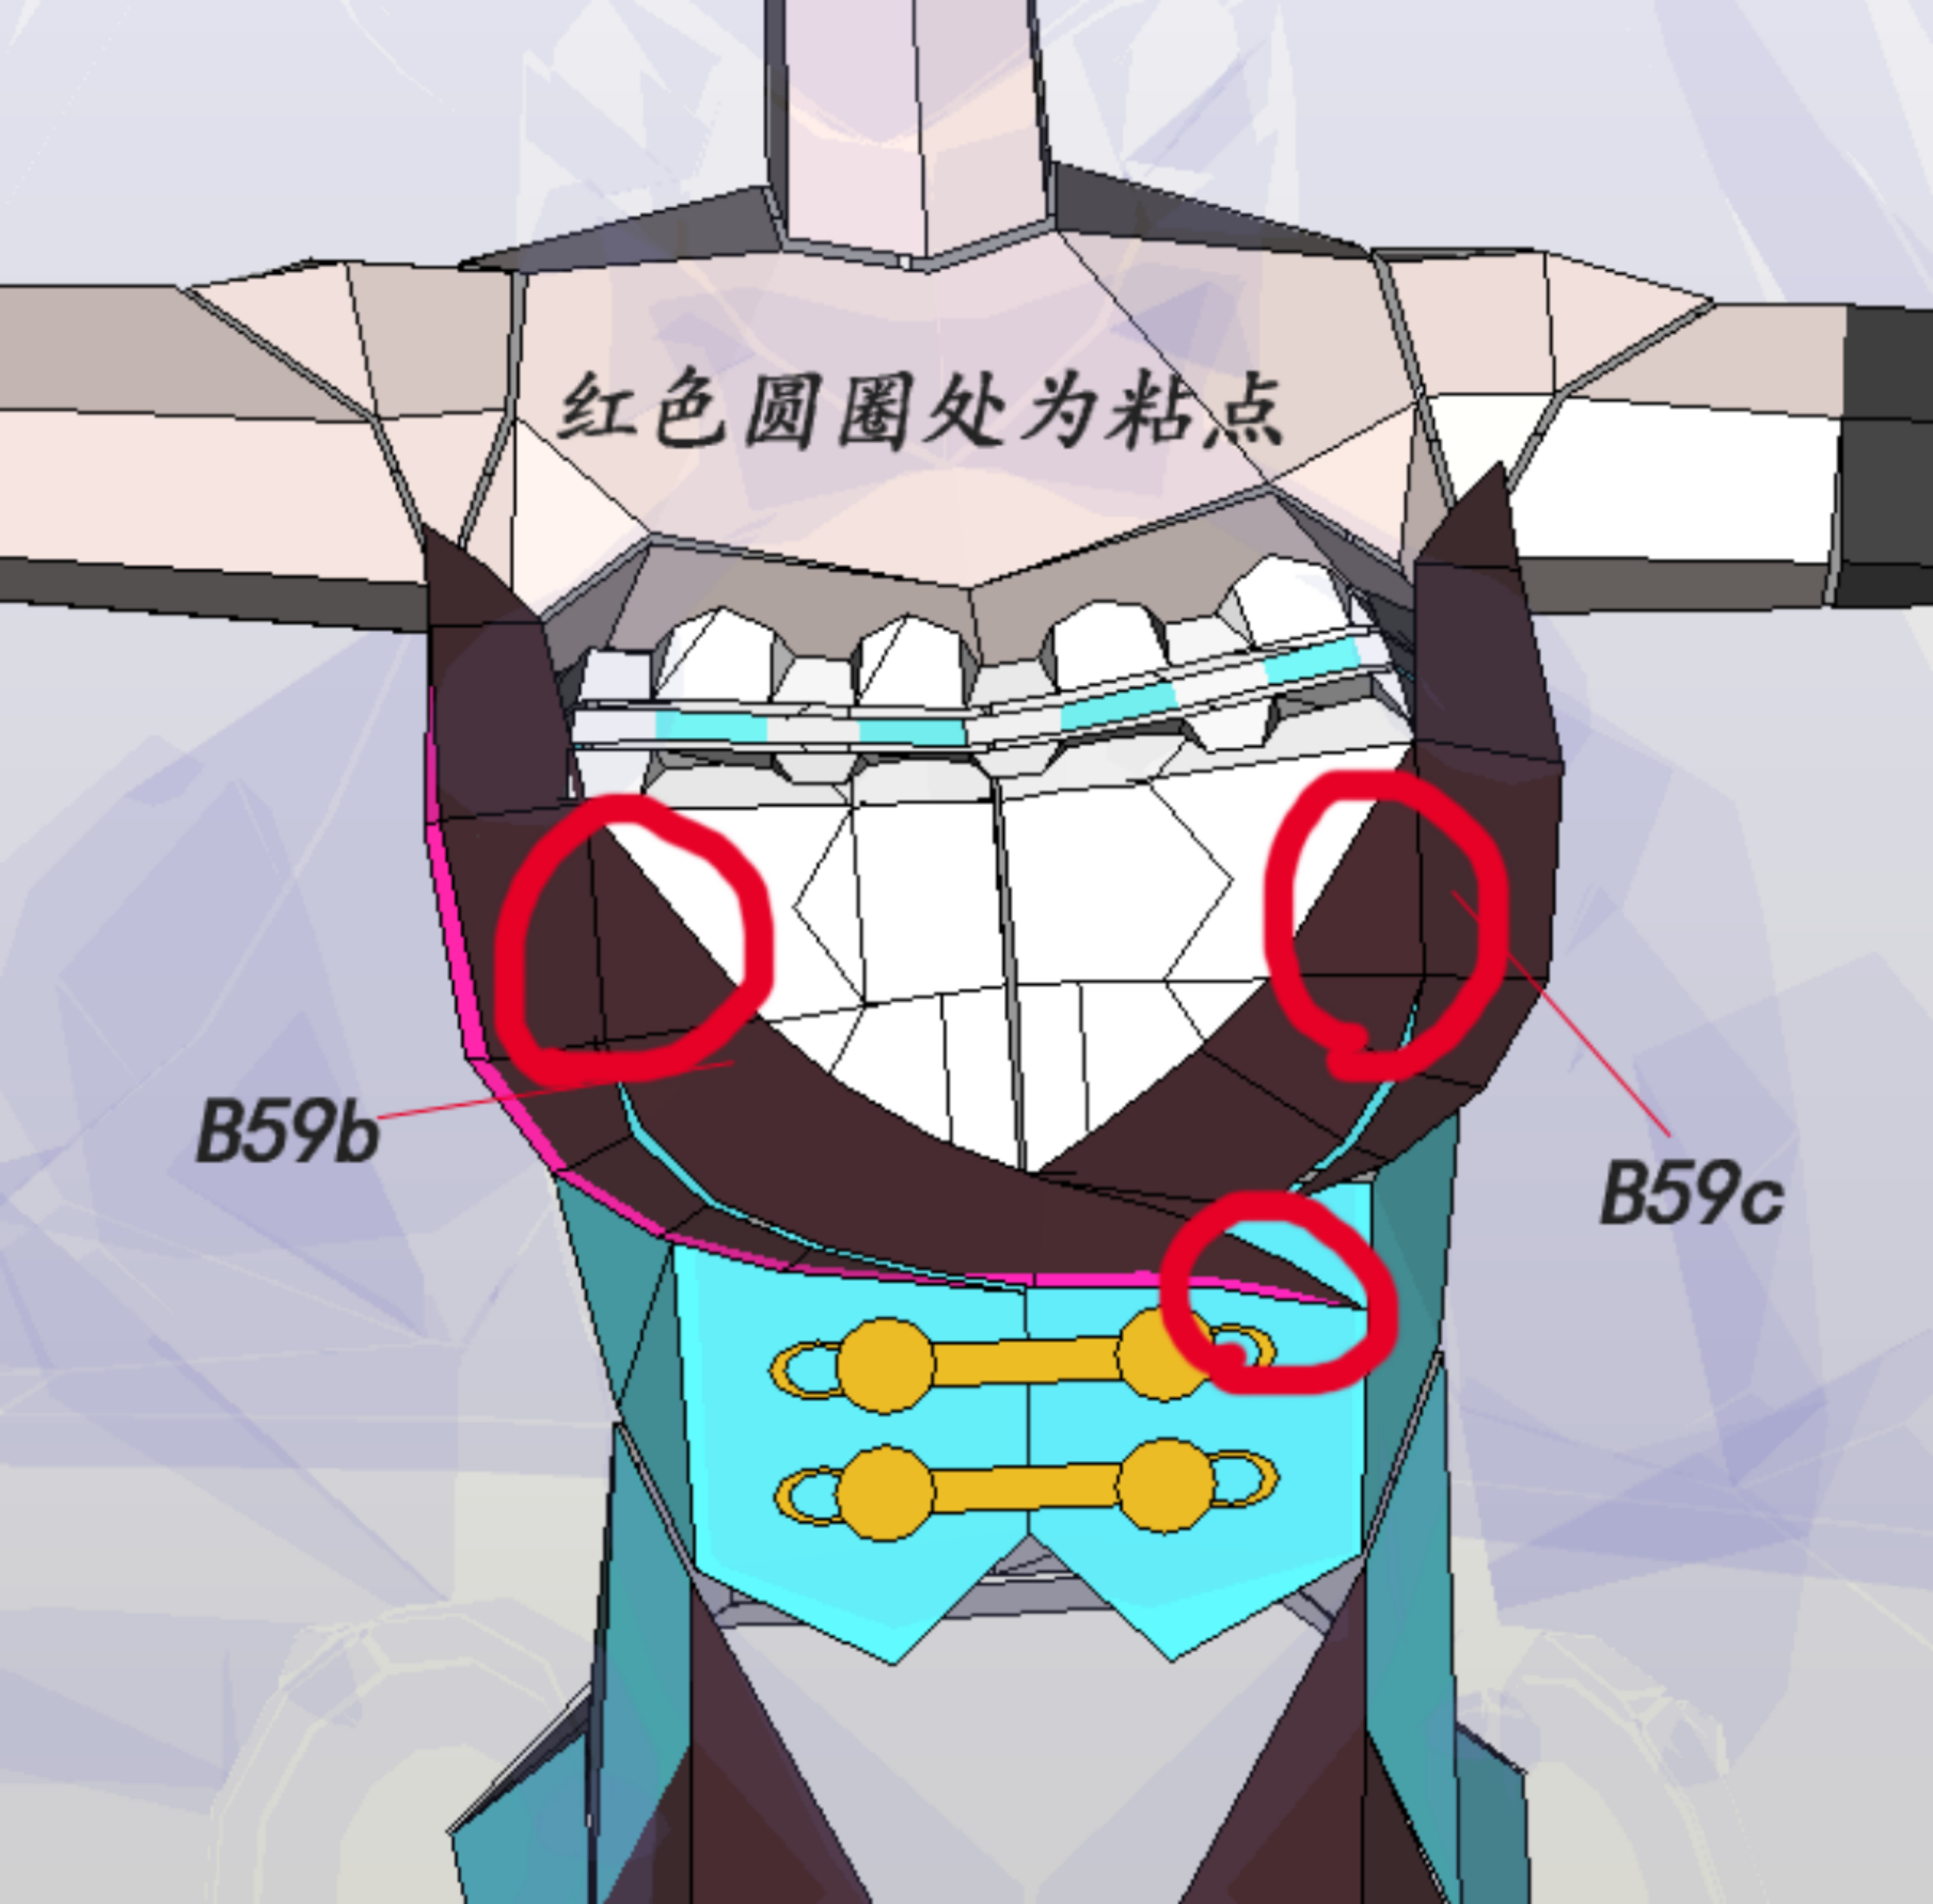

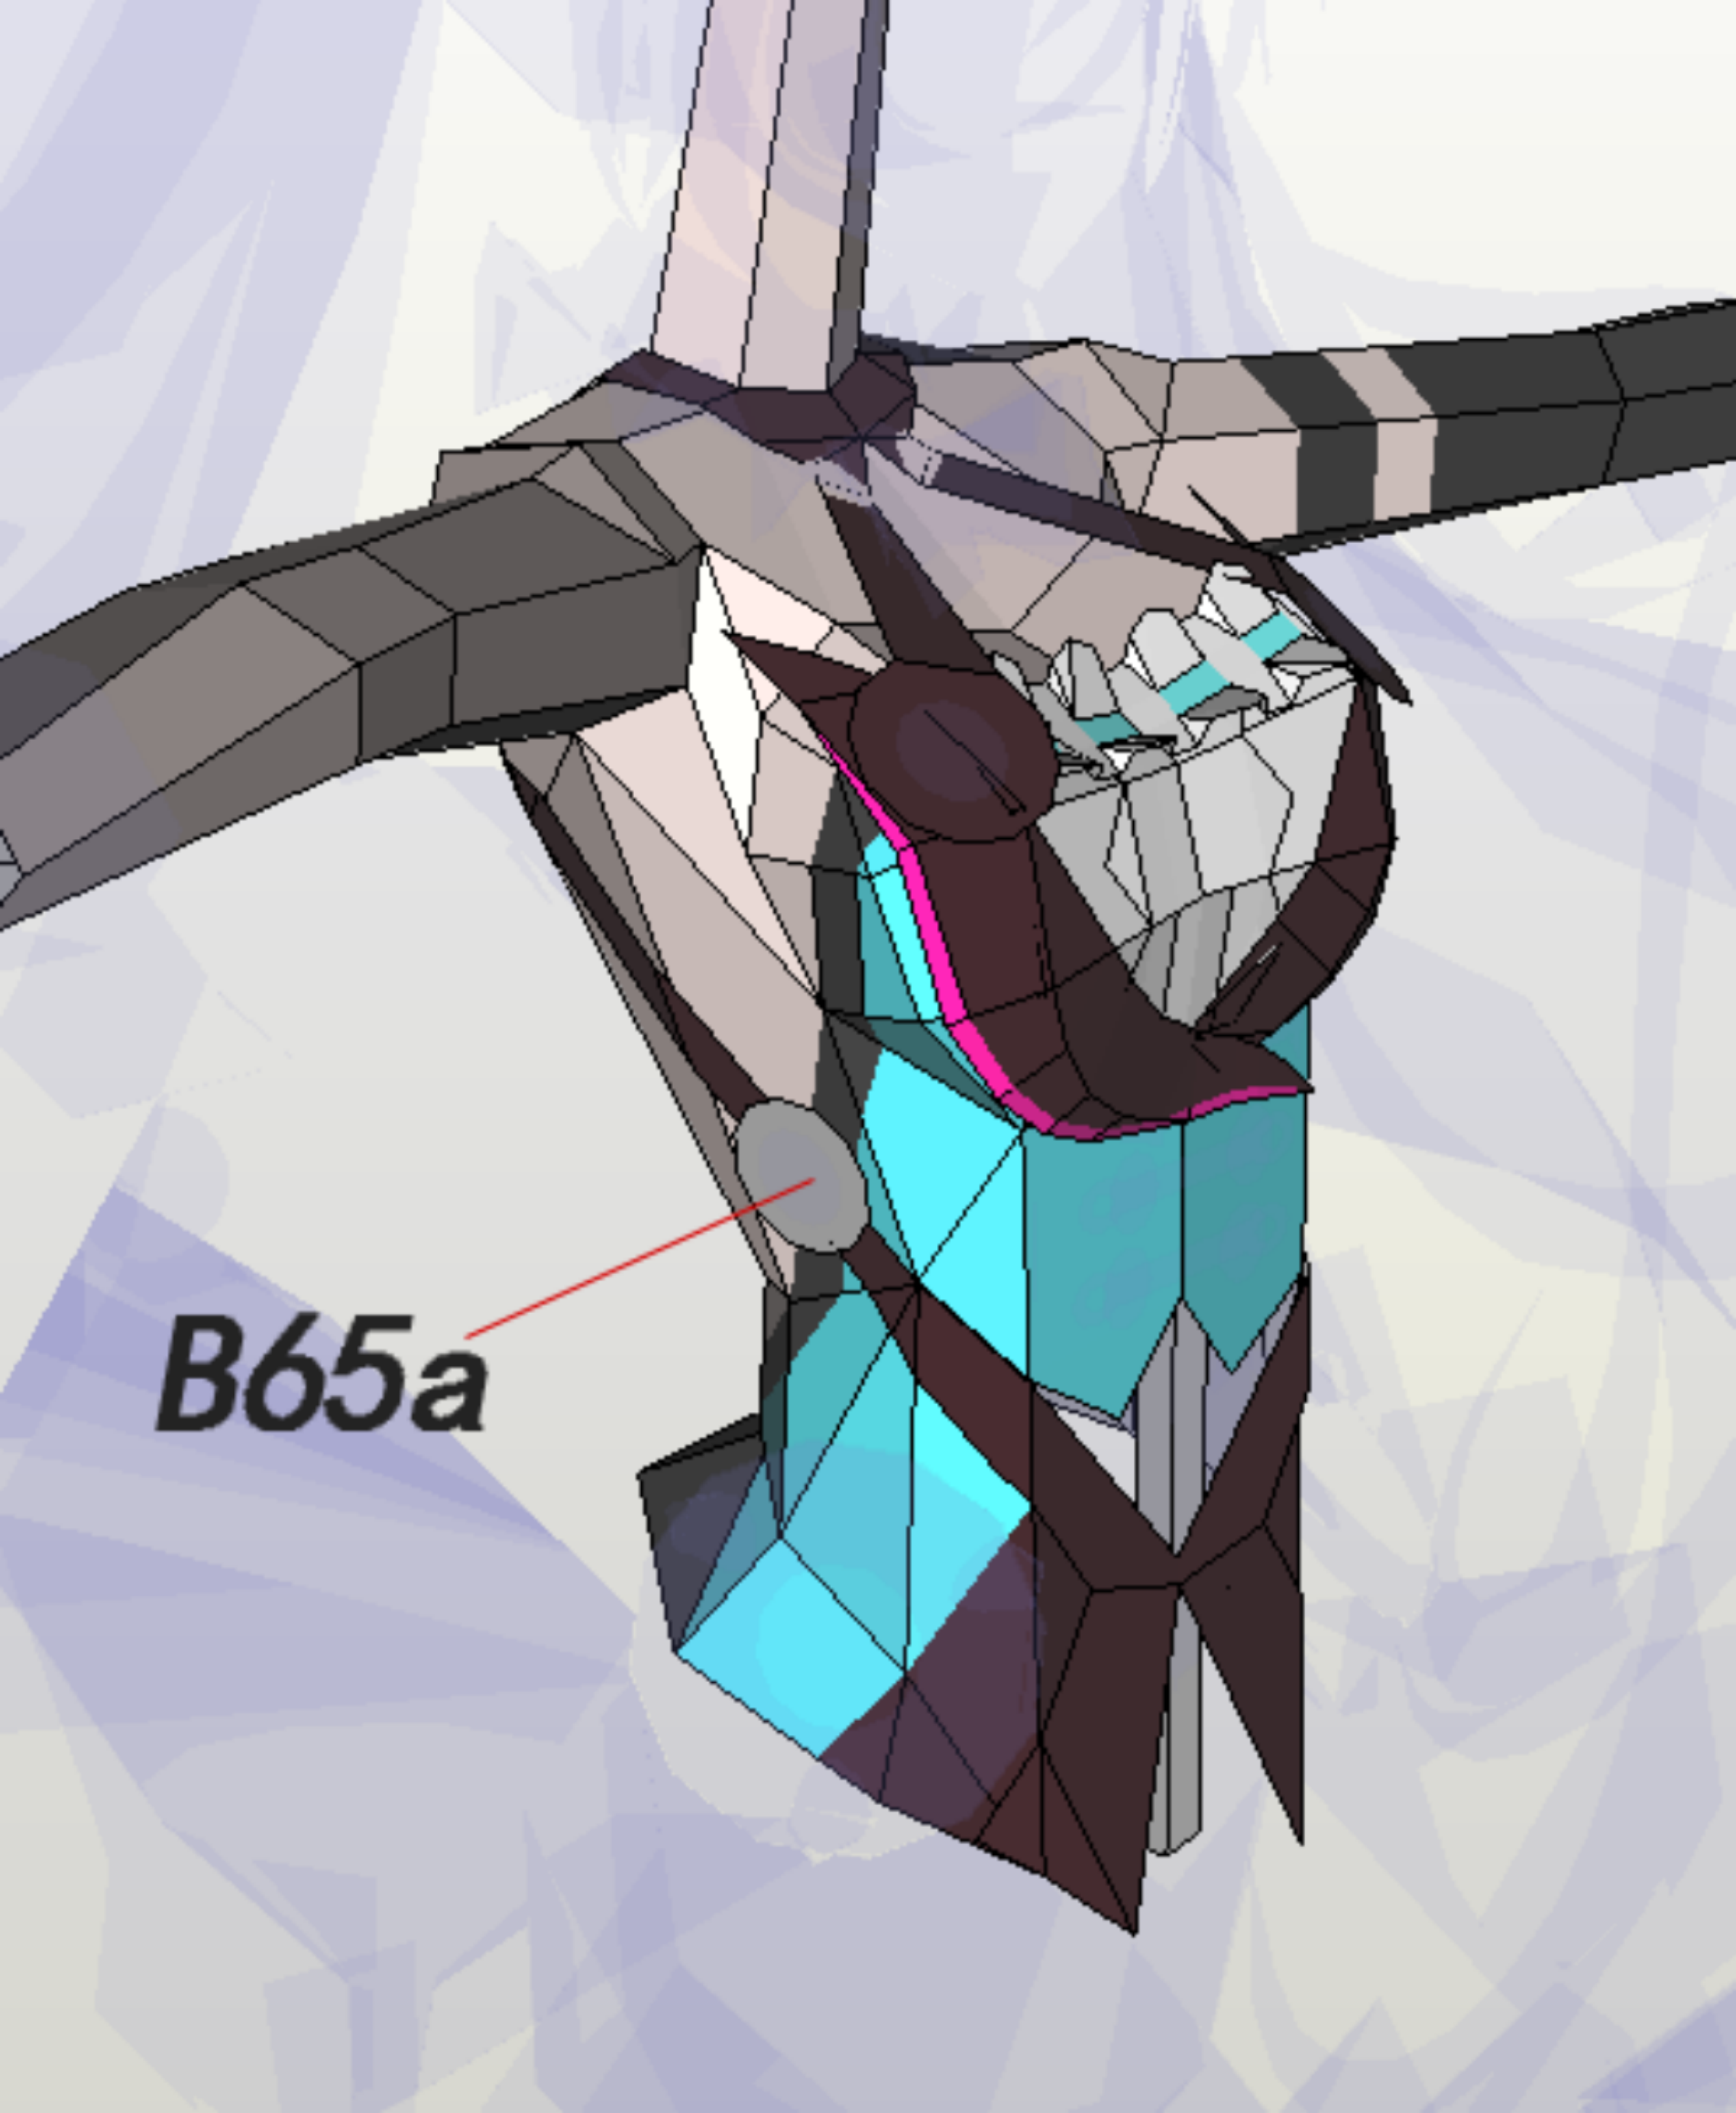


B65a


B65

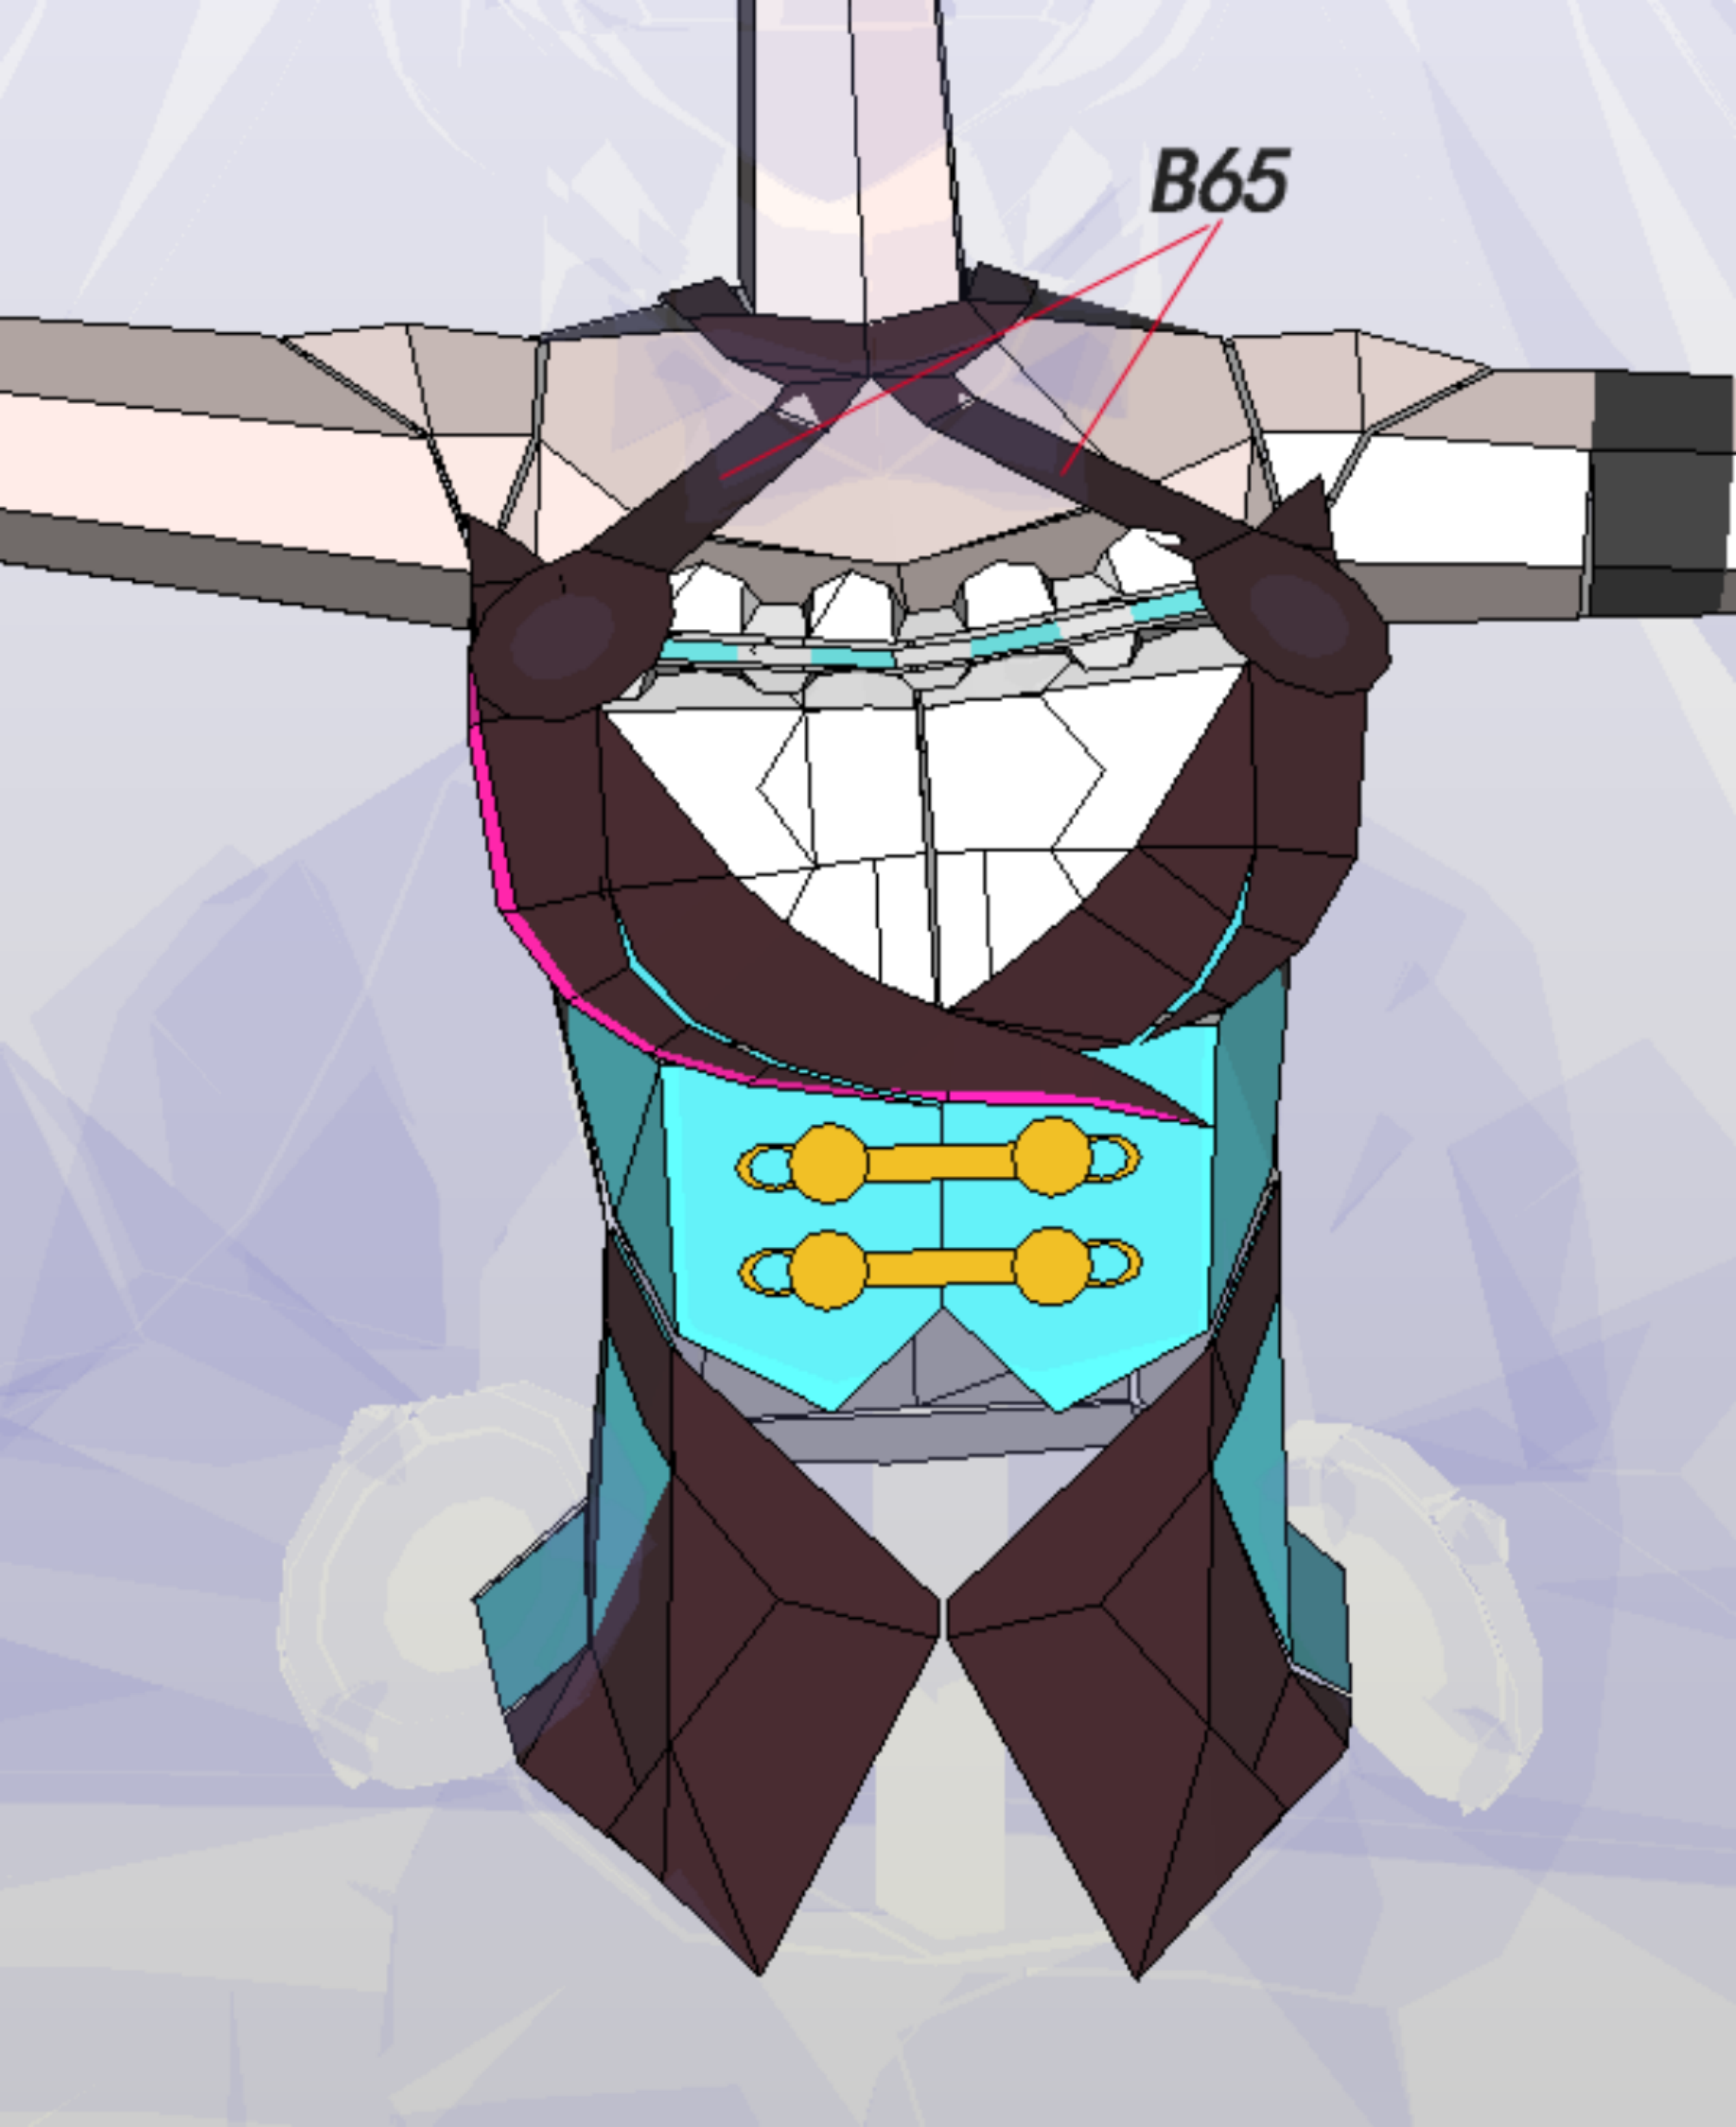




B66

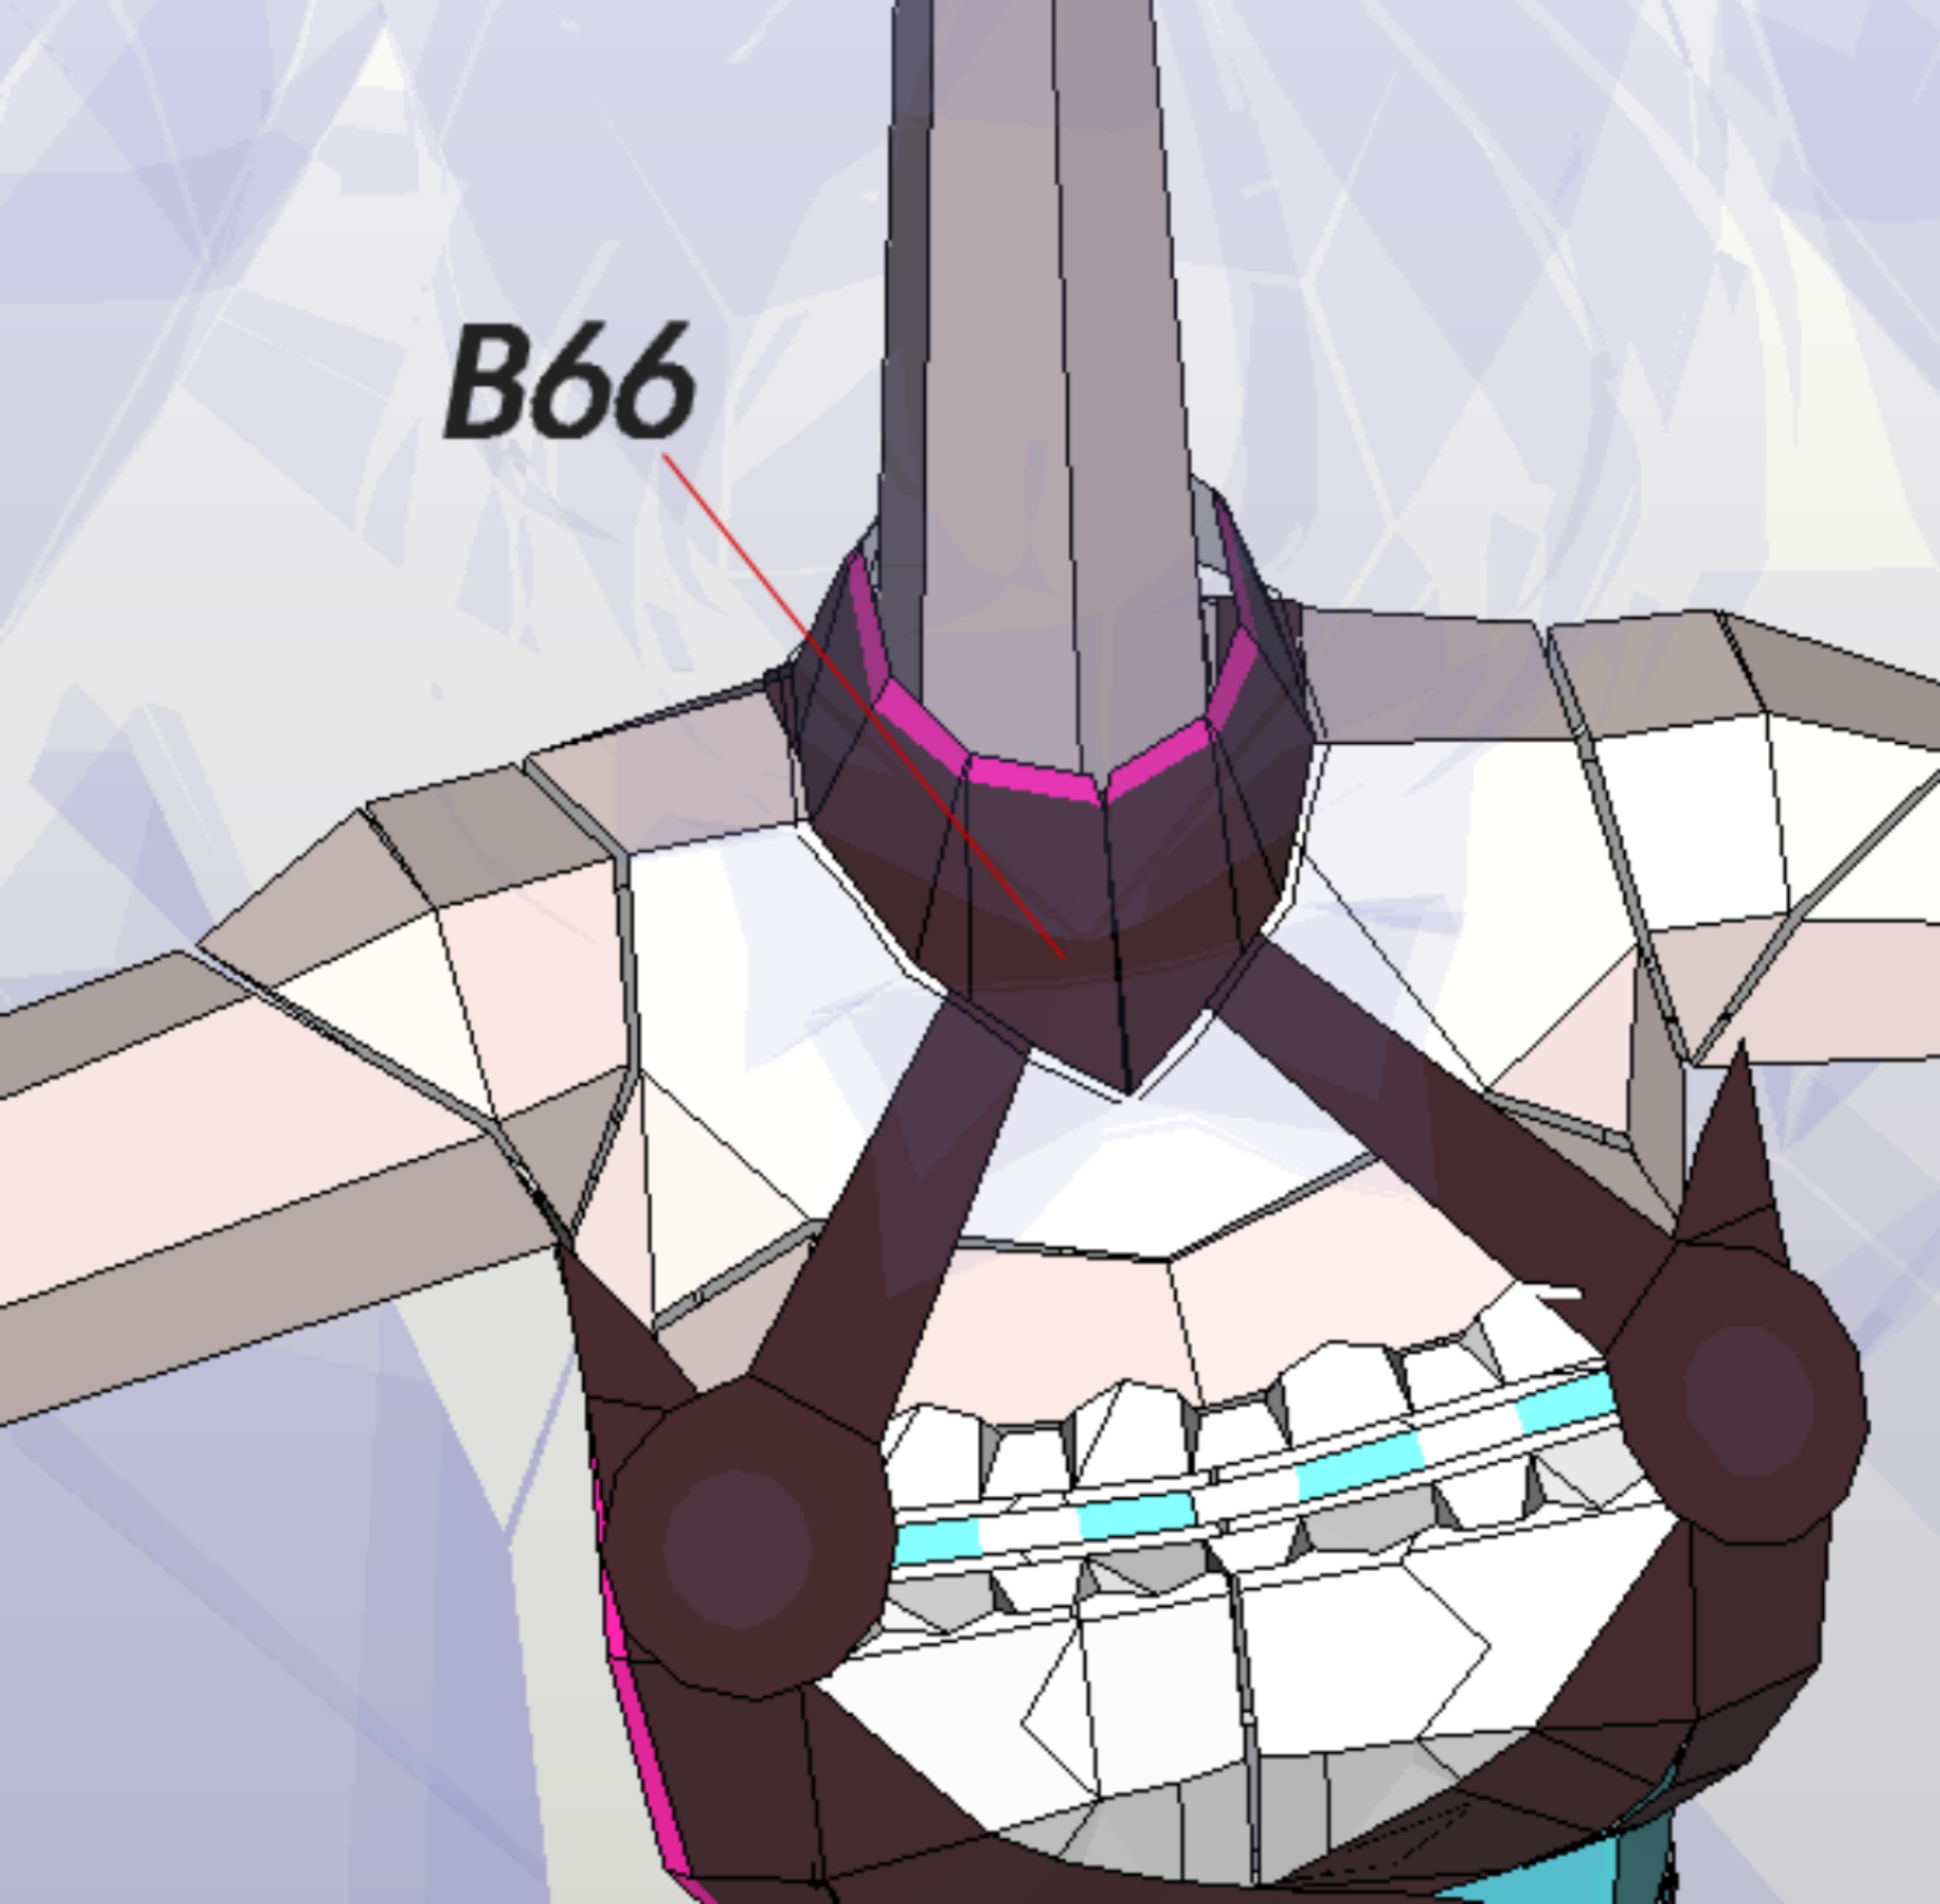

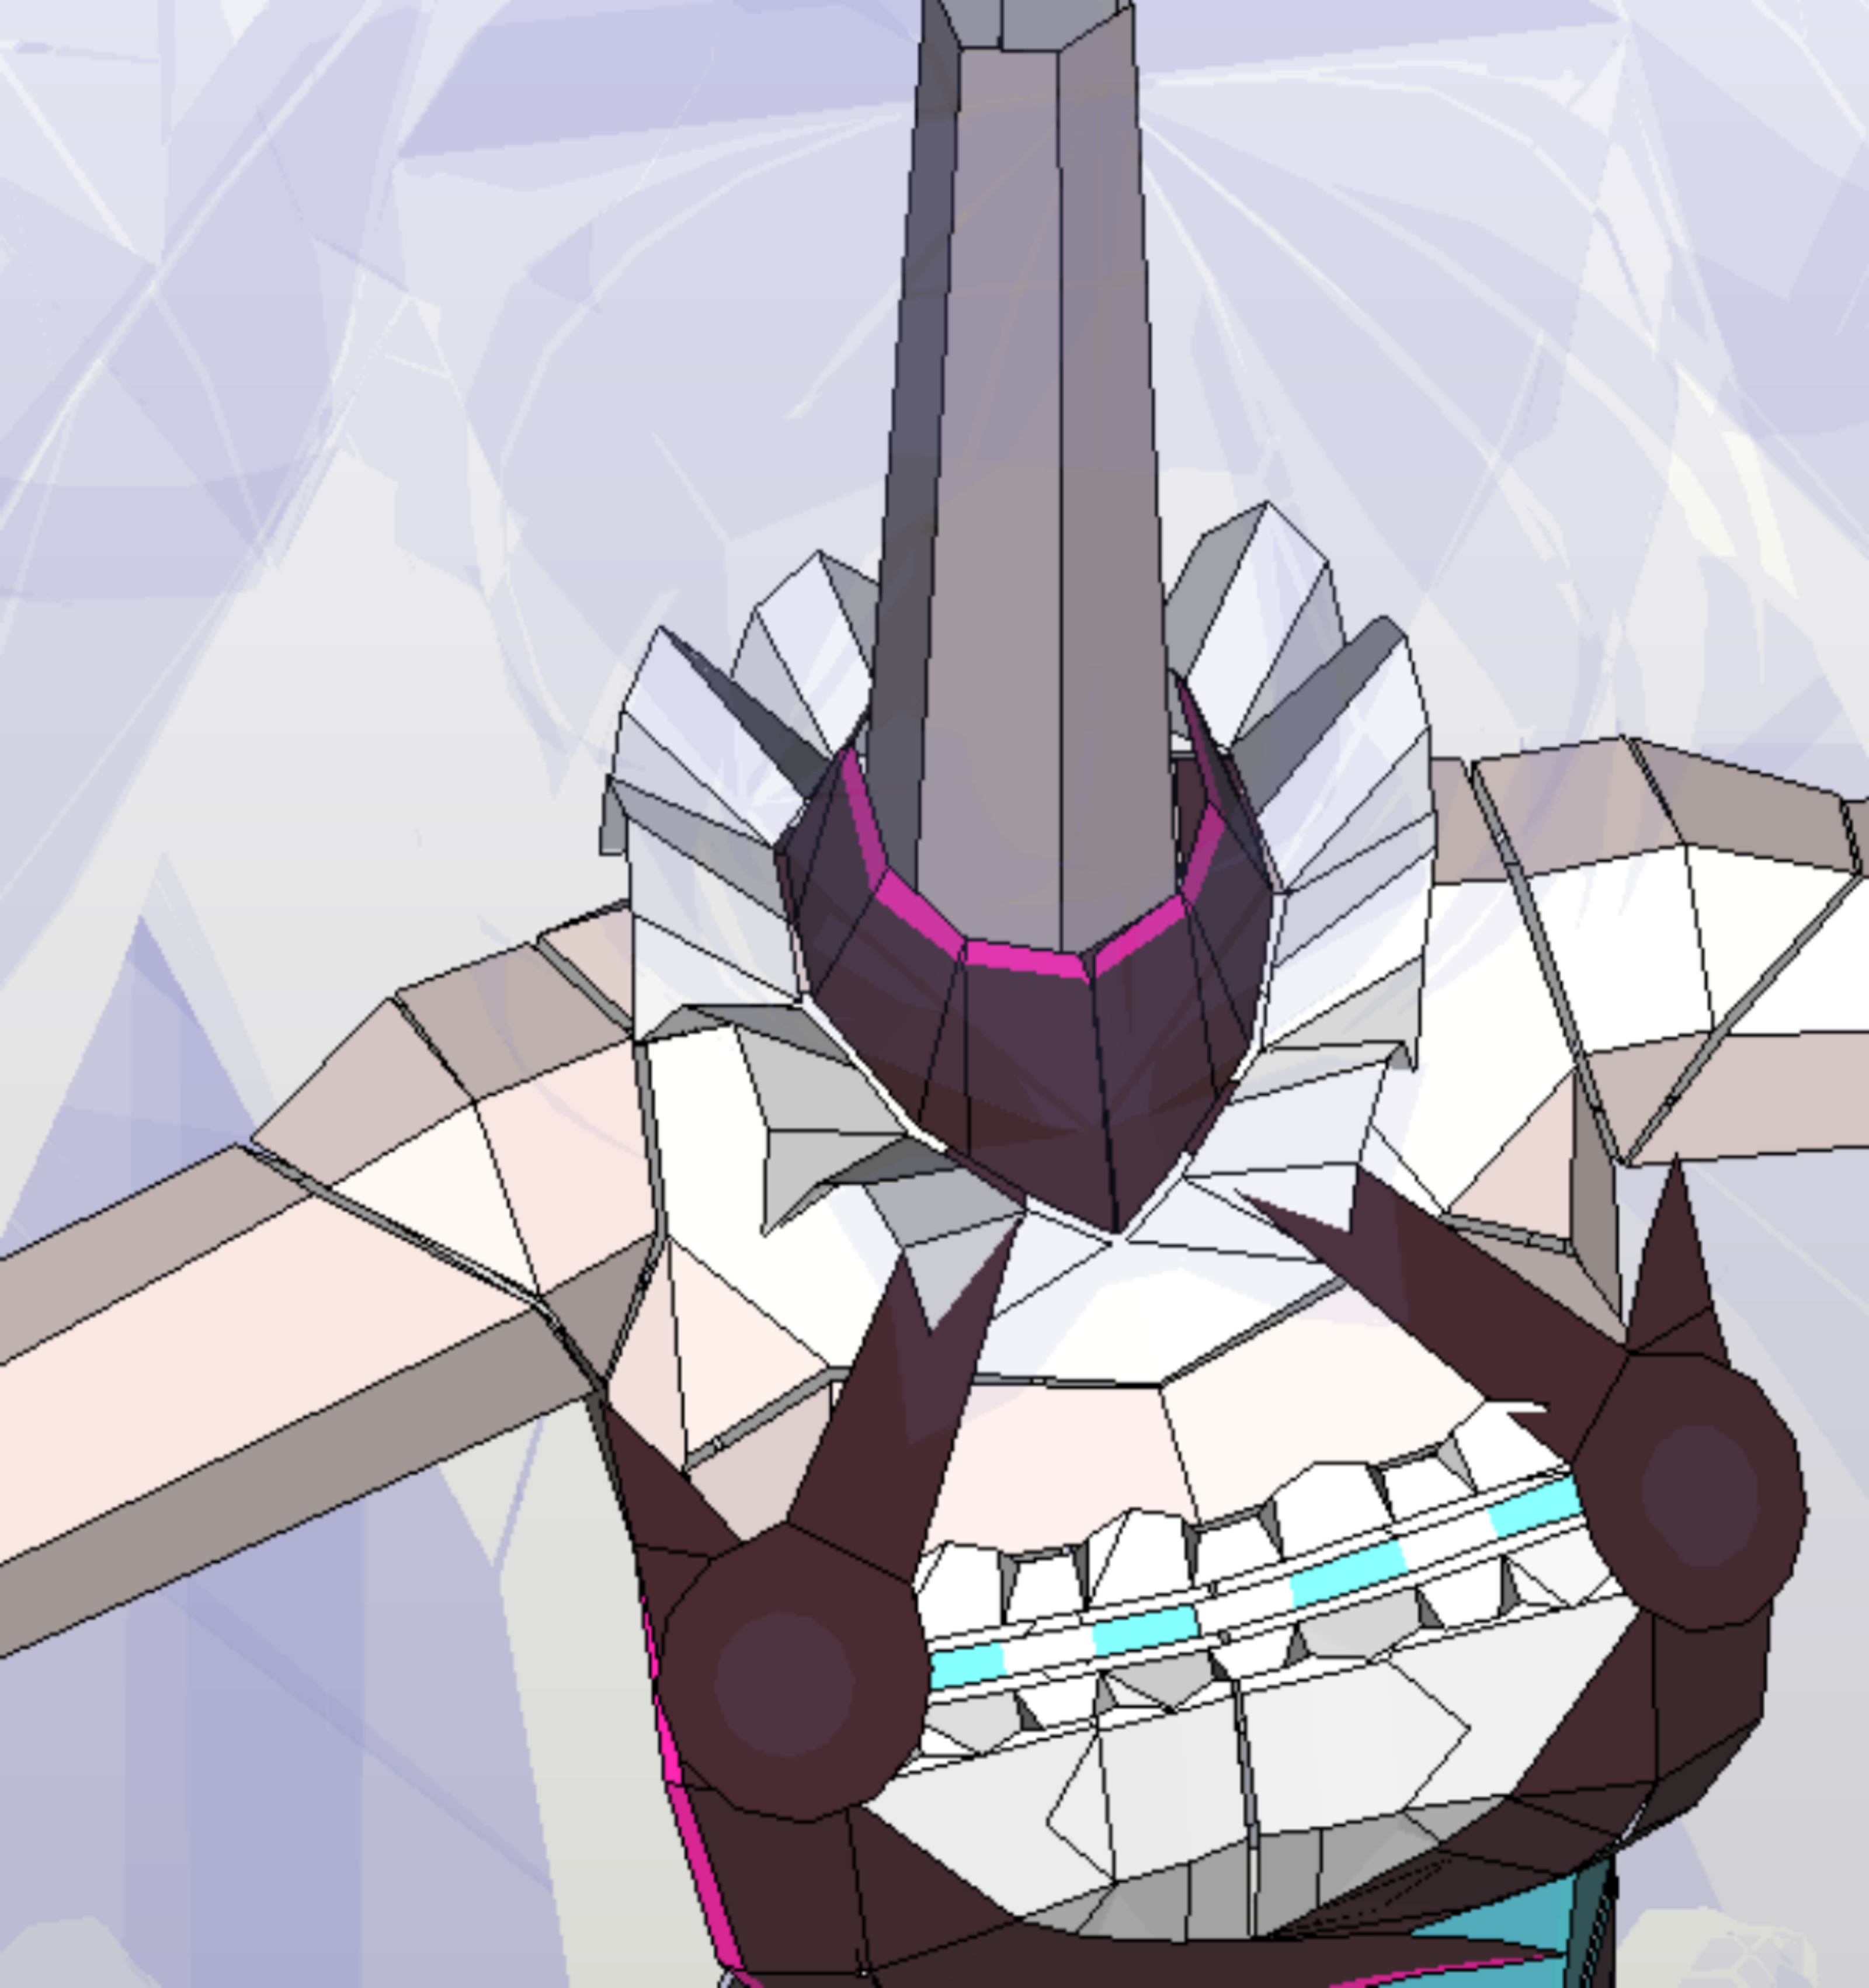


B67

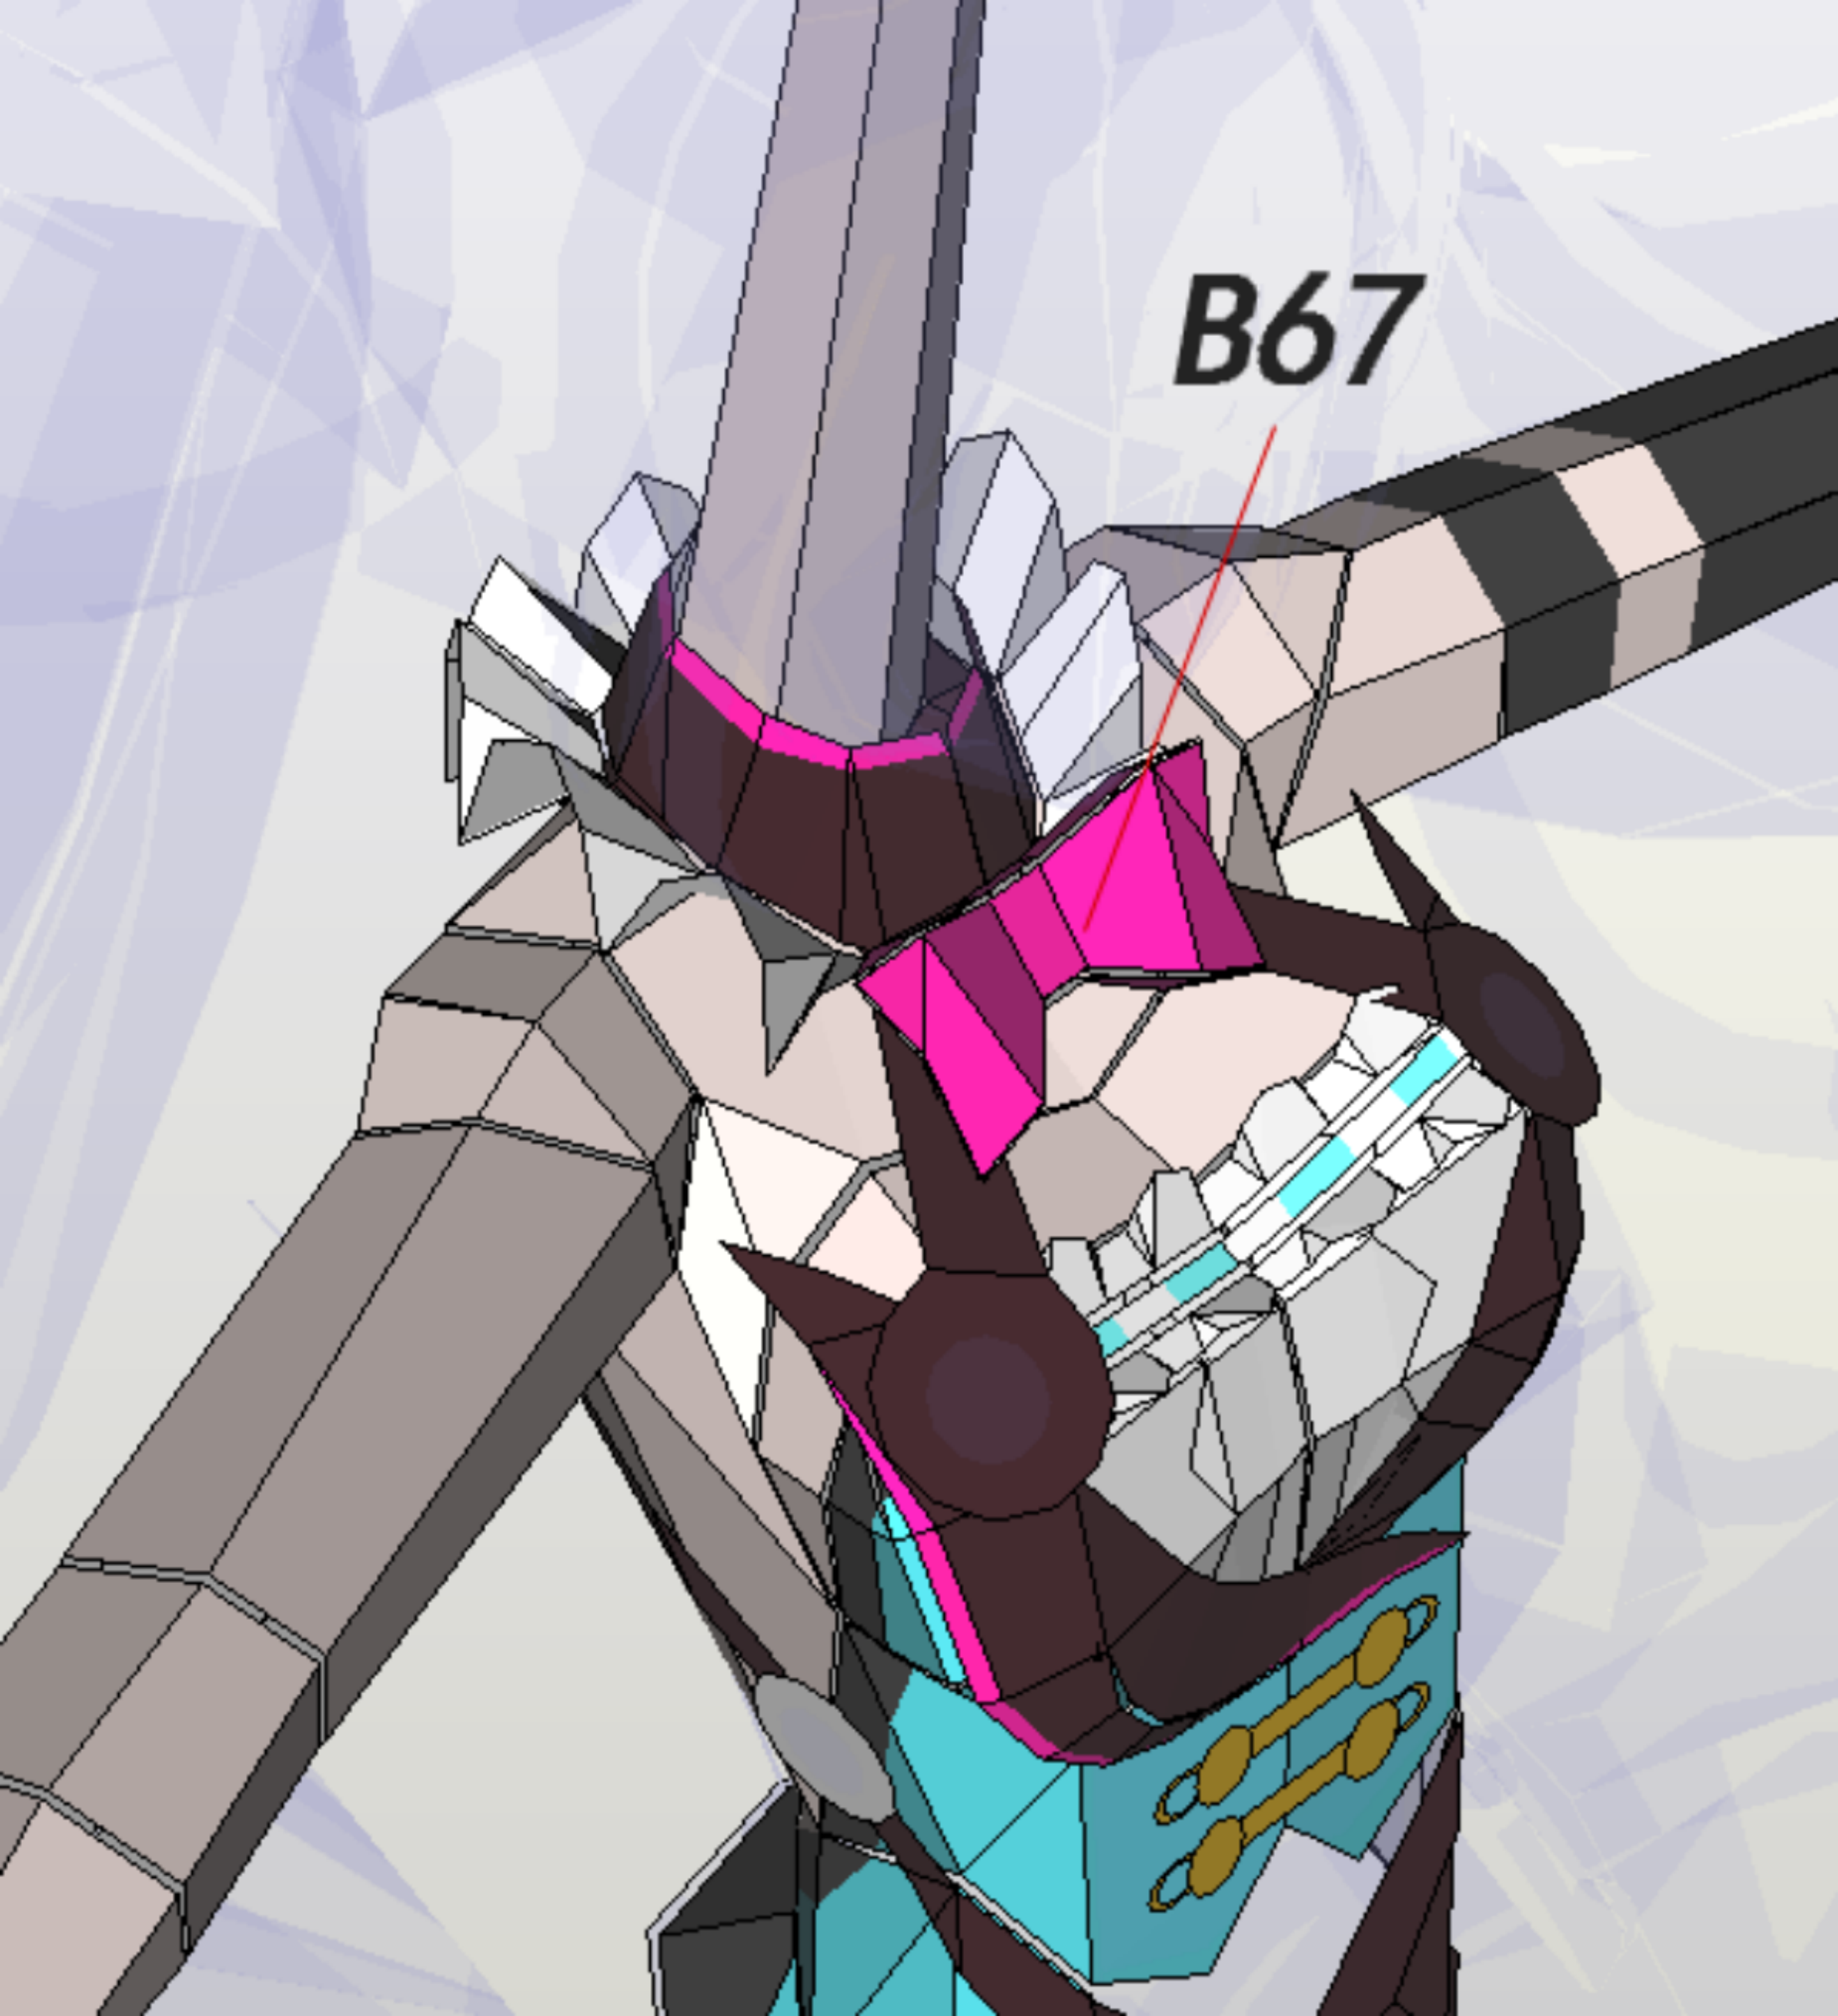

B66



B67

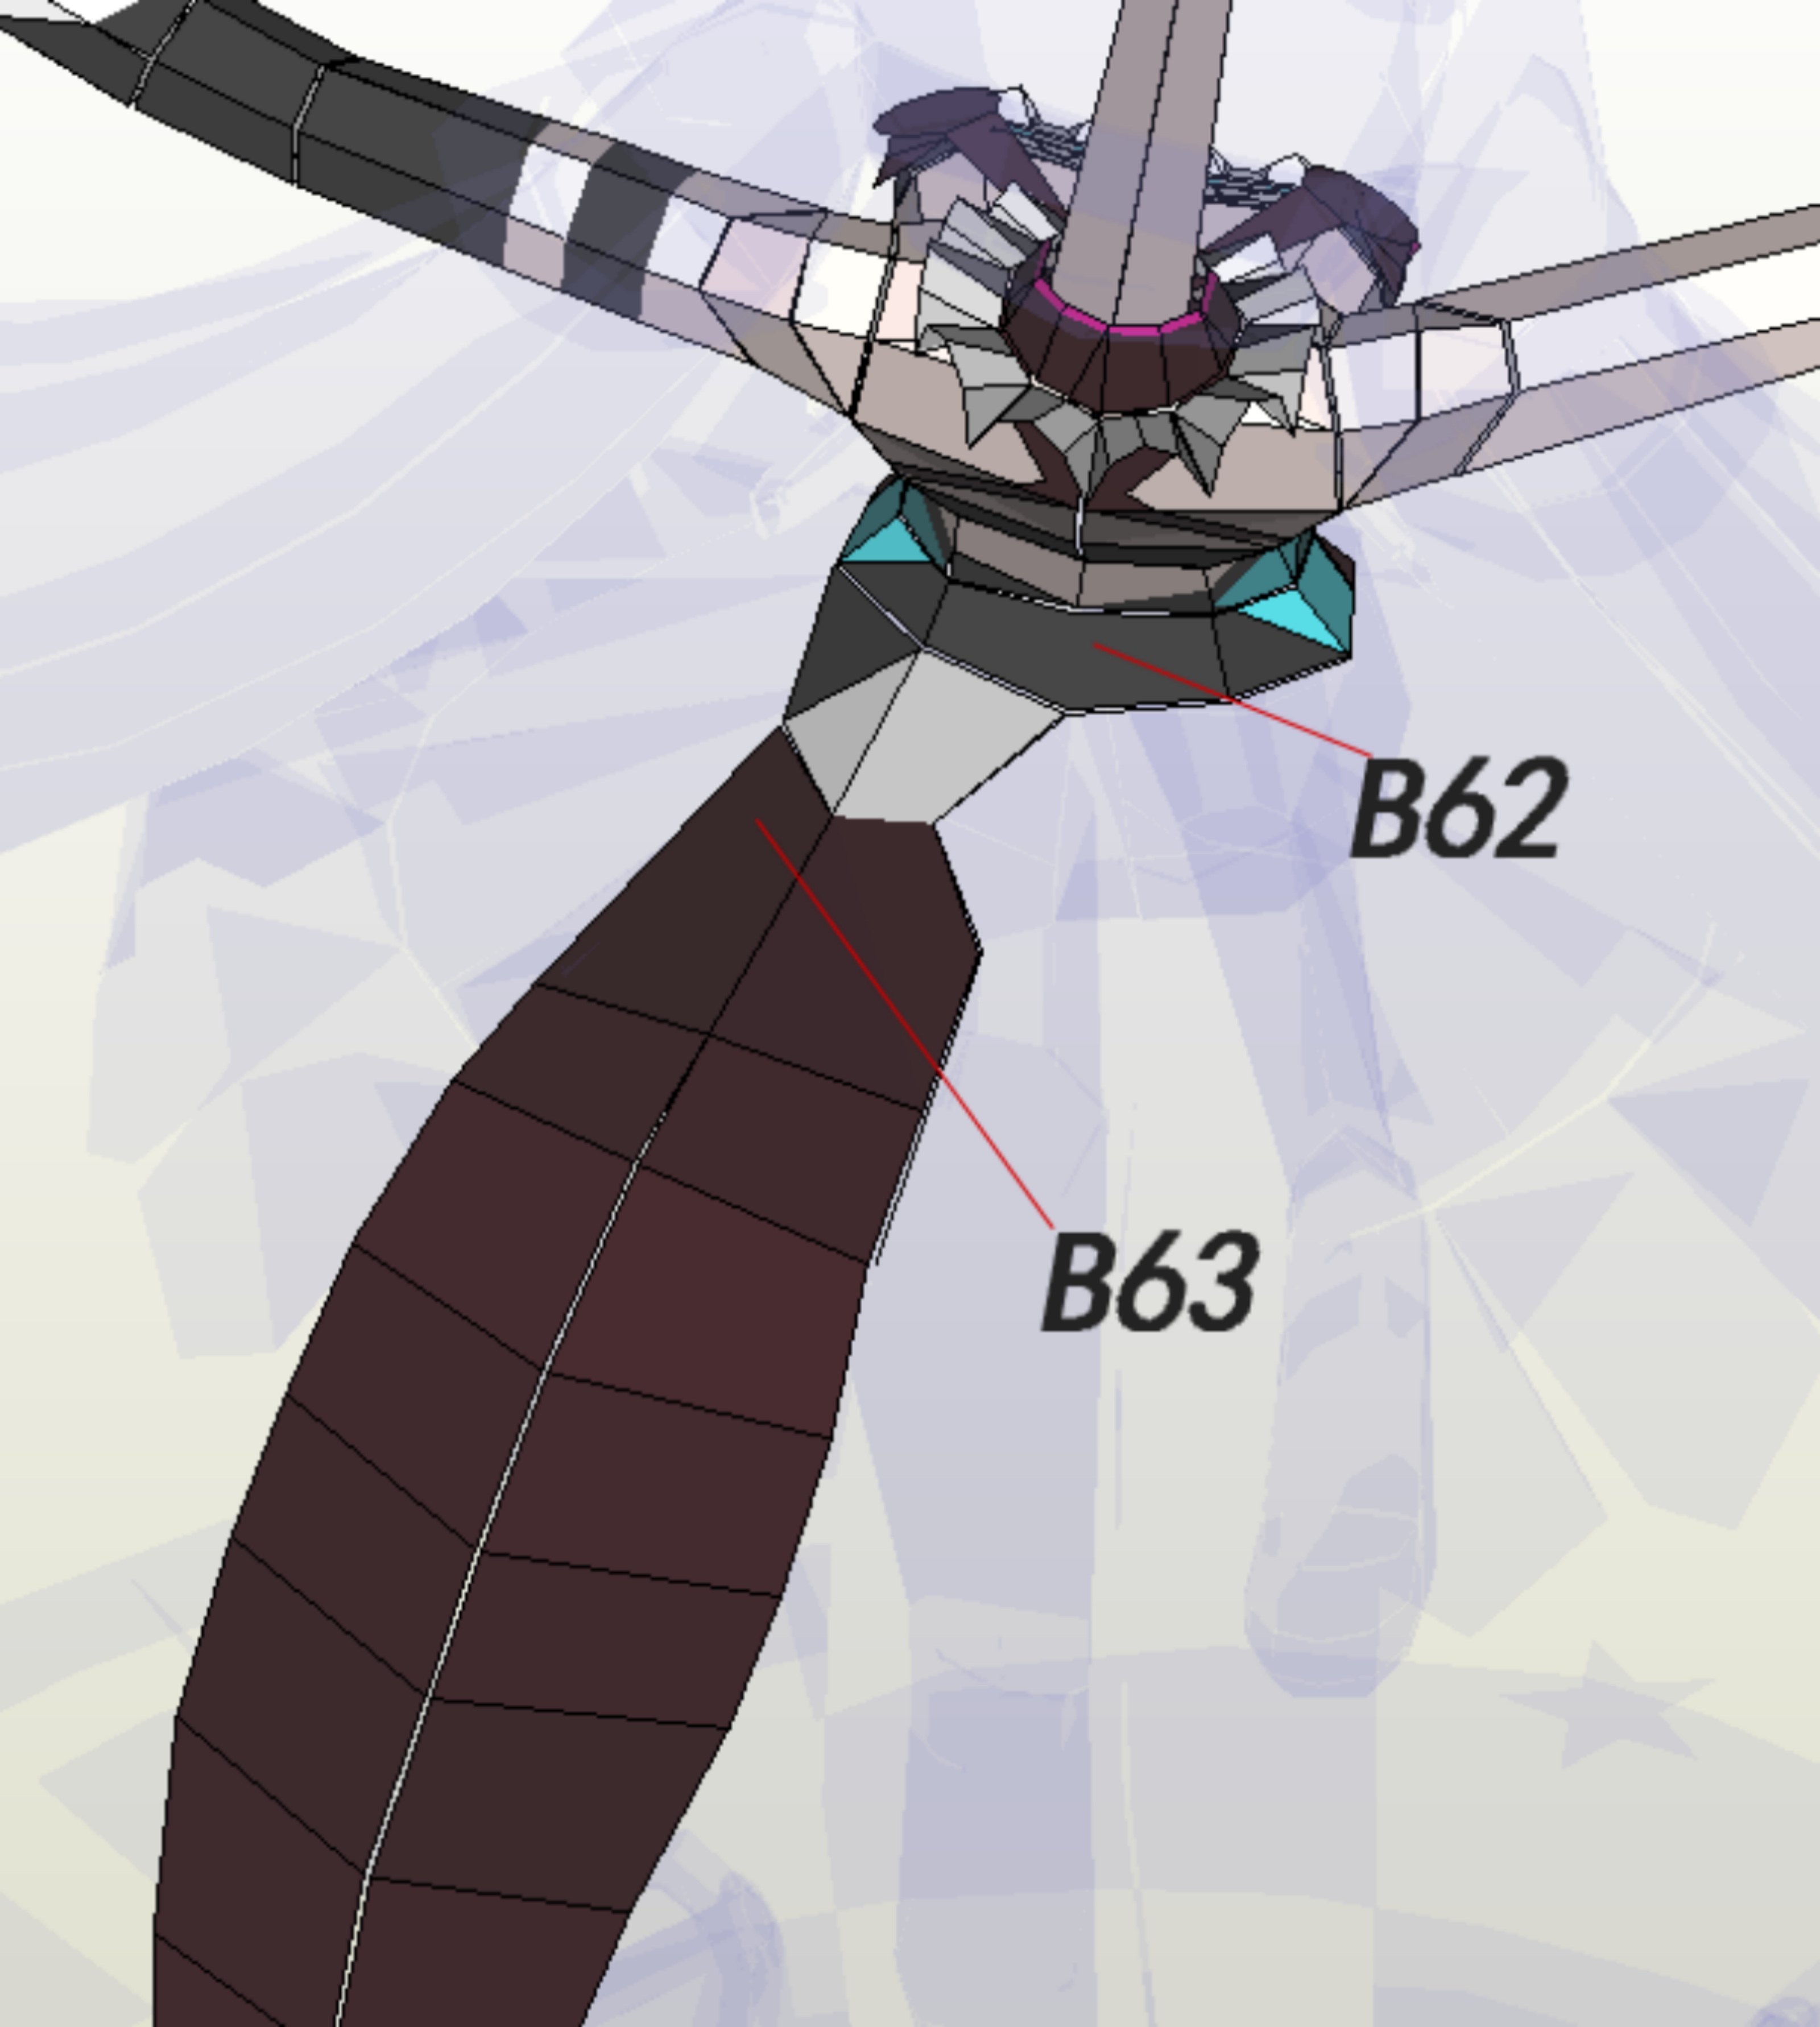


B62


B63

B63


B62

B64

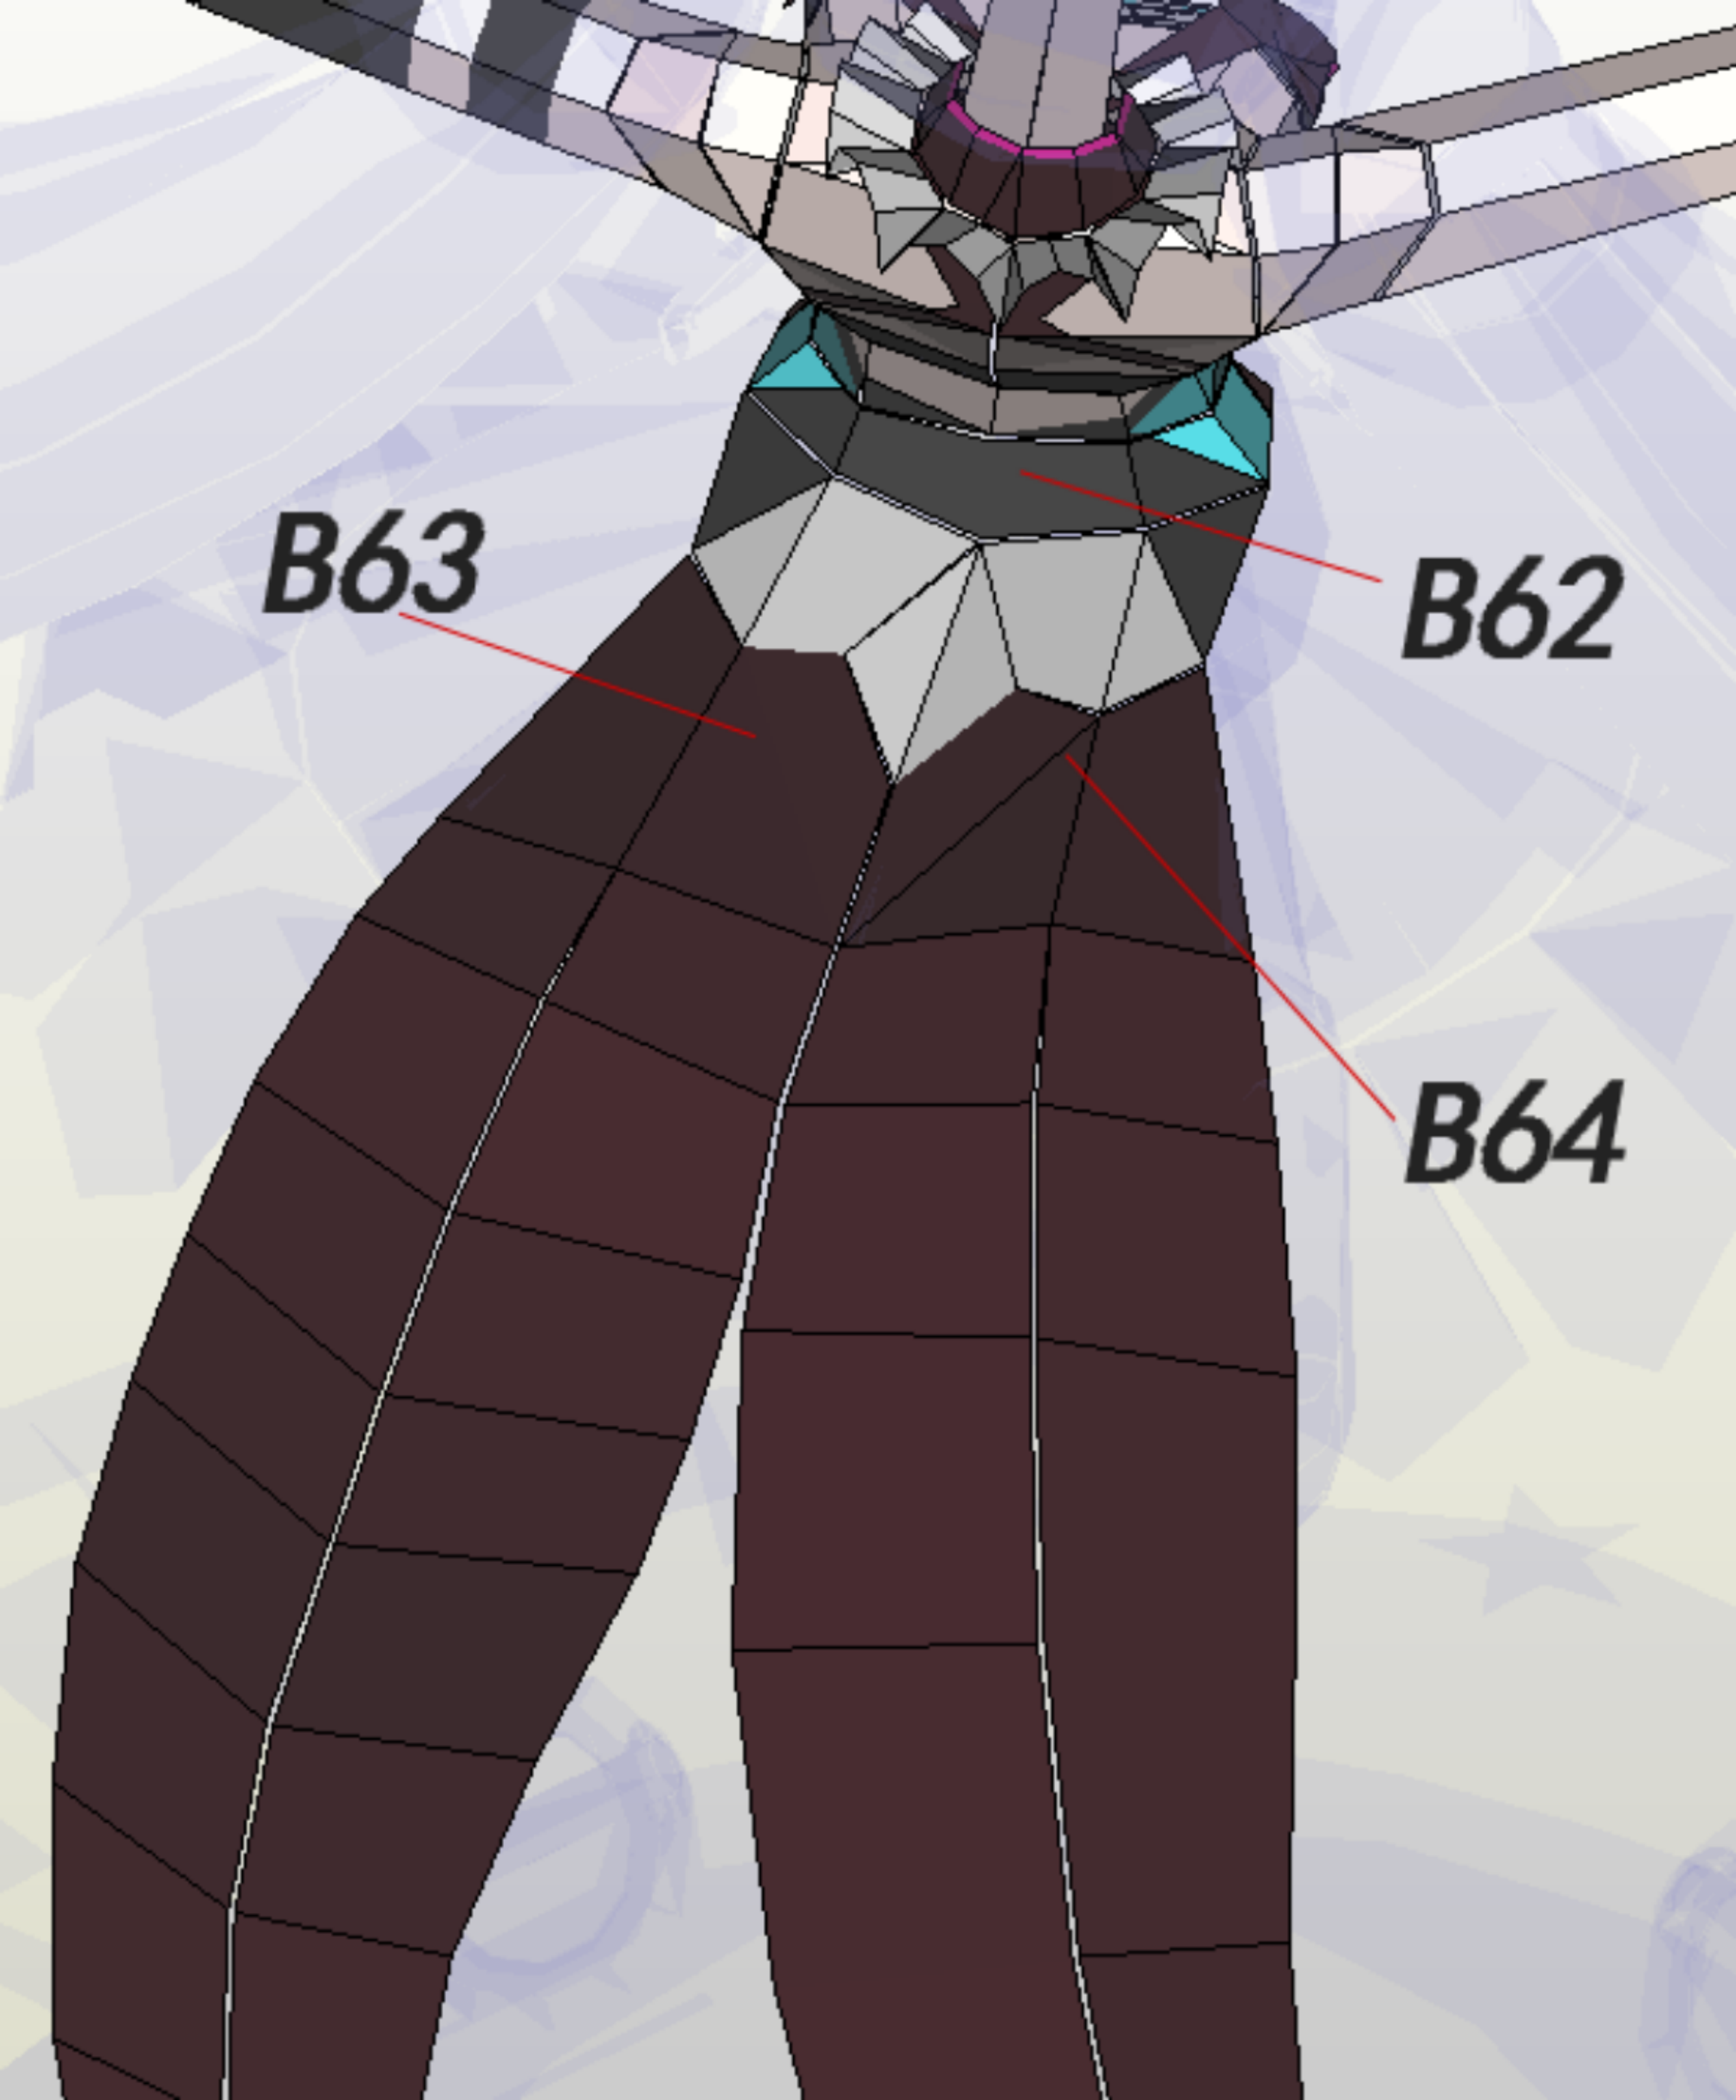


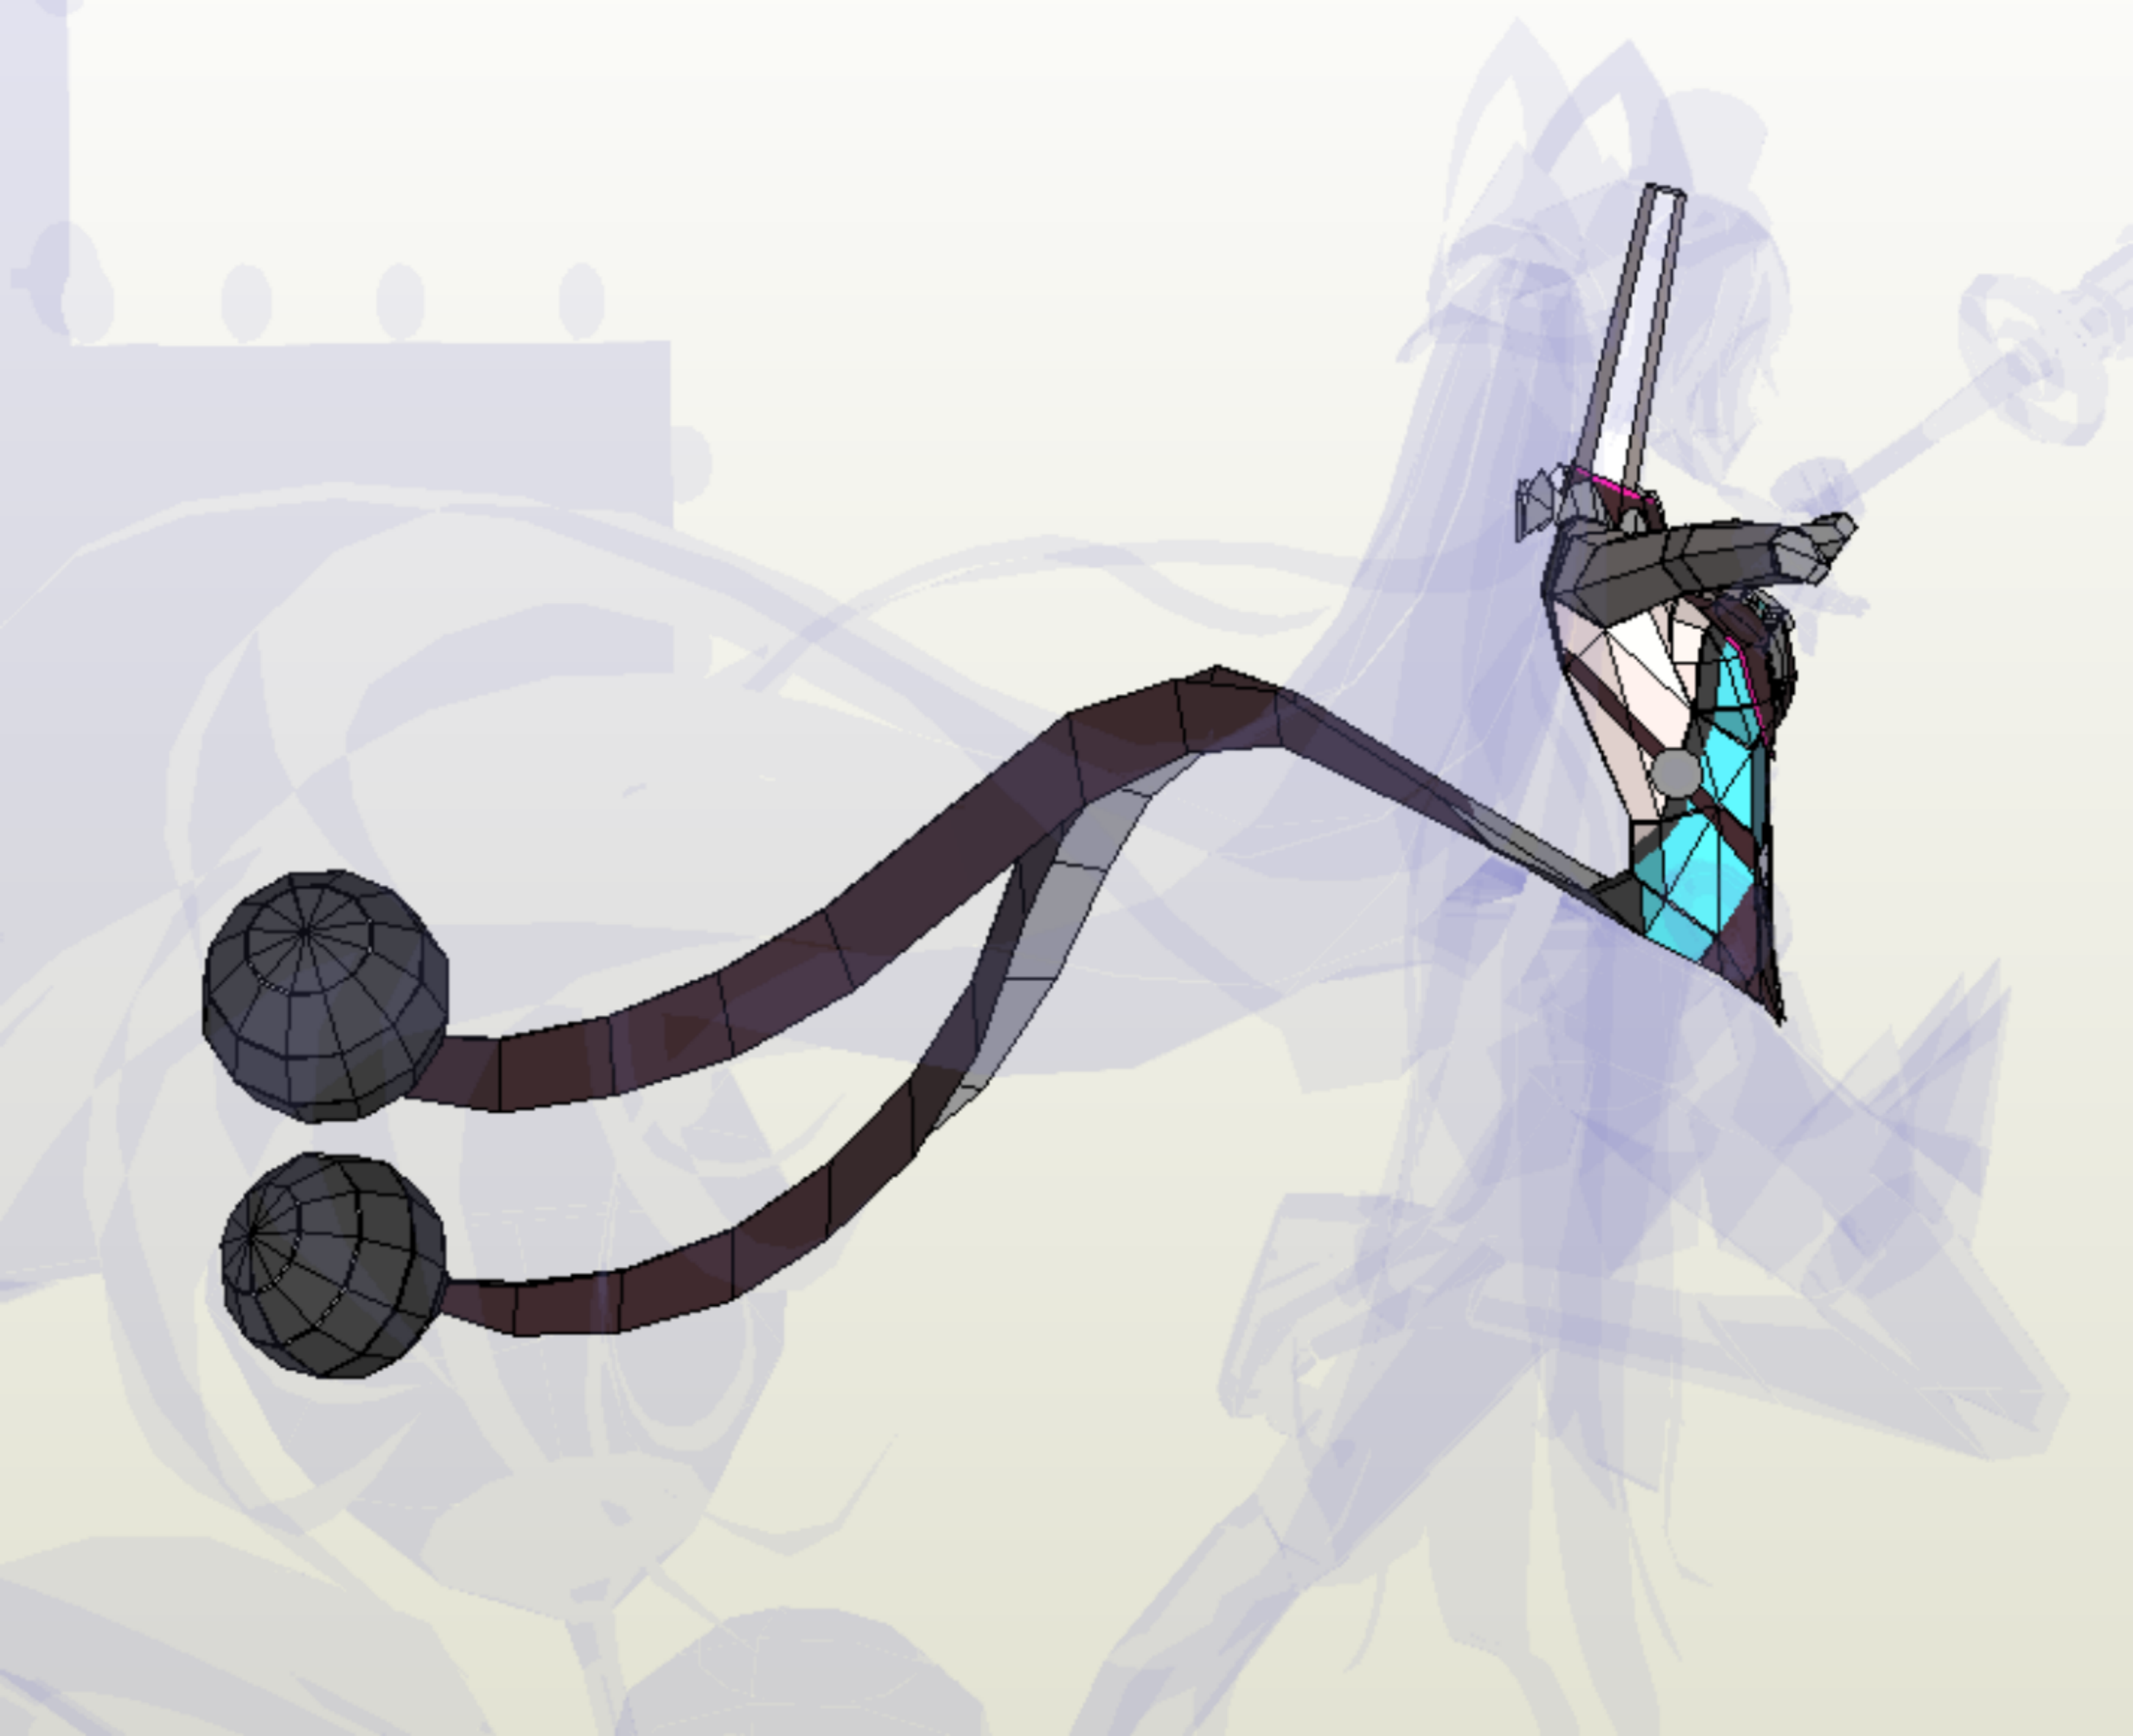



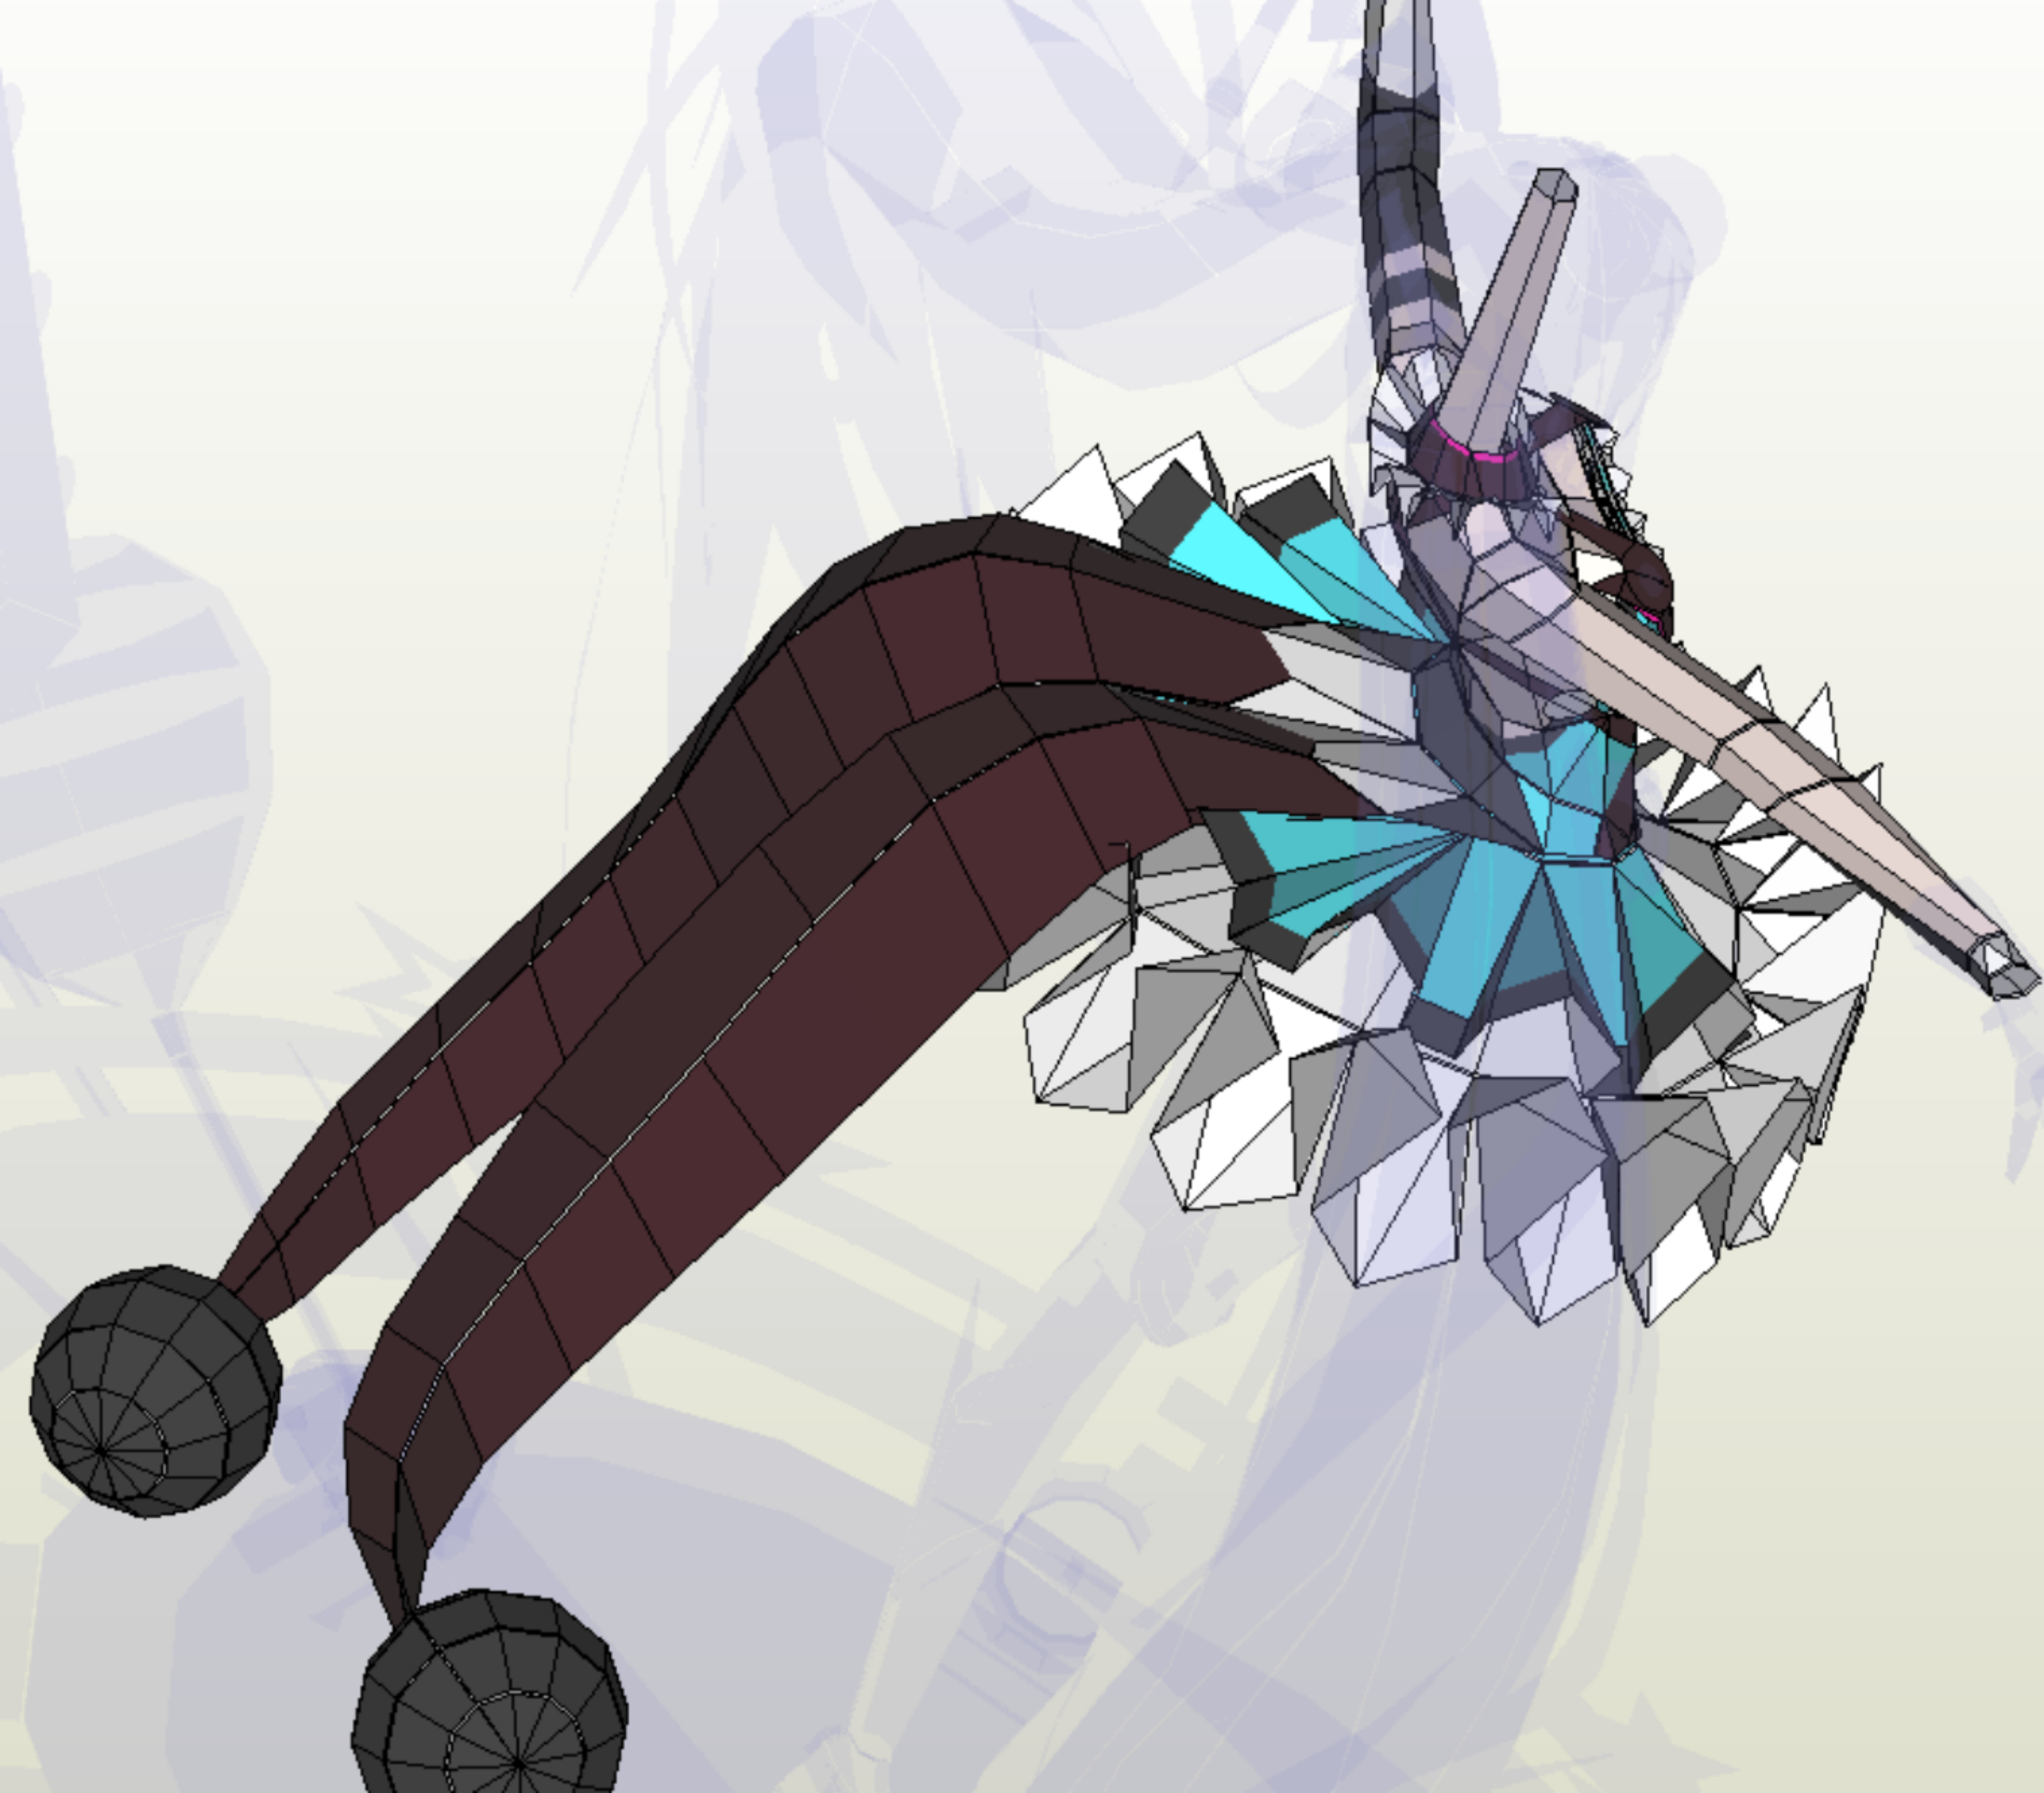




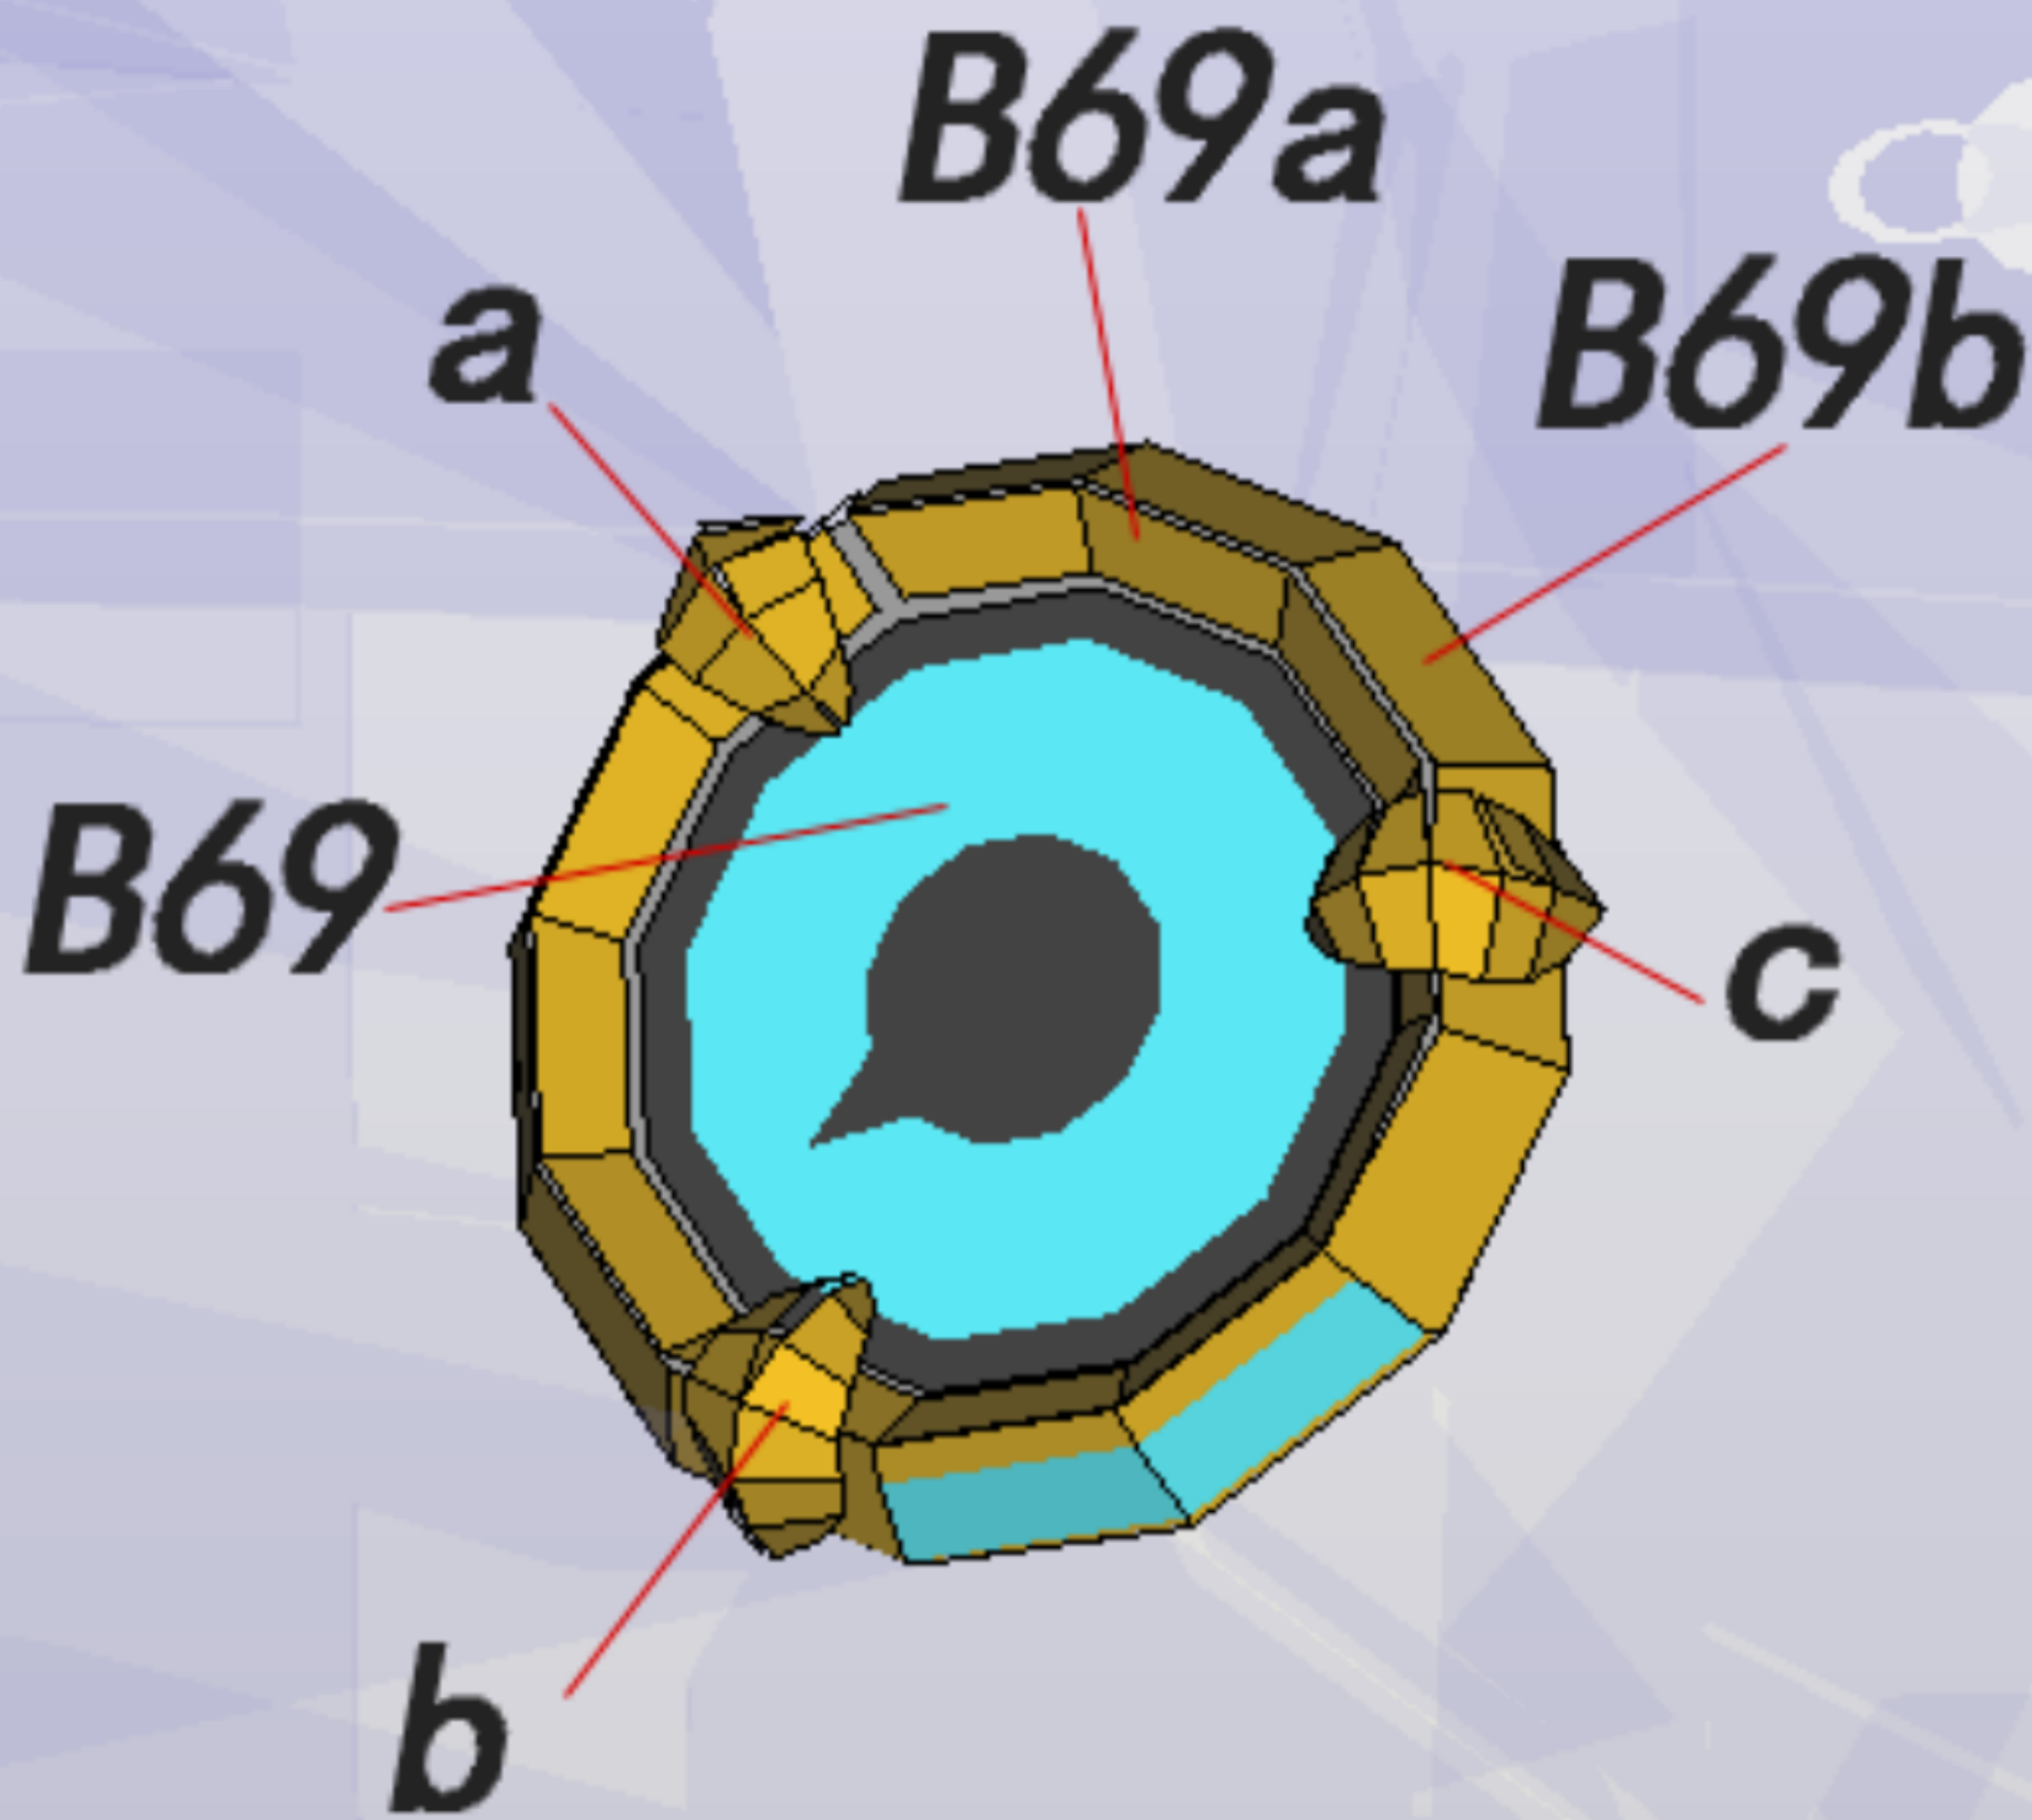

B69d


B69b

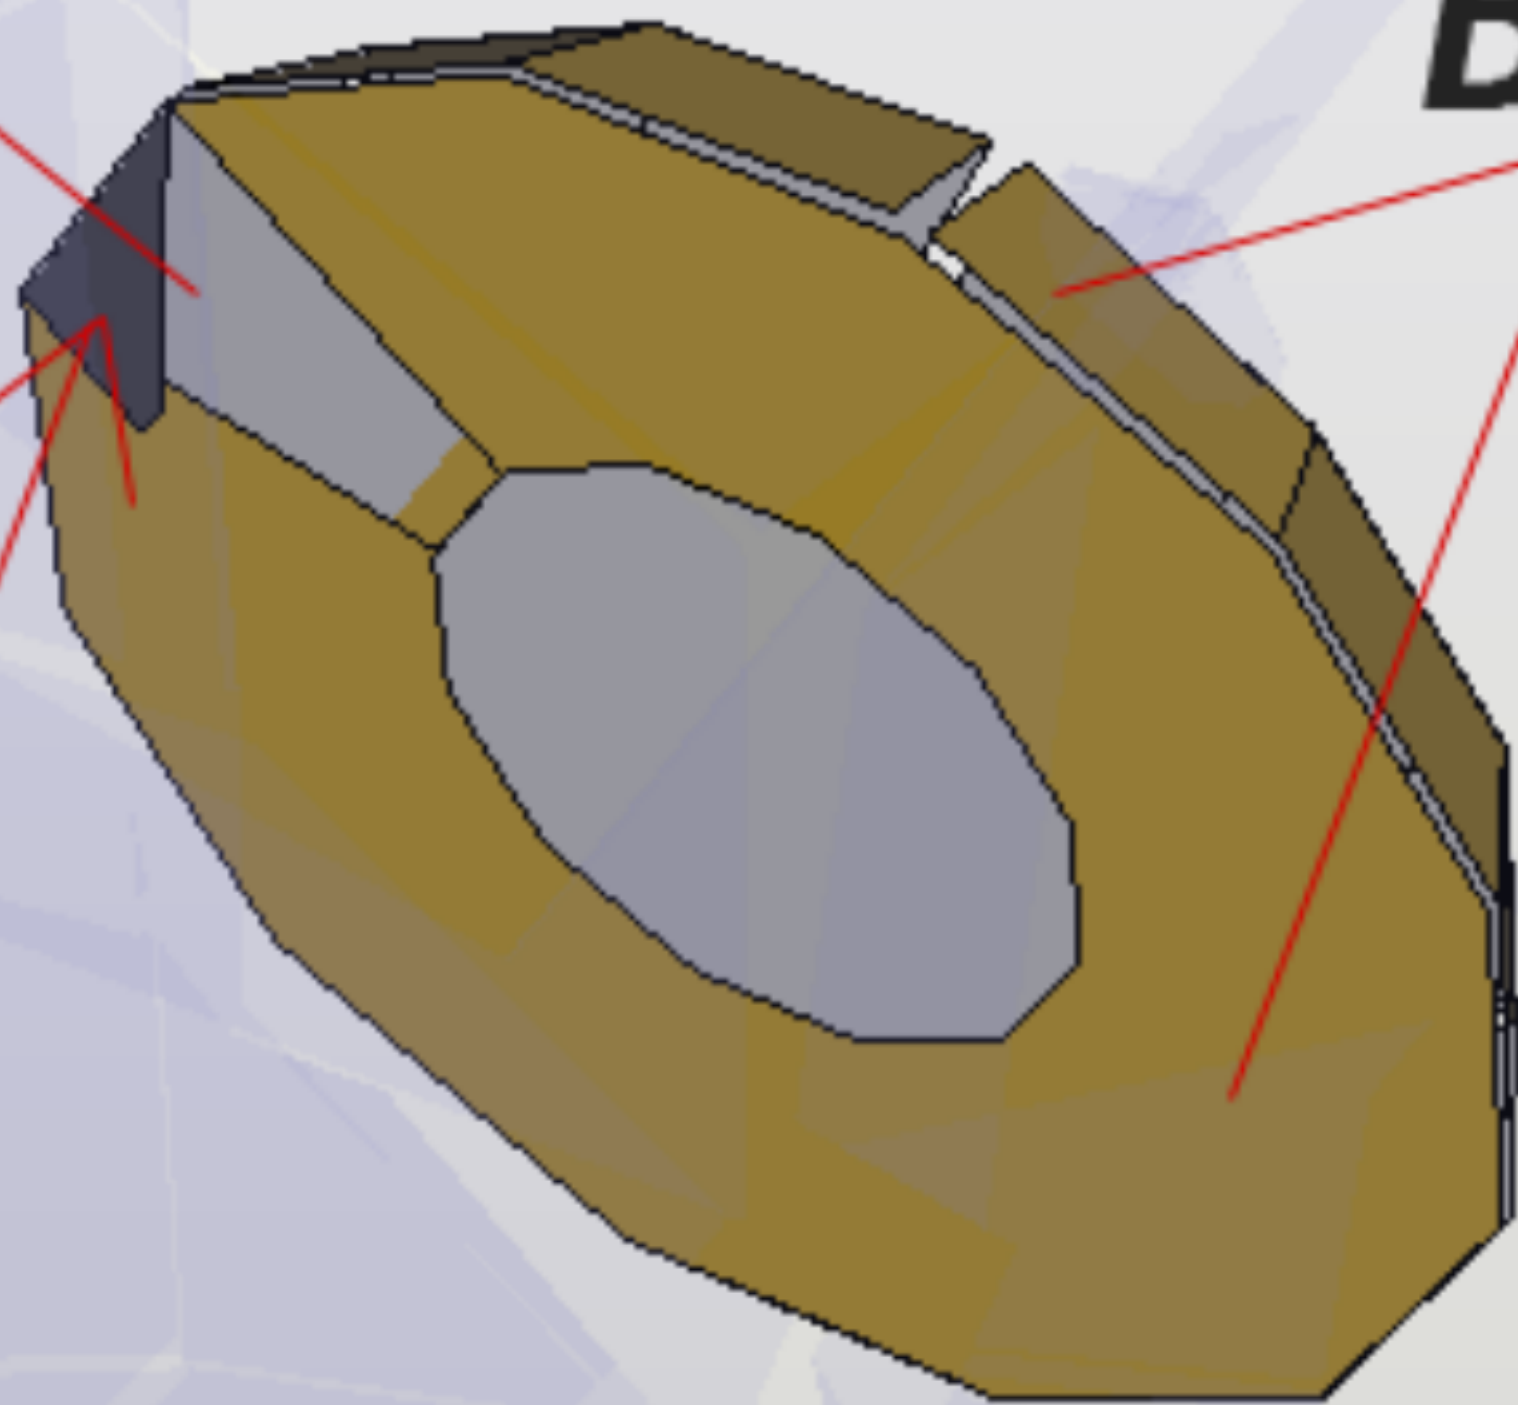

此处与衣服沾合

A68a

A68

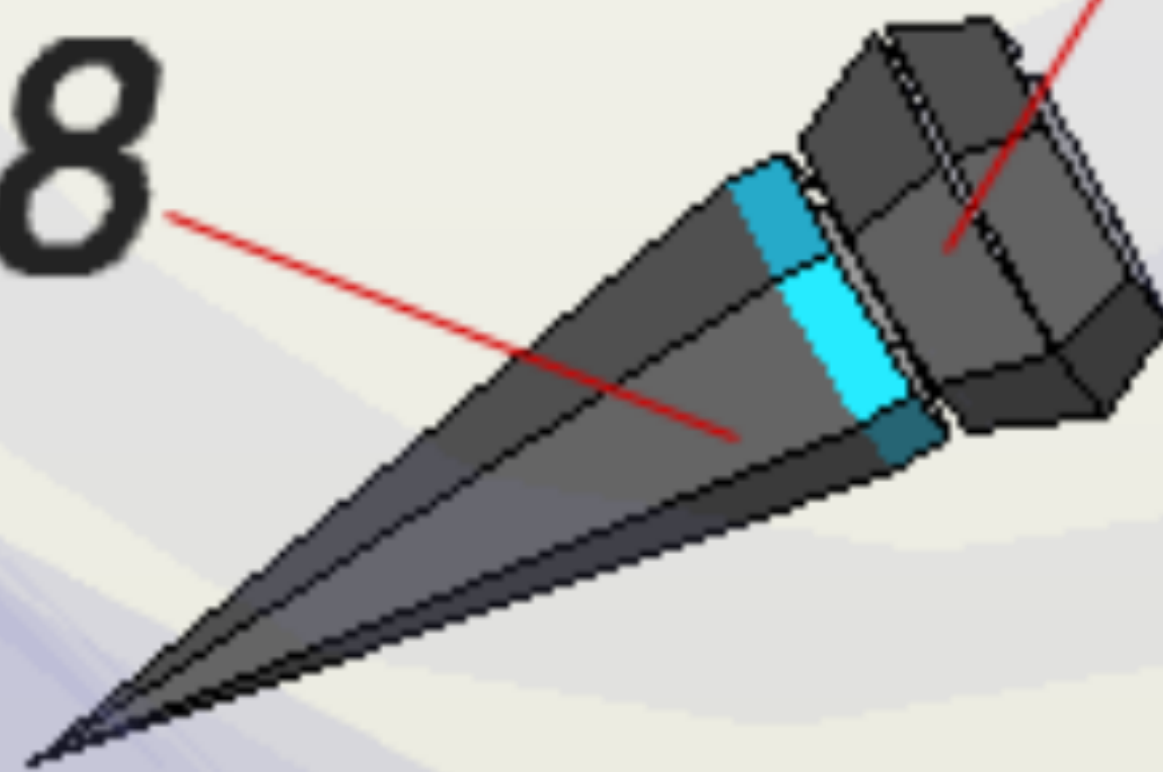



A69


A69a


A69b

A69c

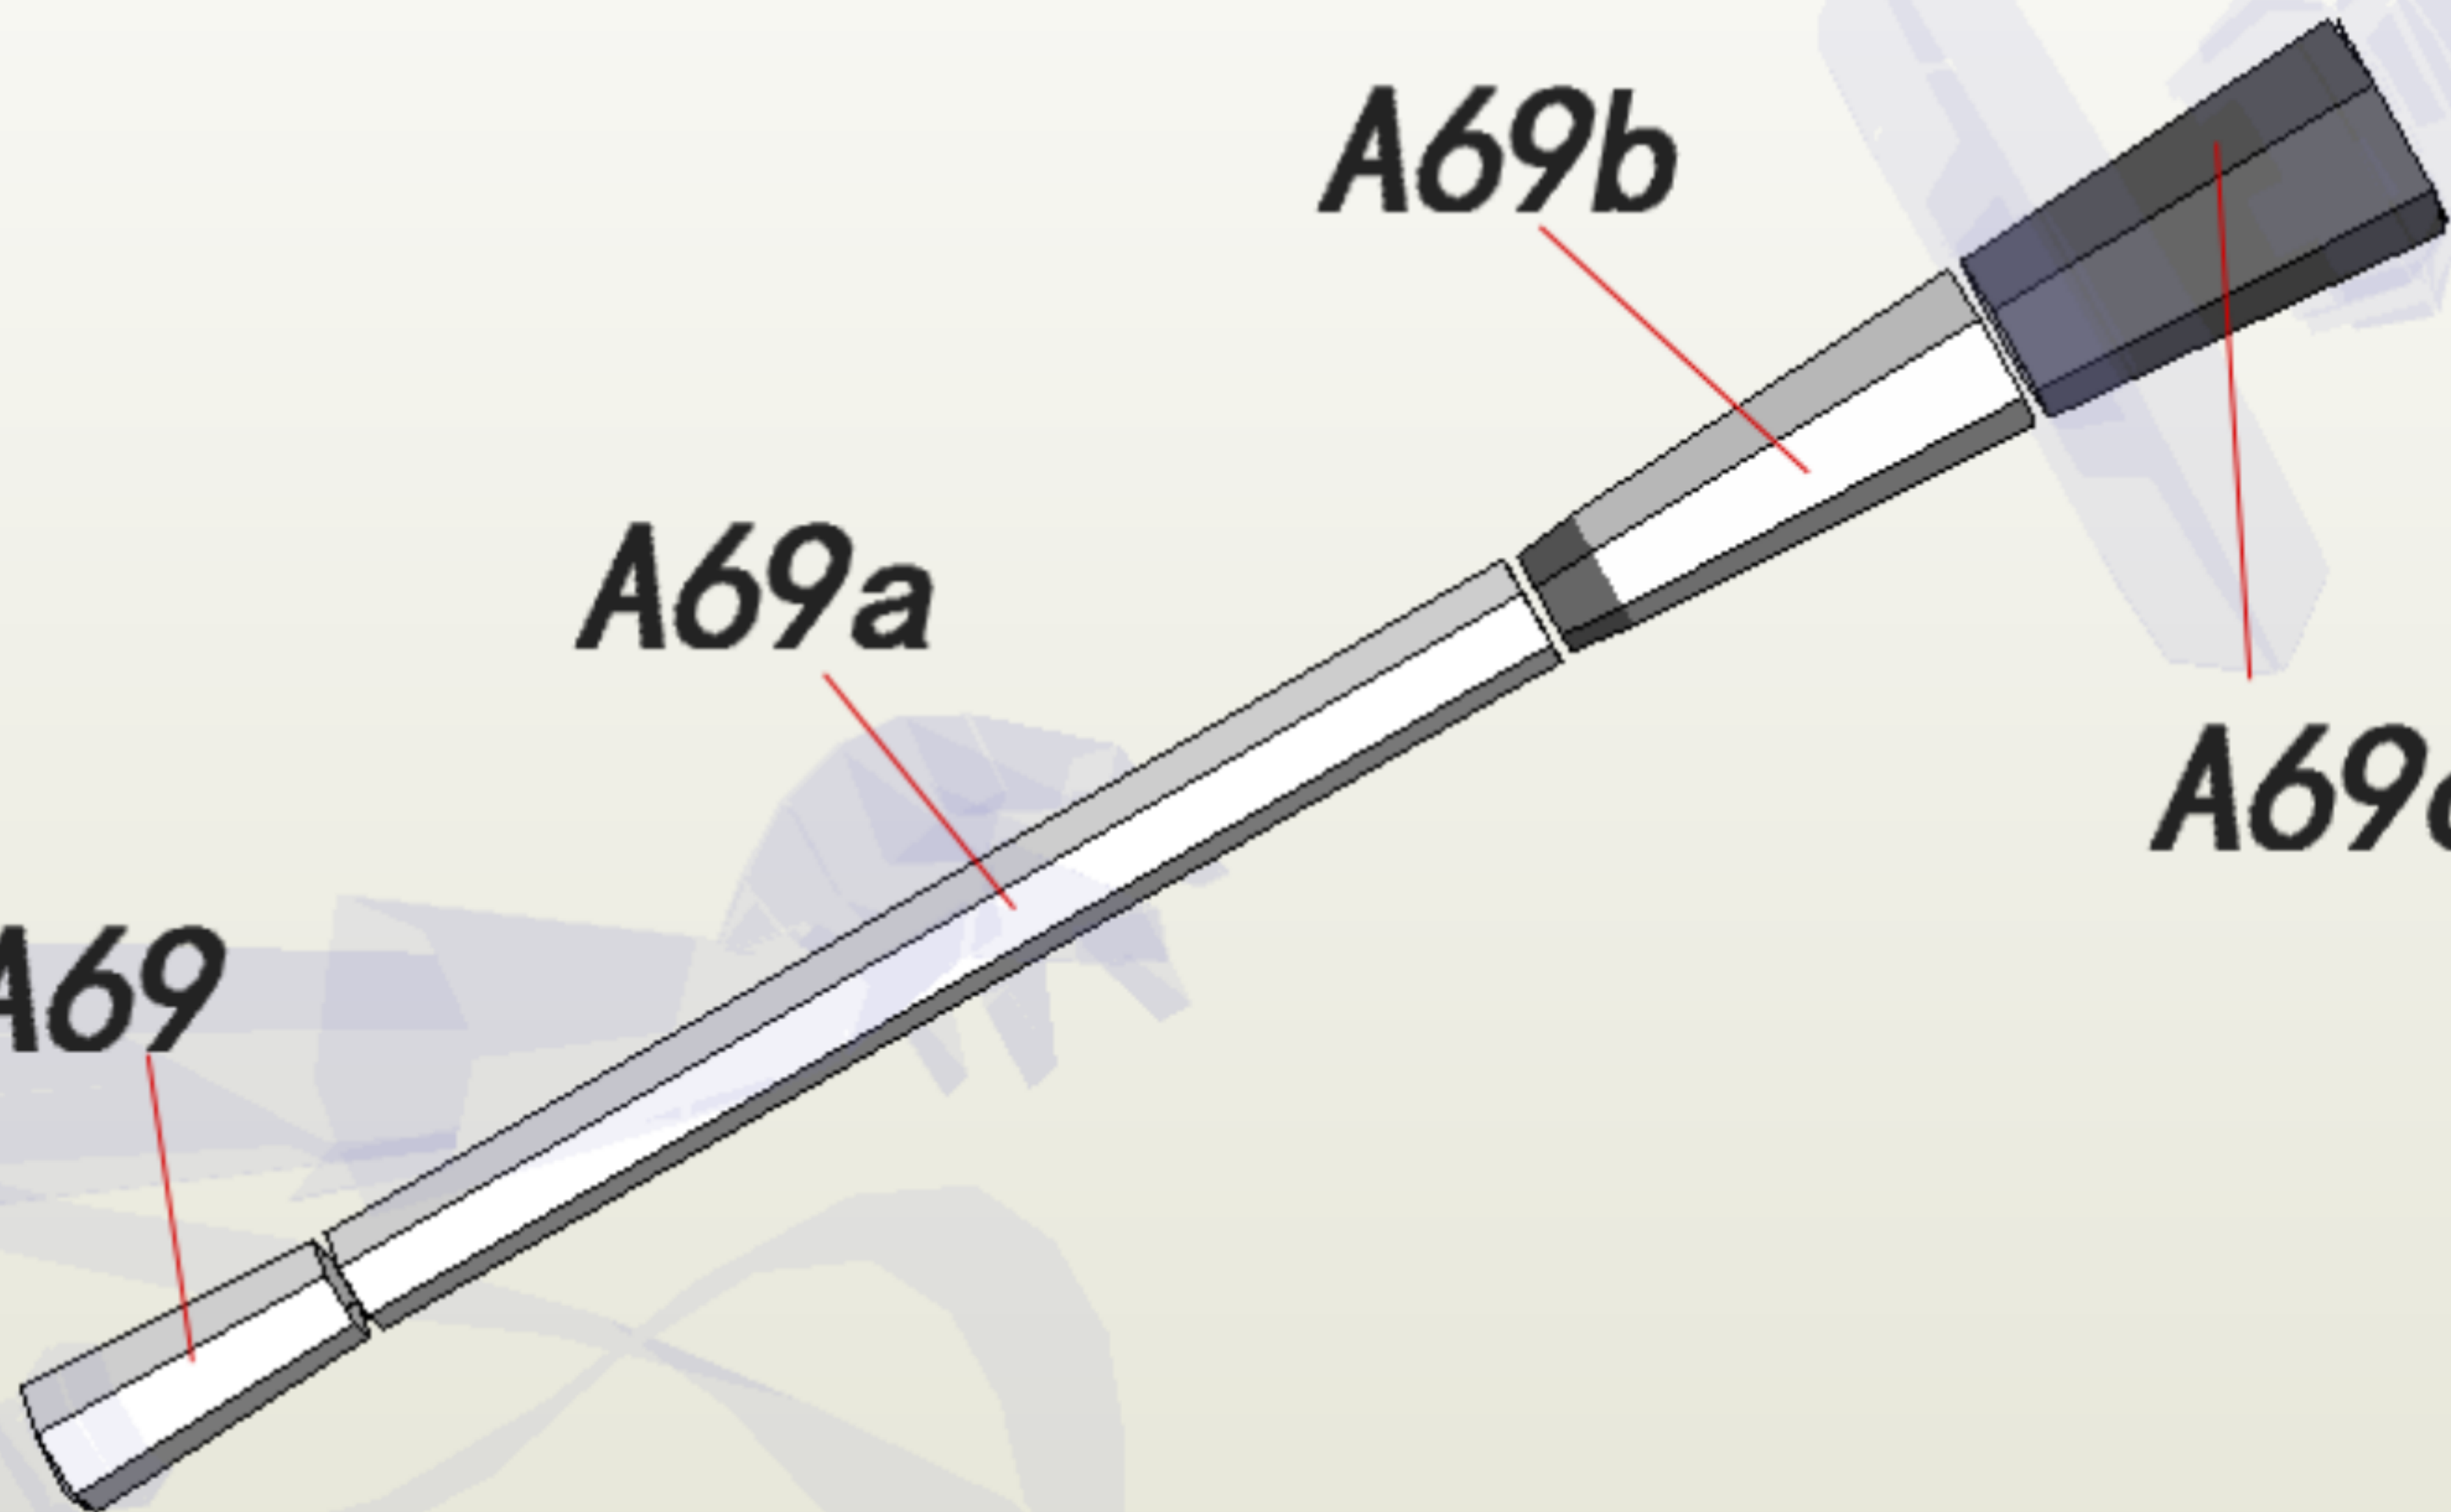

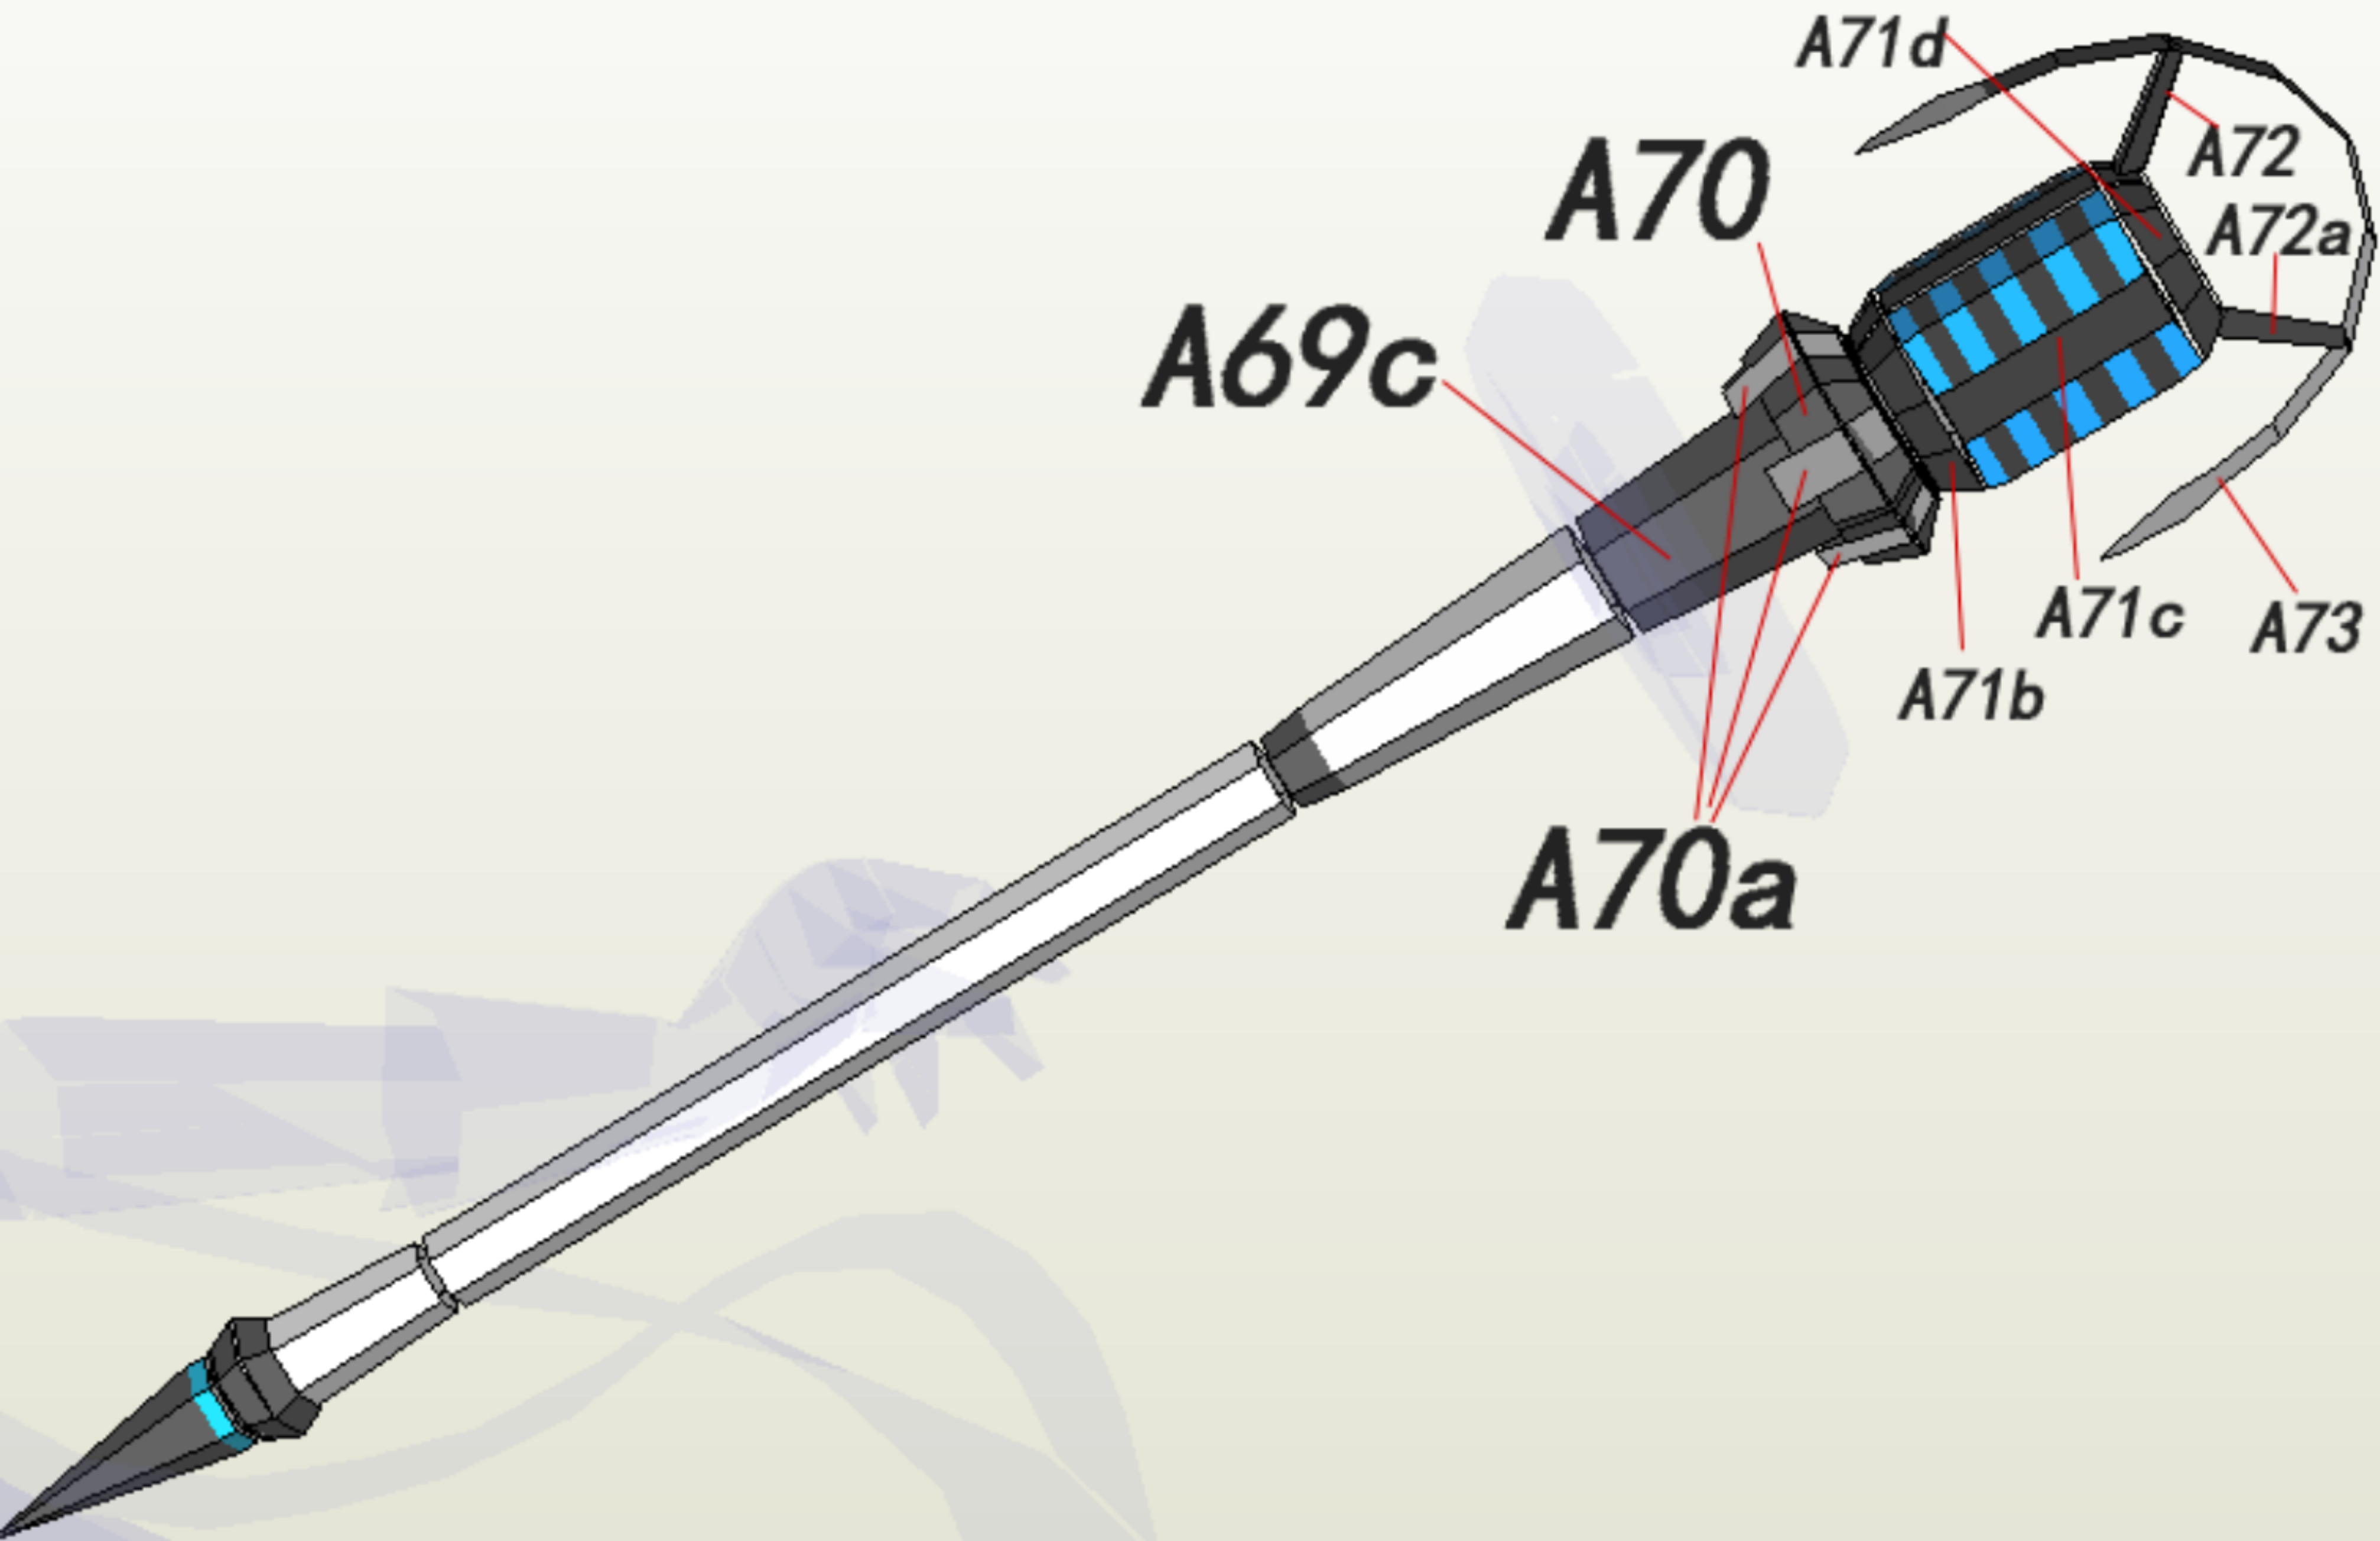

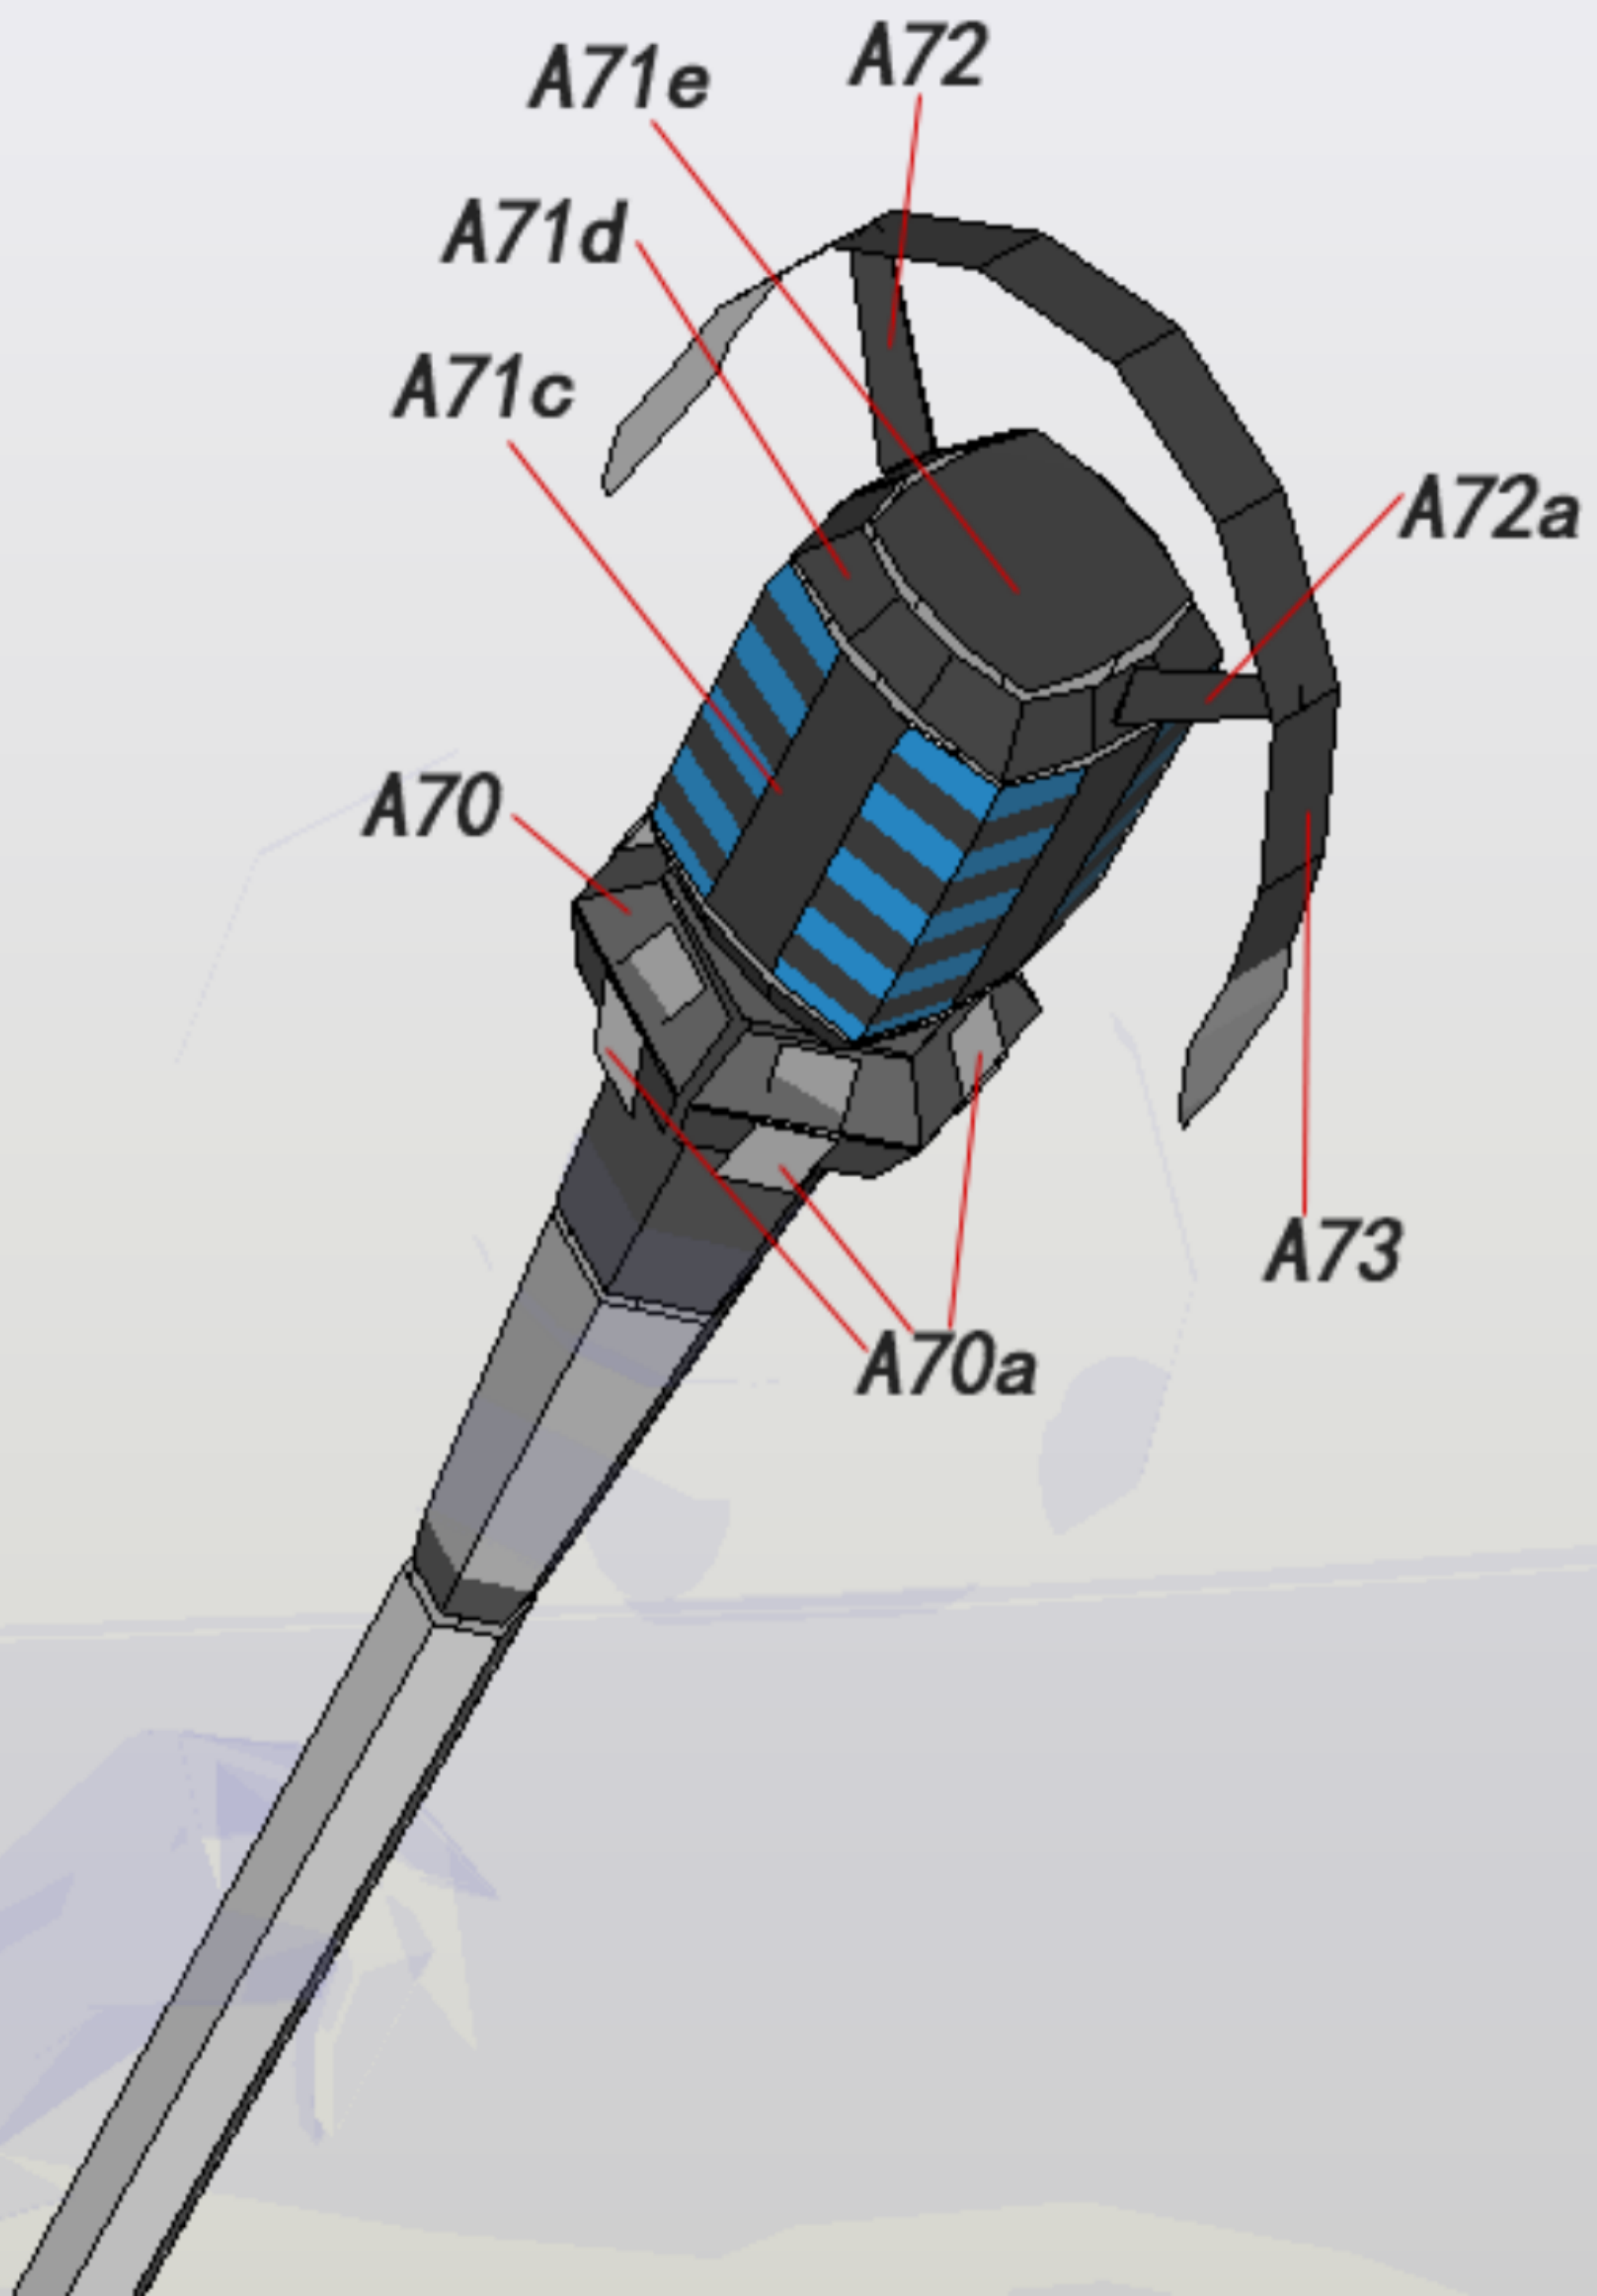


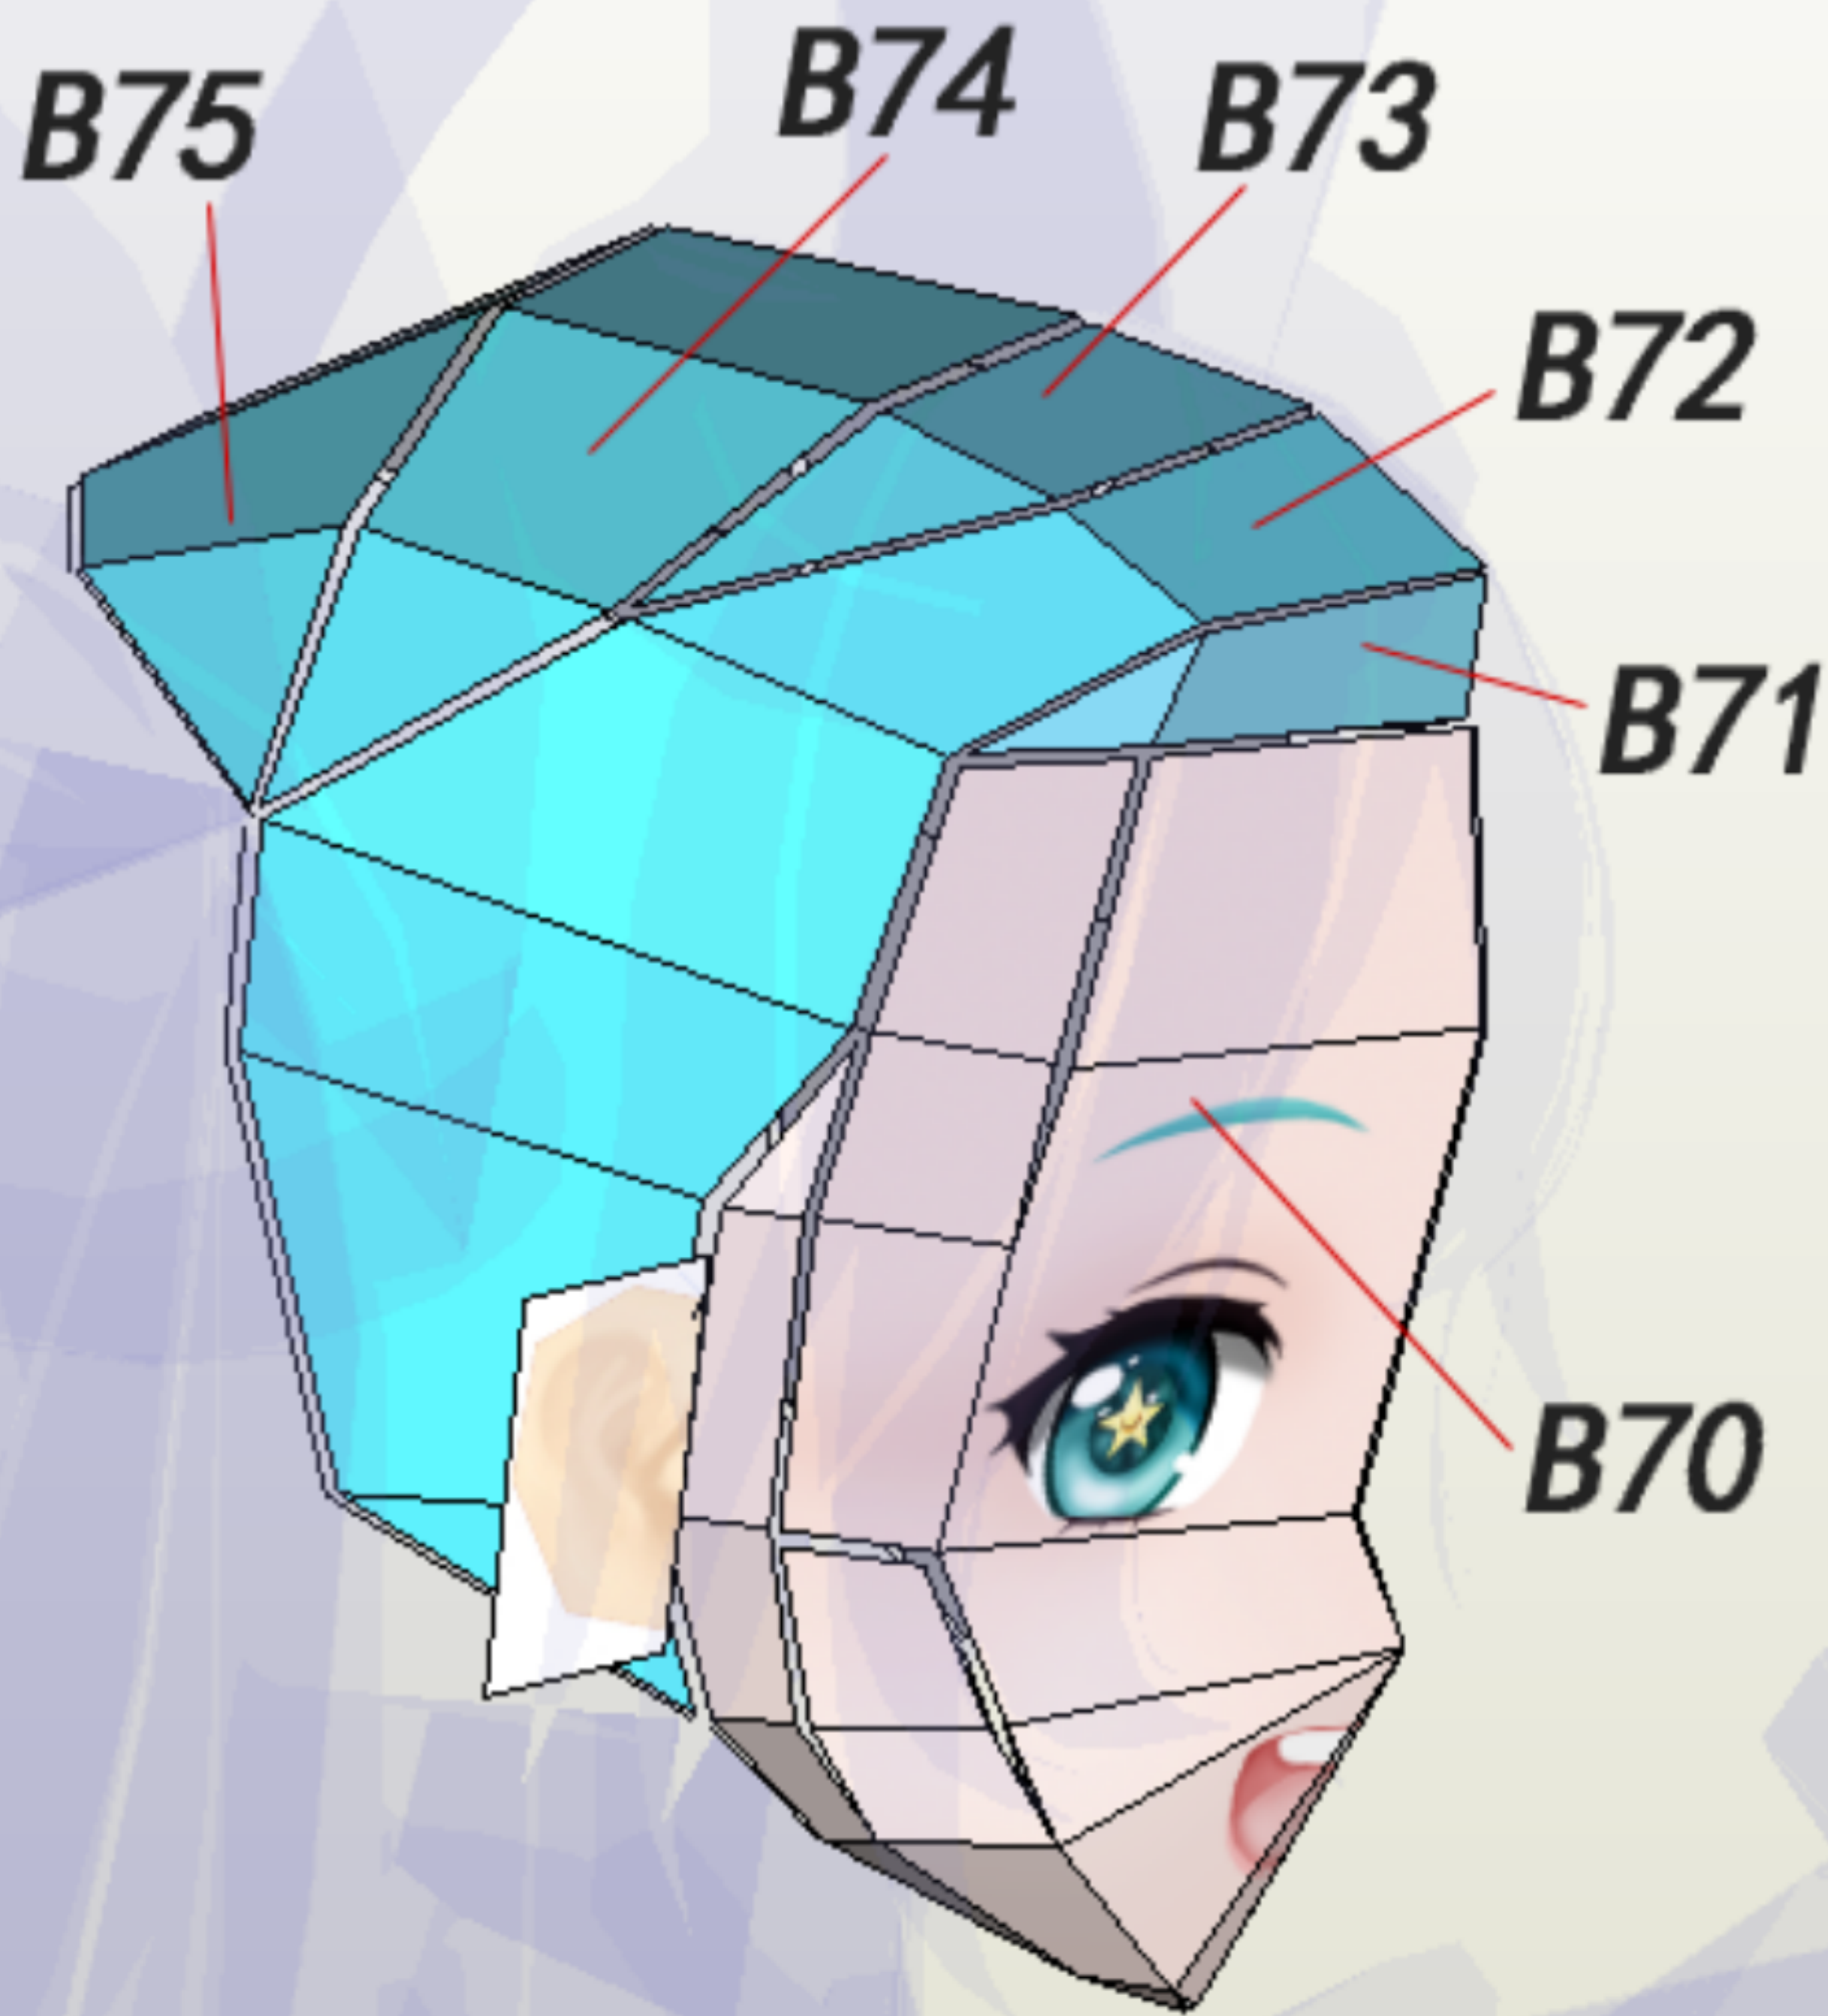

B80

B79 B80

需要加固

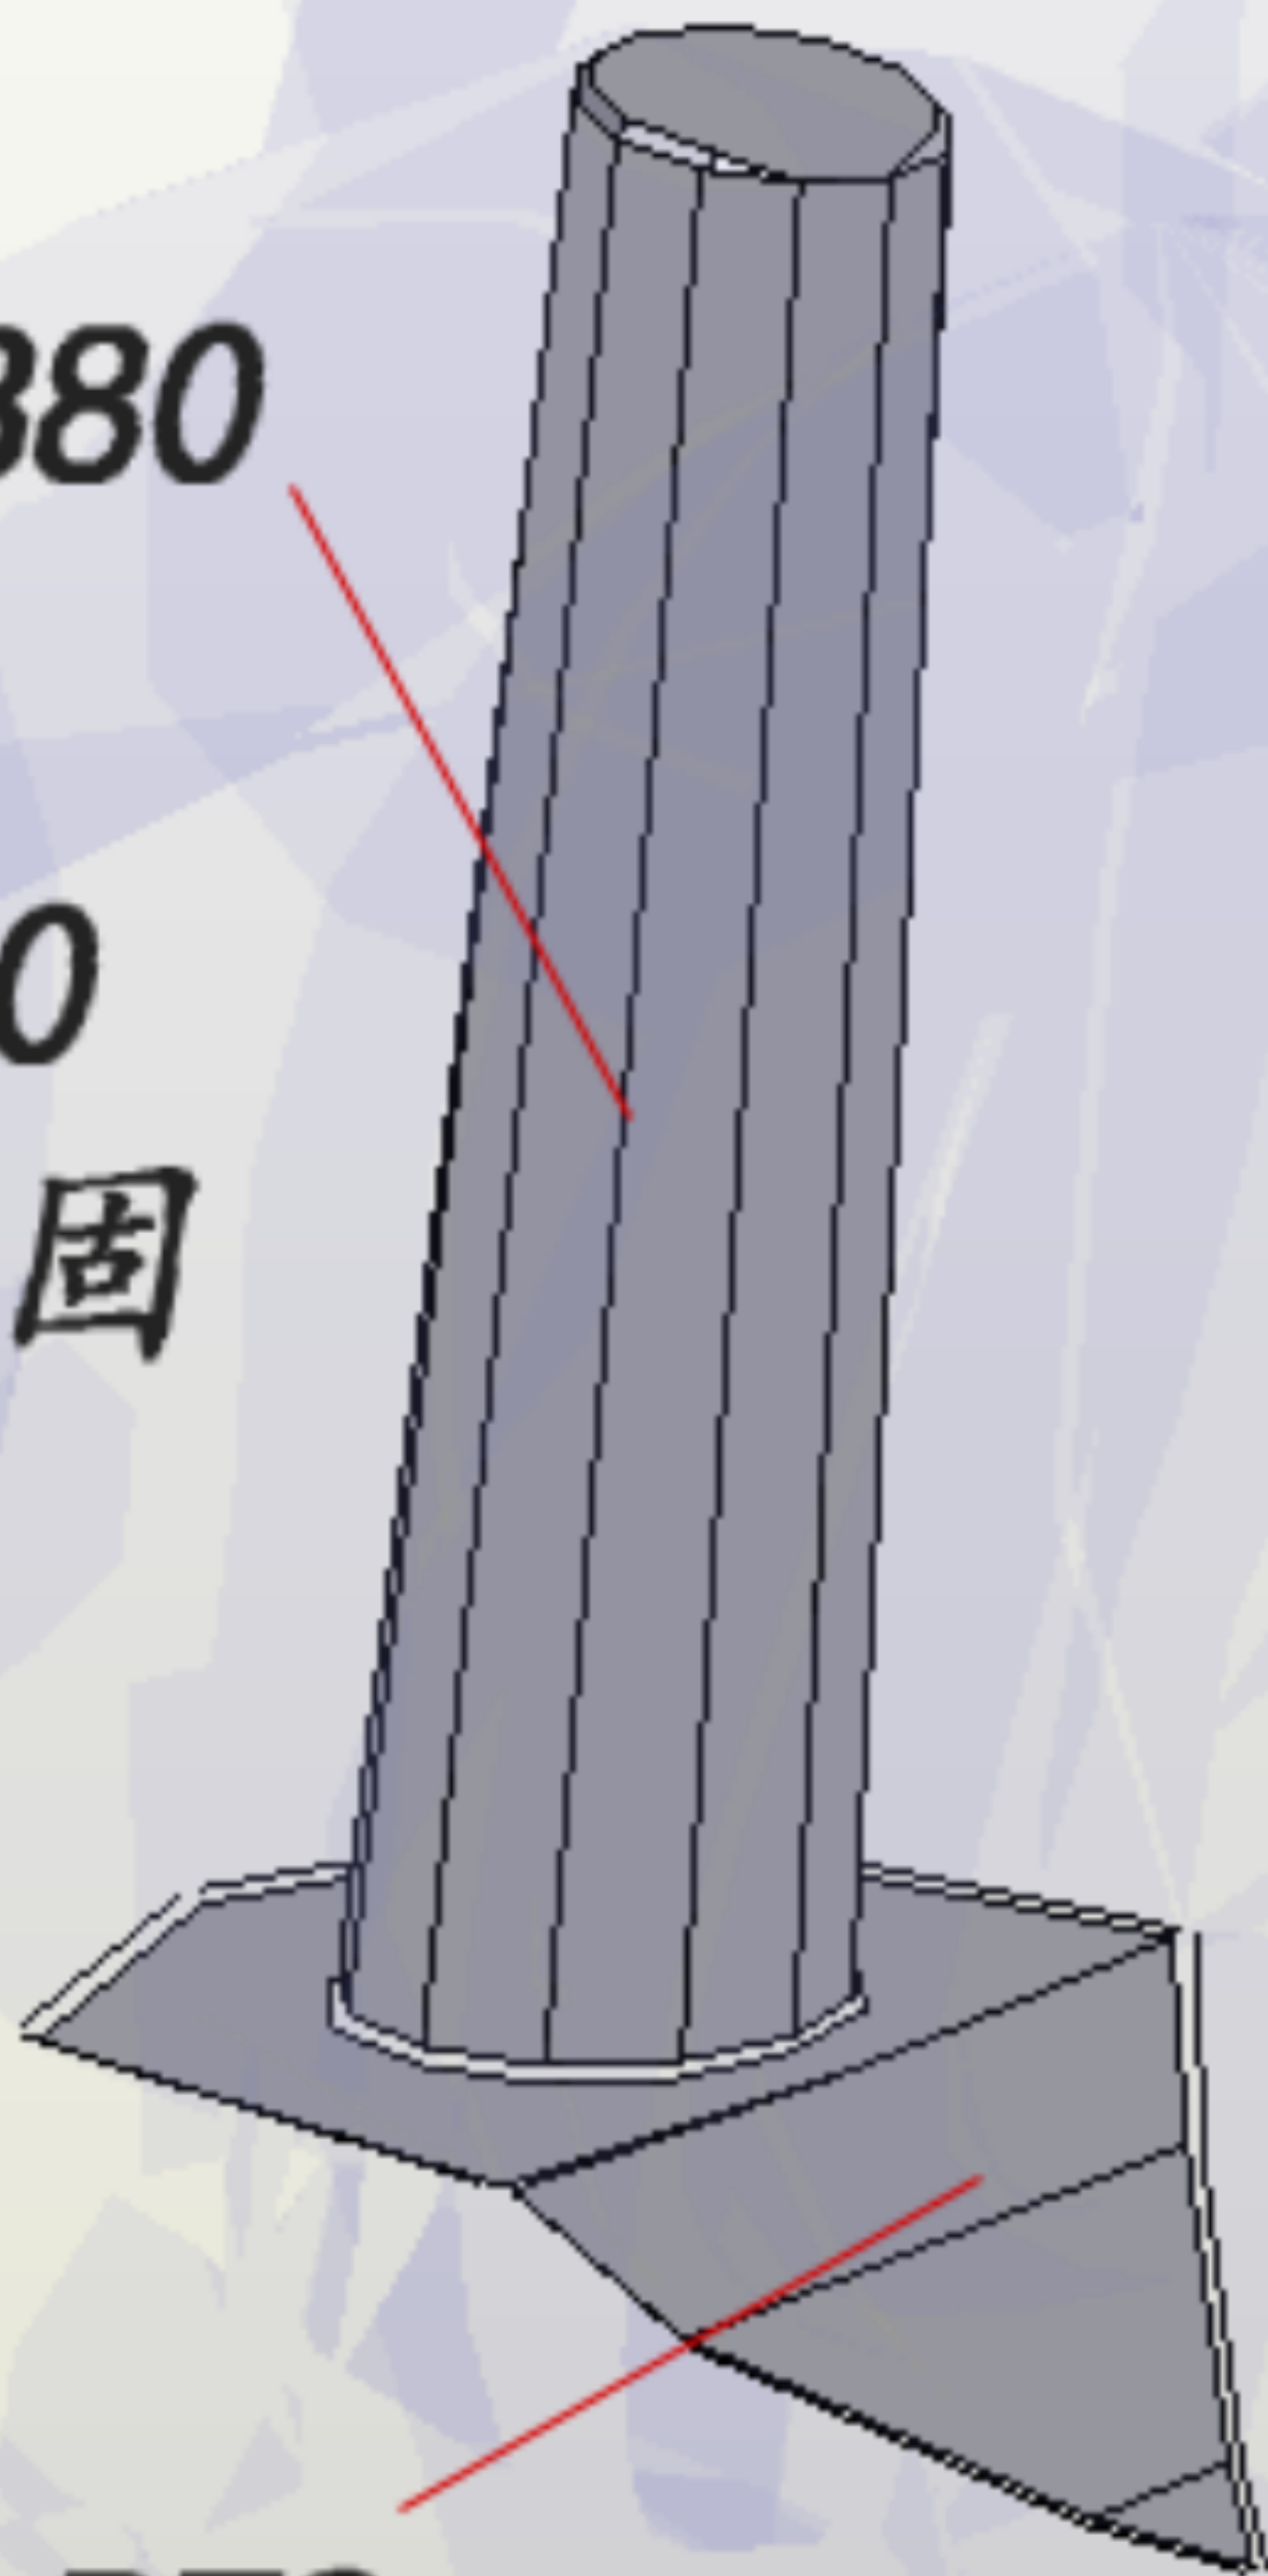



B79

B75

B74


B76

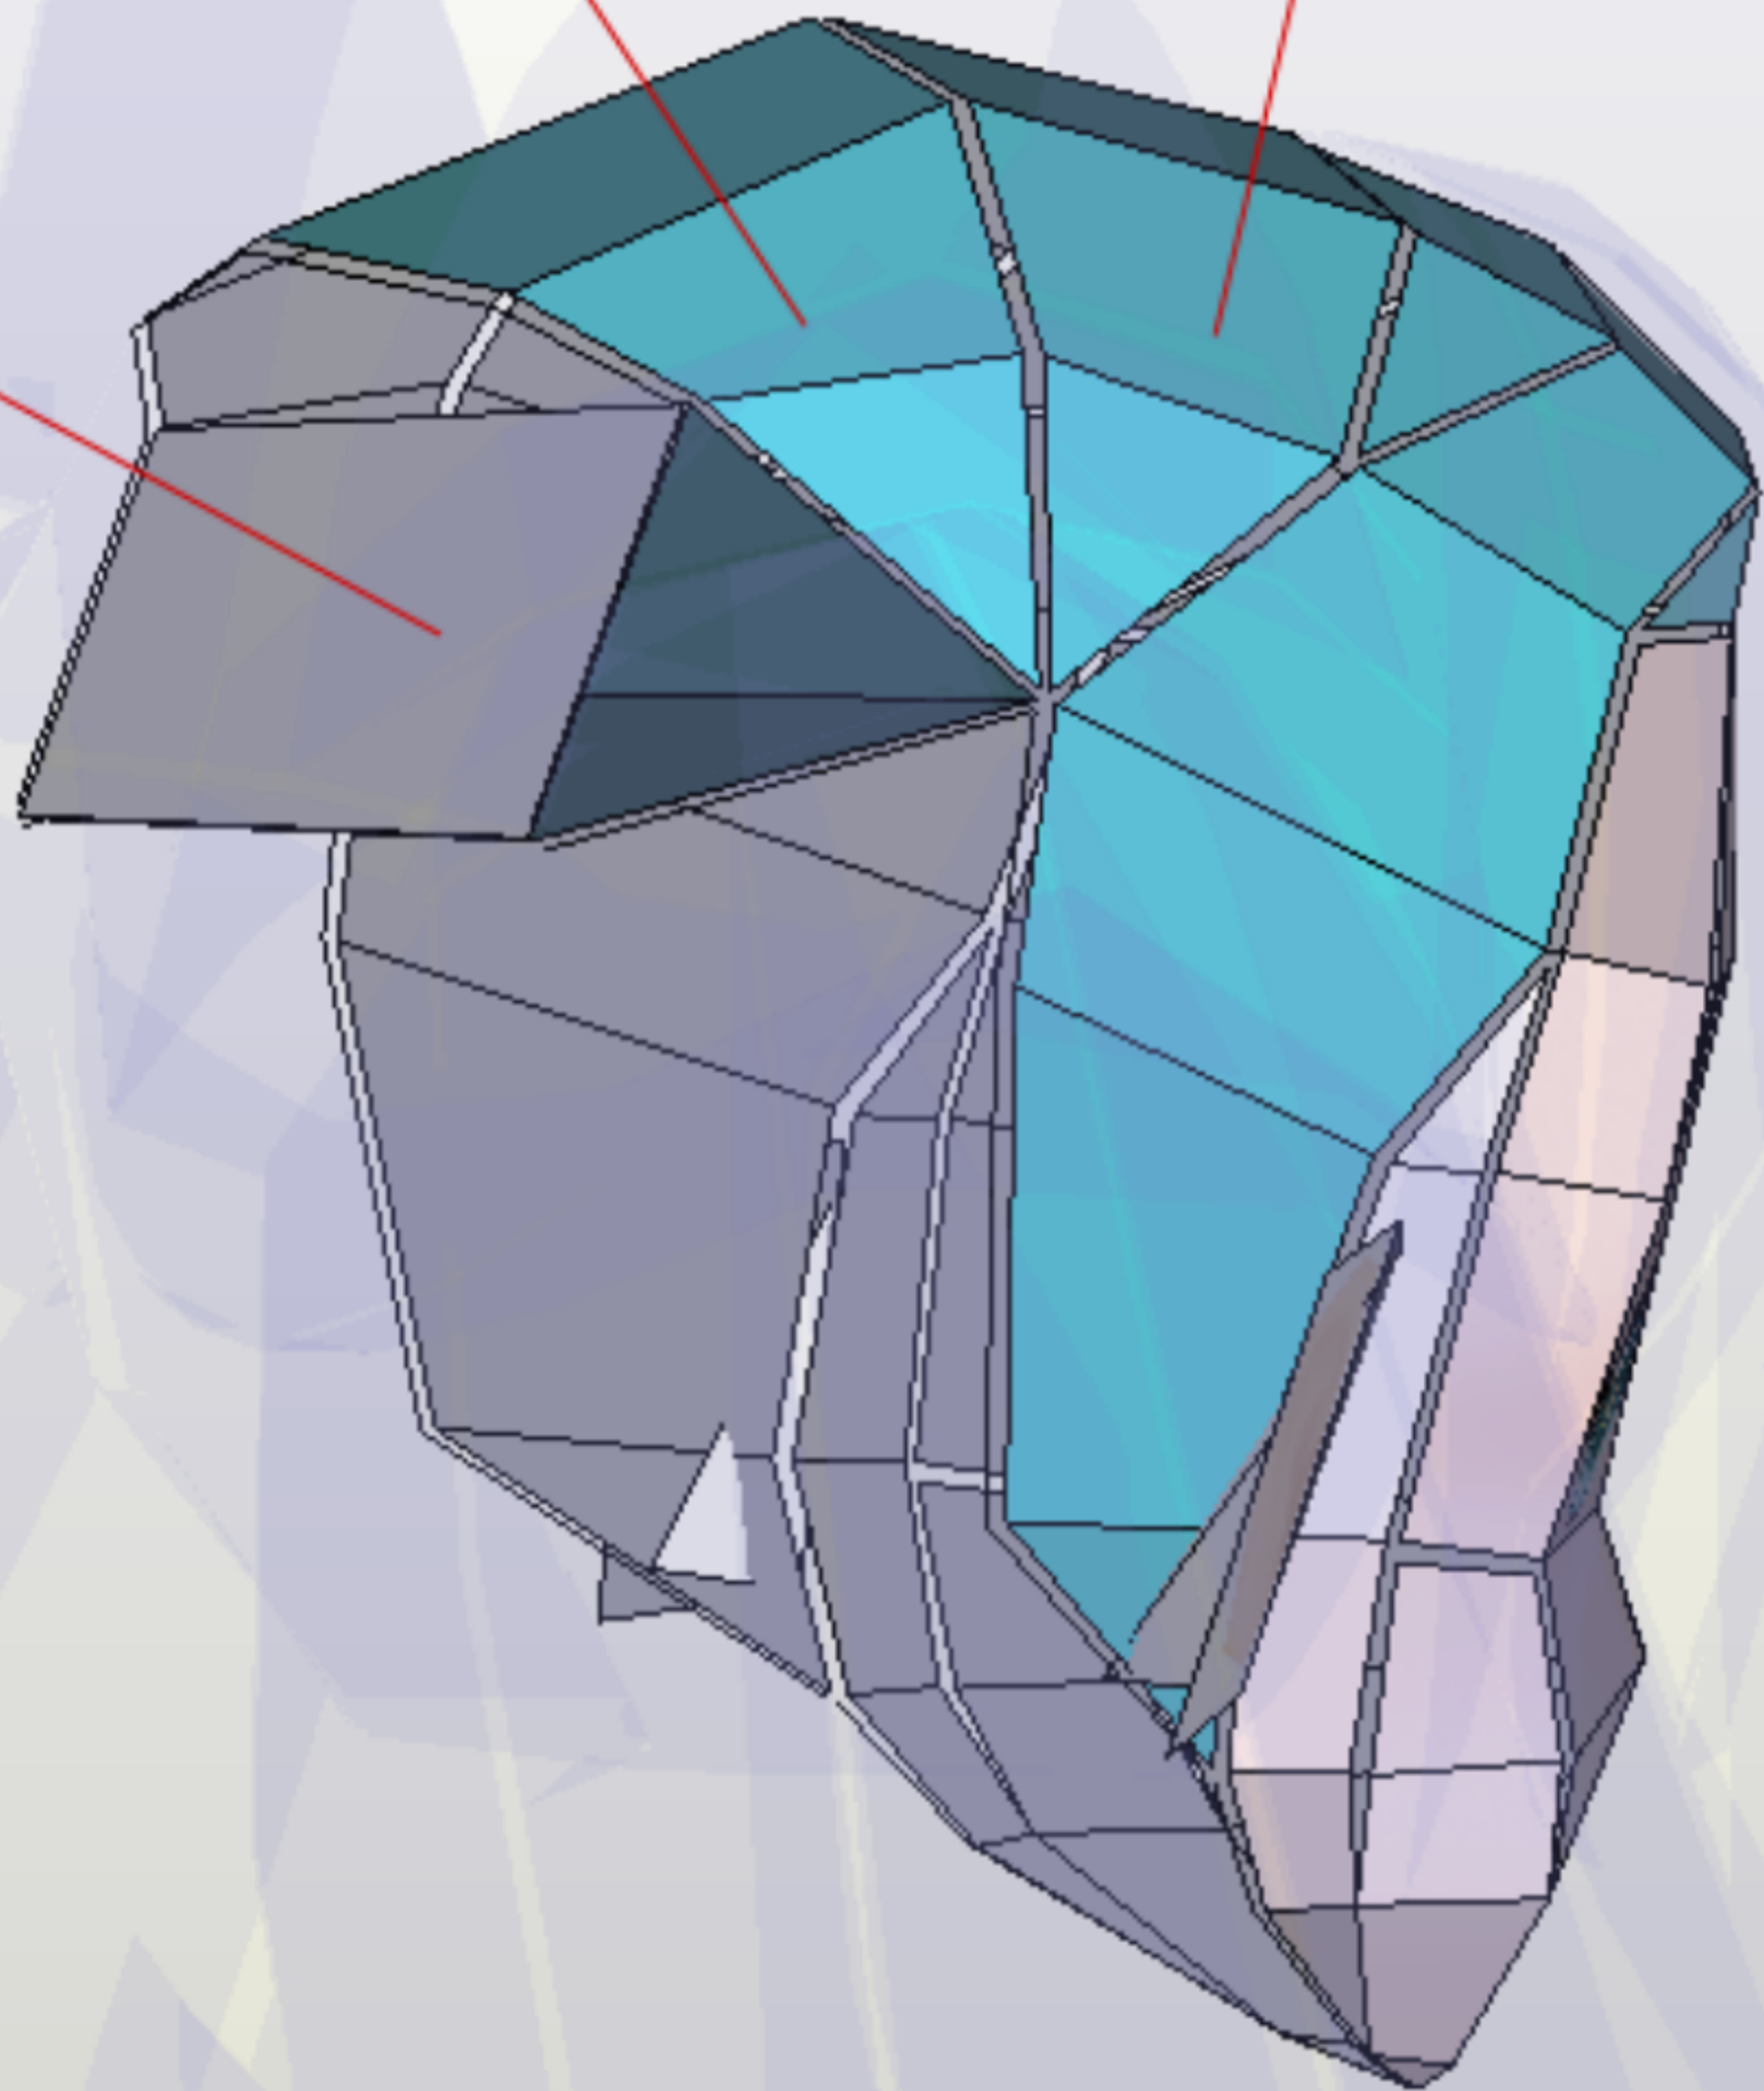

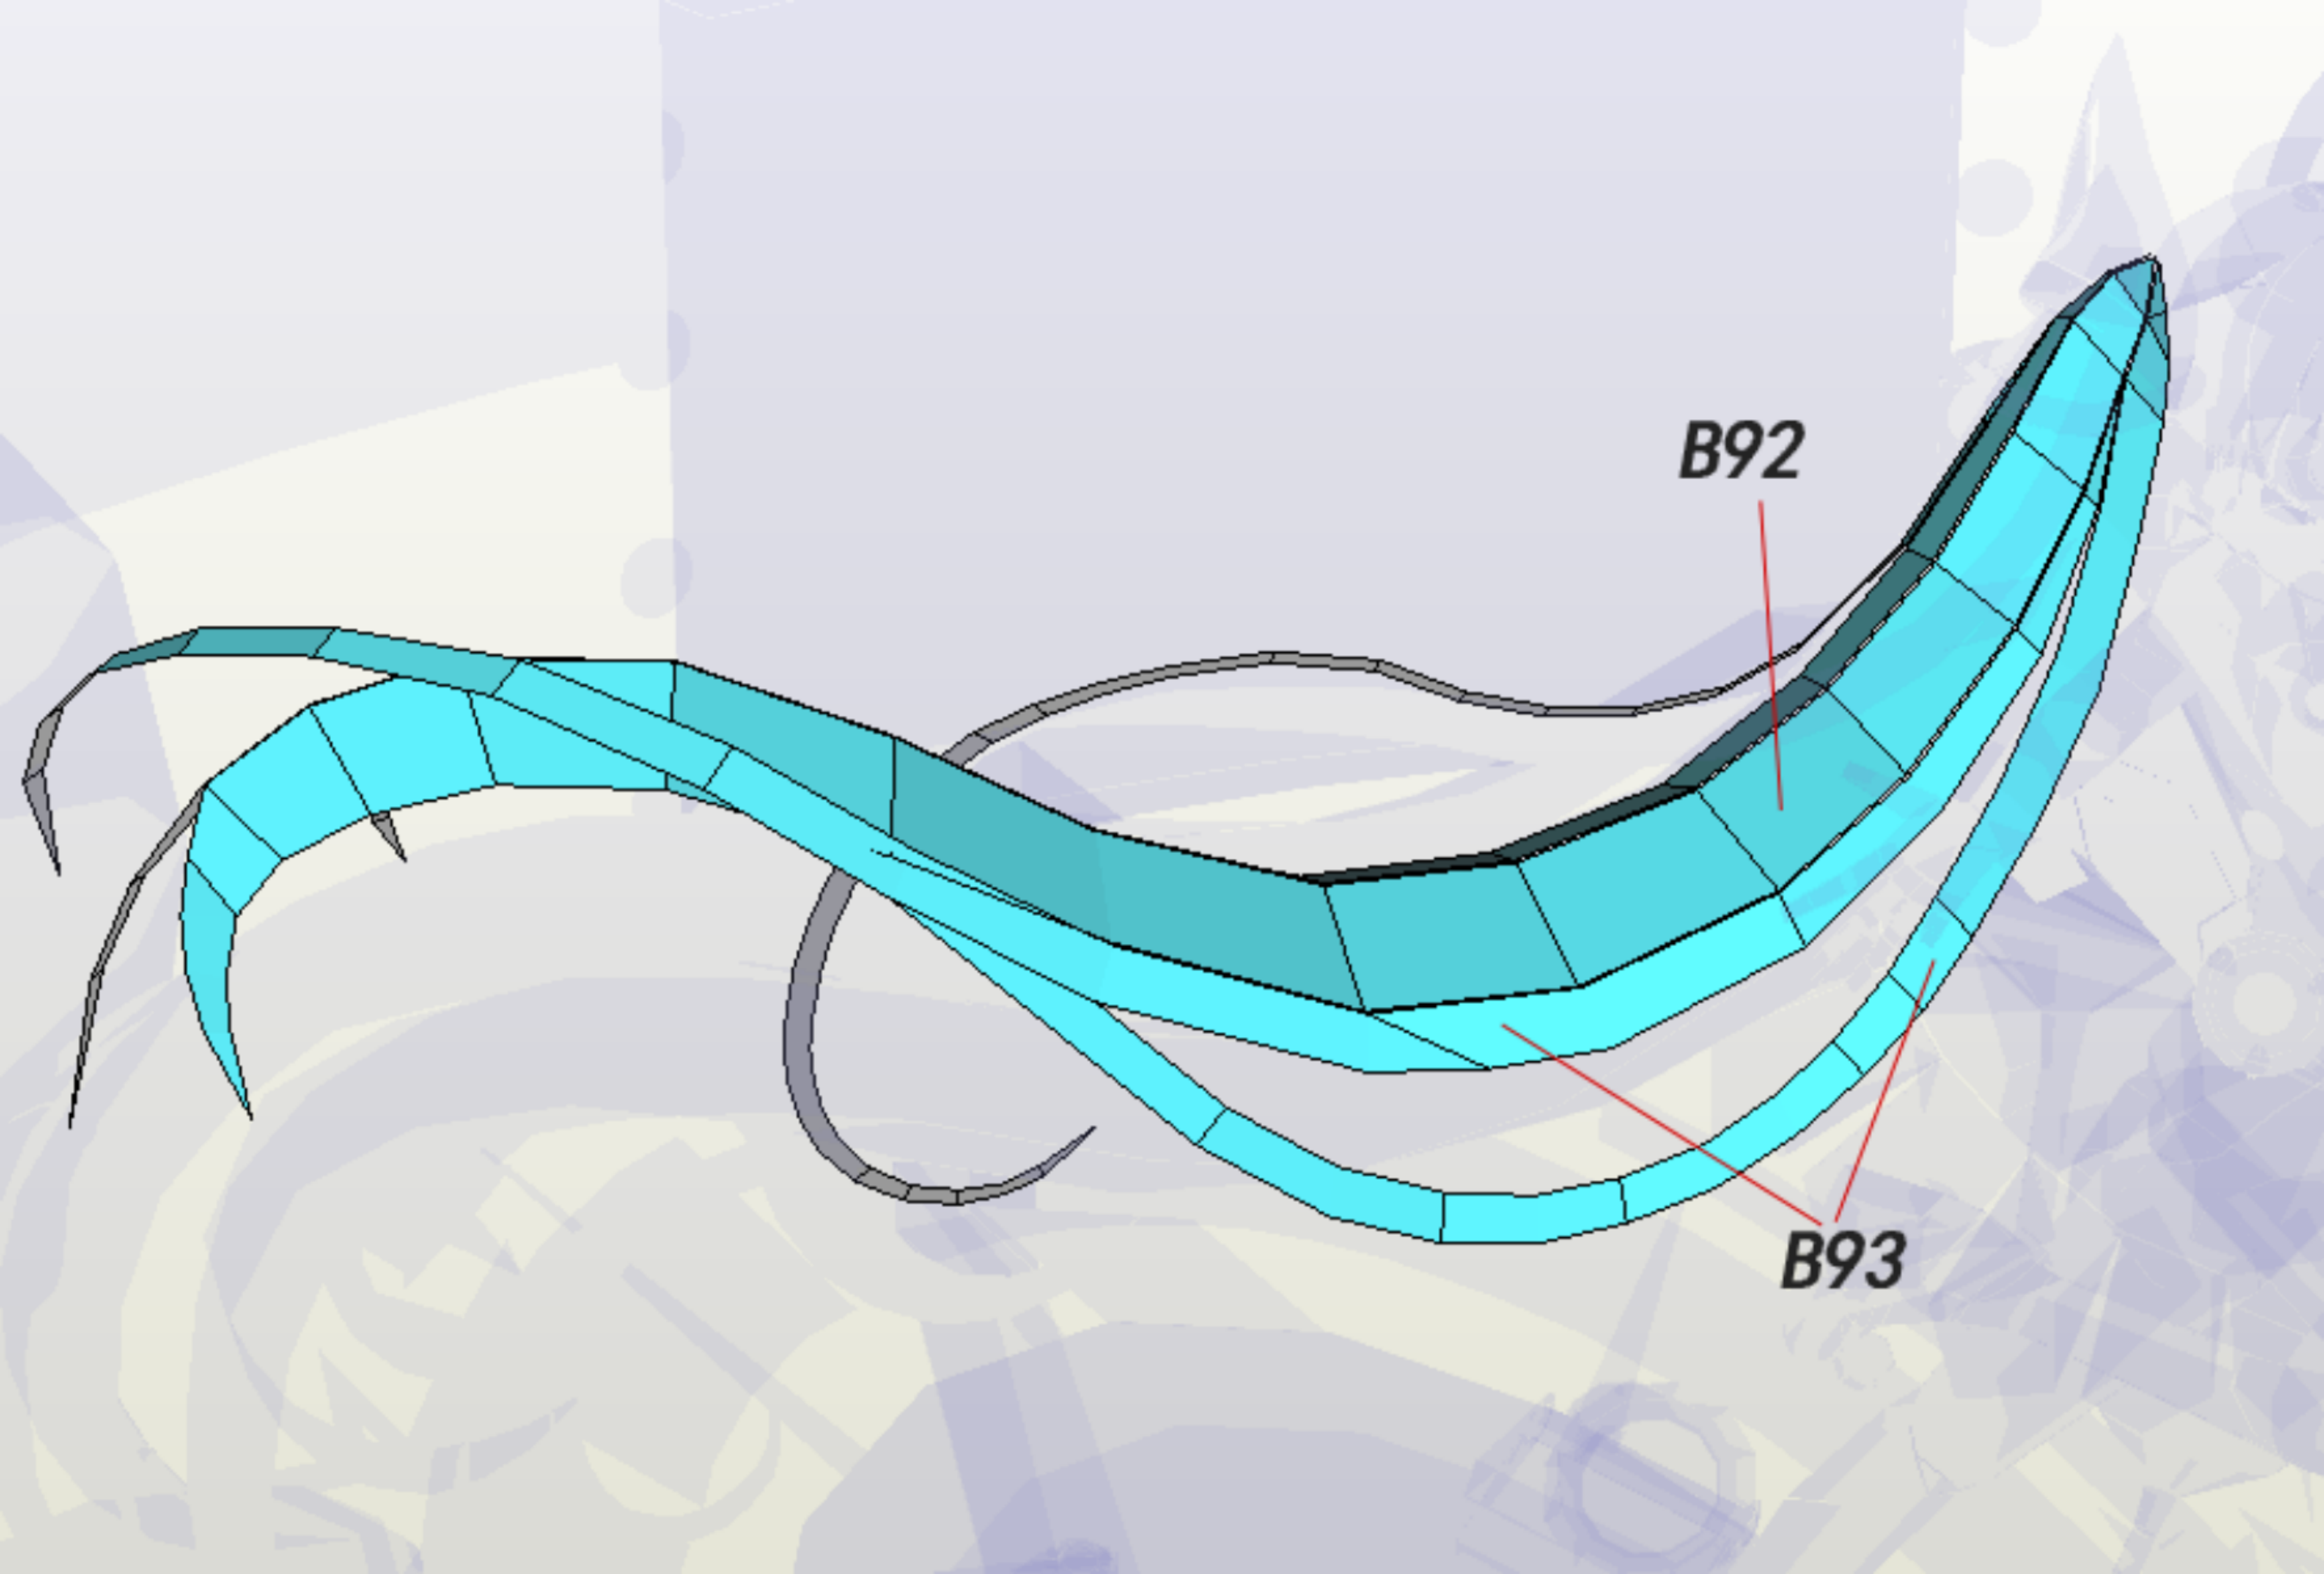


B92

B93

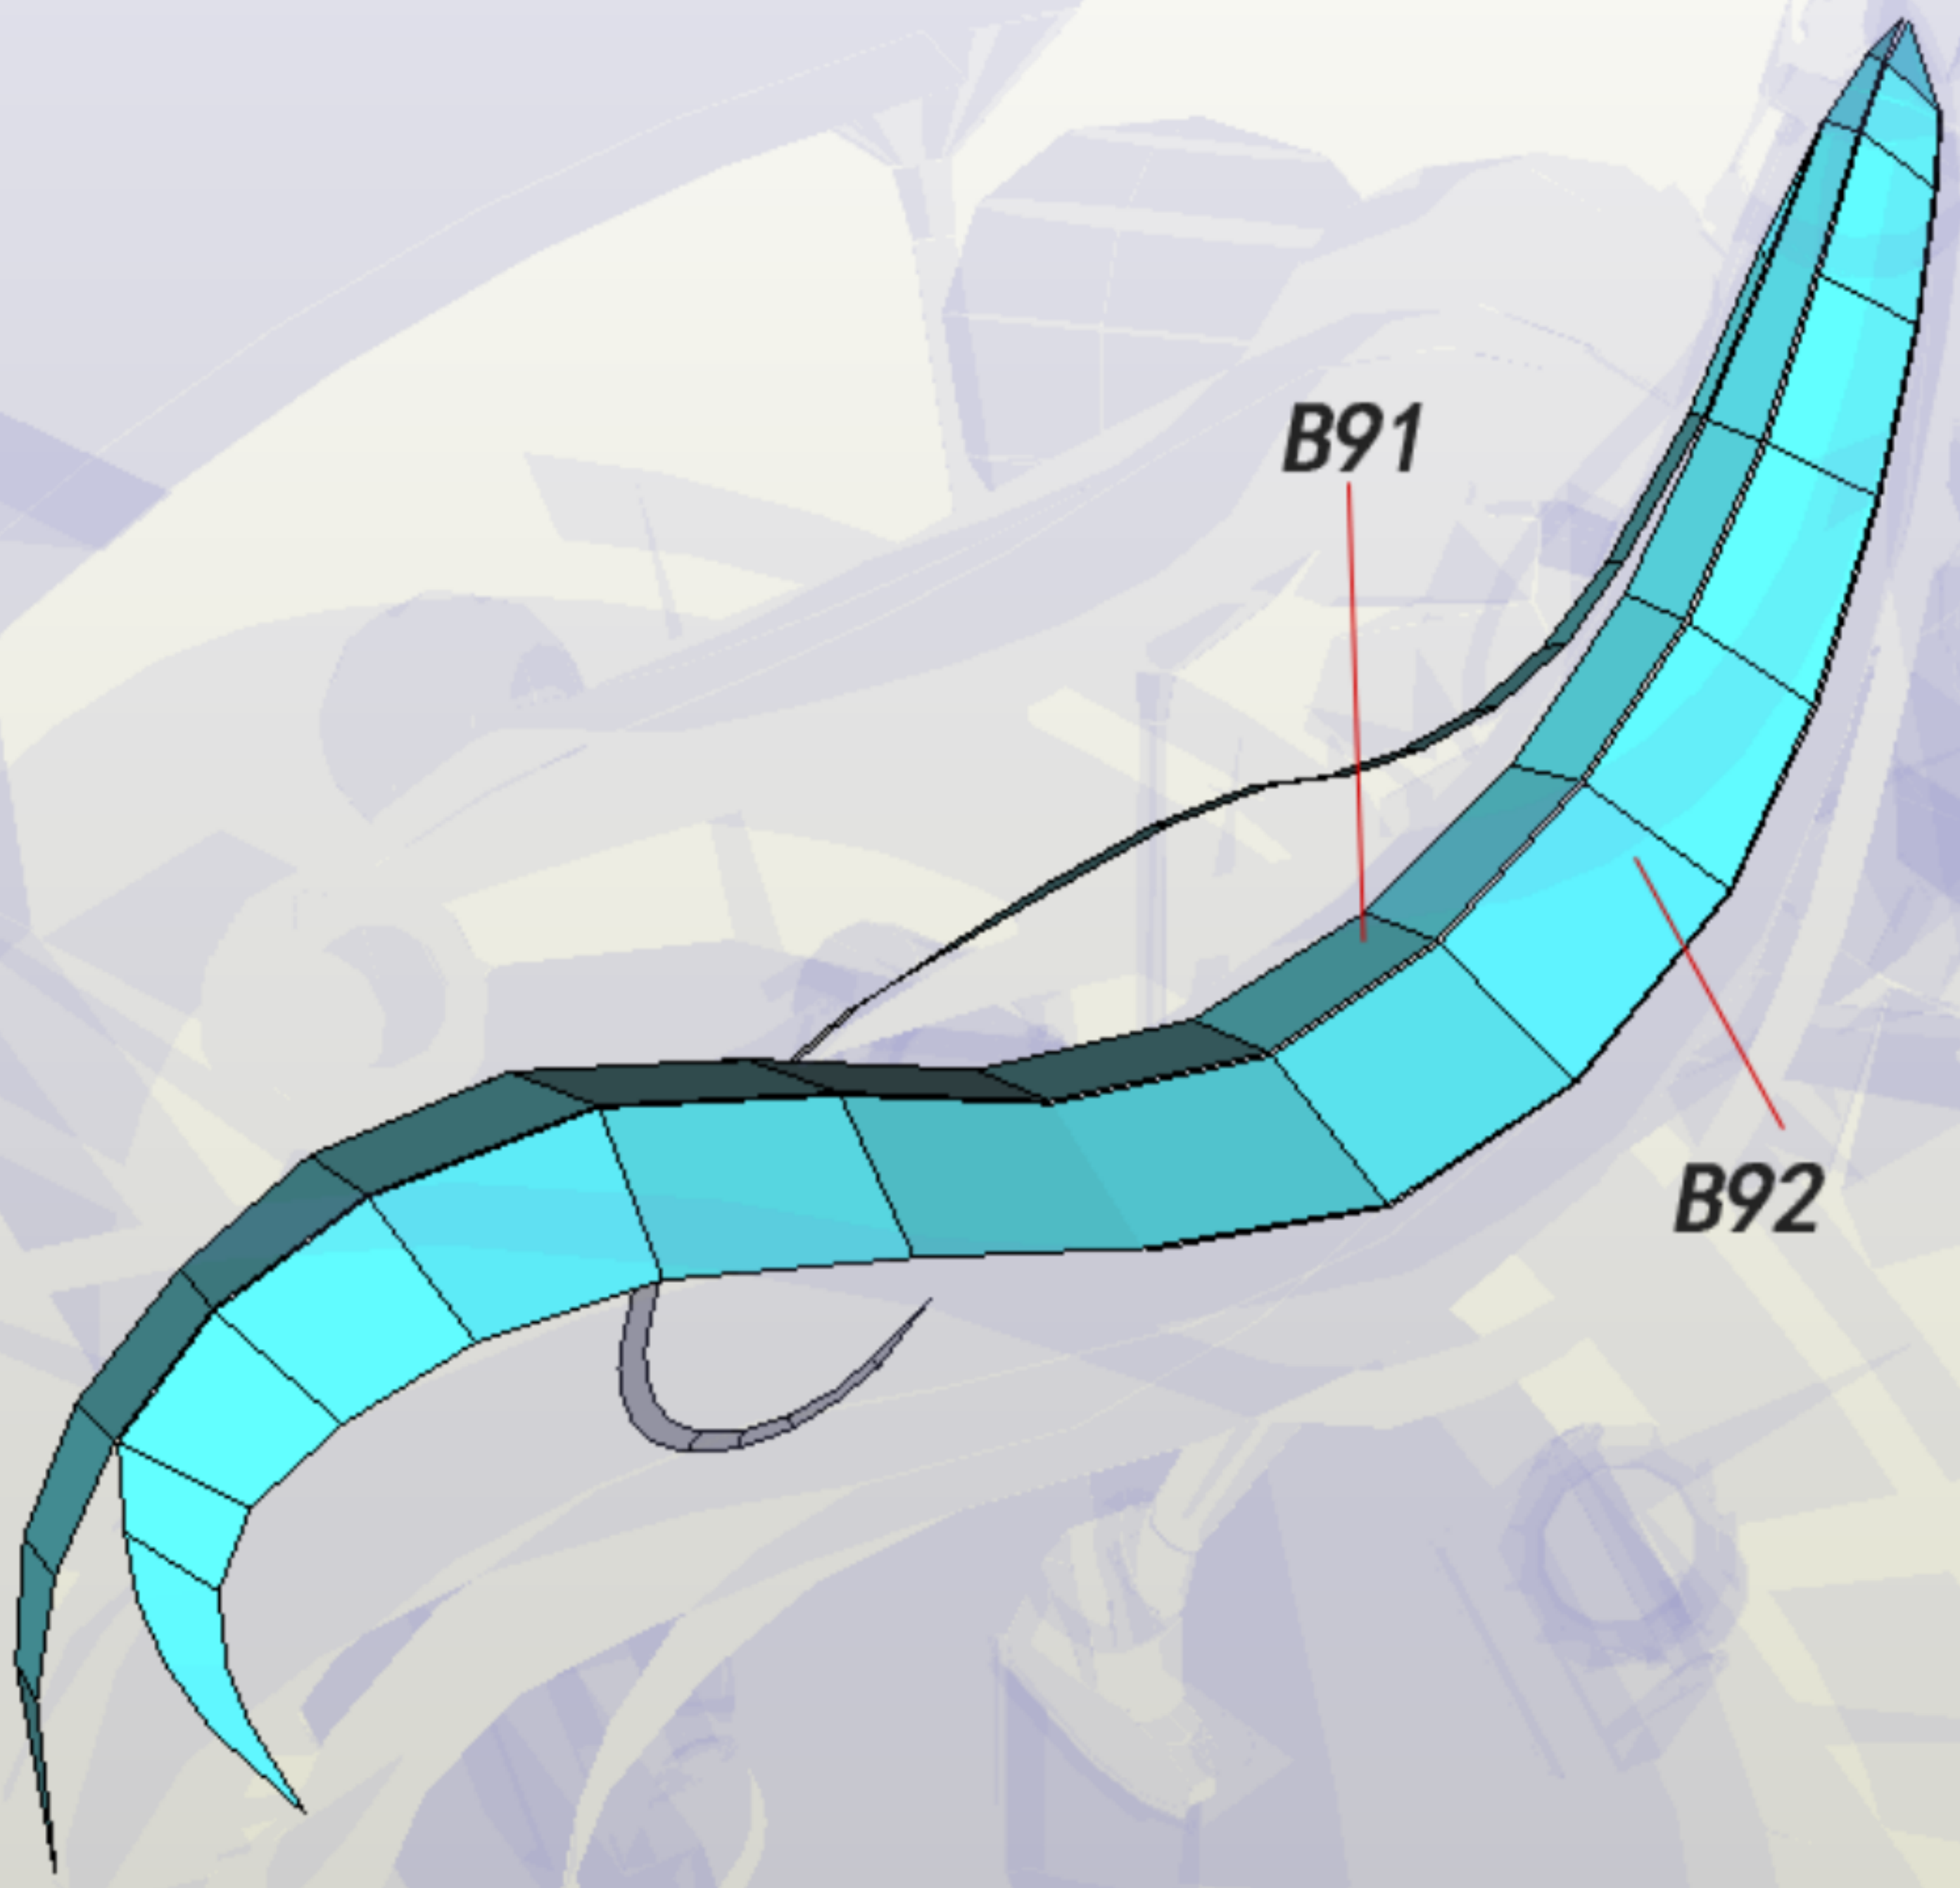


B91

B92

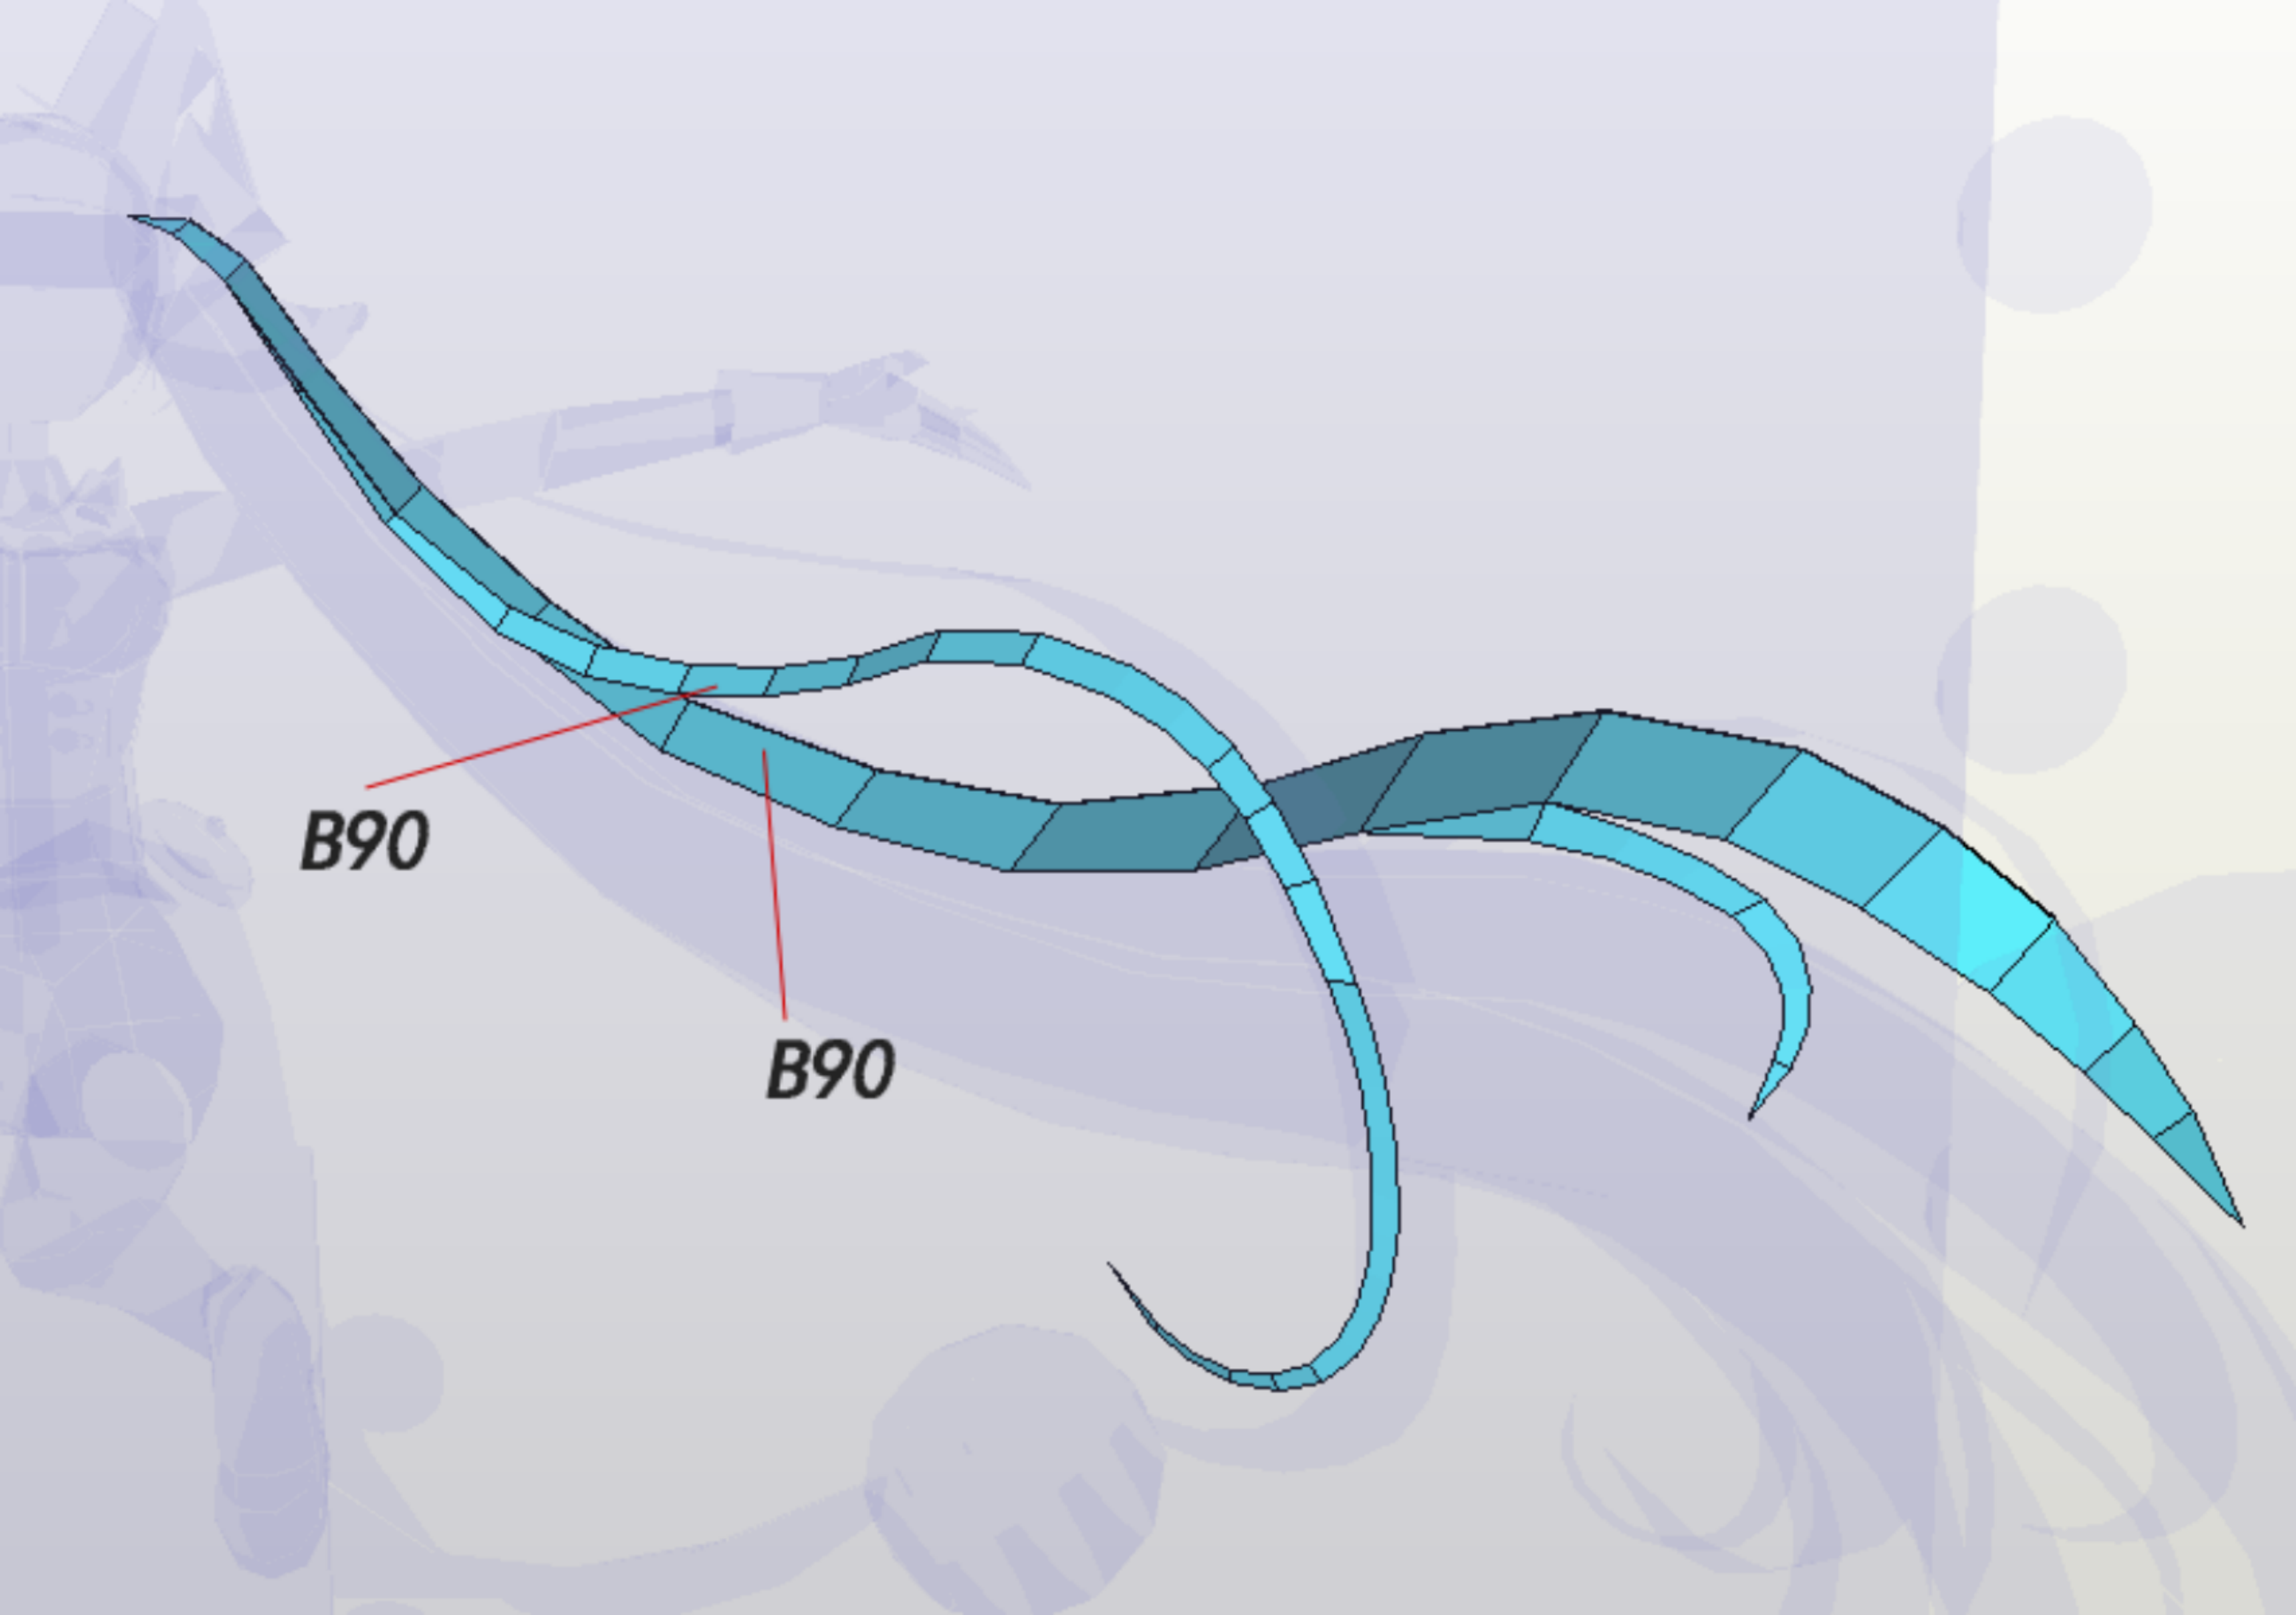


B90

B90

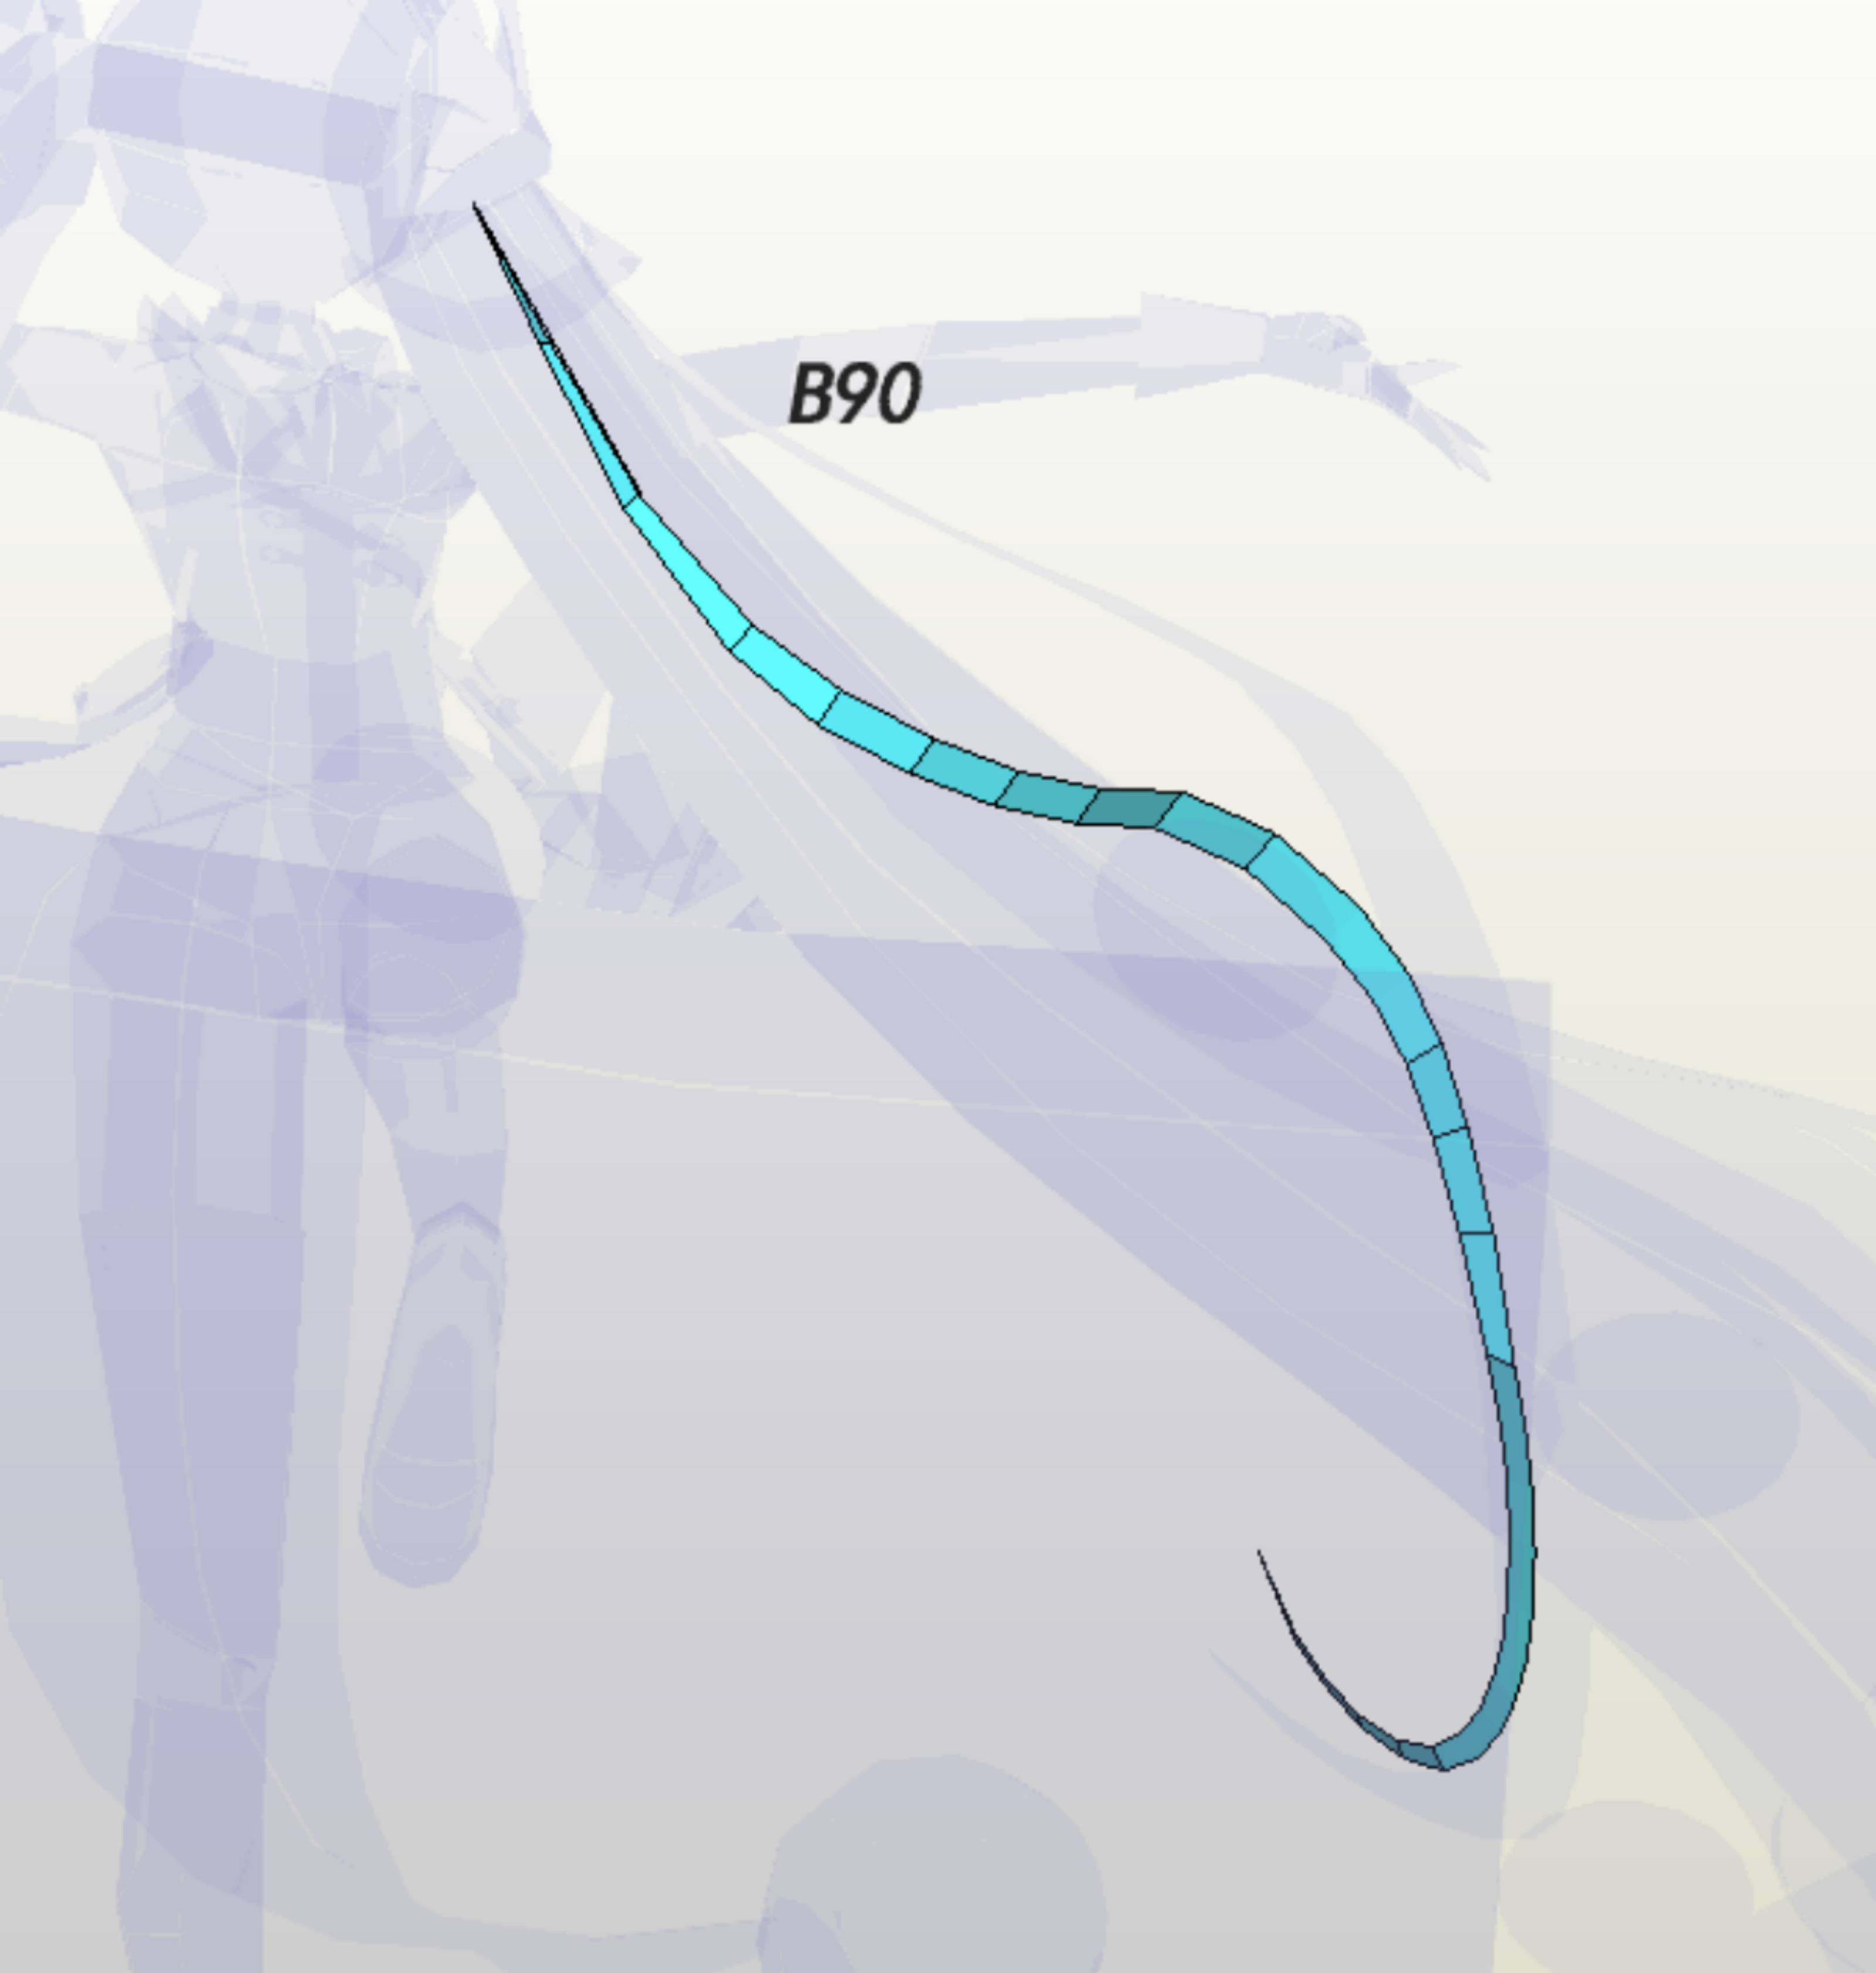


B90

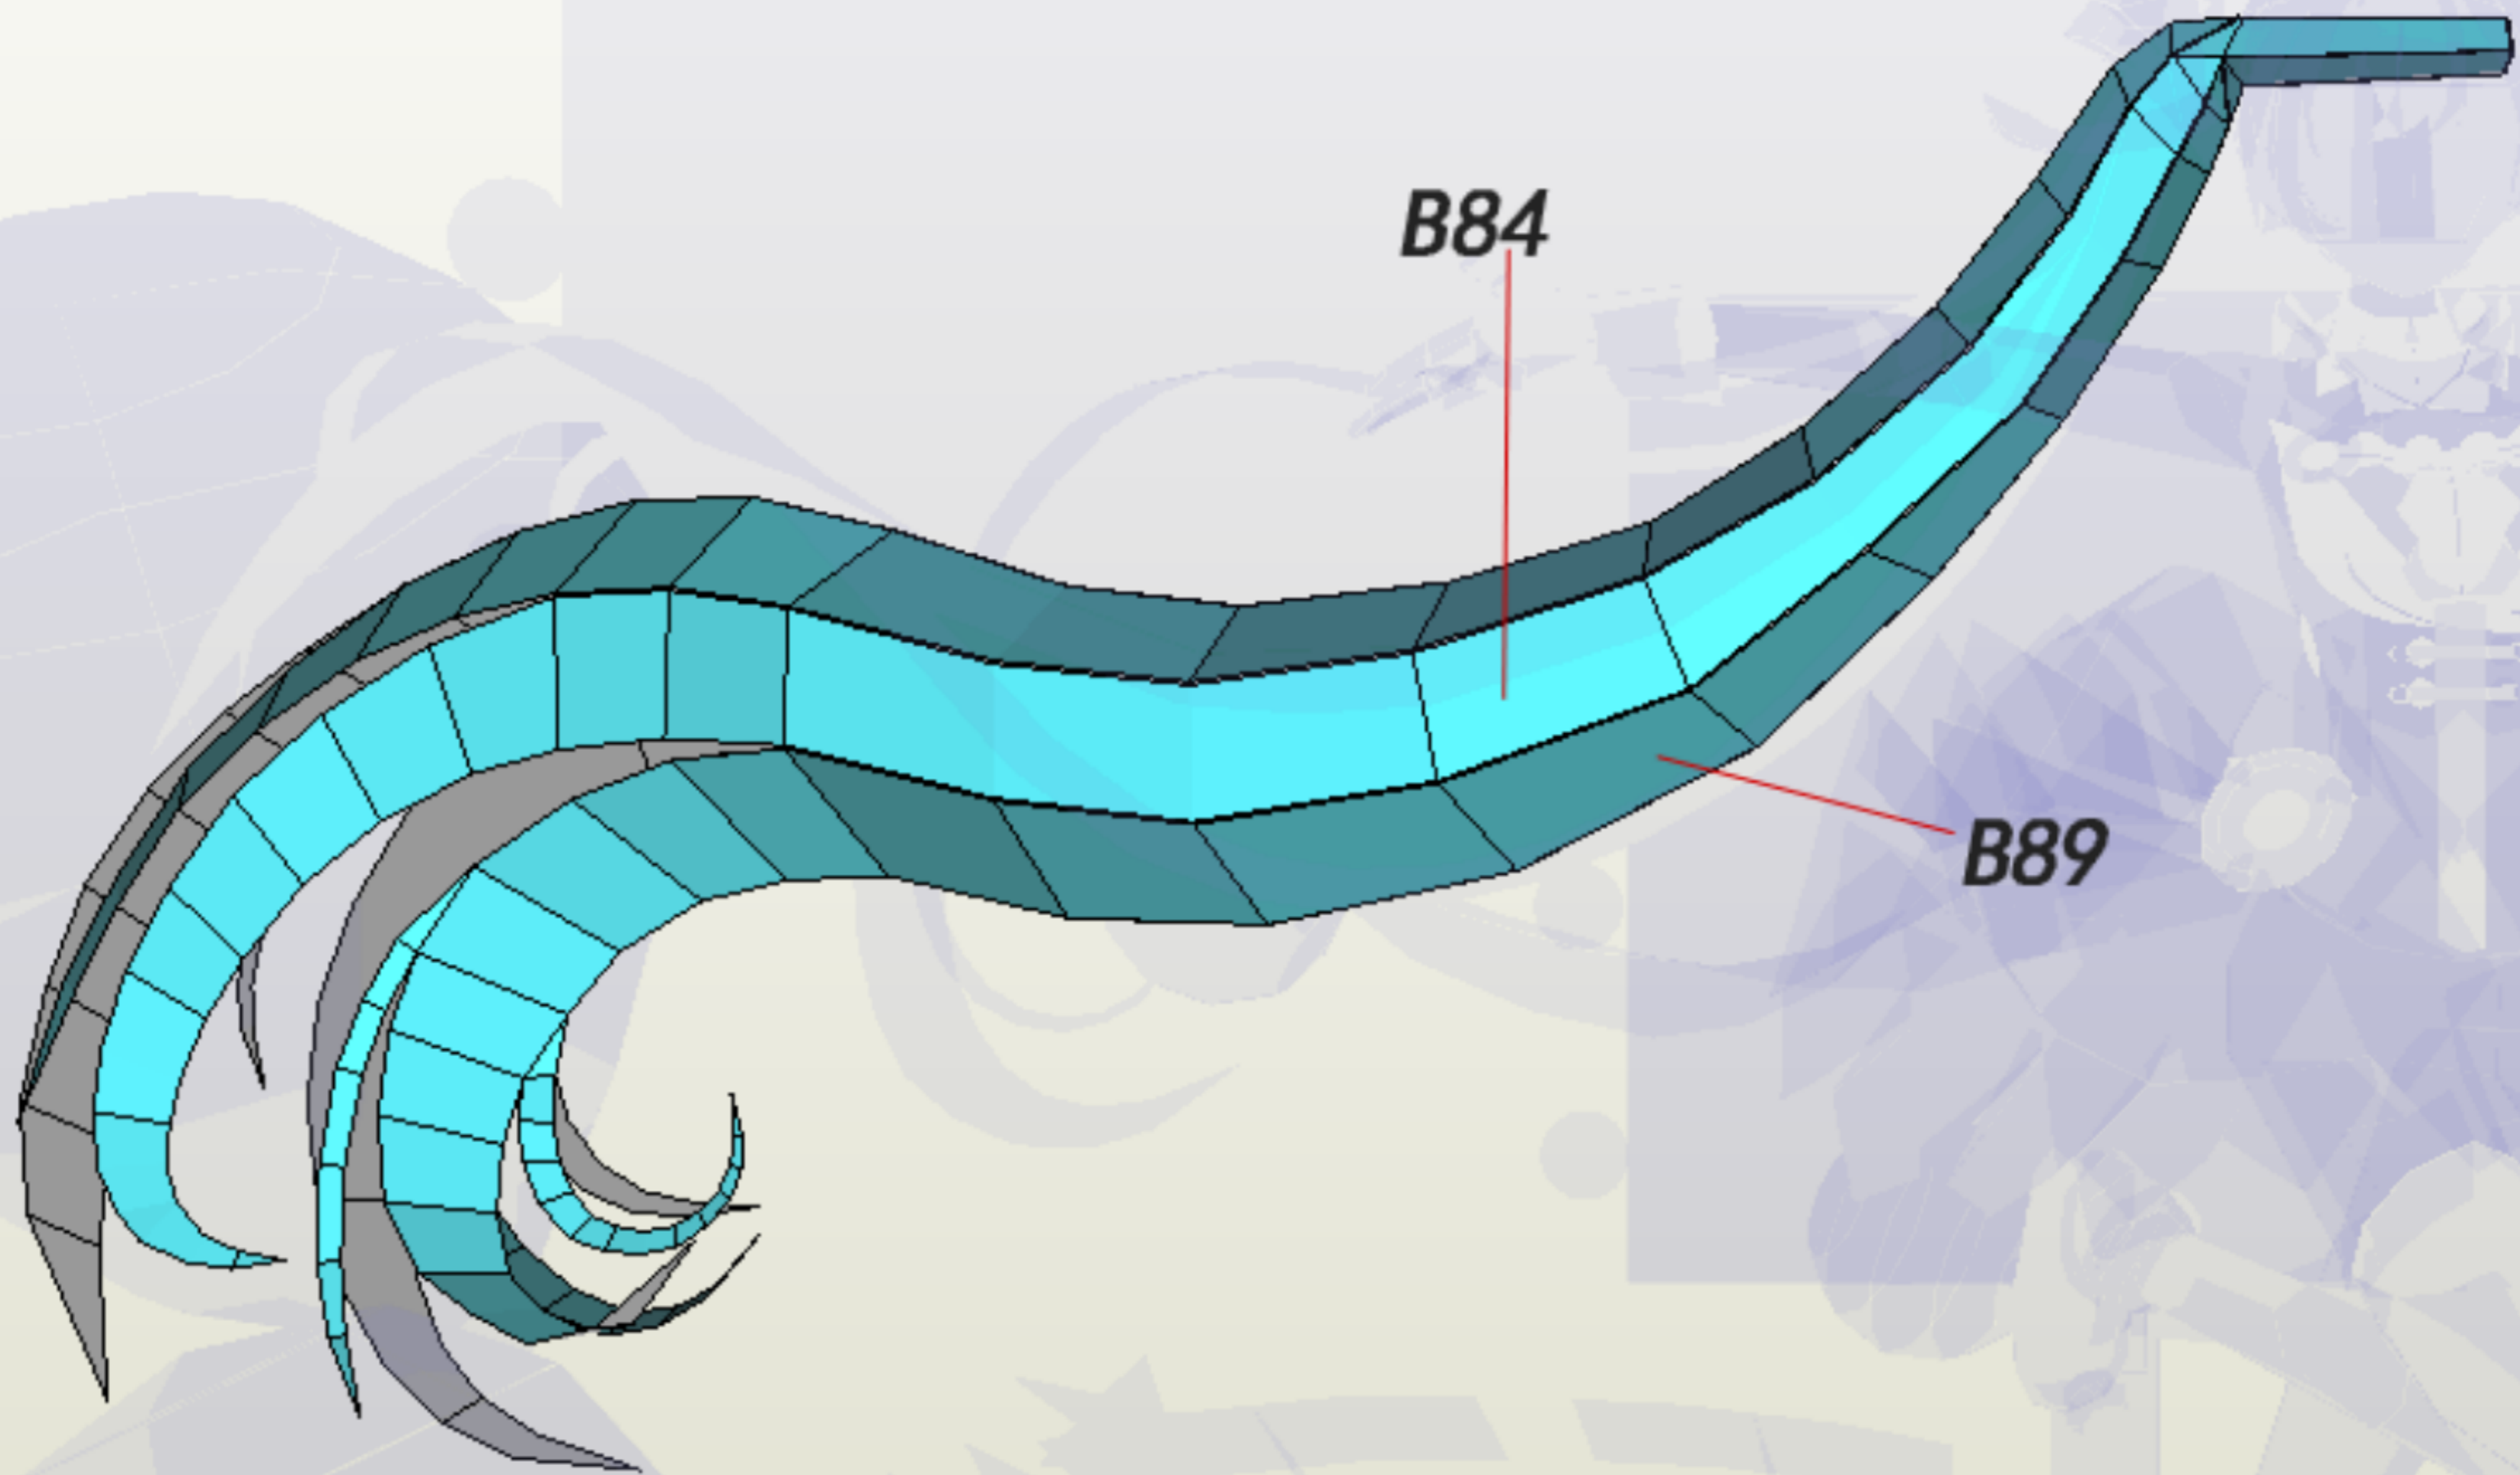

B84

B89

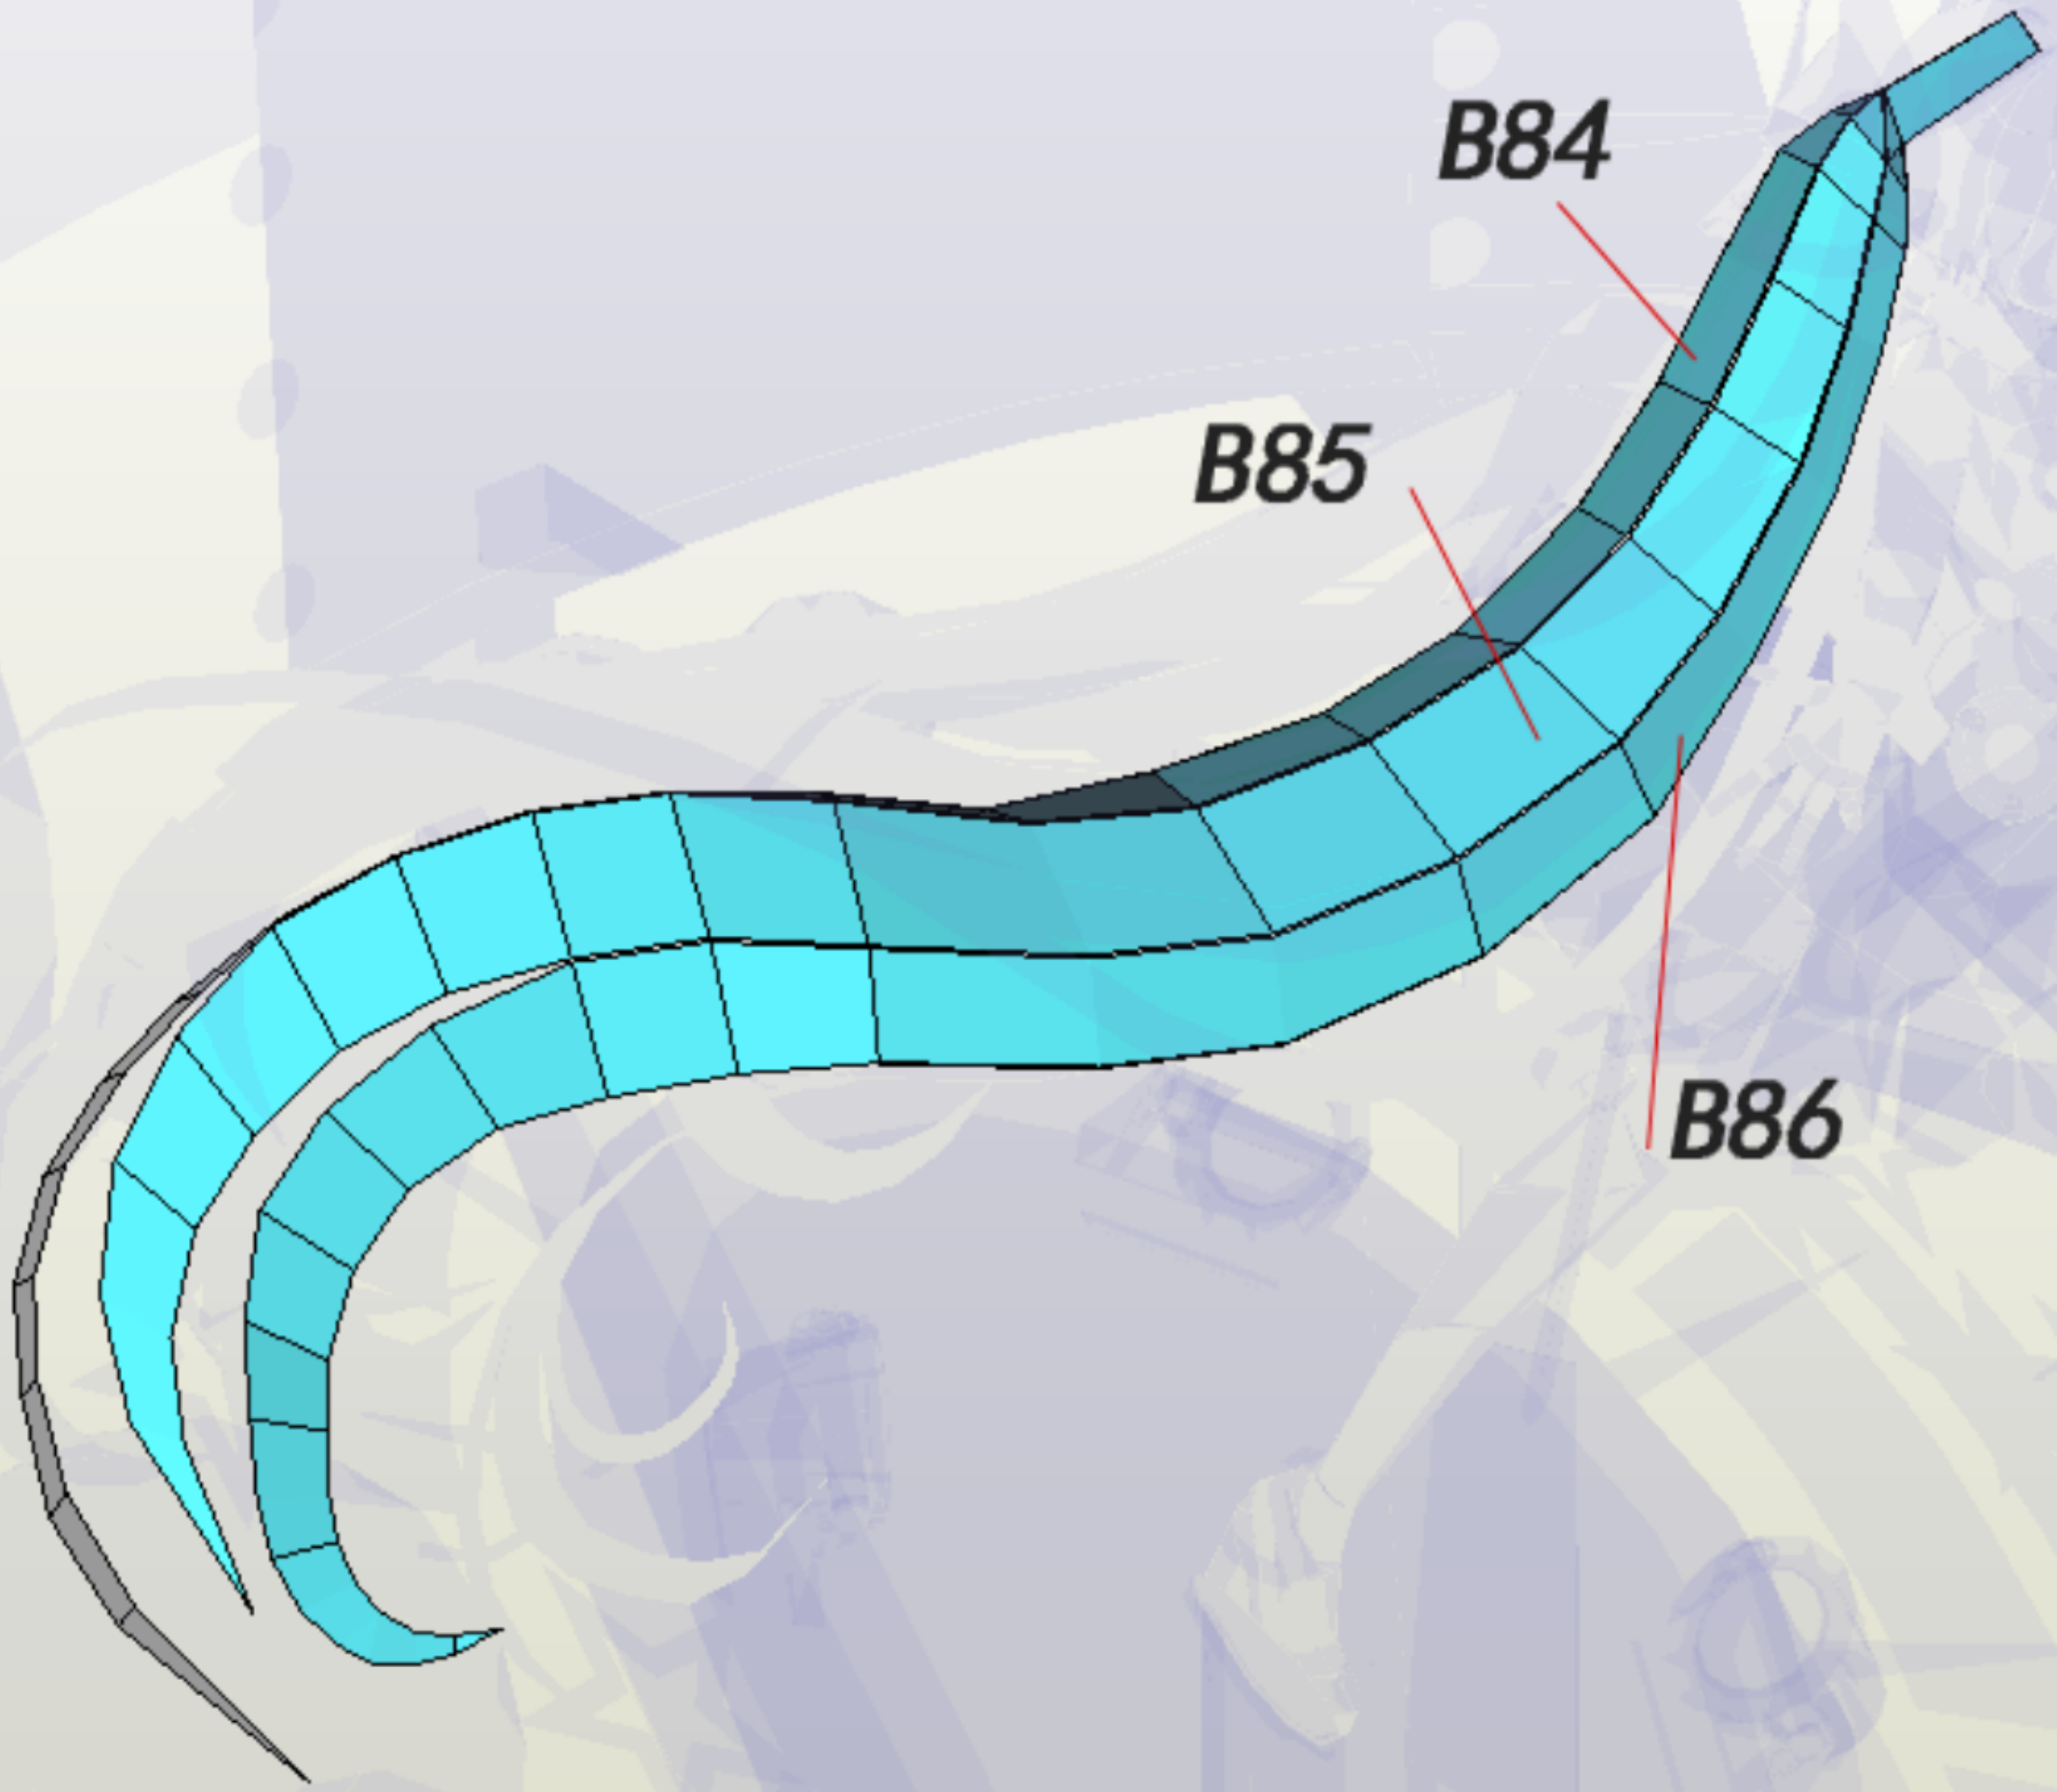


B84

B85

B86

B84

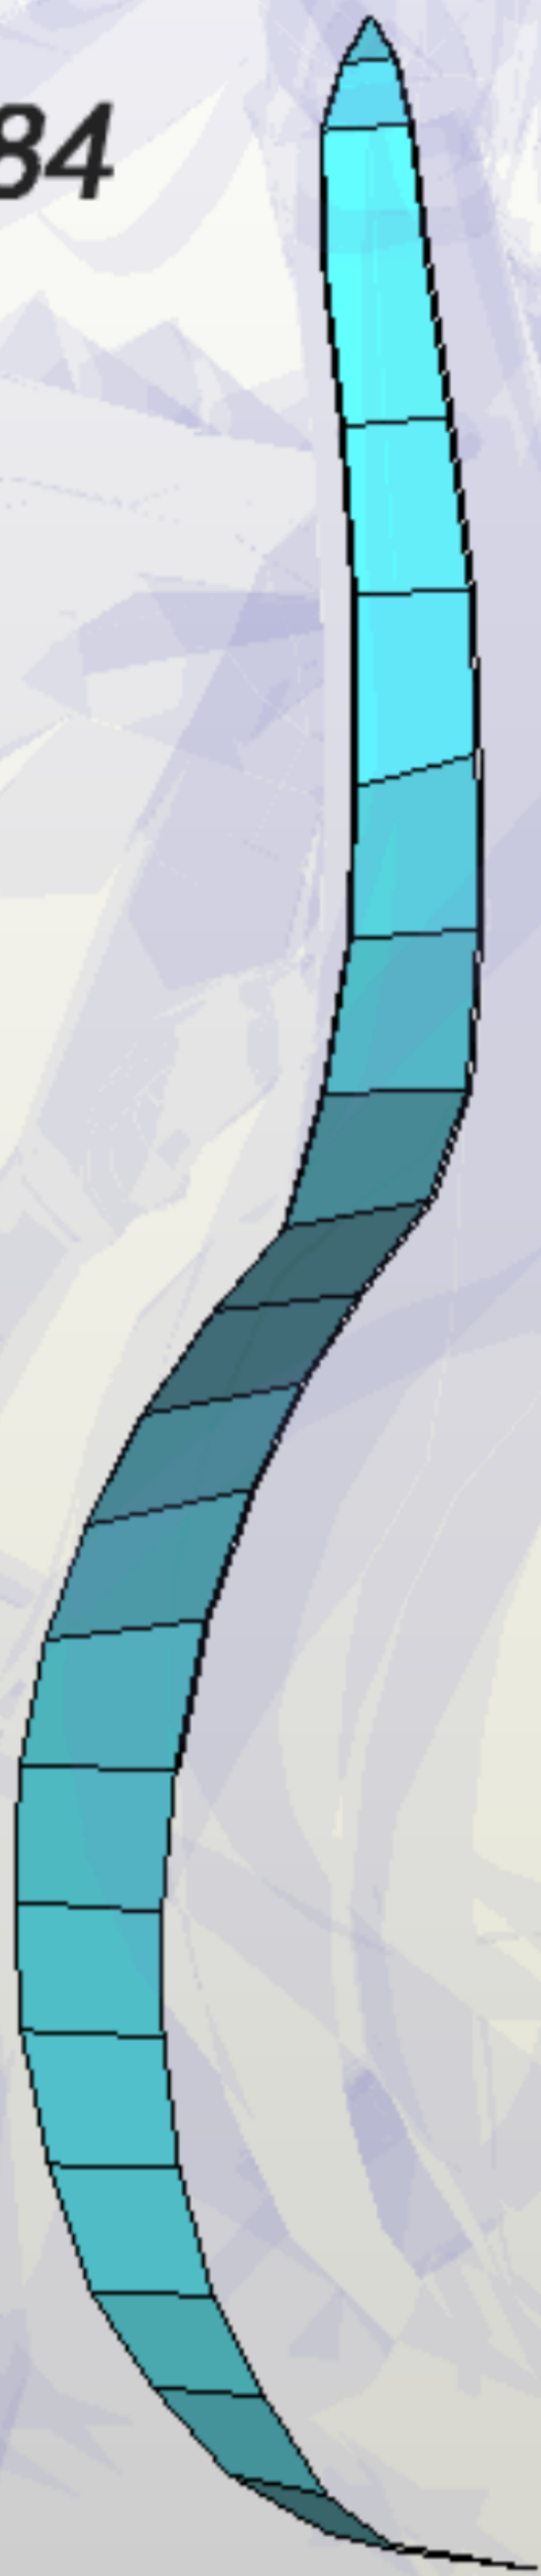






B74




前刘海沾B73上面

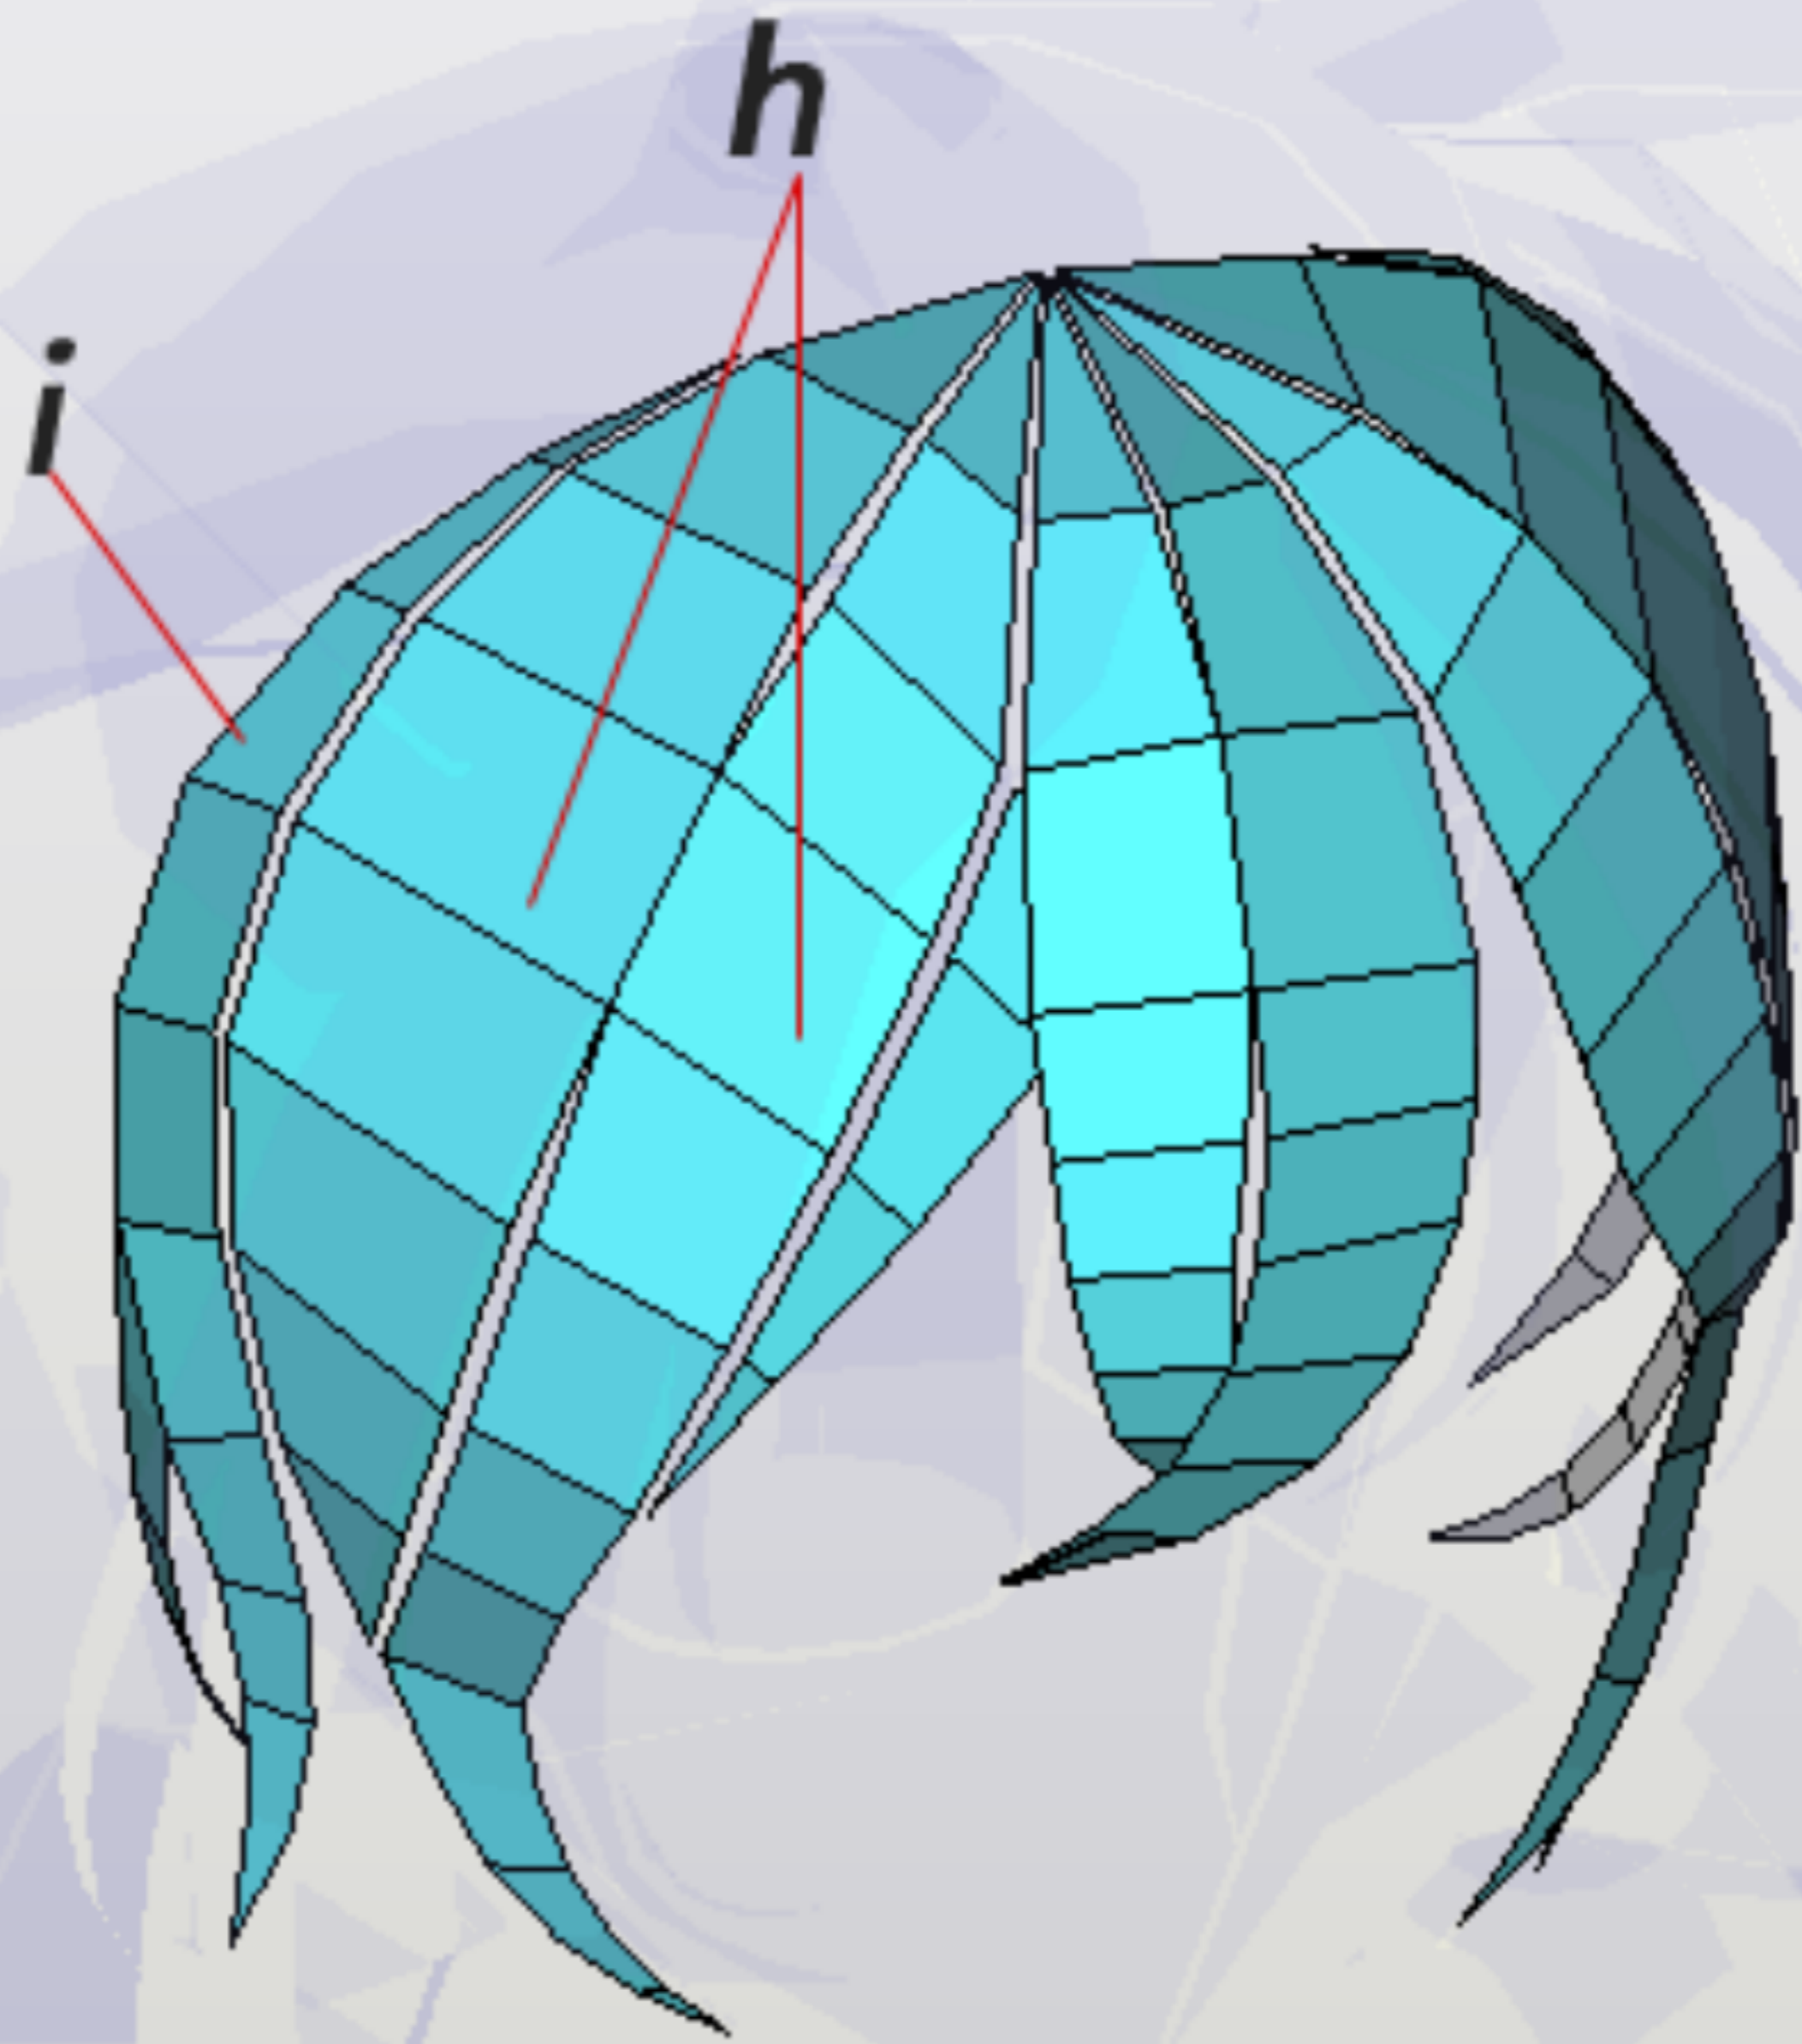


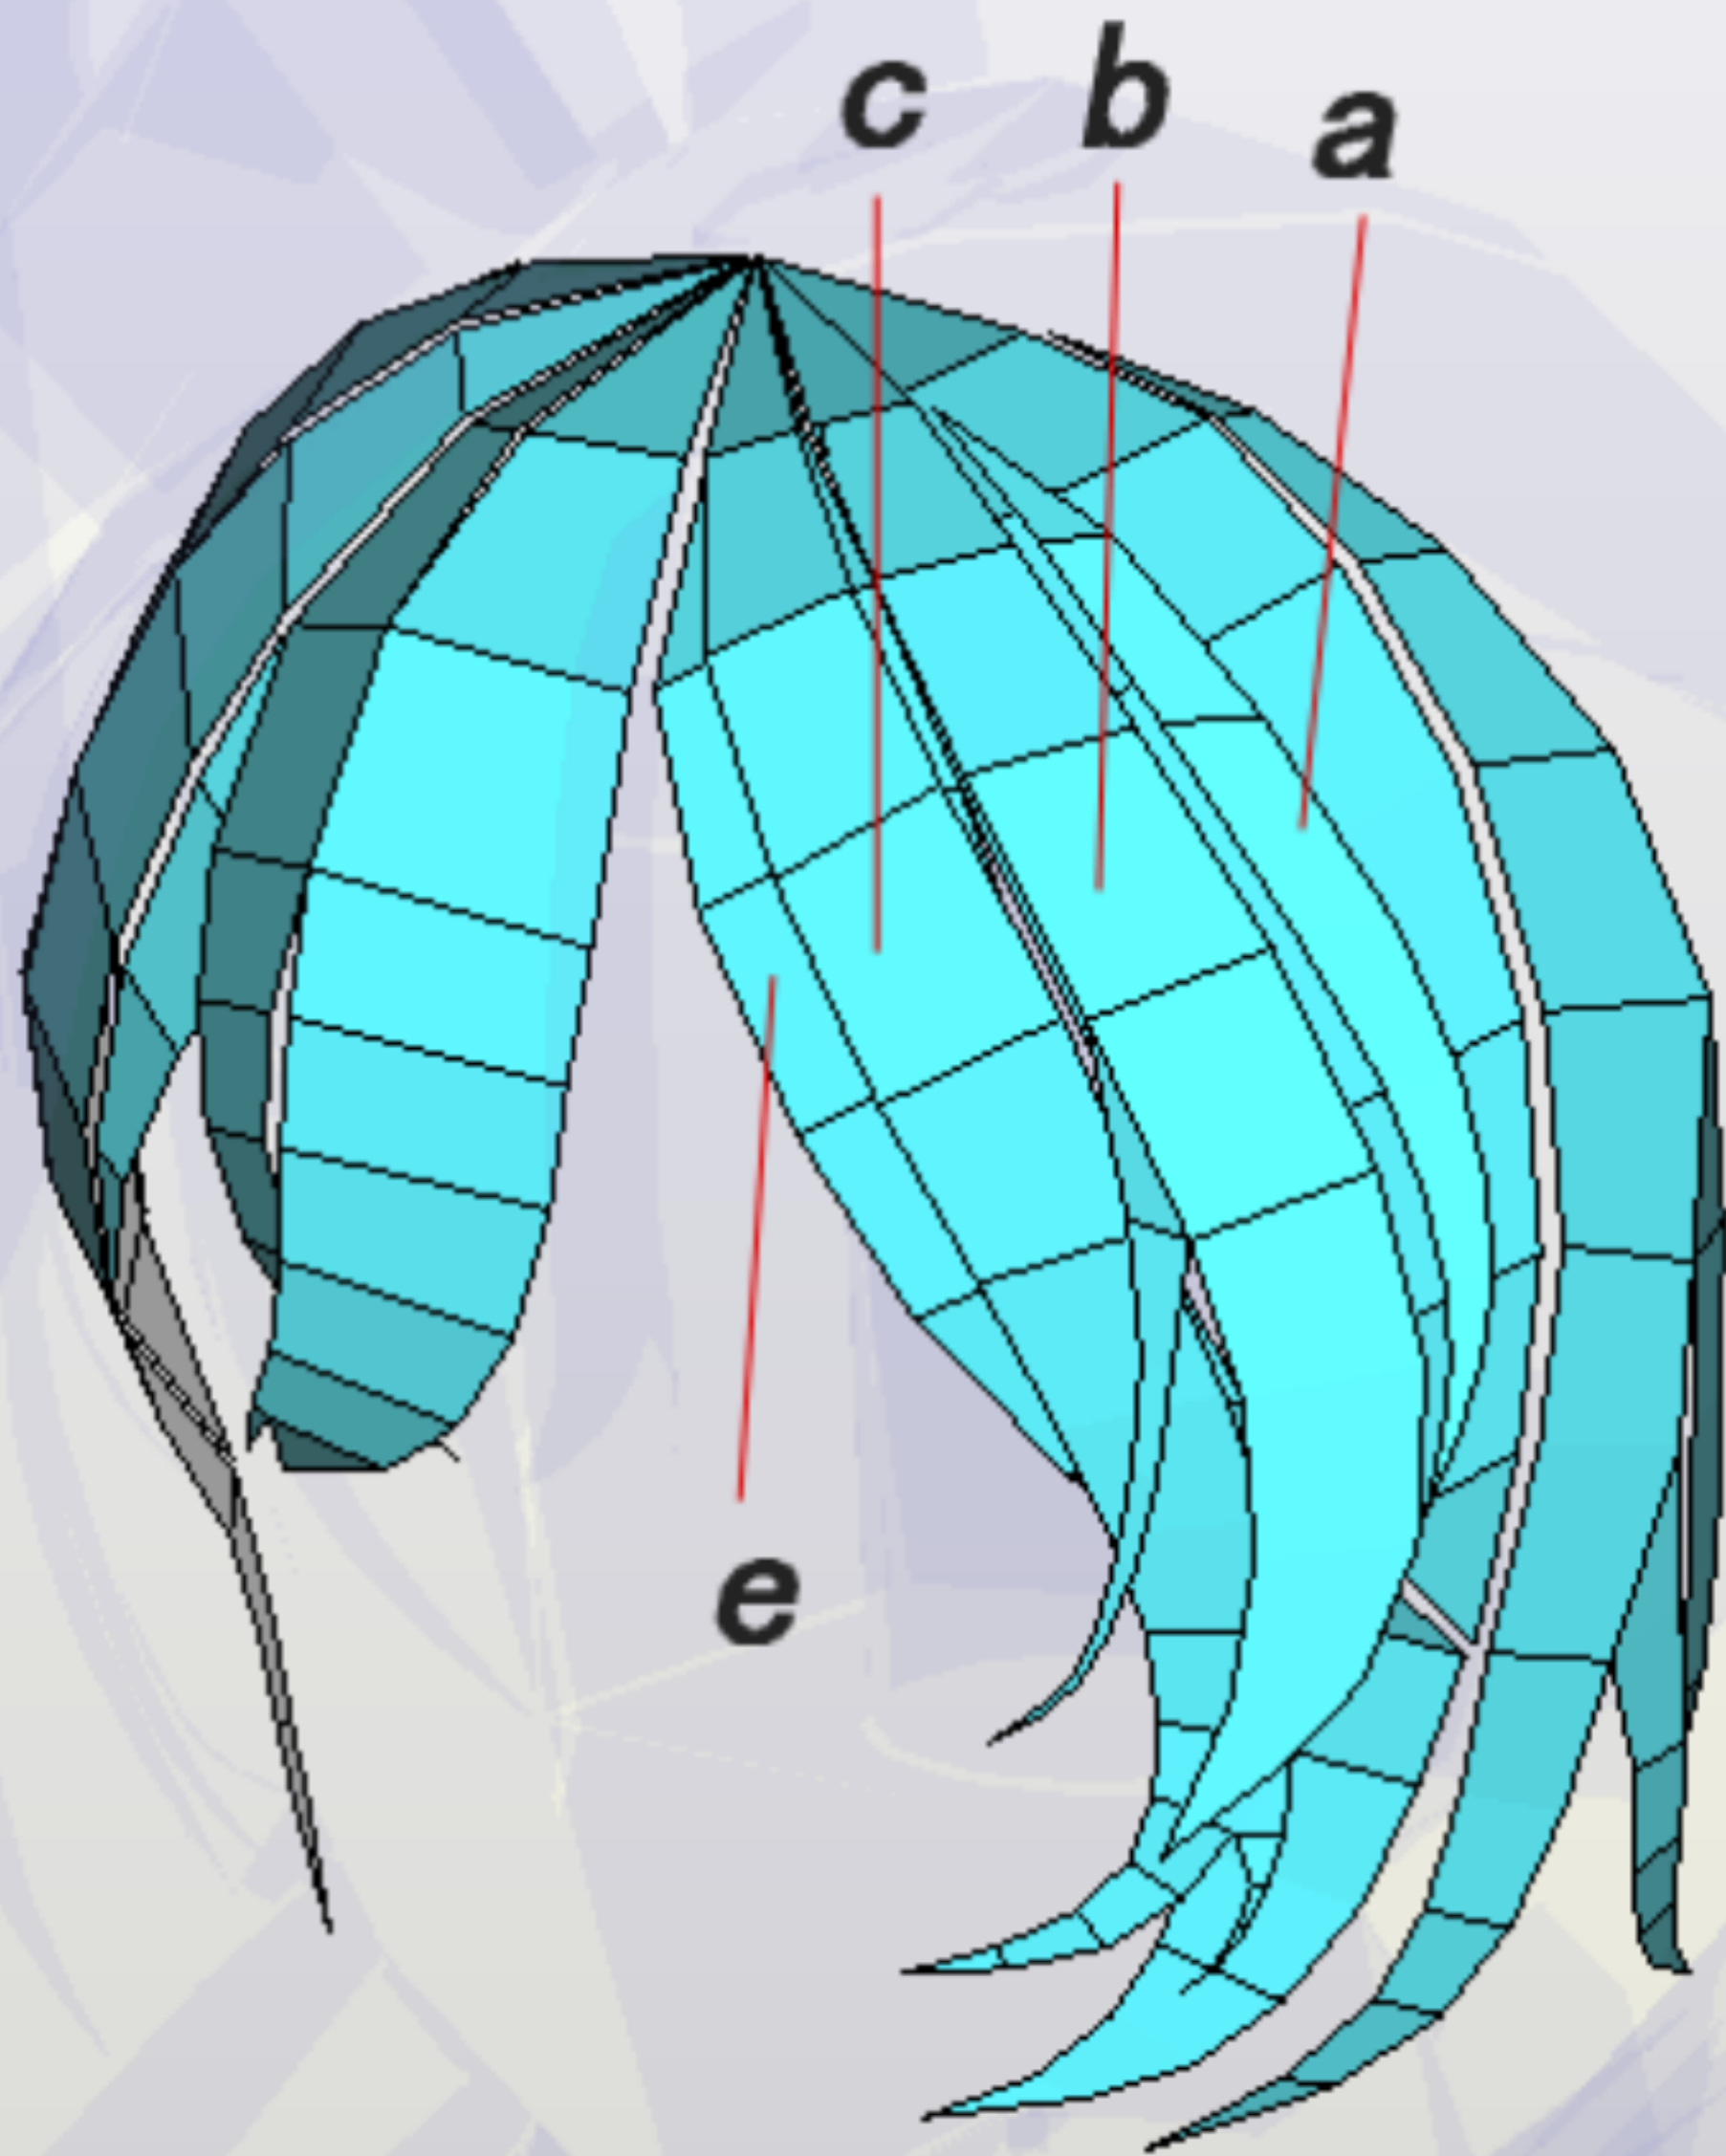

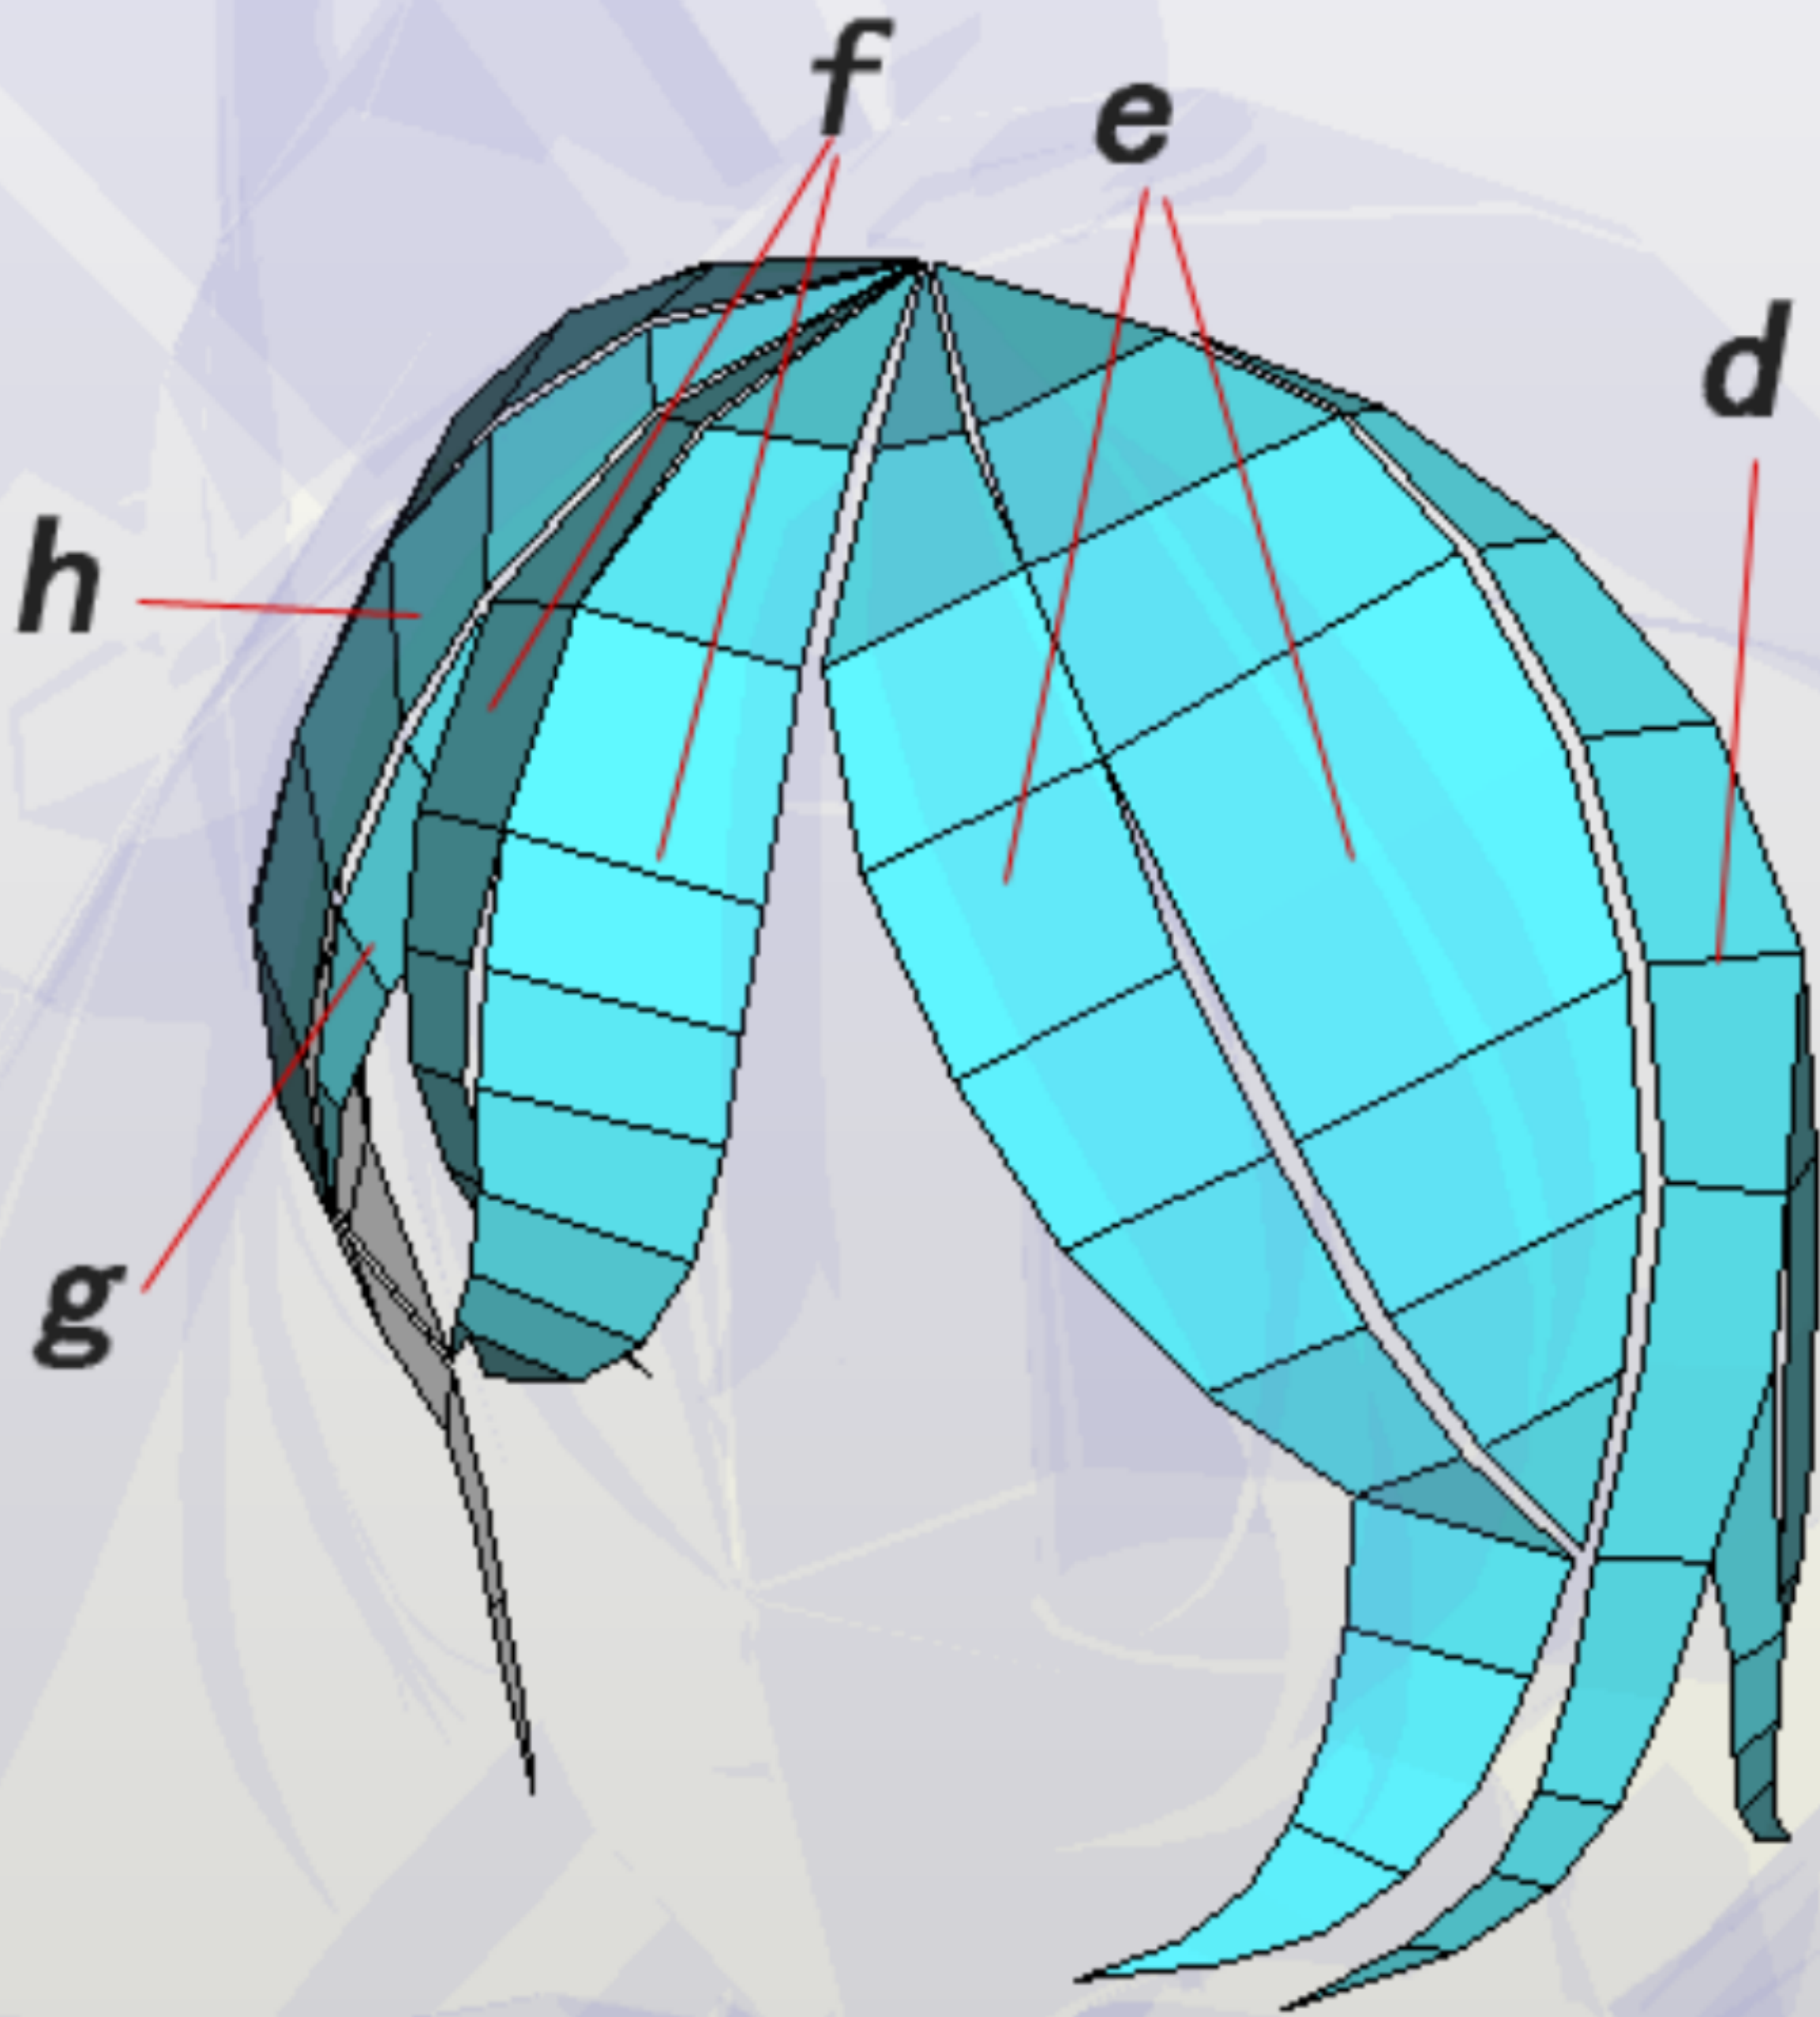

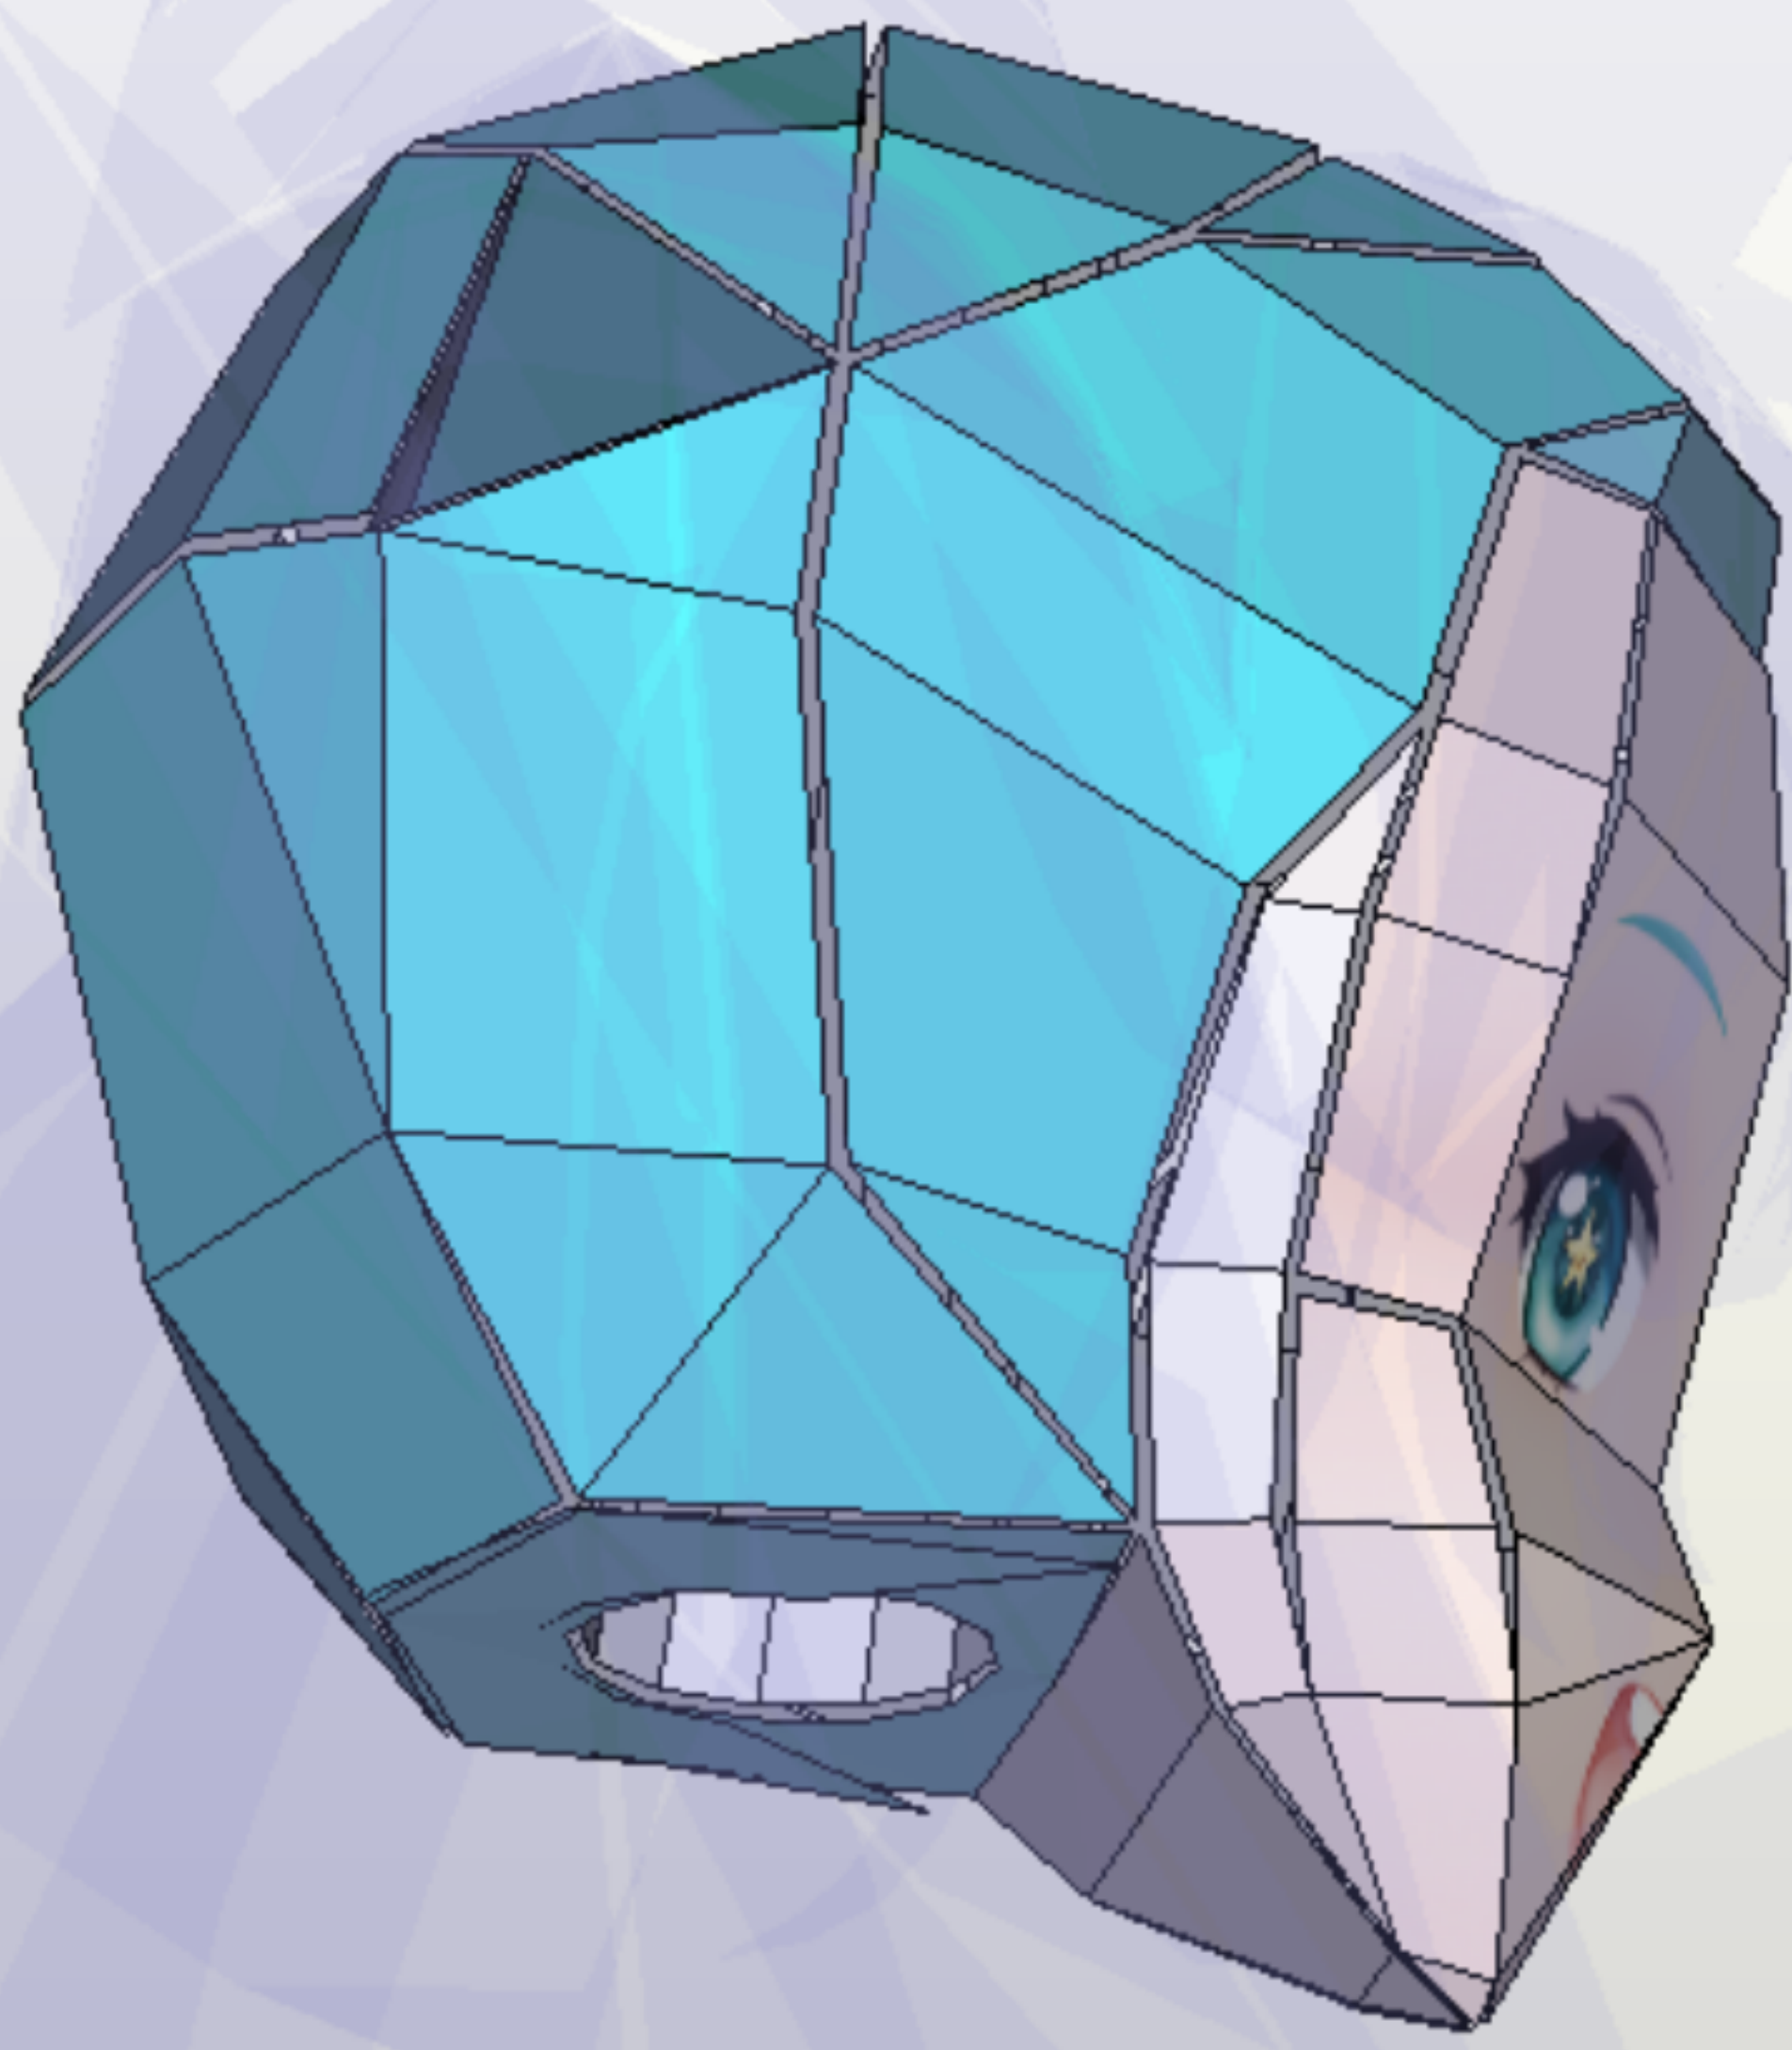


B80

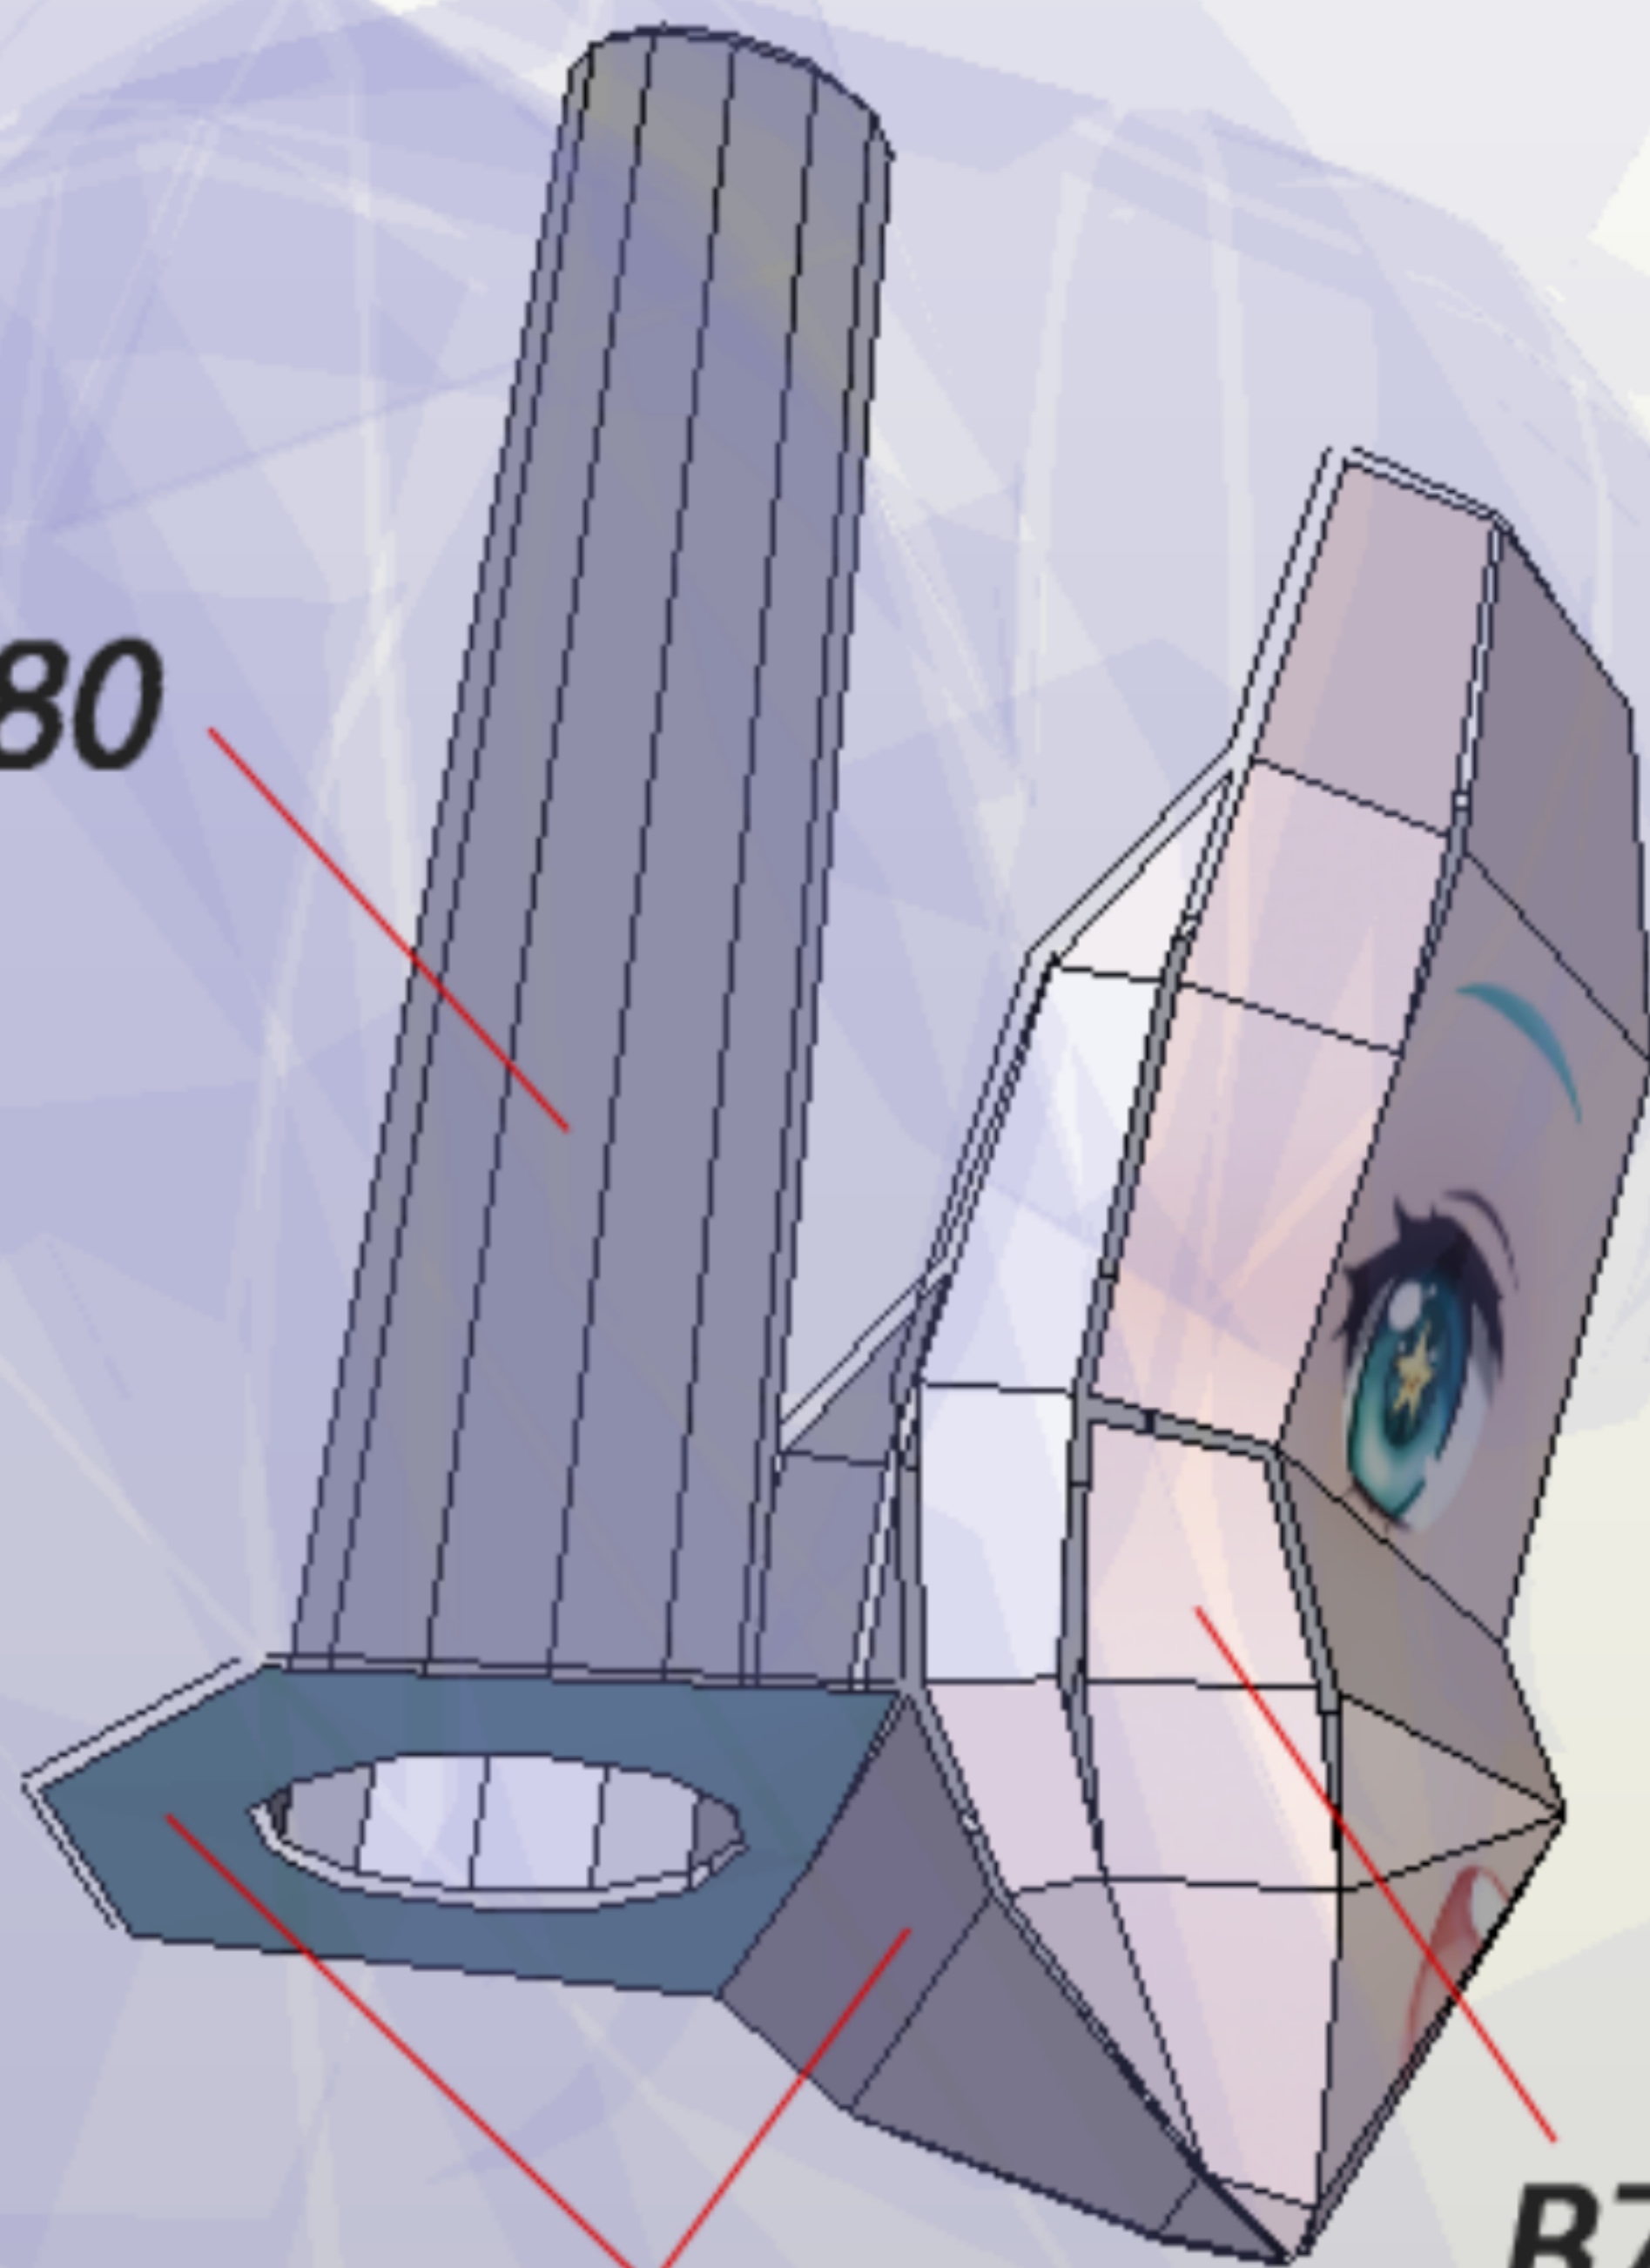


B79


B70

B96a

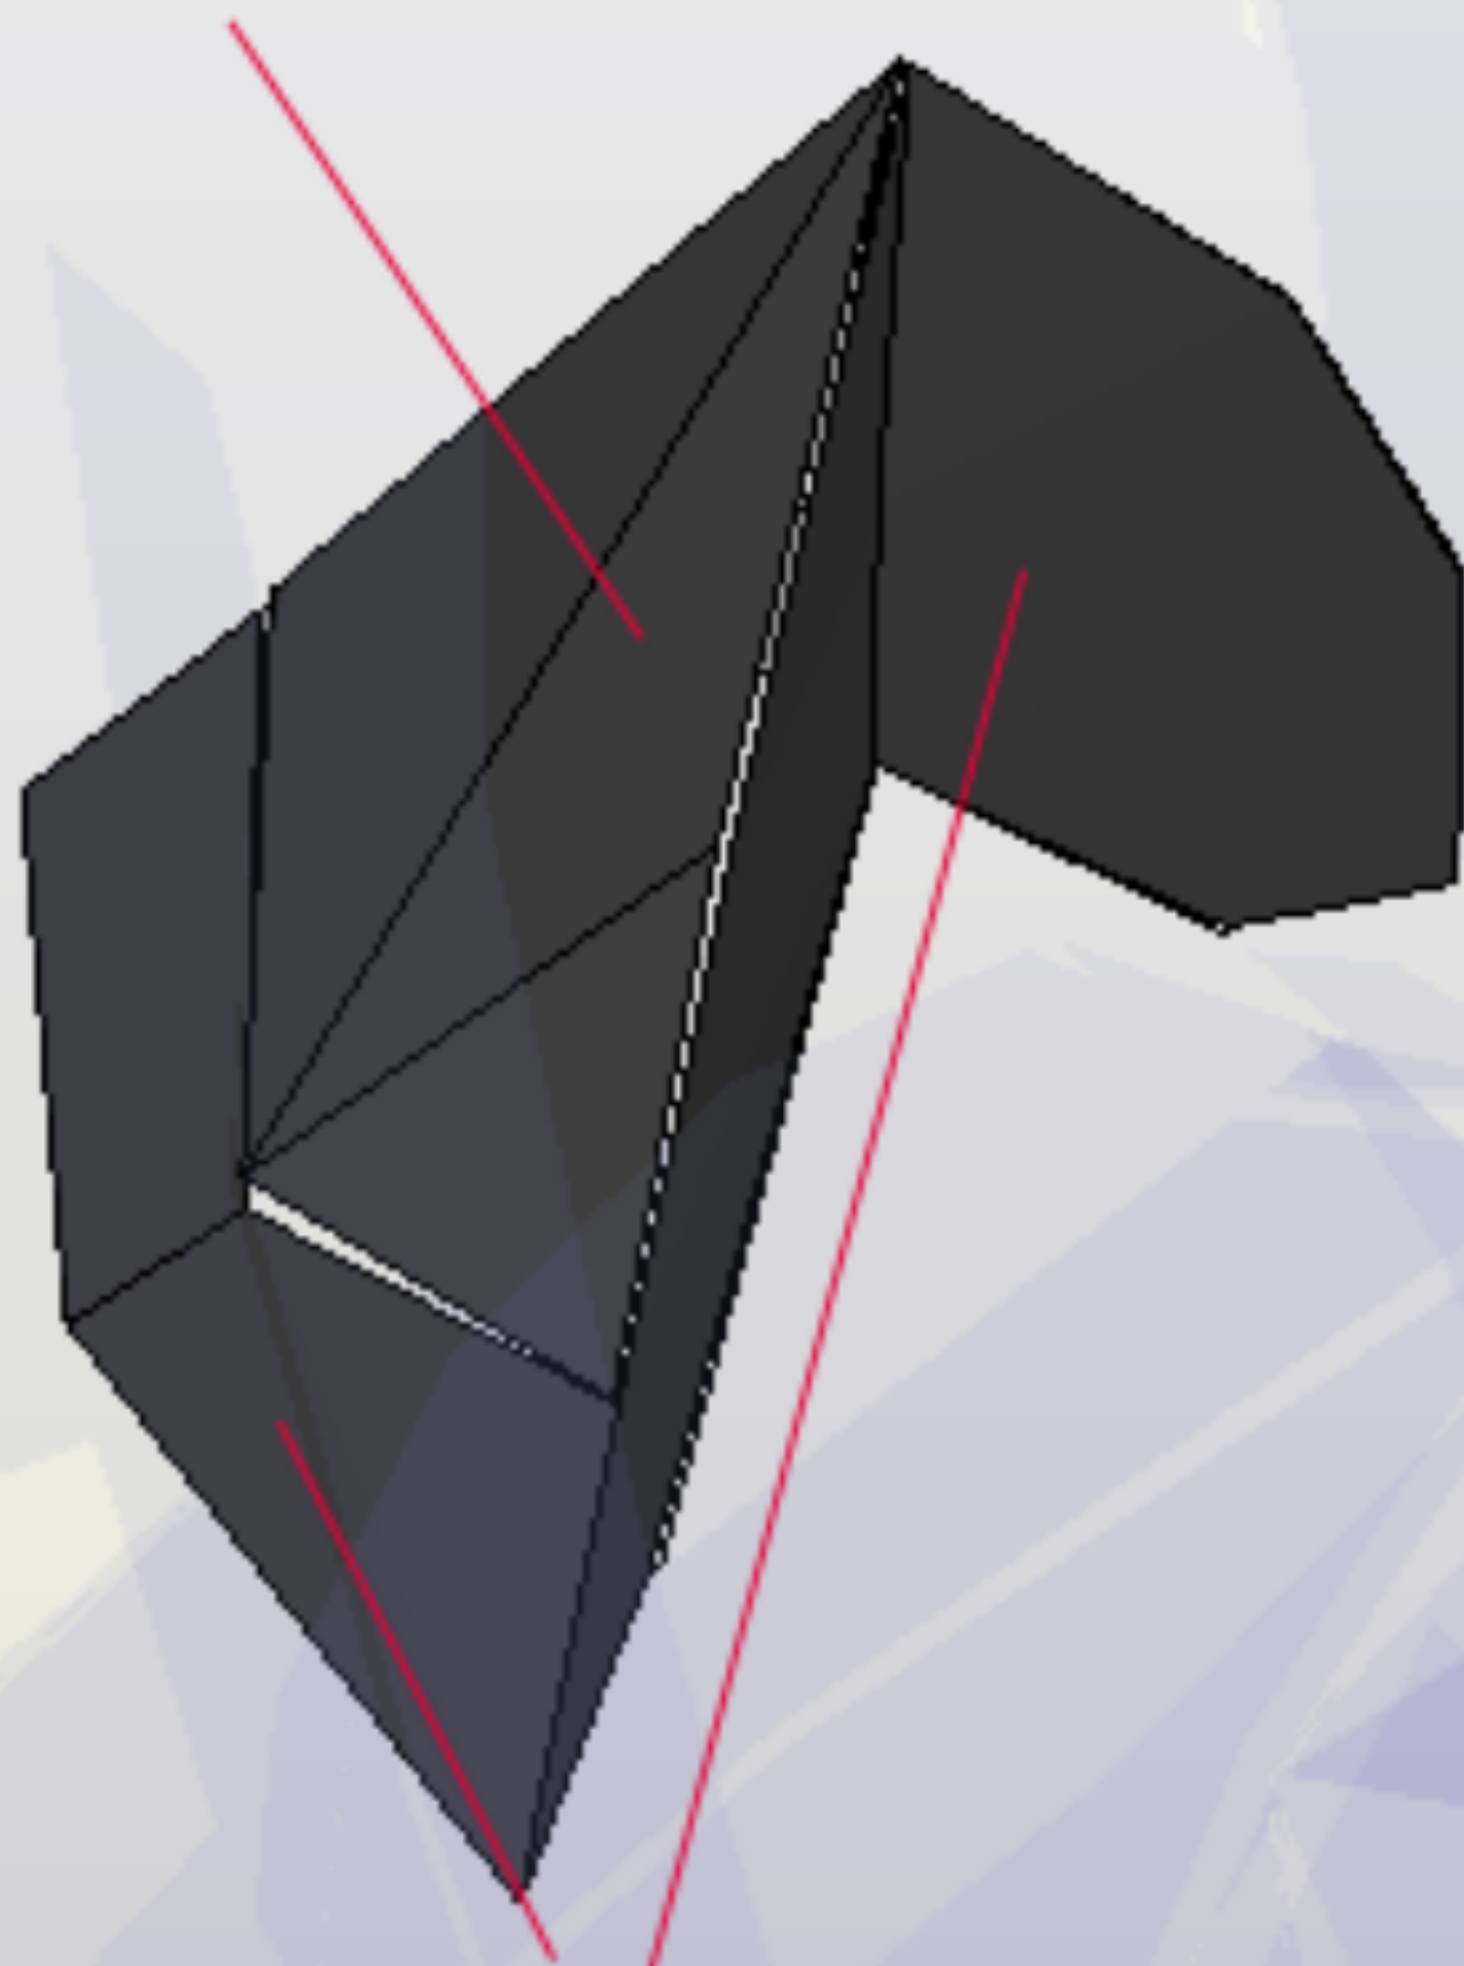

B96

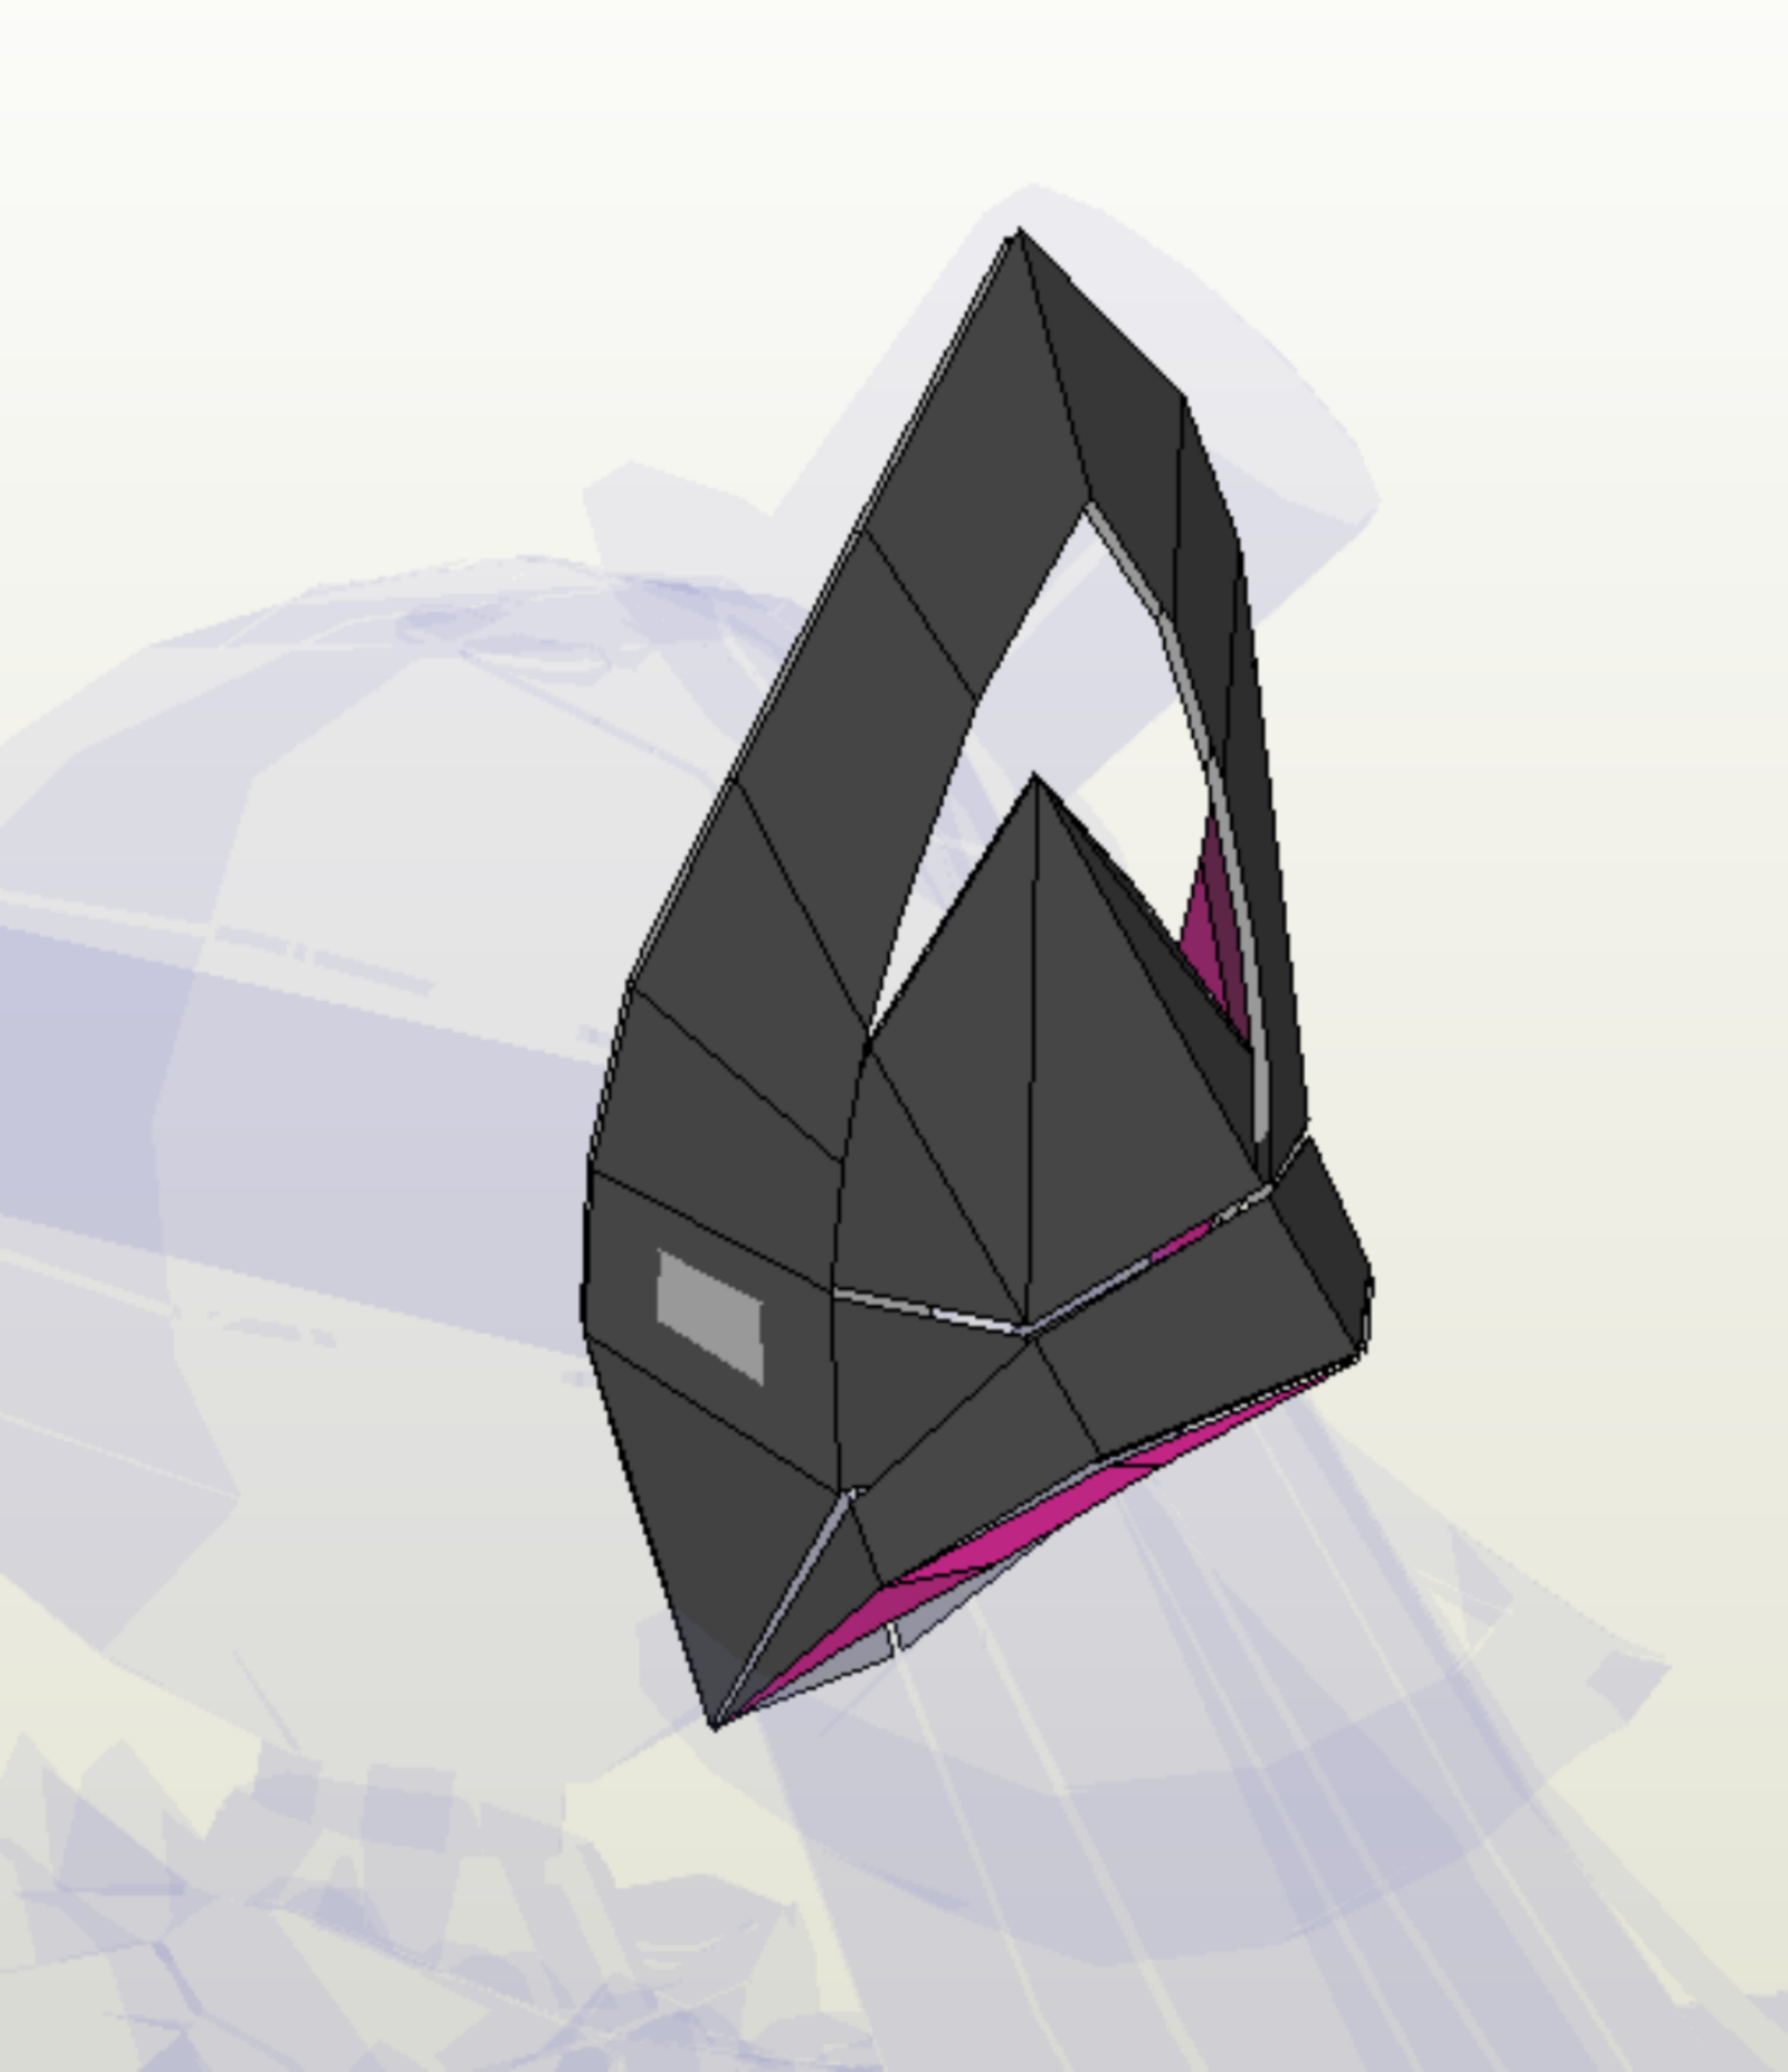


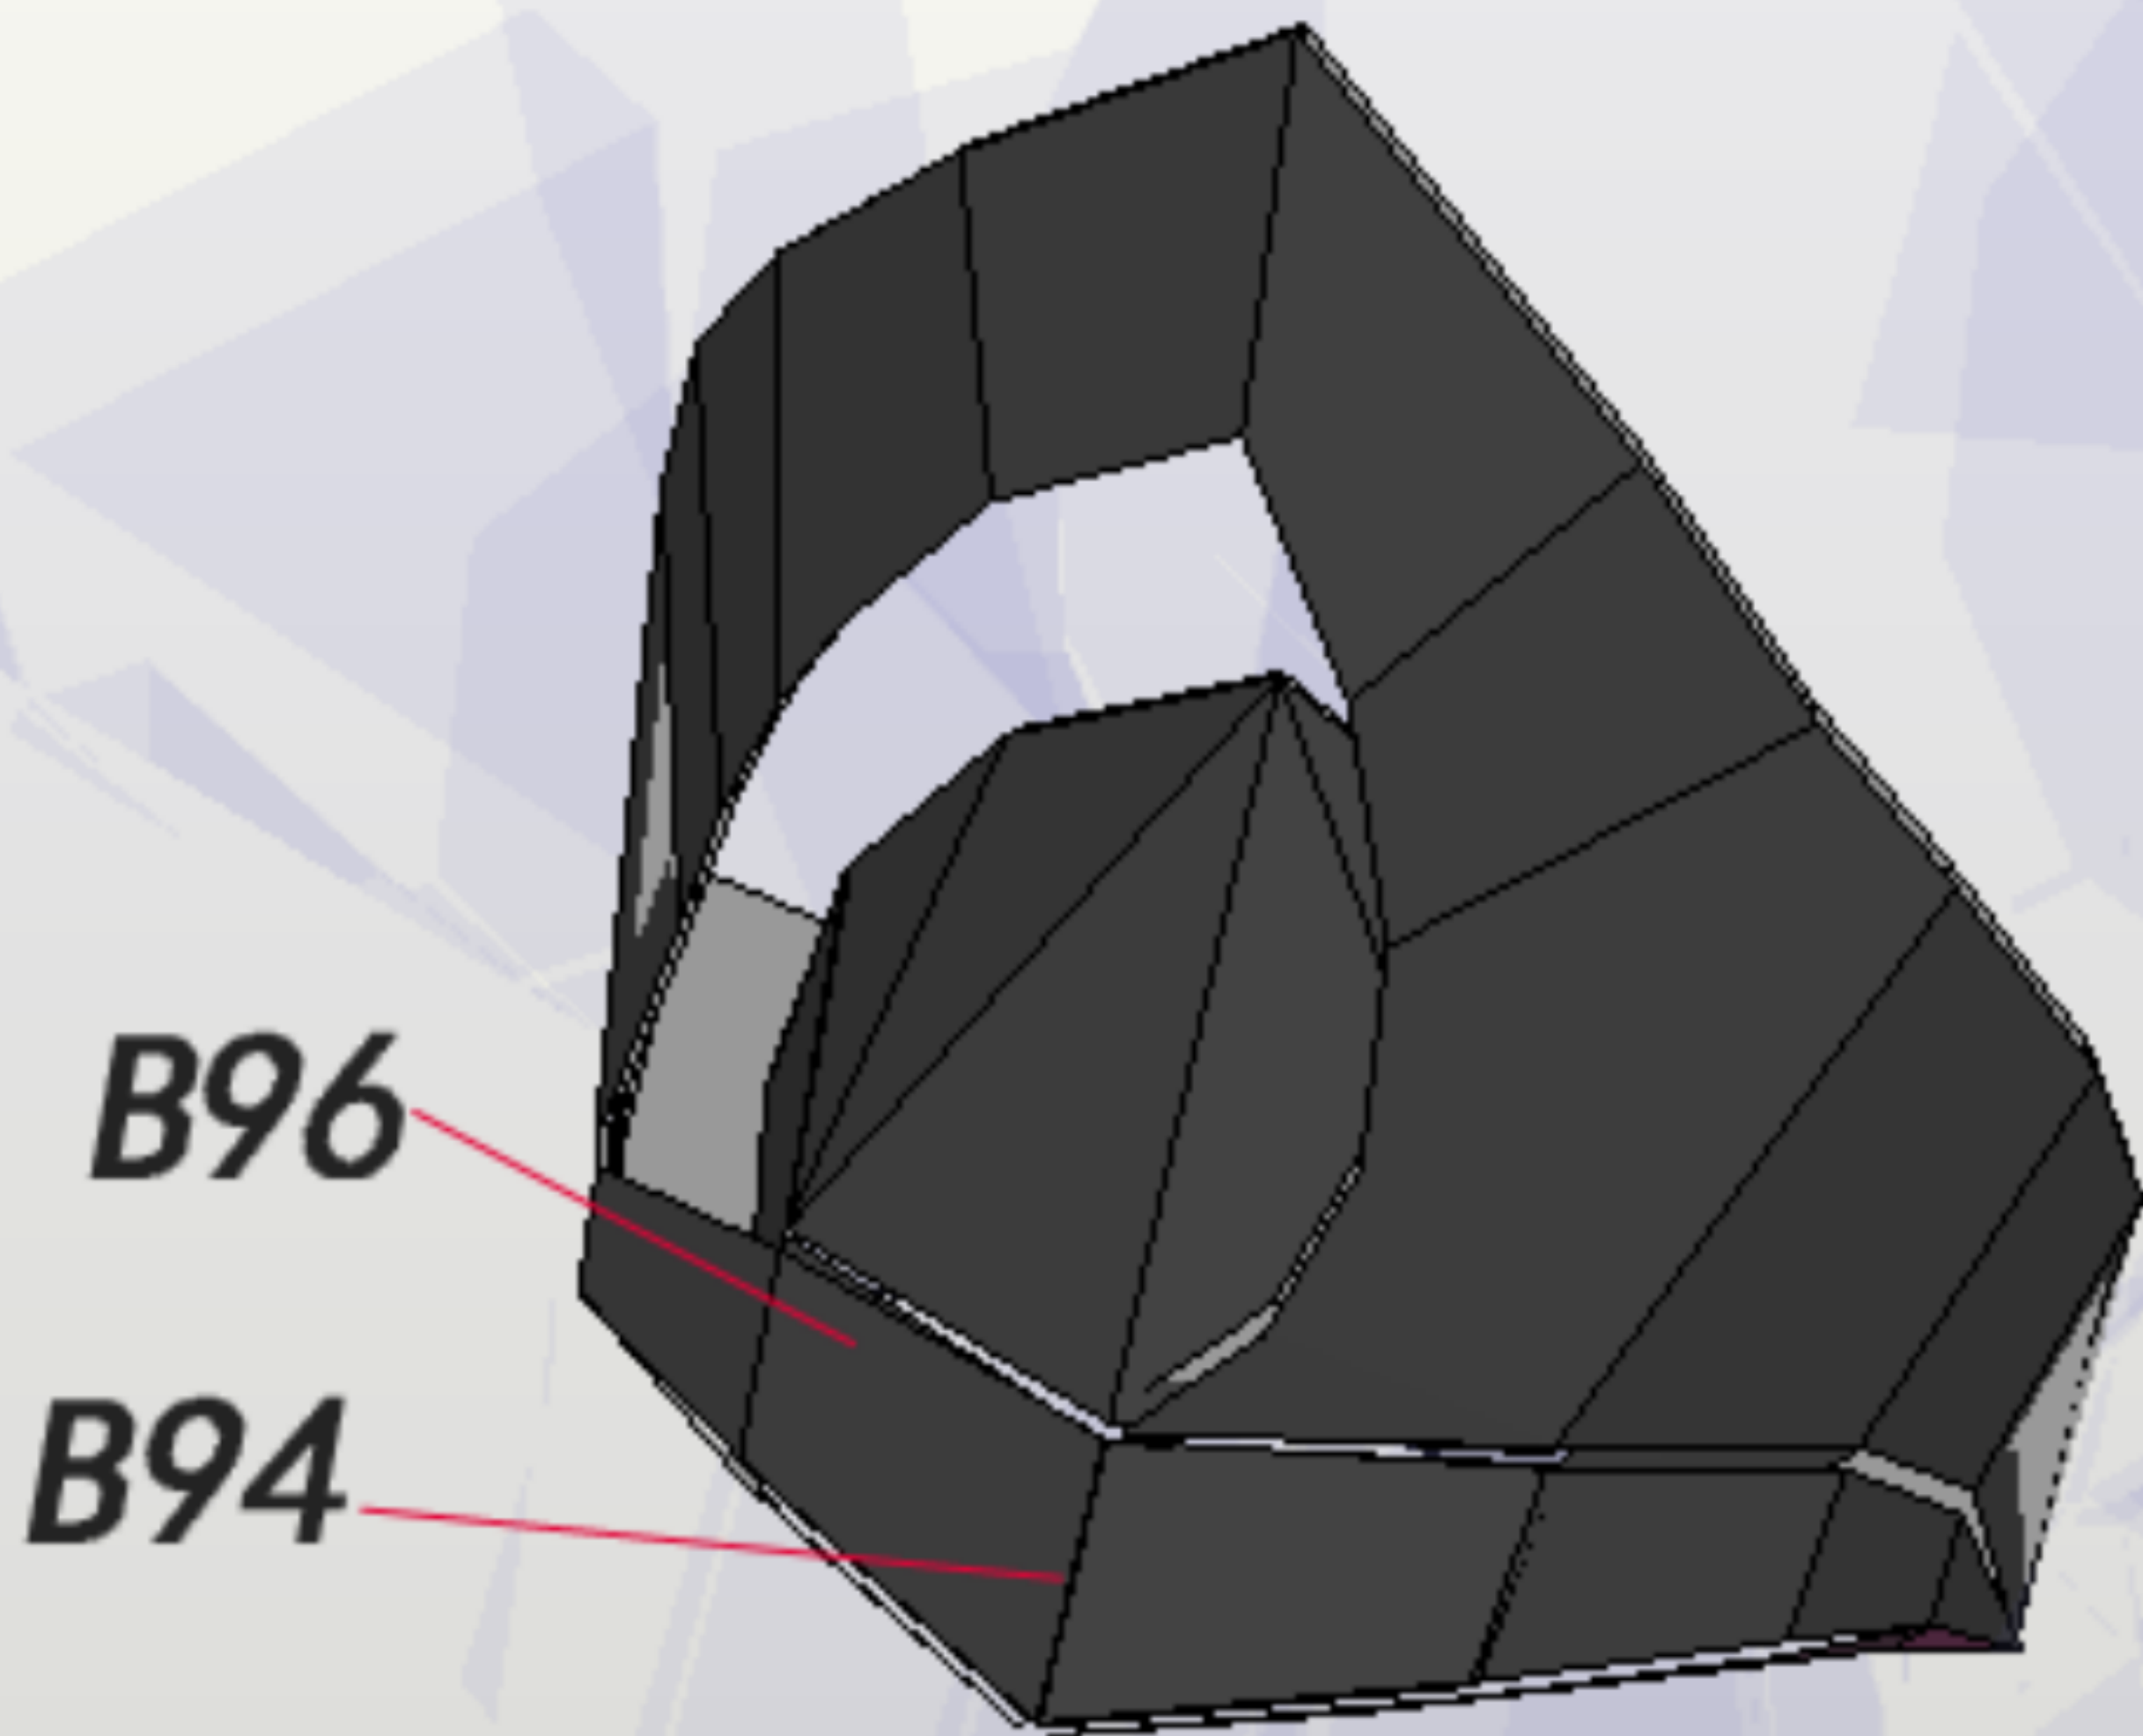

B96


B94

B94 B96重合沾一起

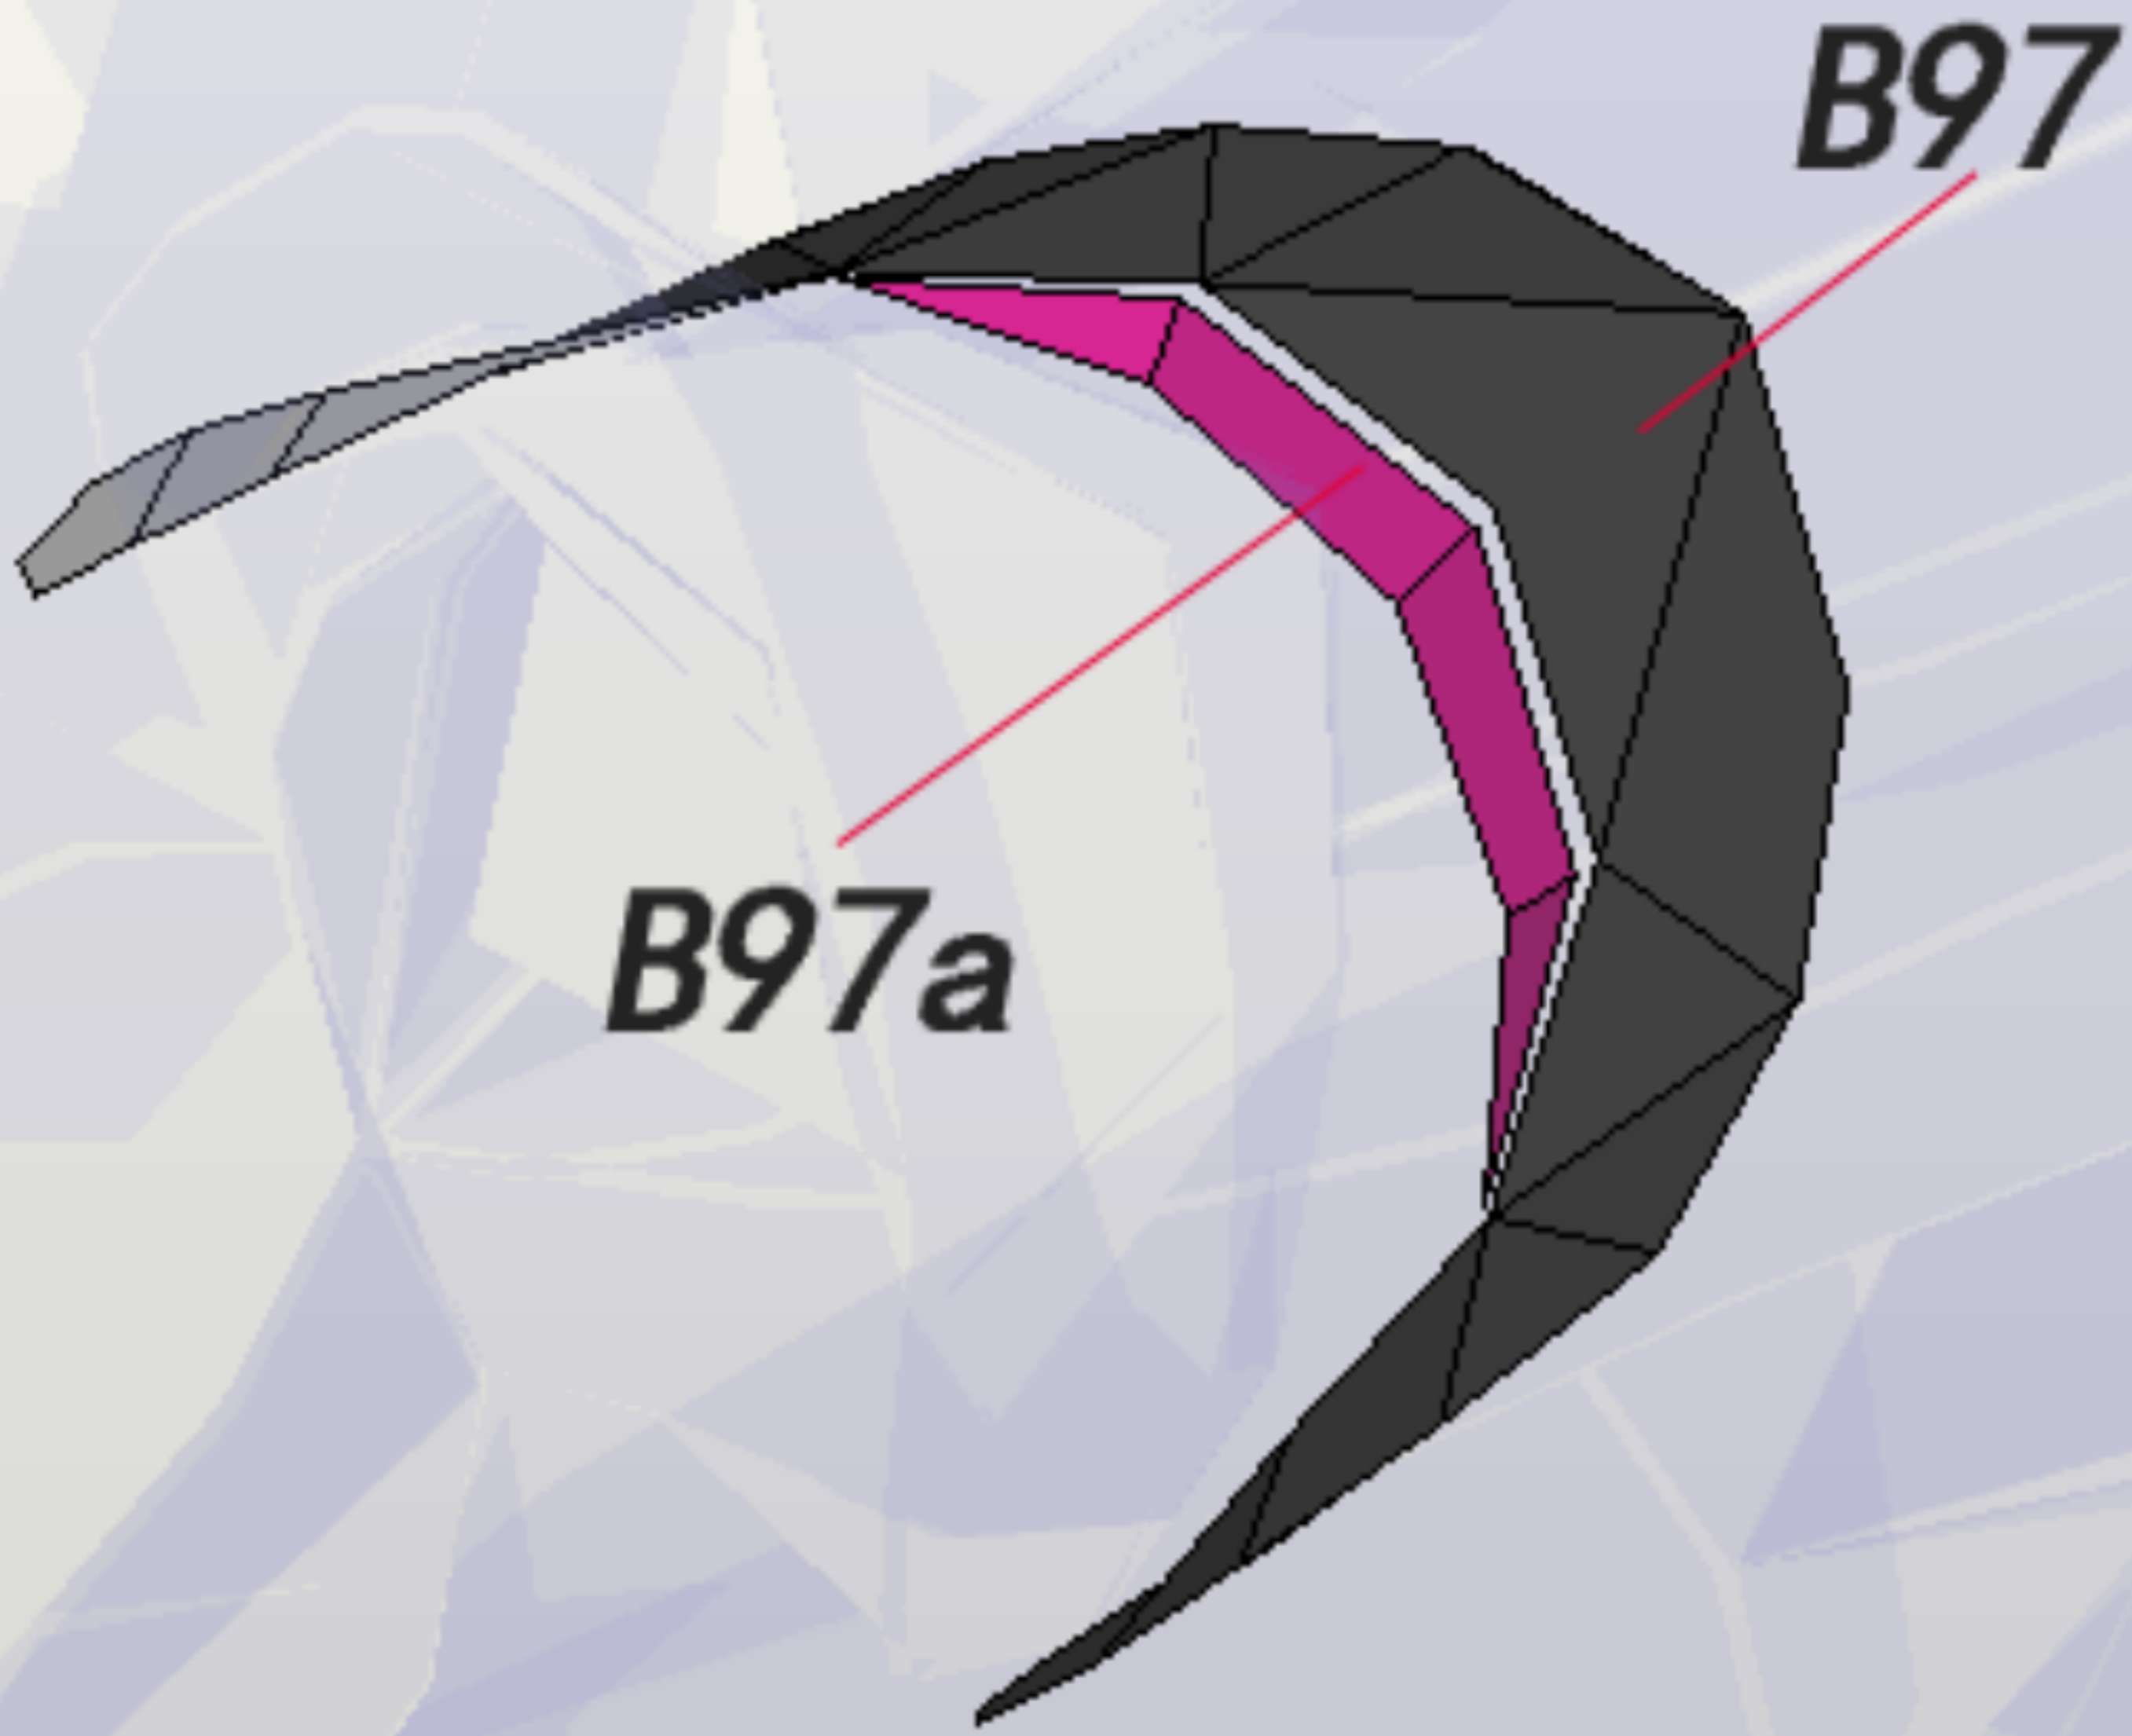

B97


B97a

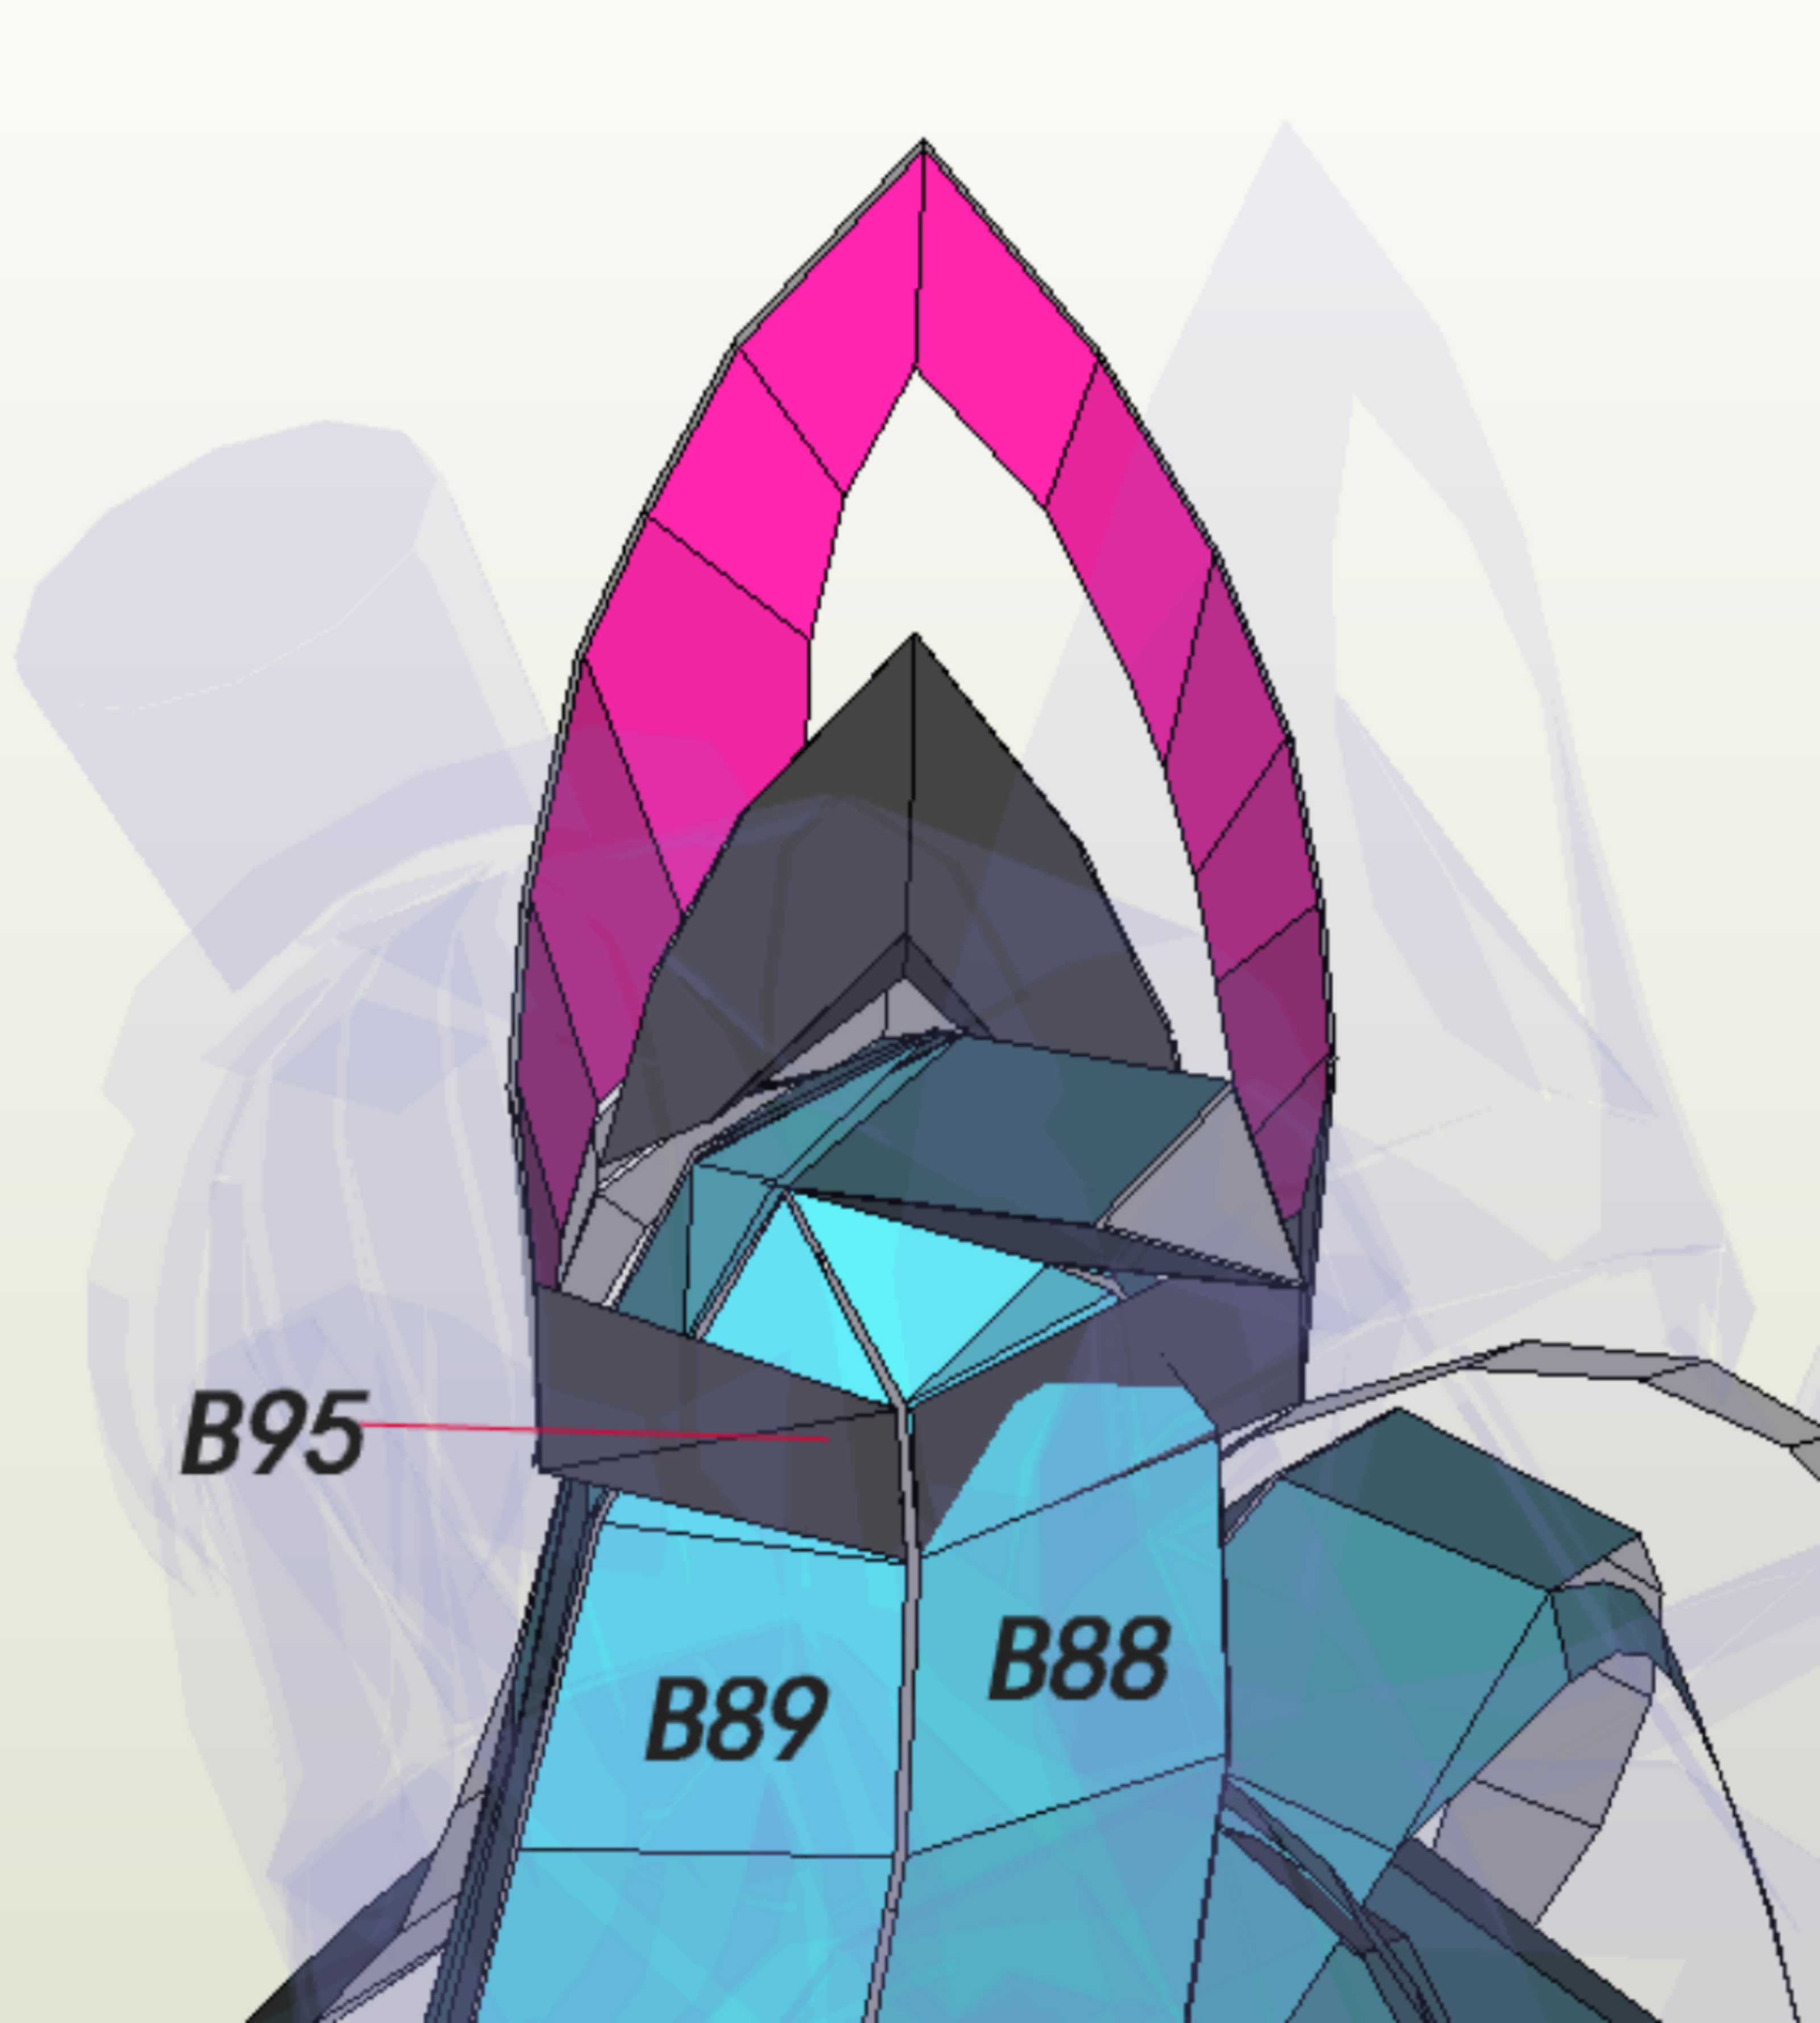


B95


B89

B88

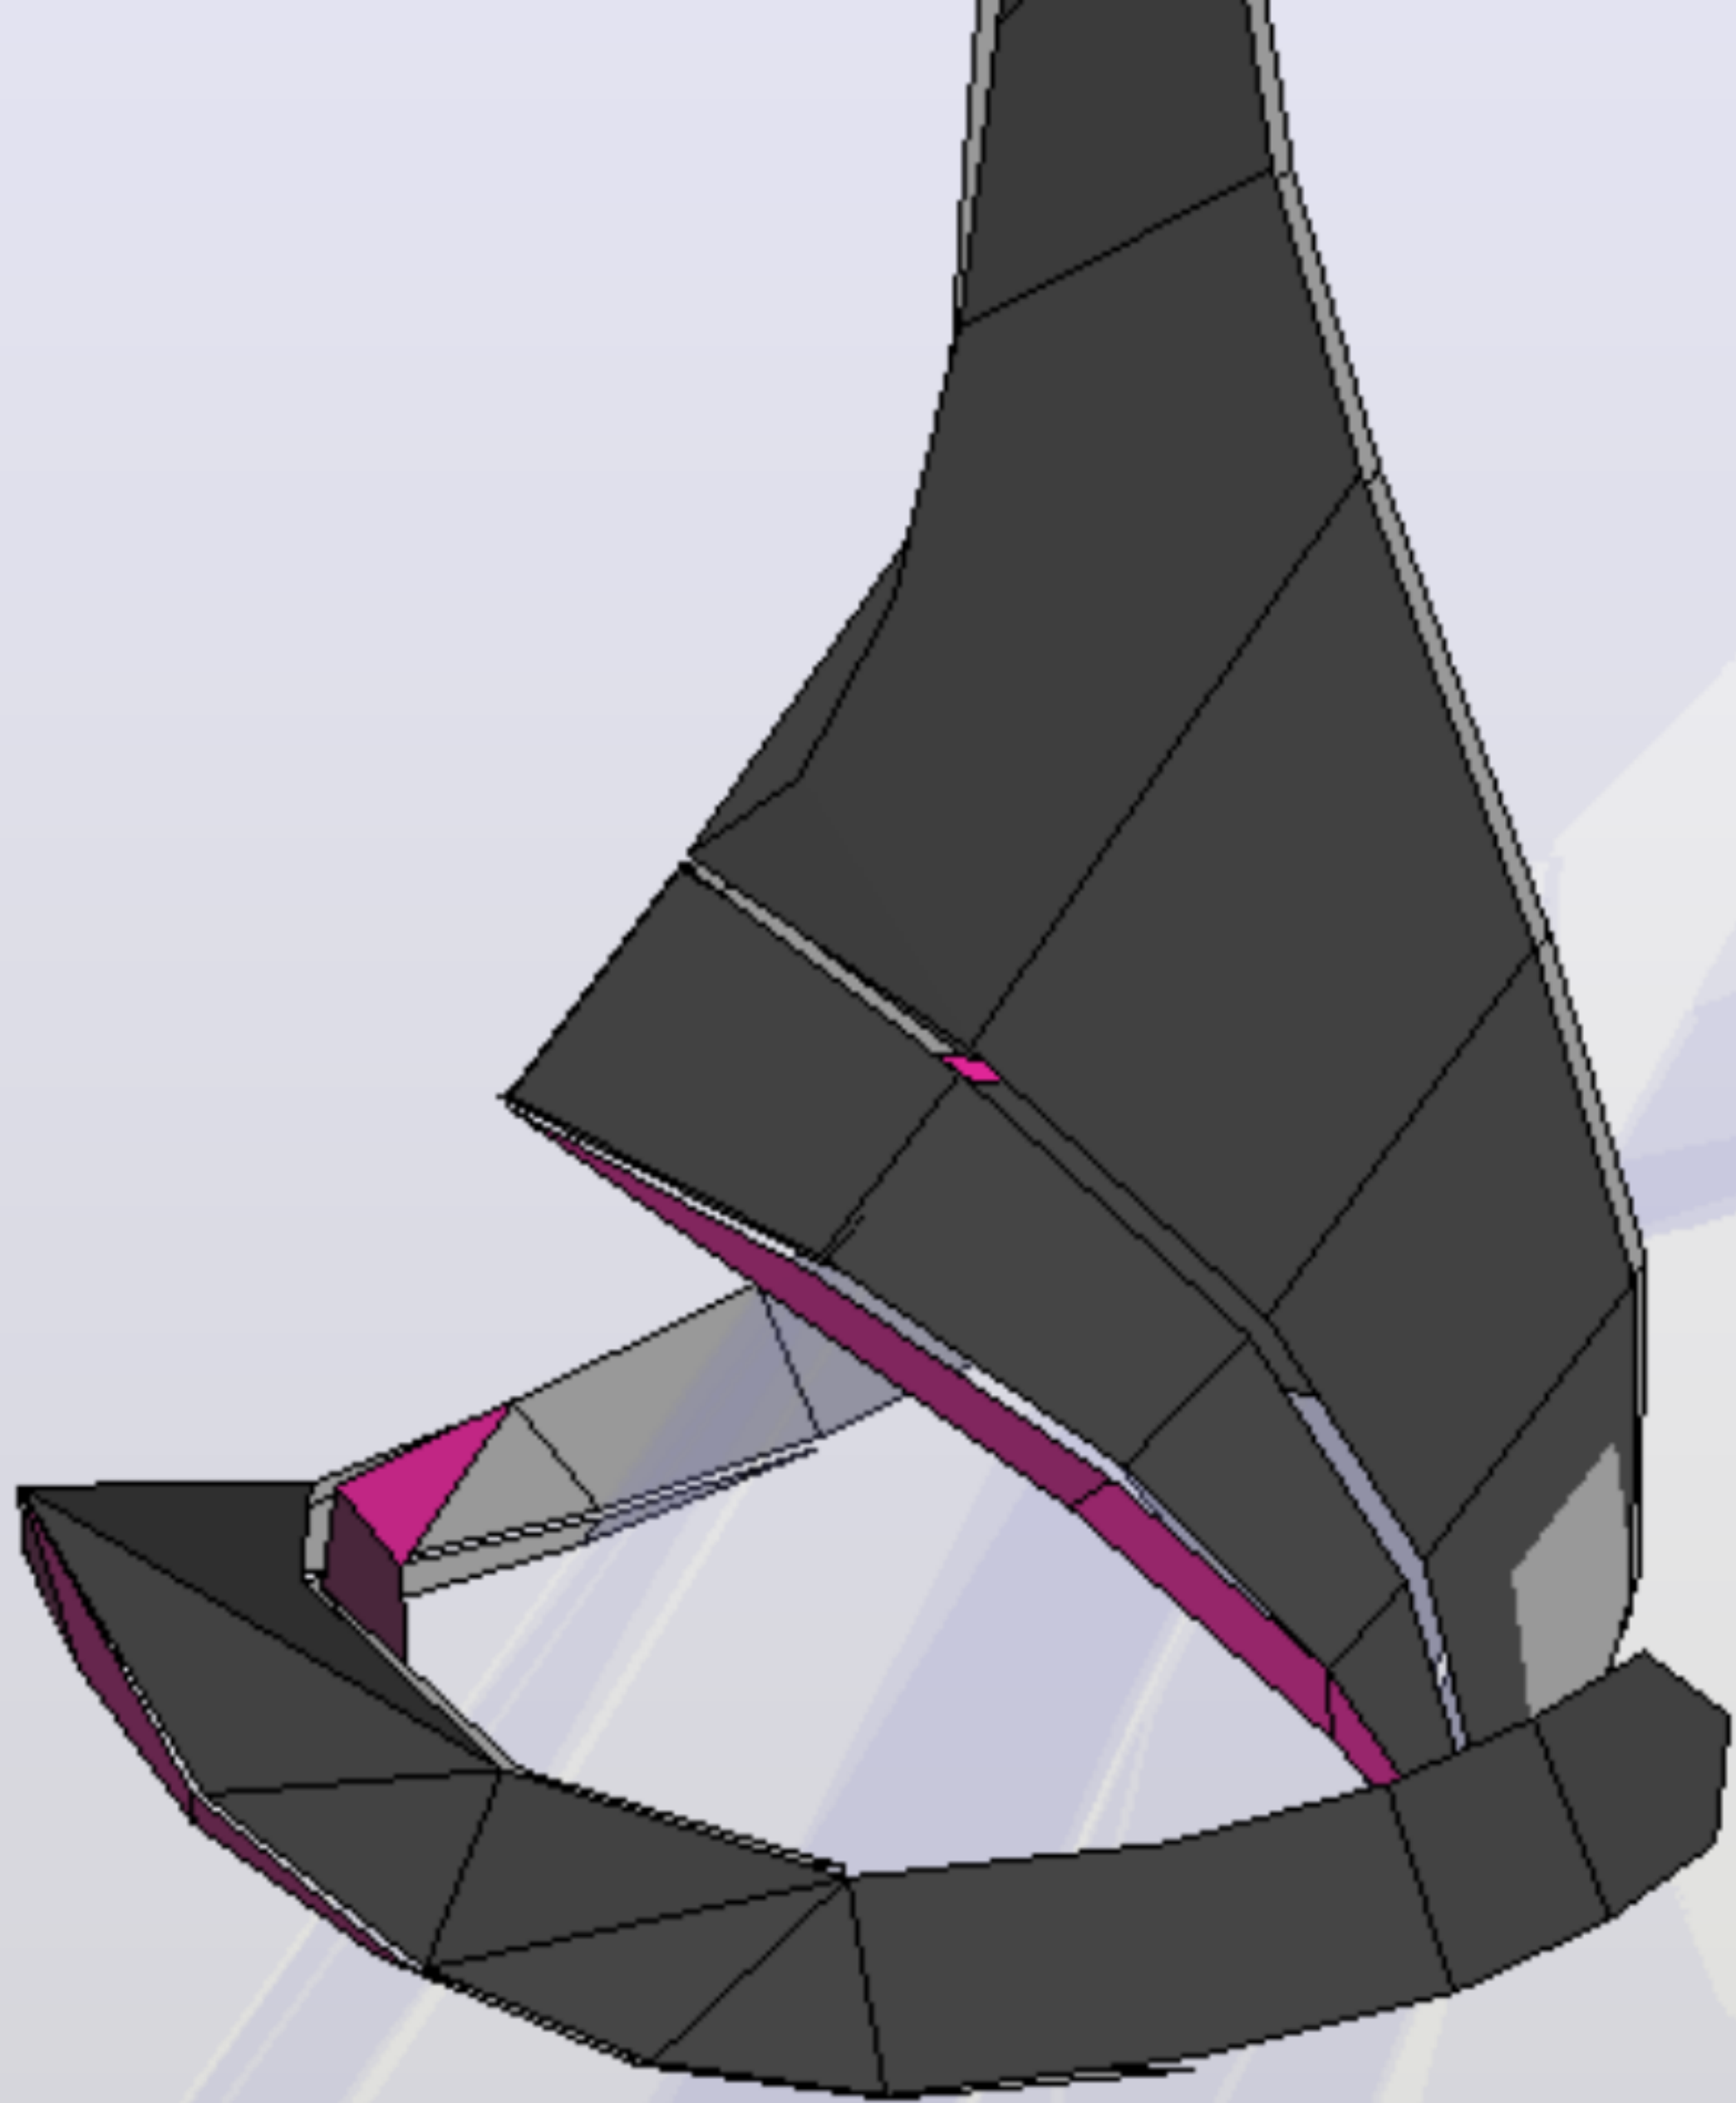

B98

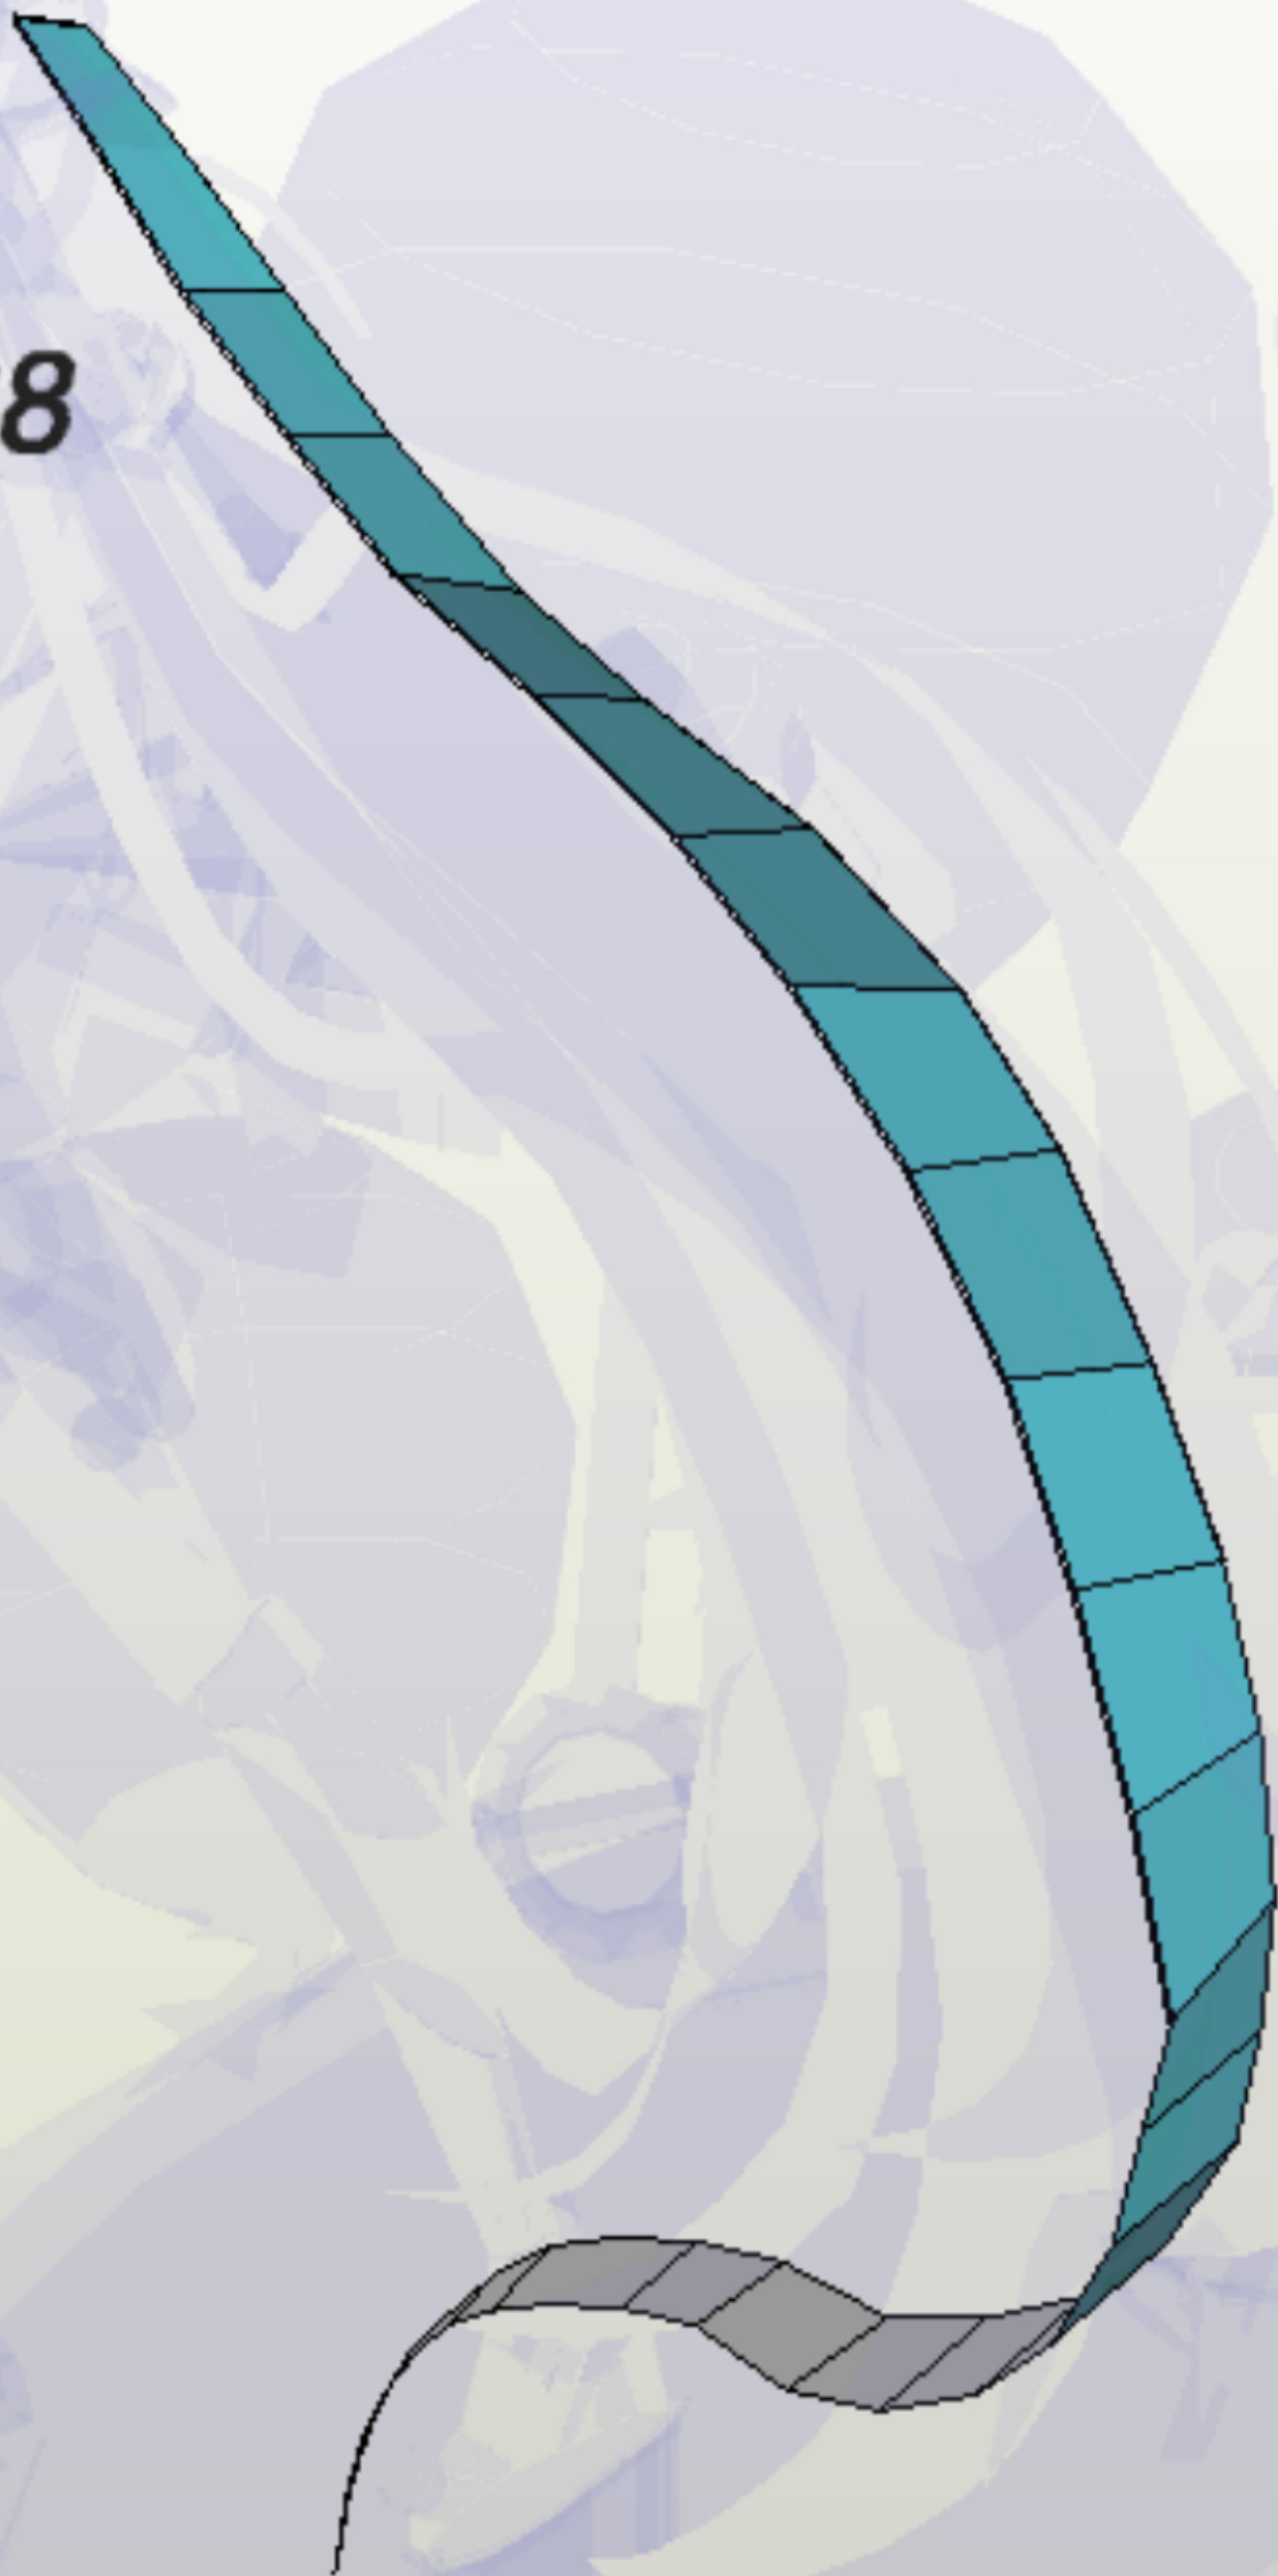

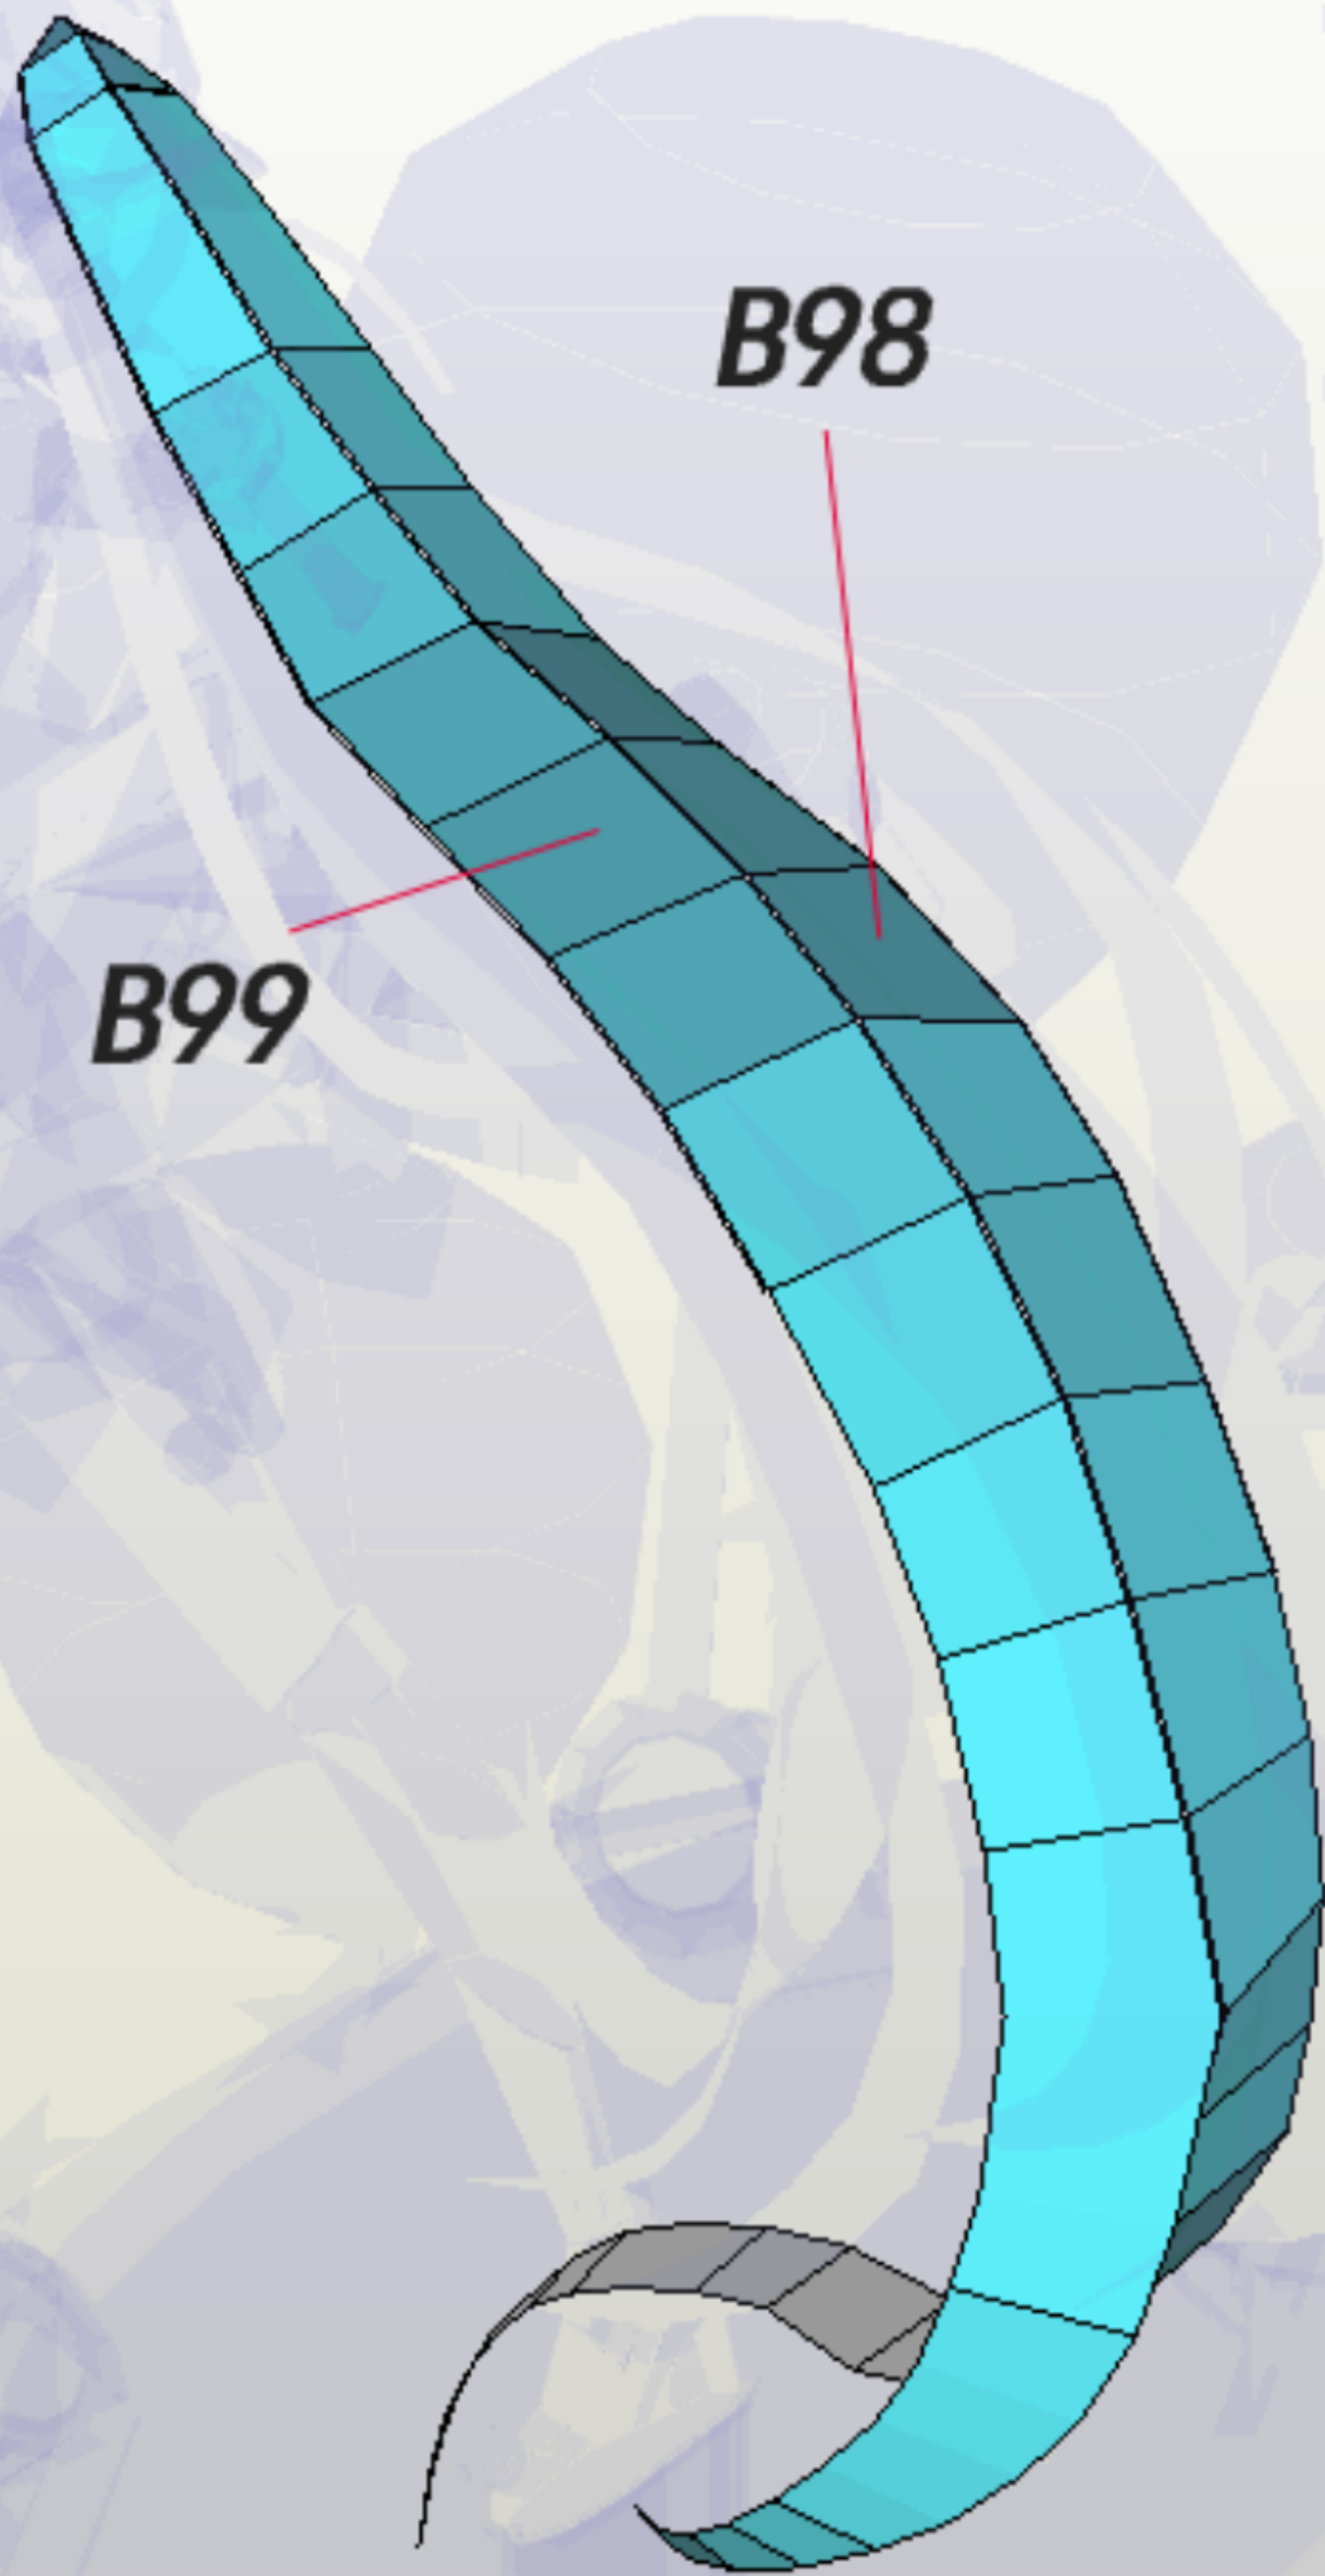


B98


B99


B105

B104

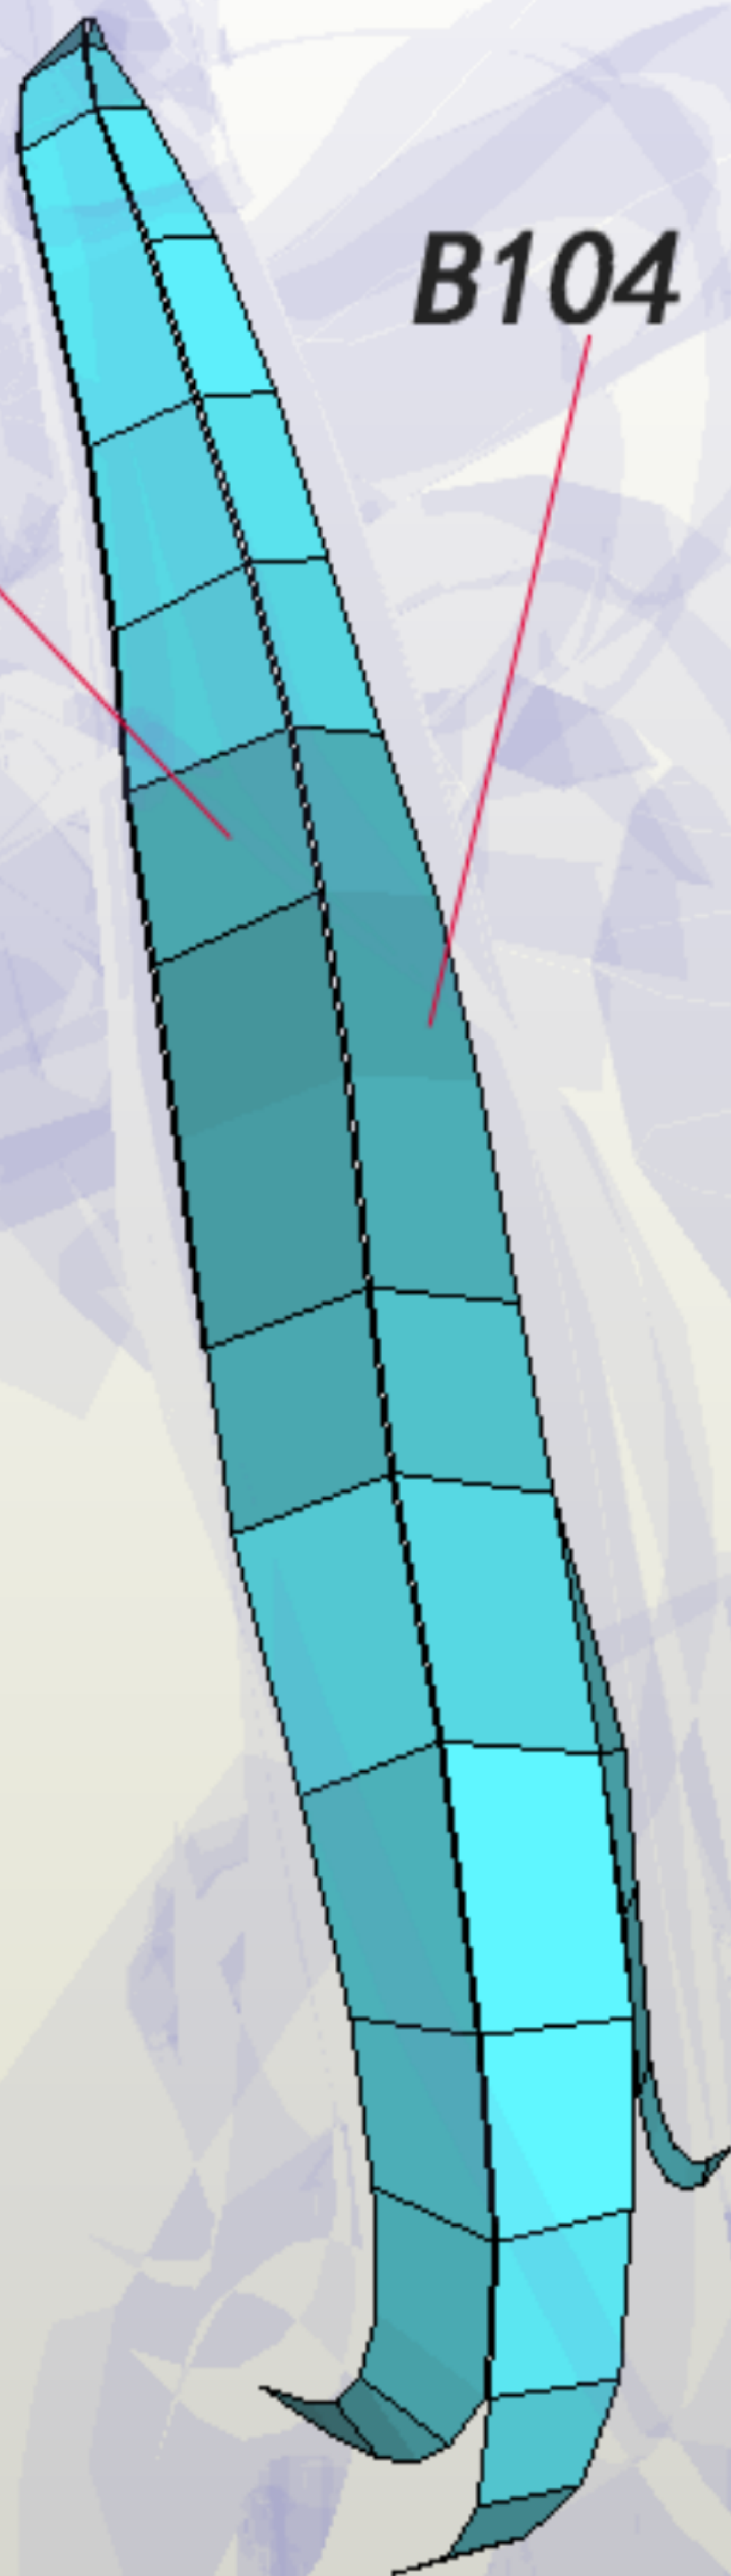

B104

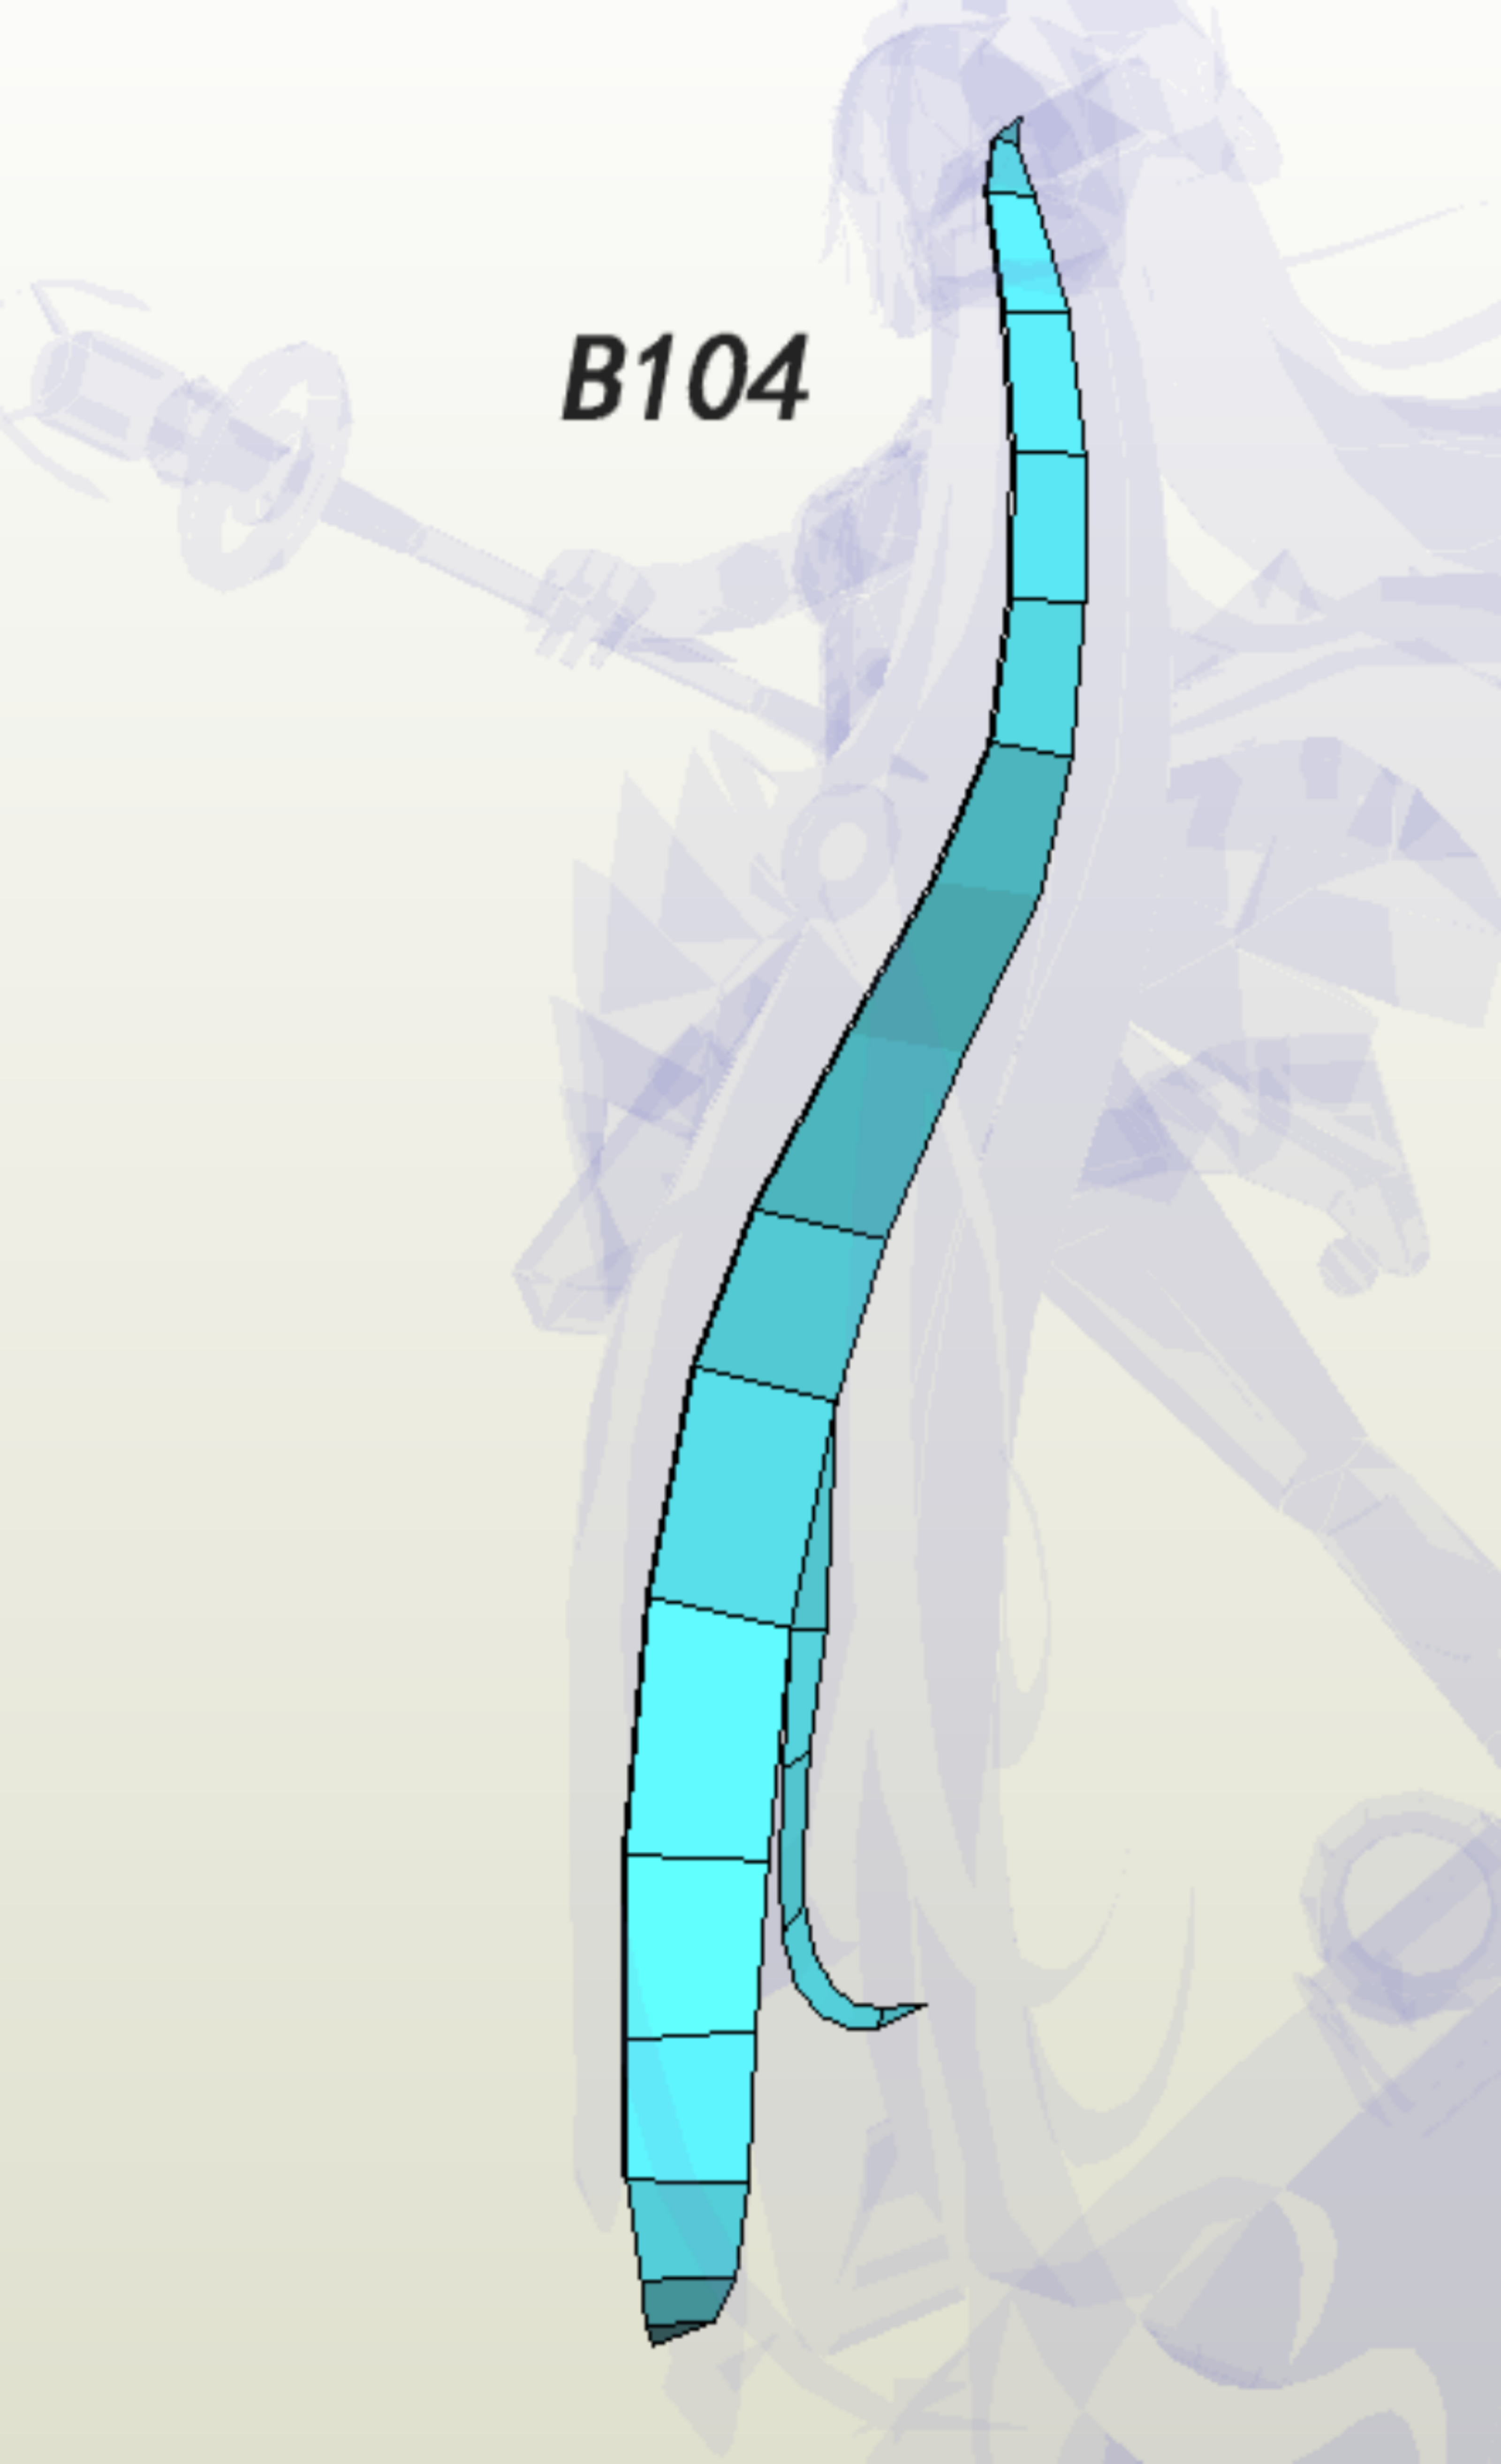


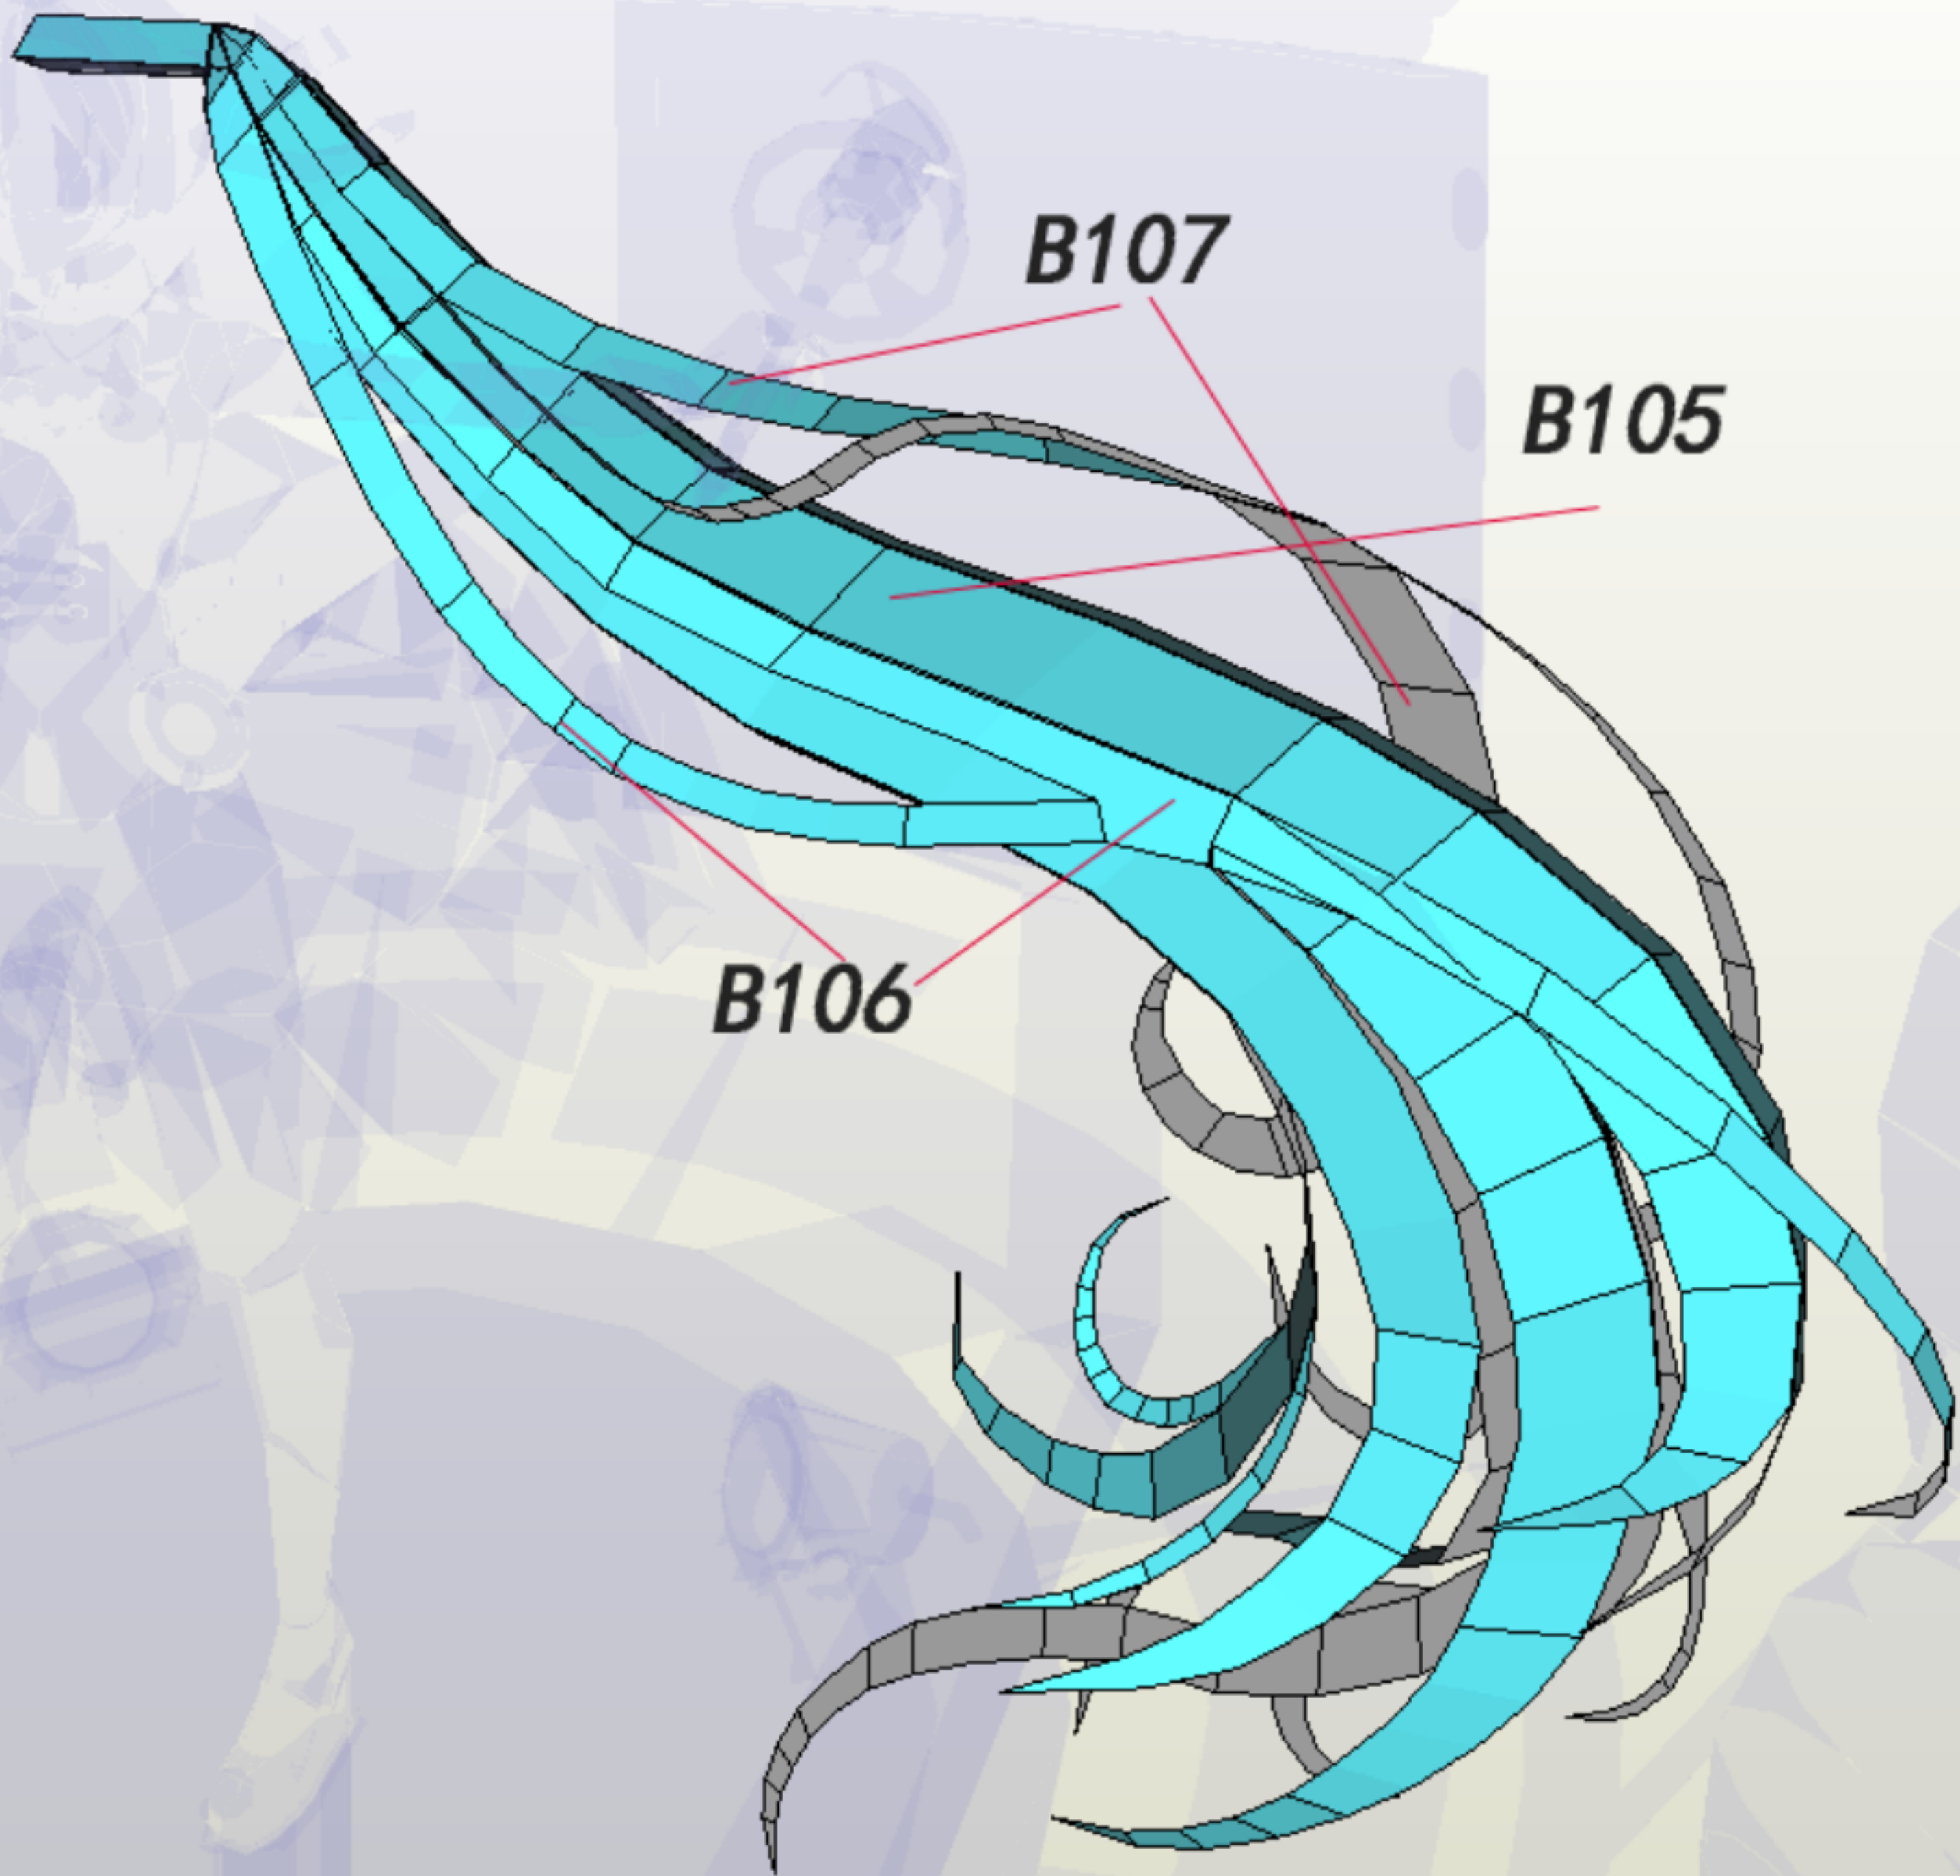

B107

B105


B106

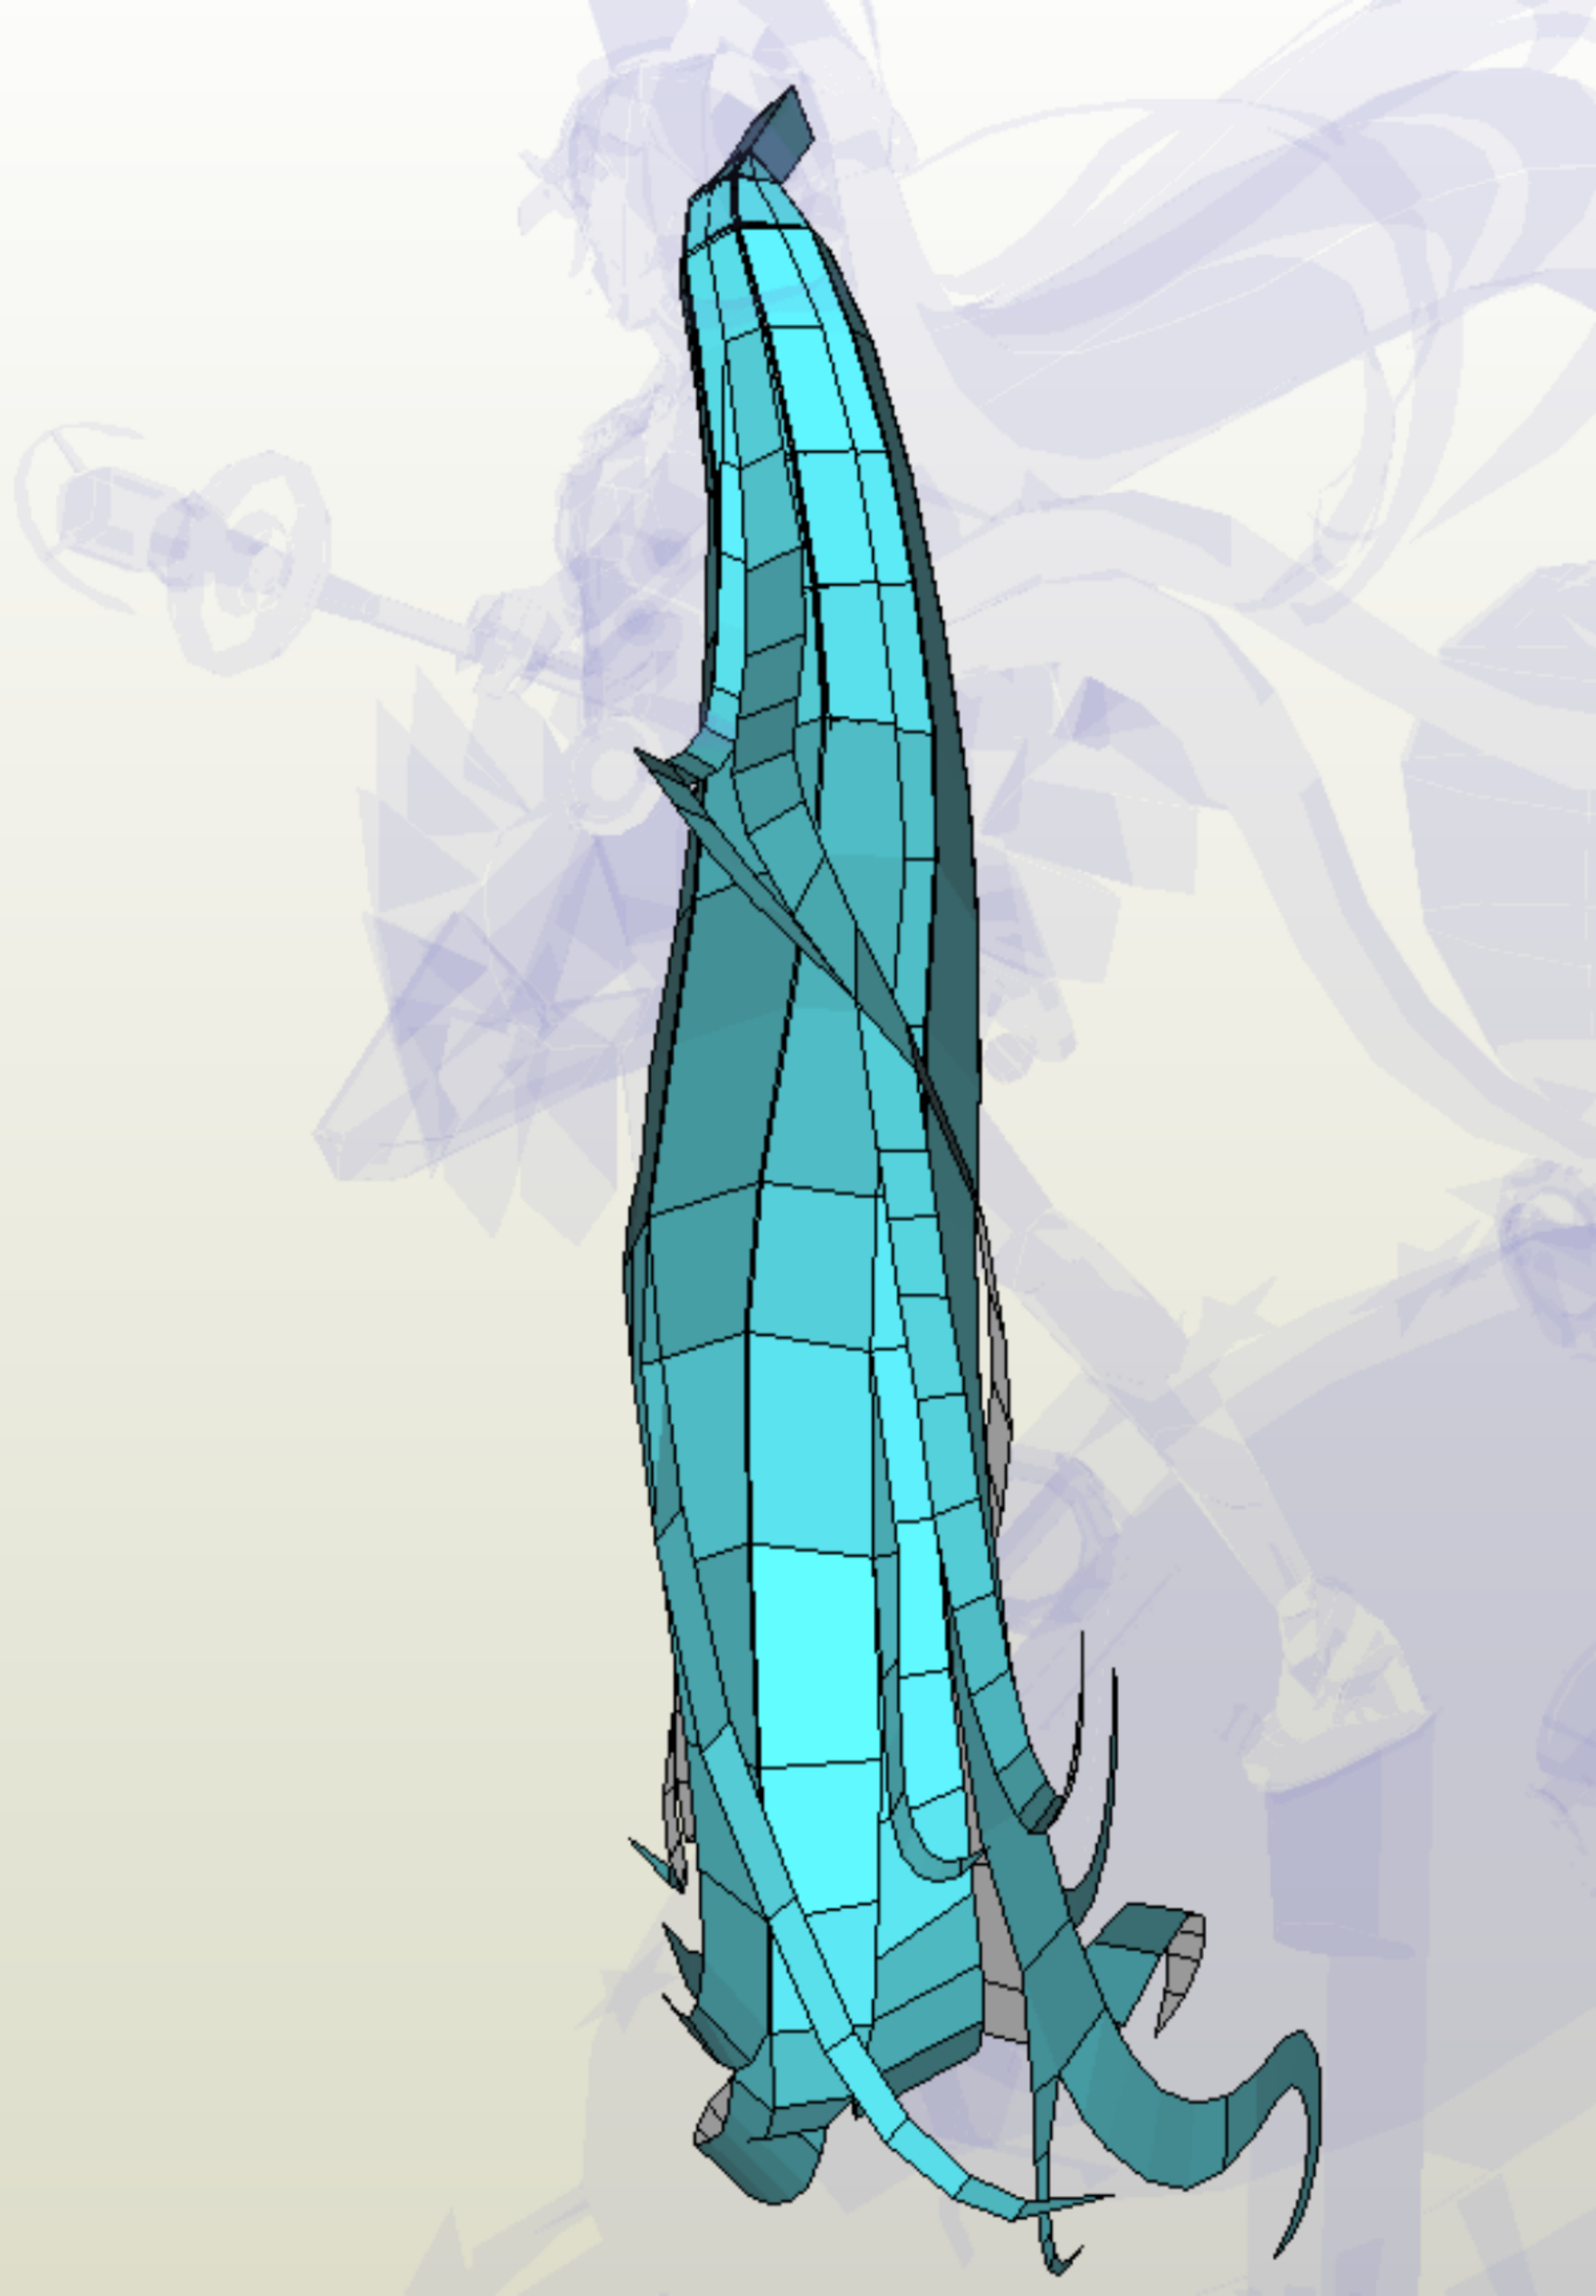




A74

A69c

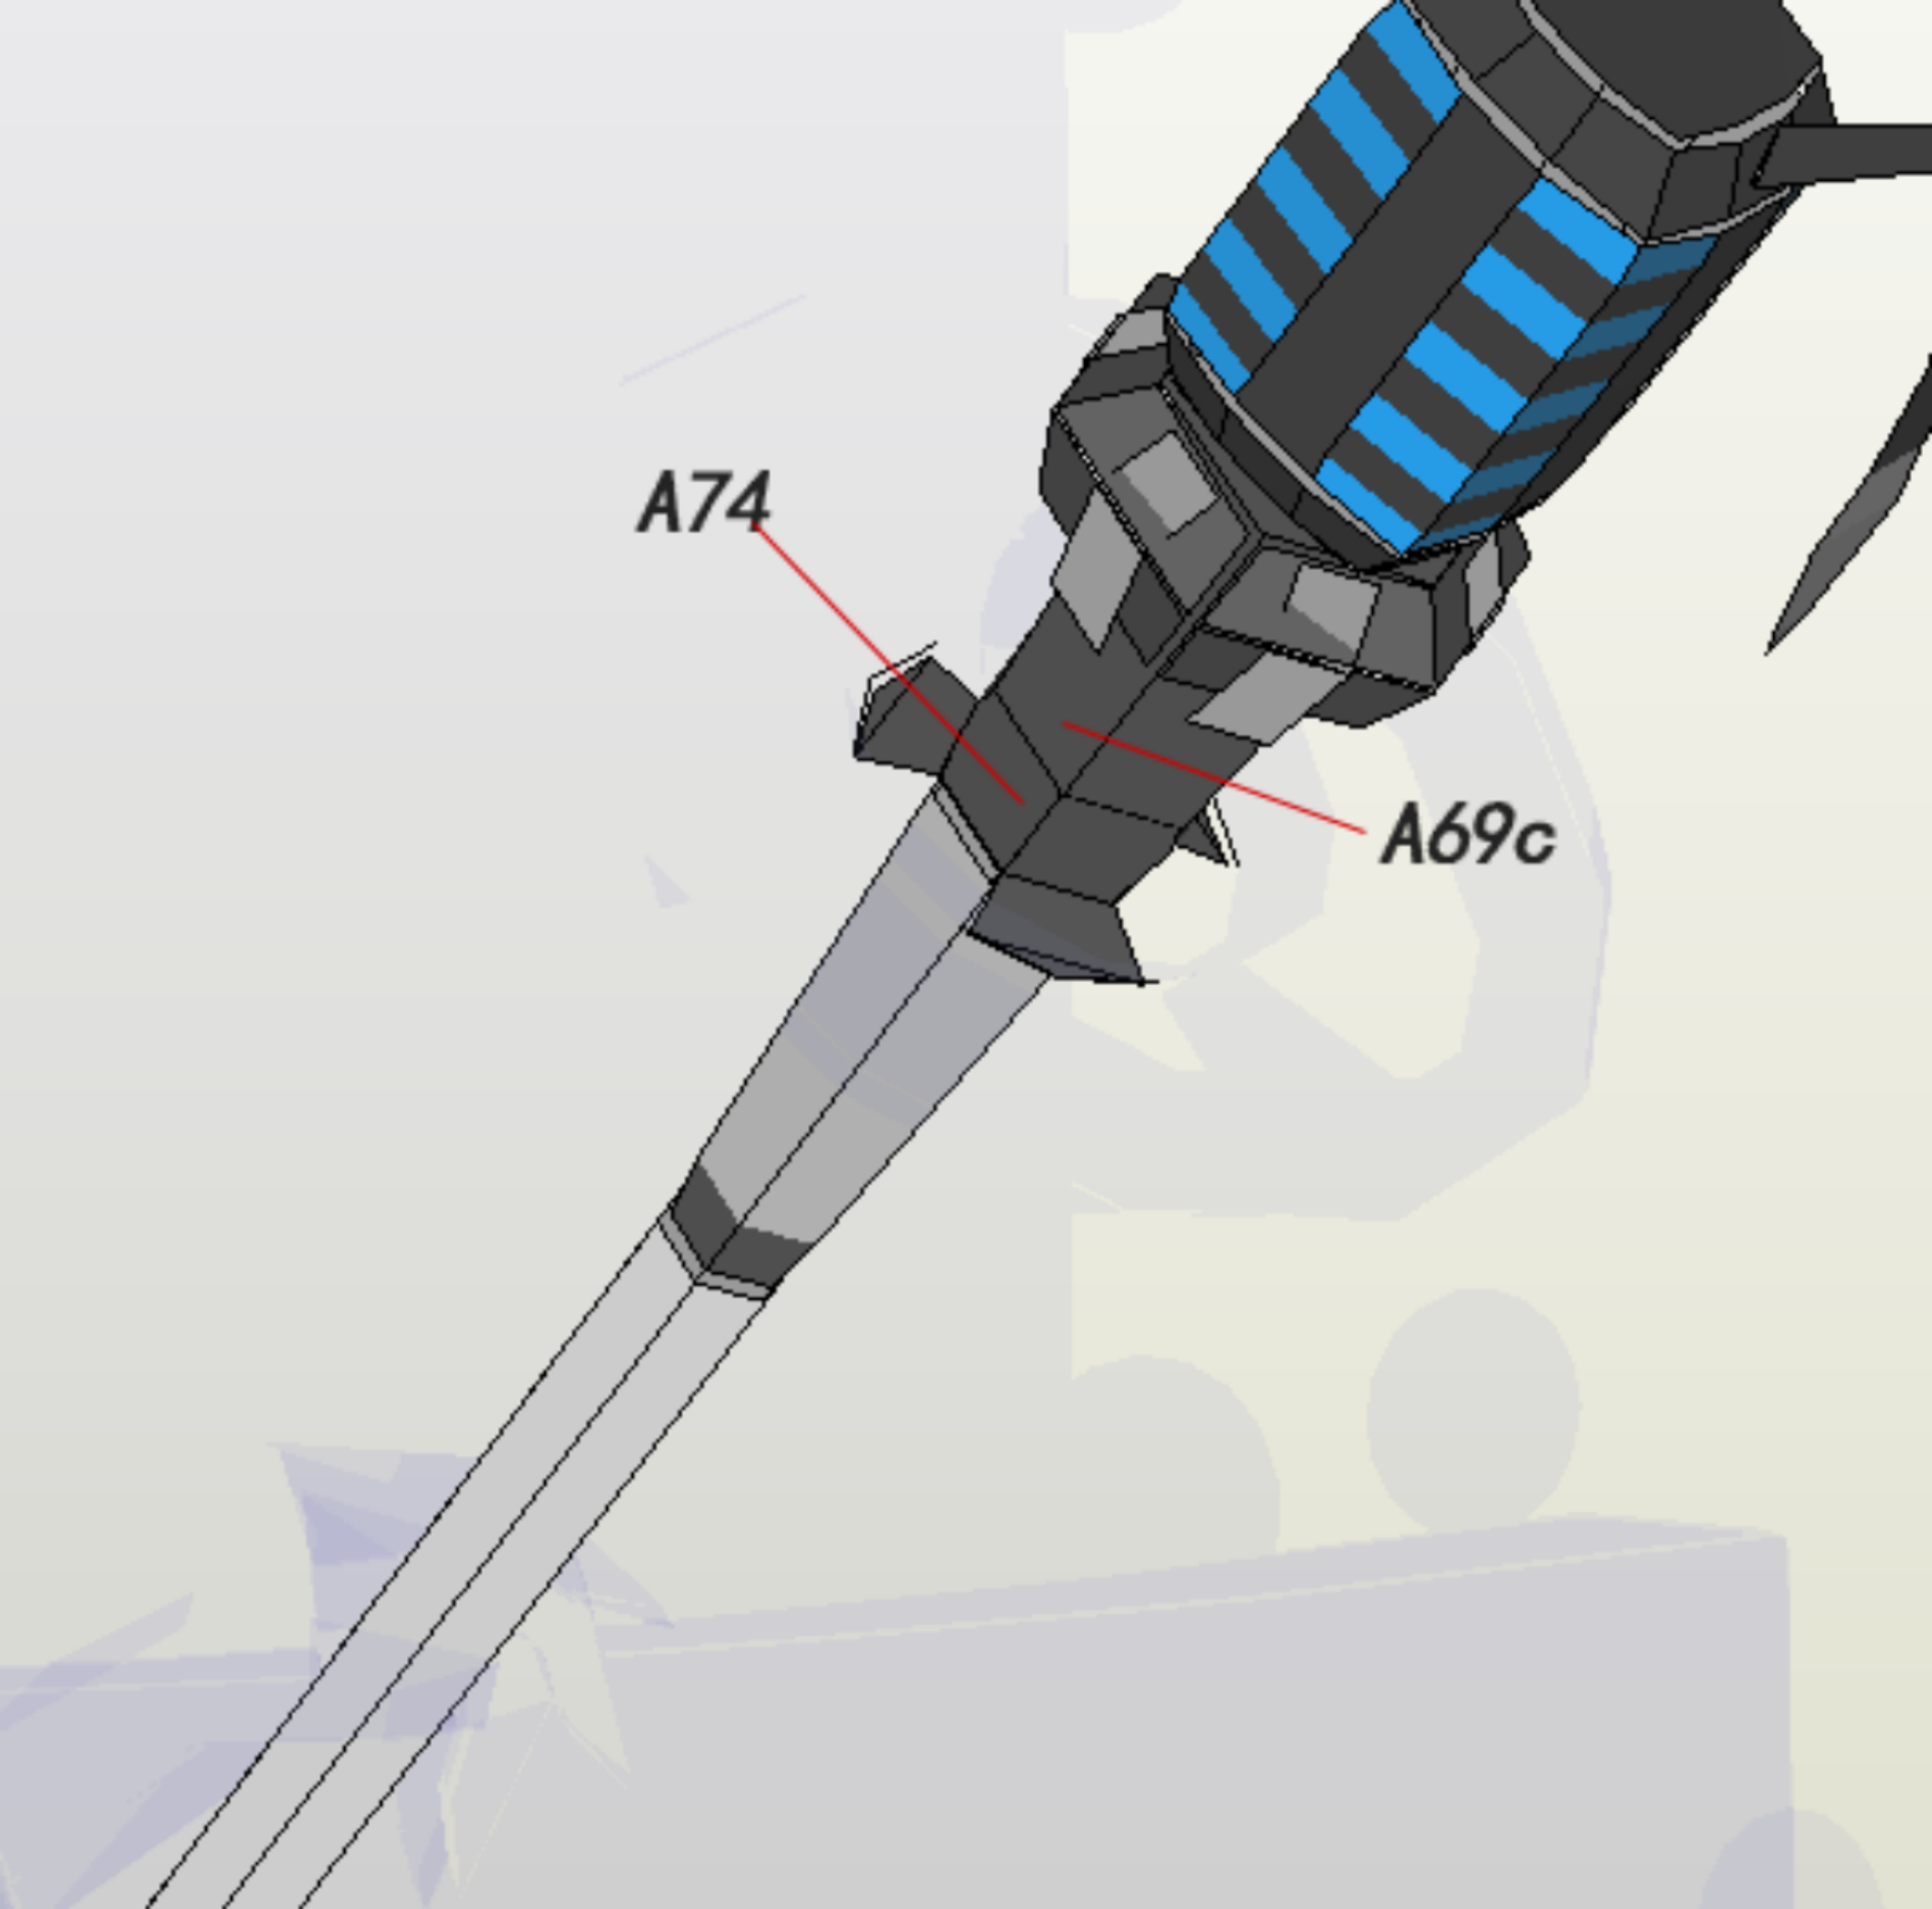

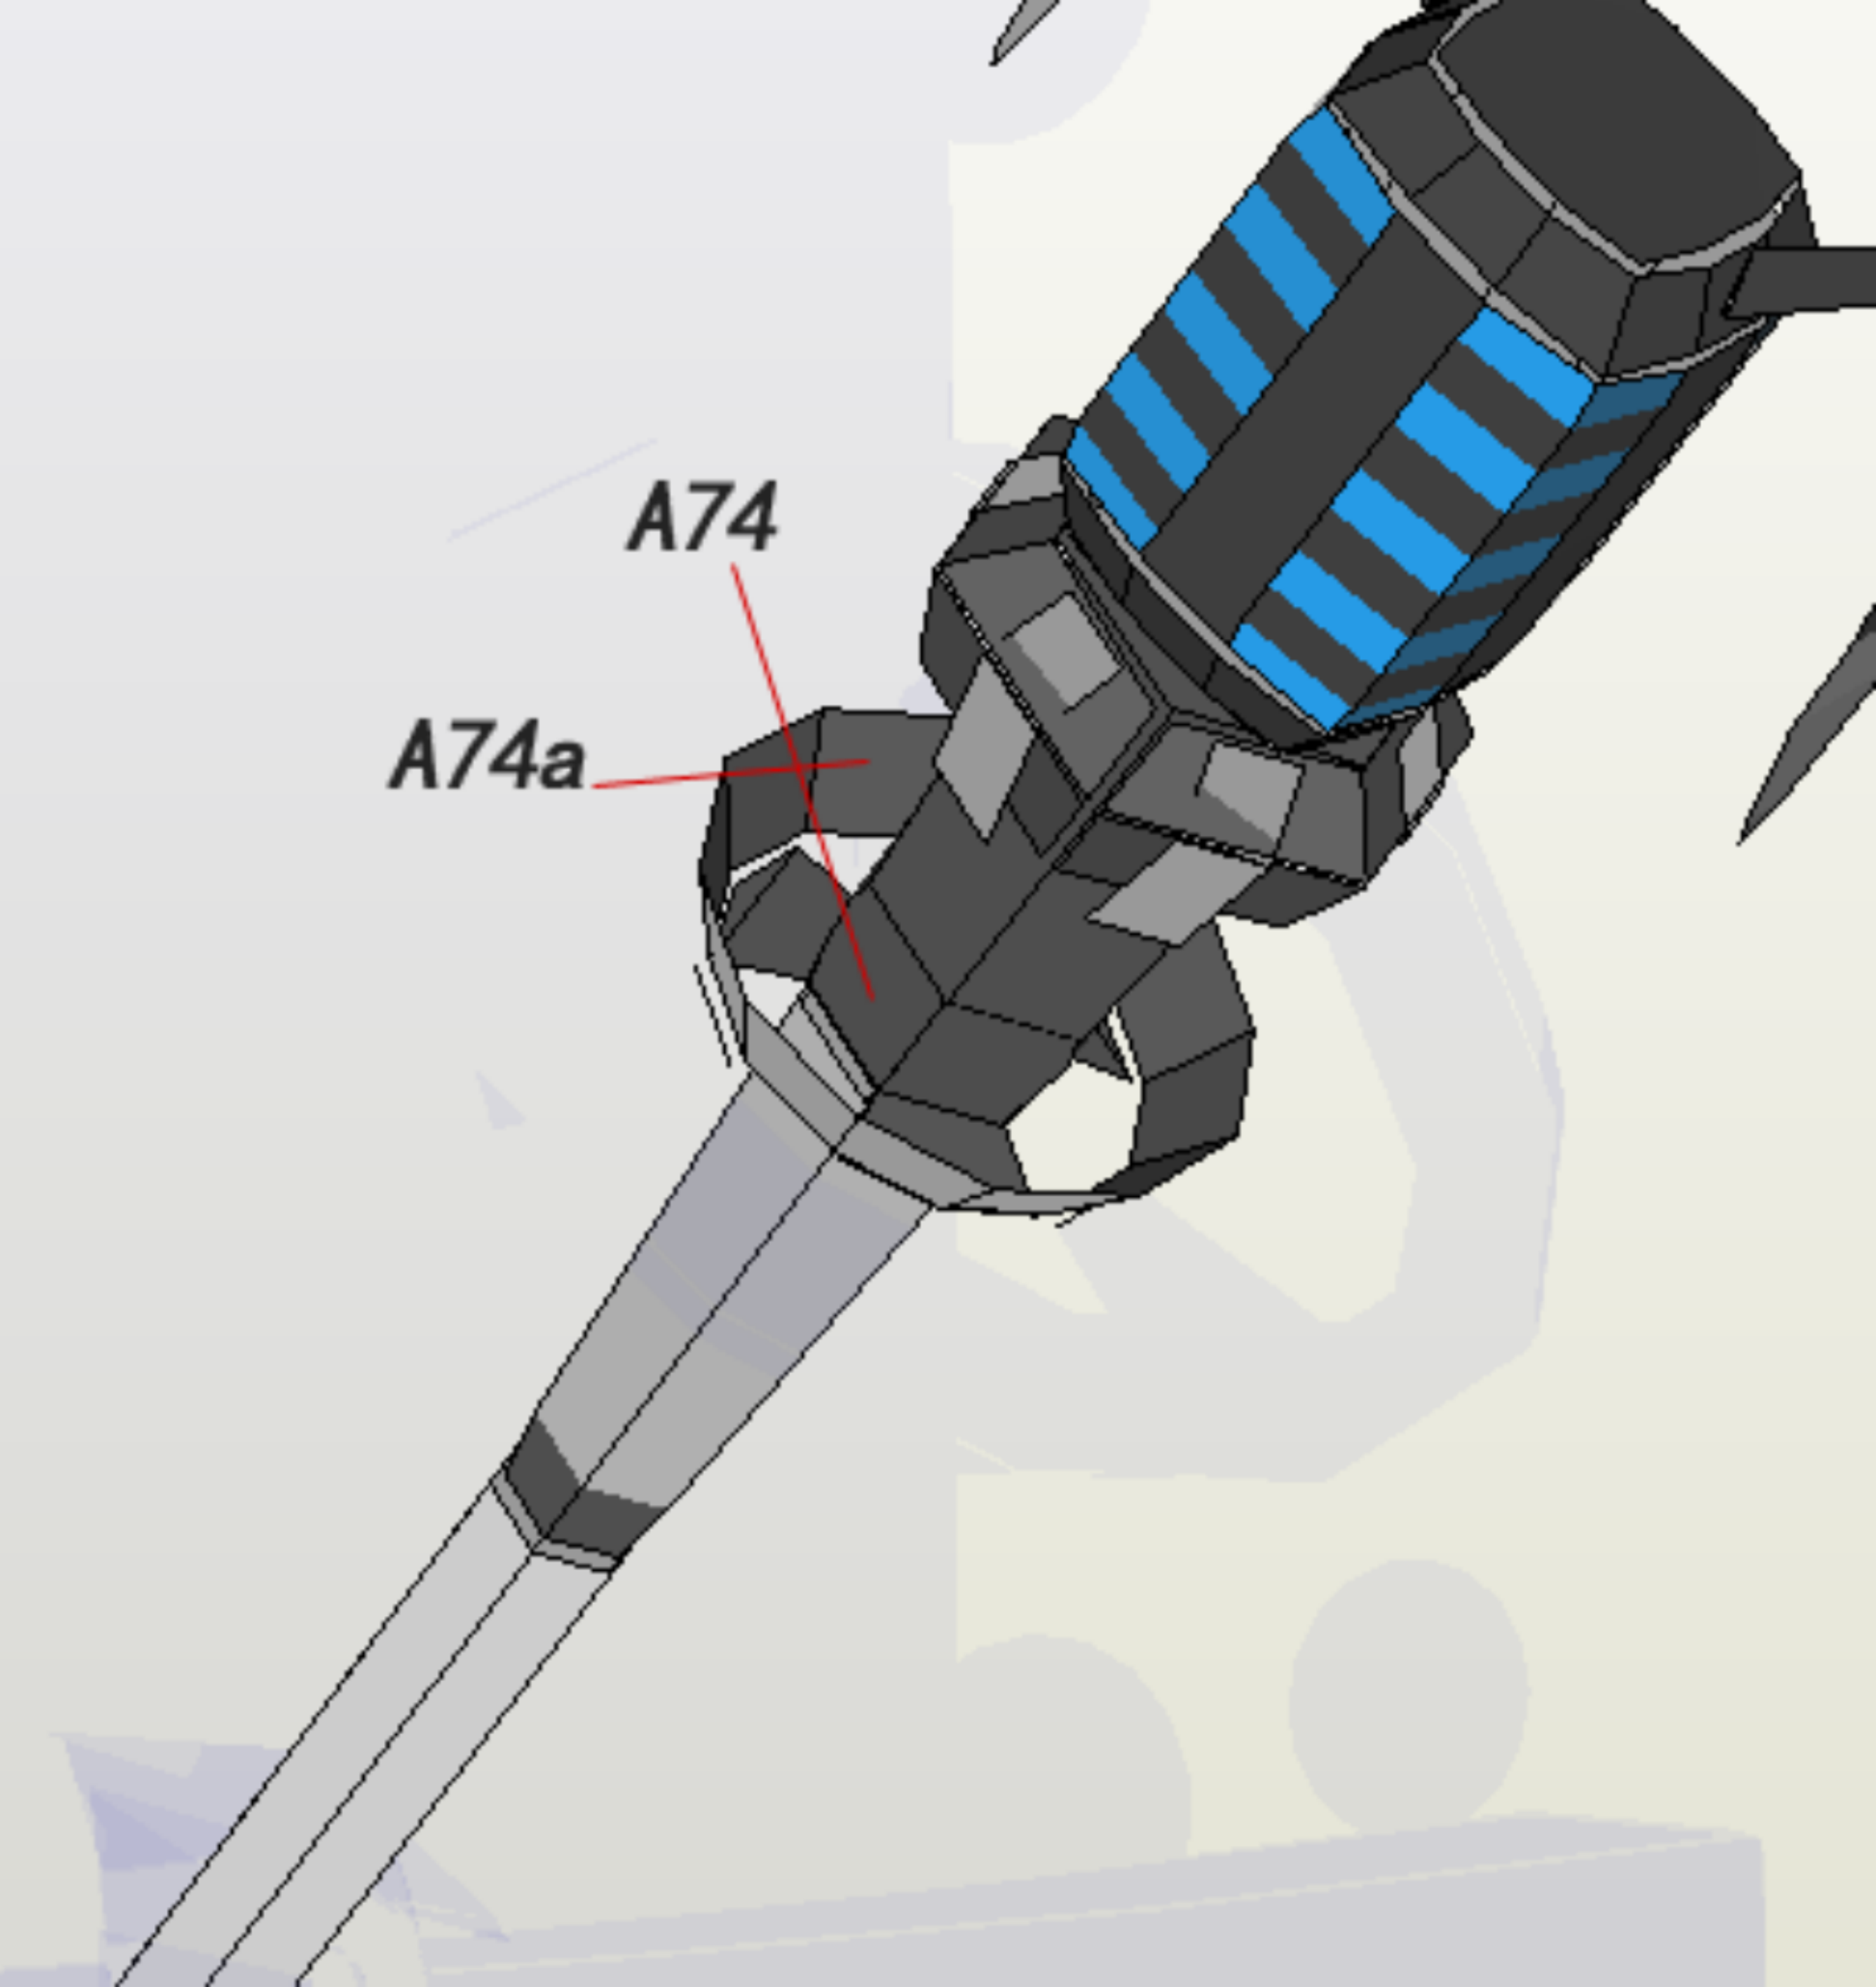



A74

A74a


A74b

A74a

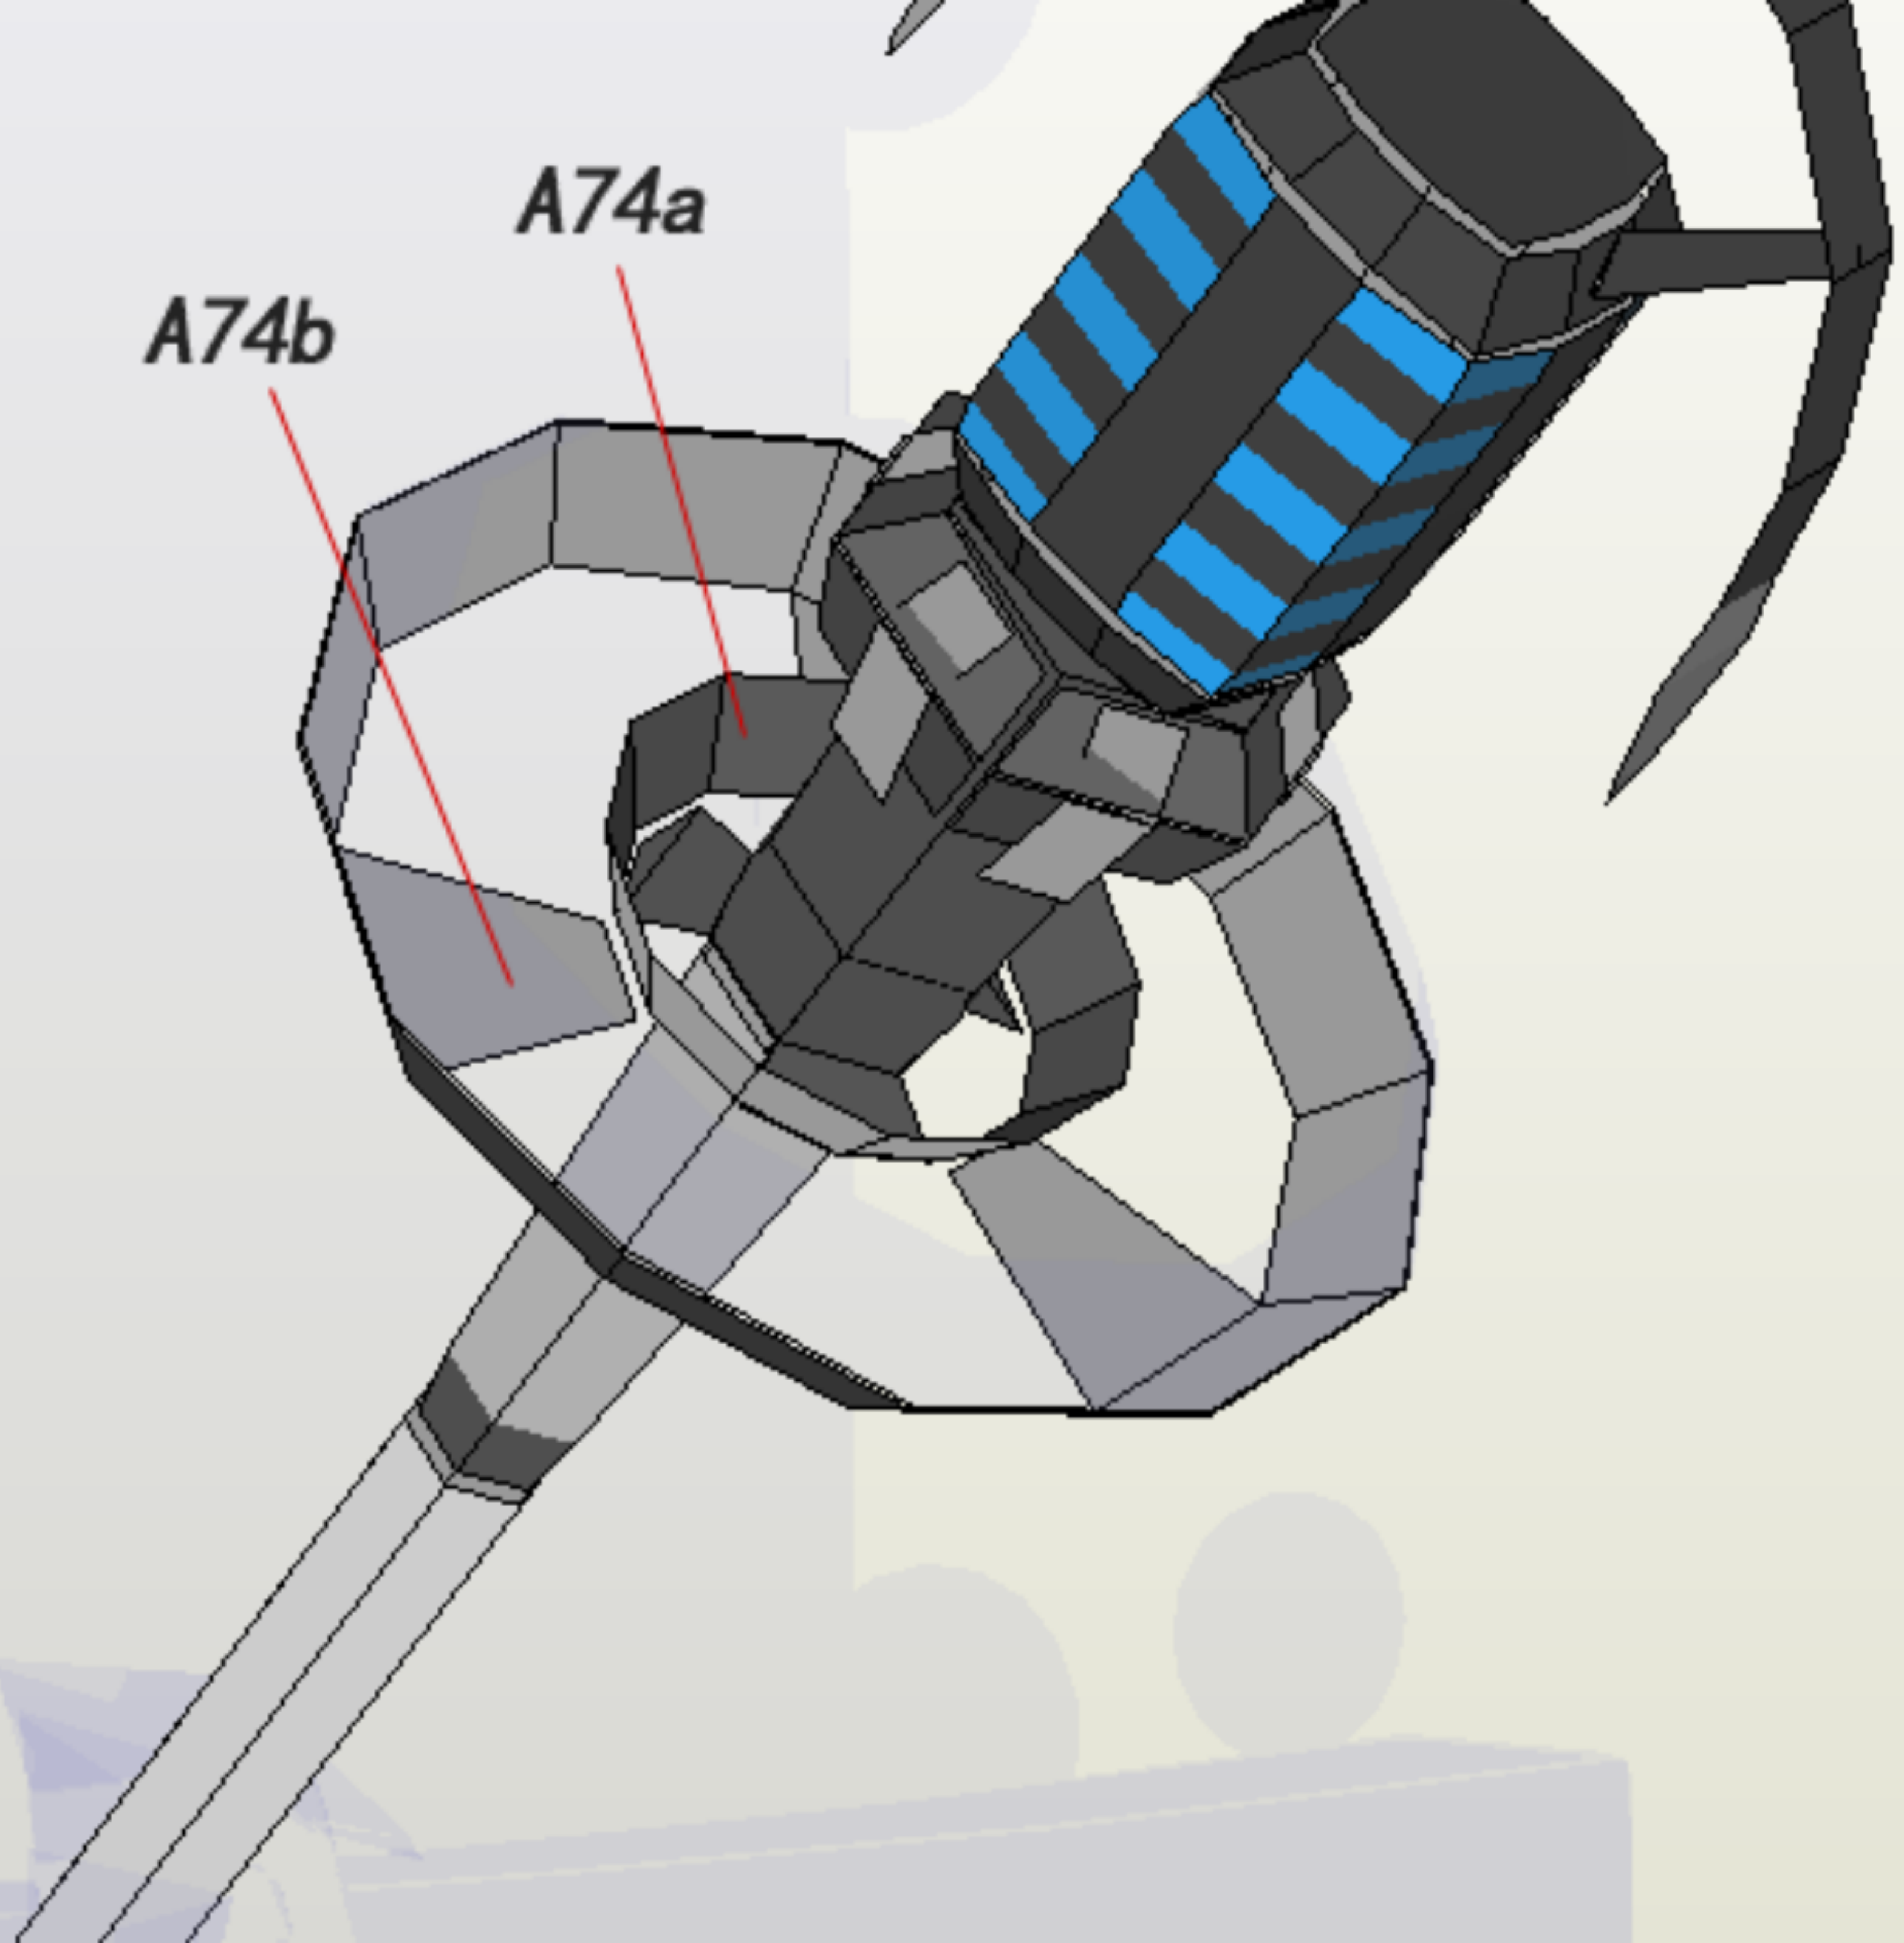

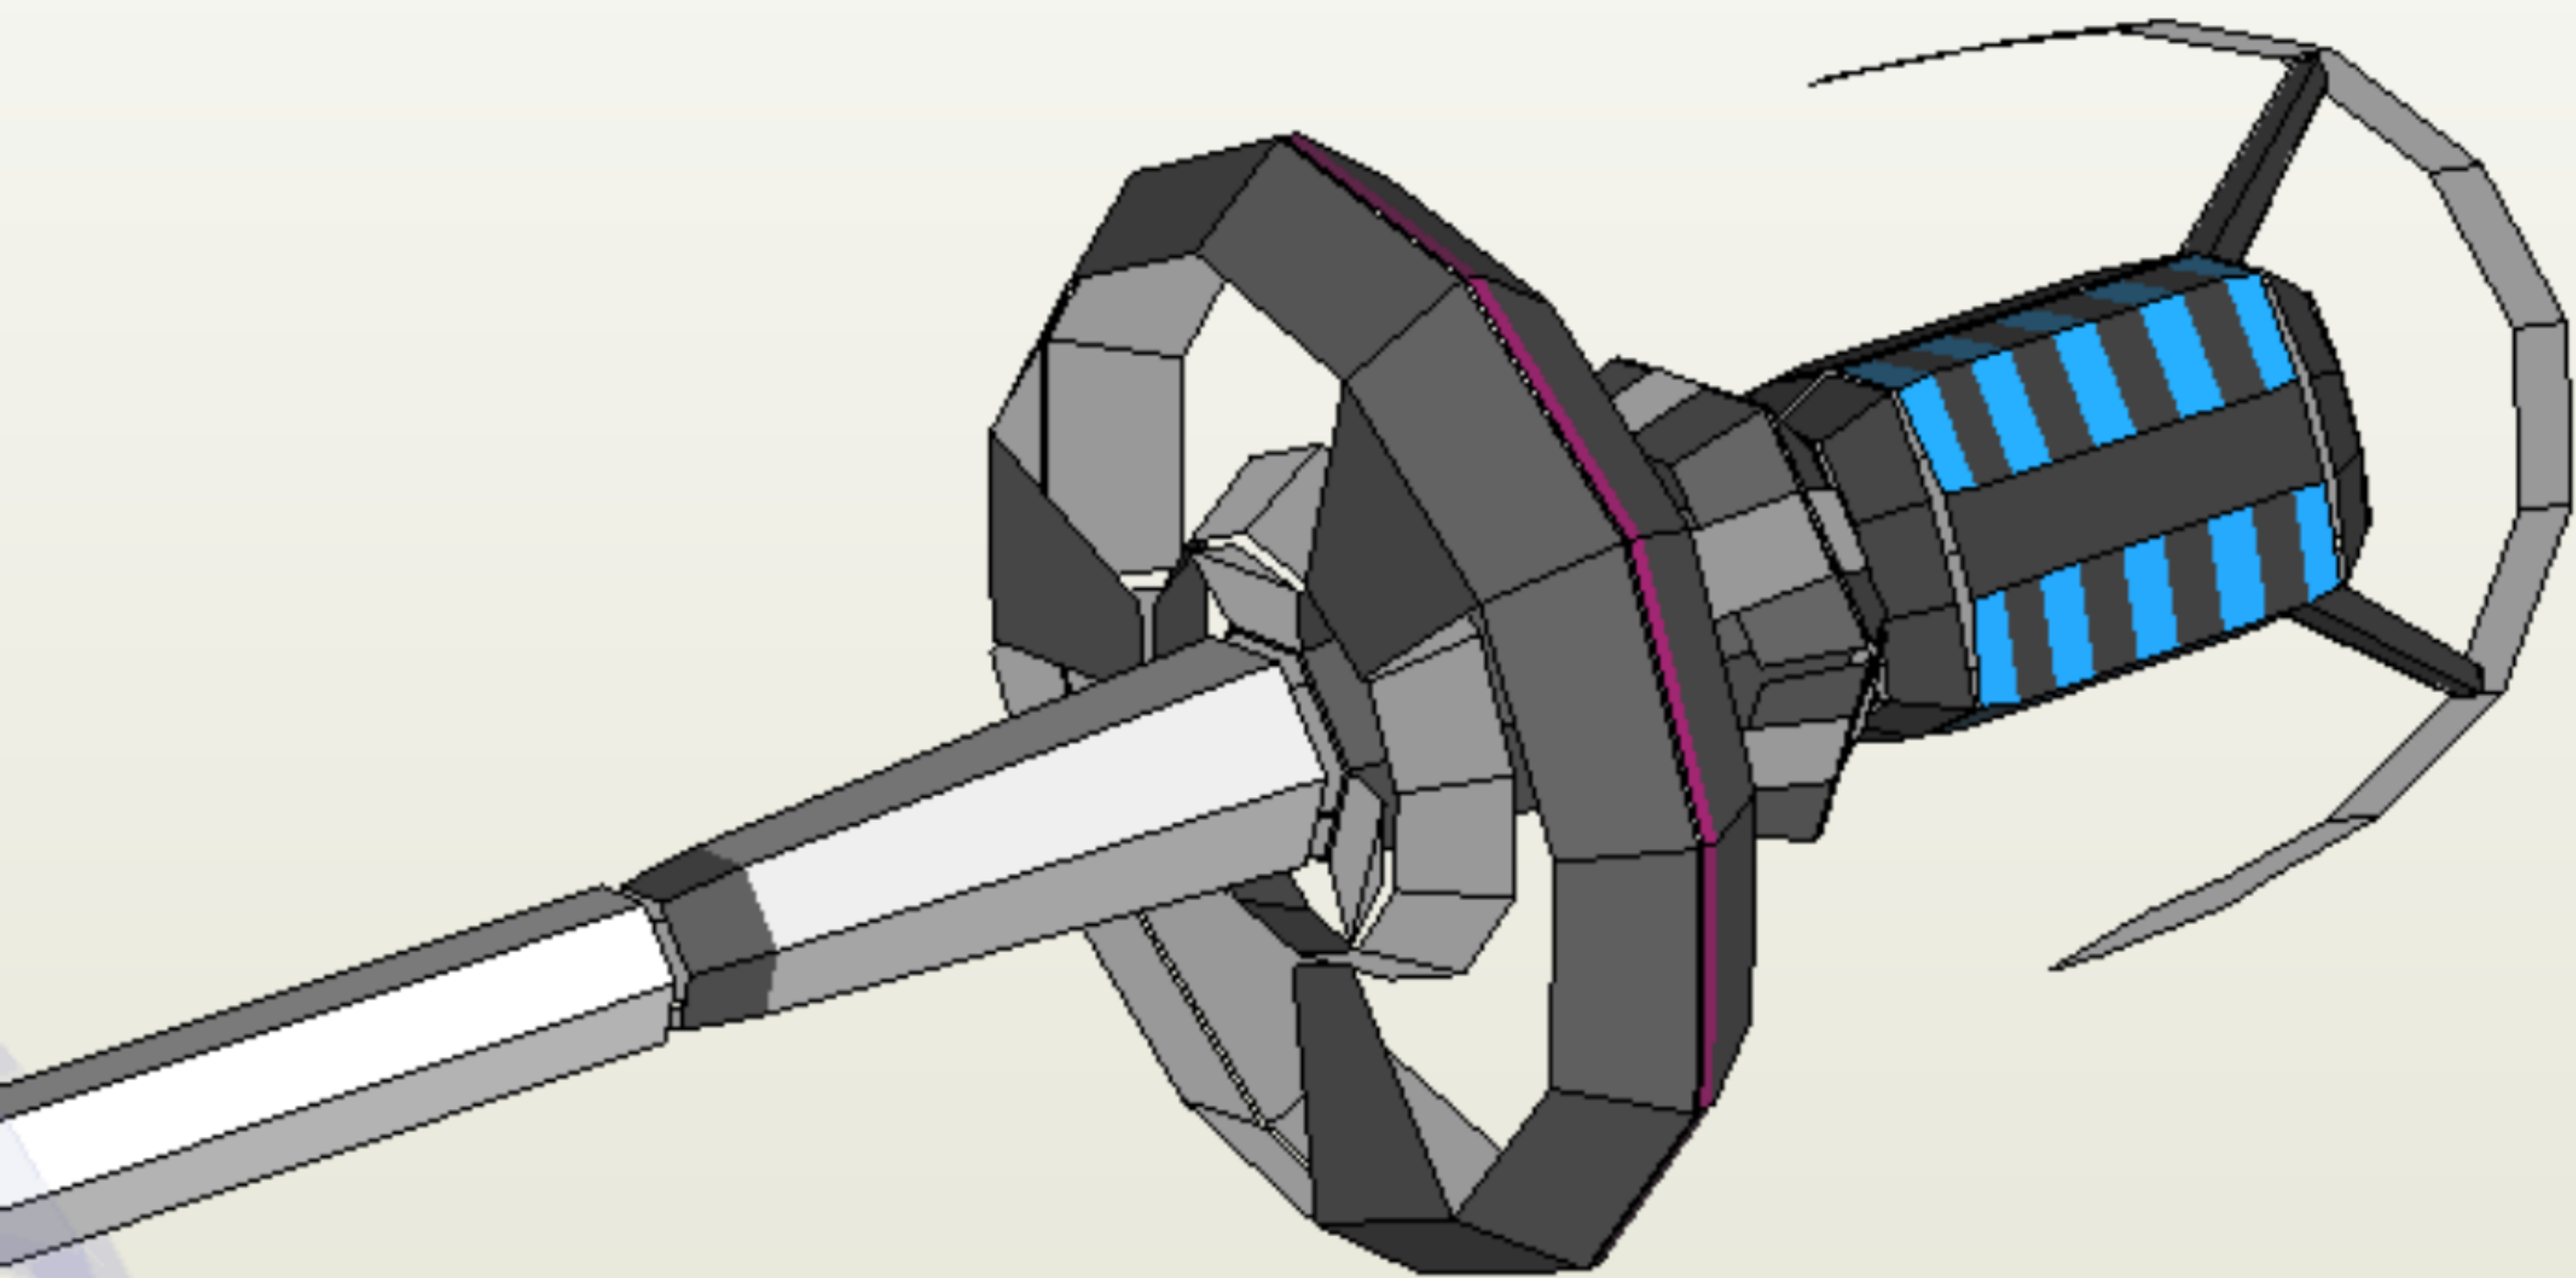


A74c

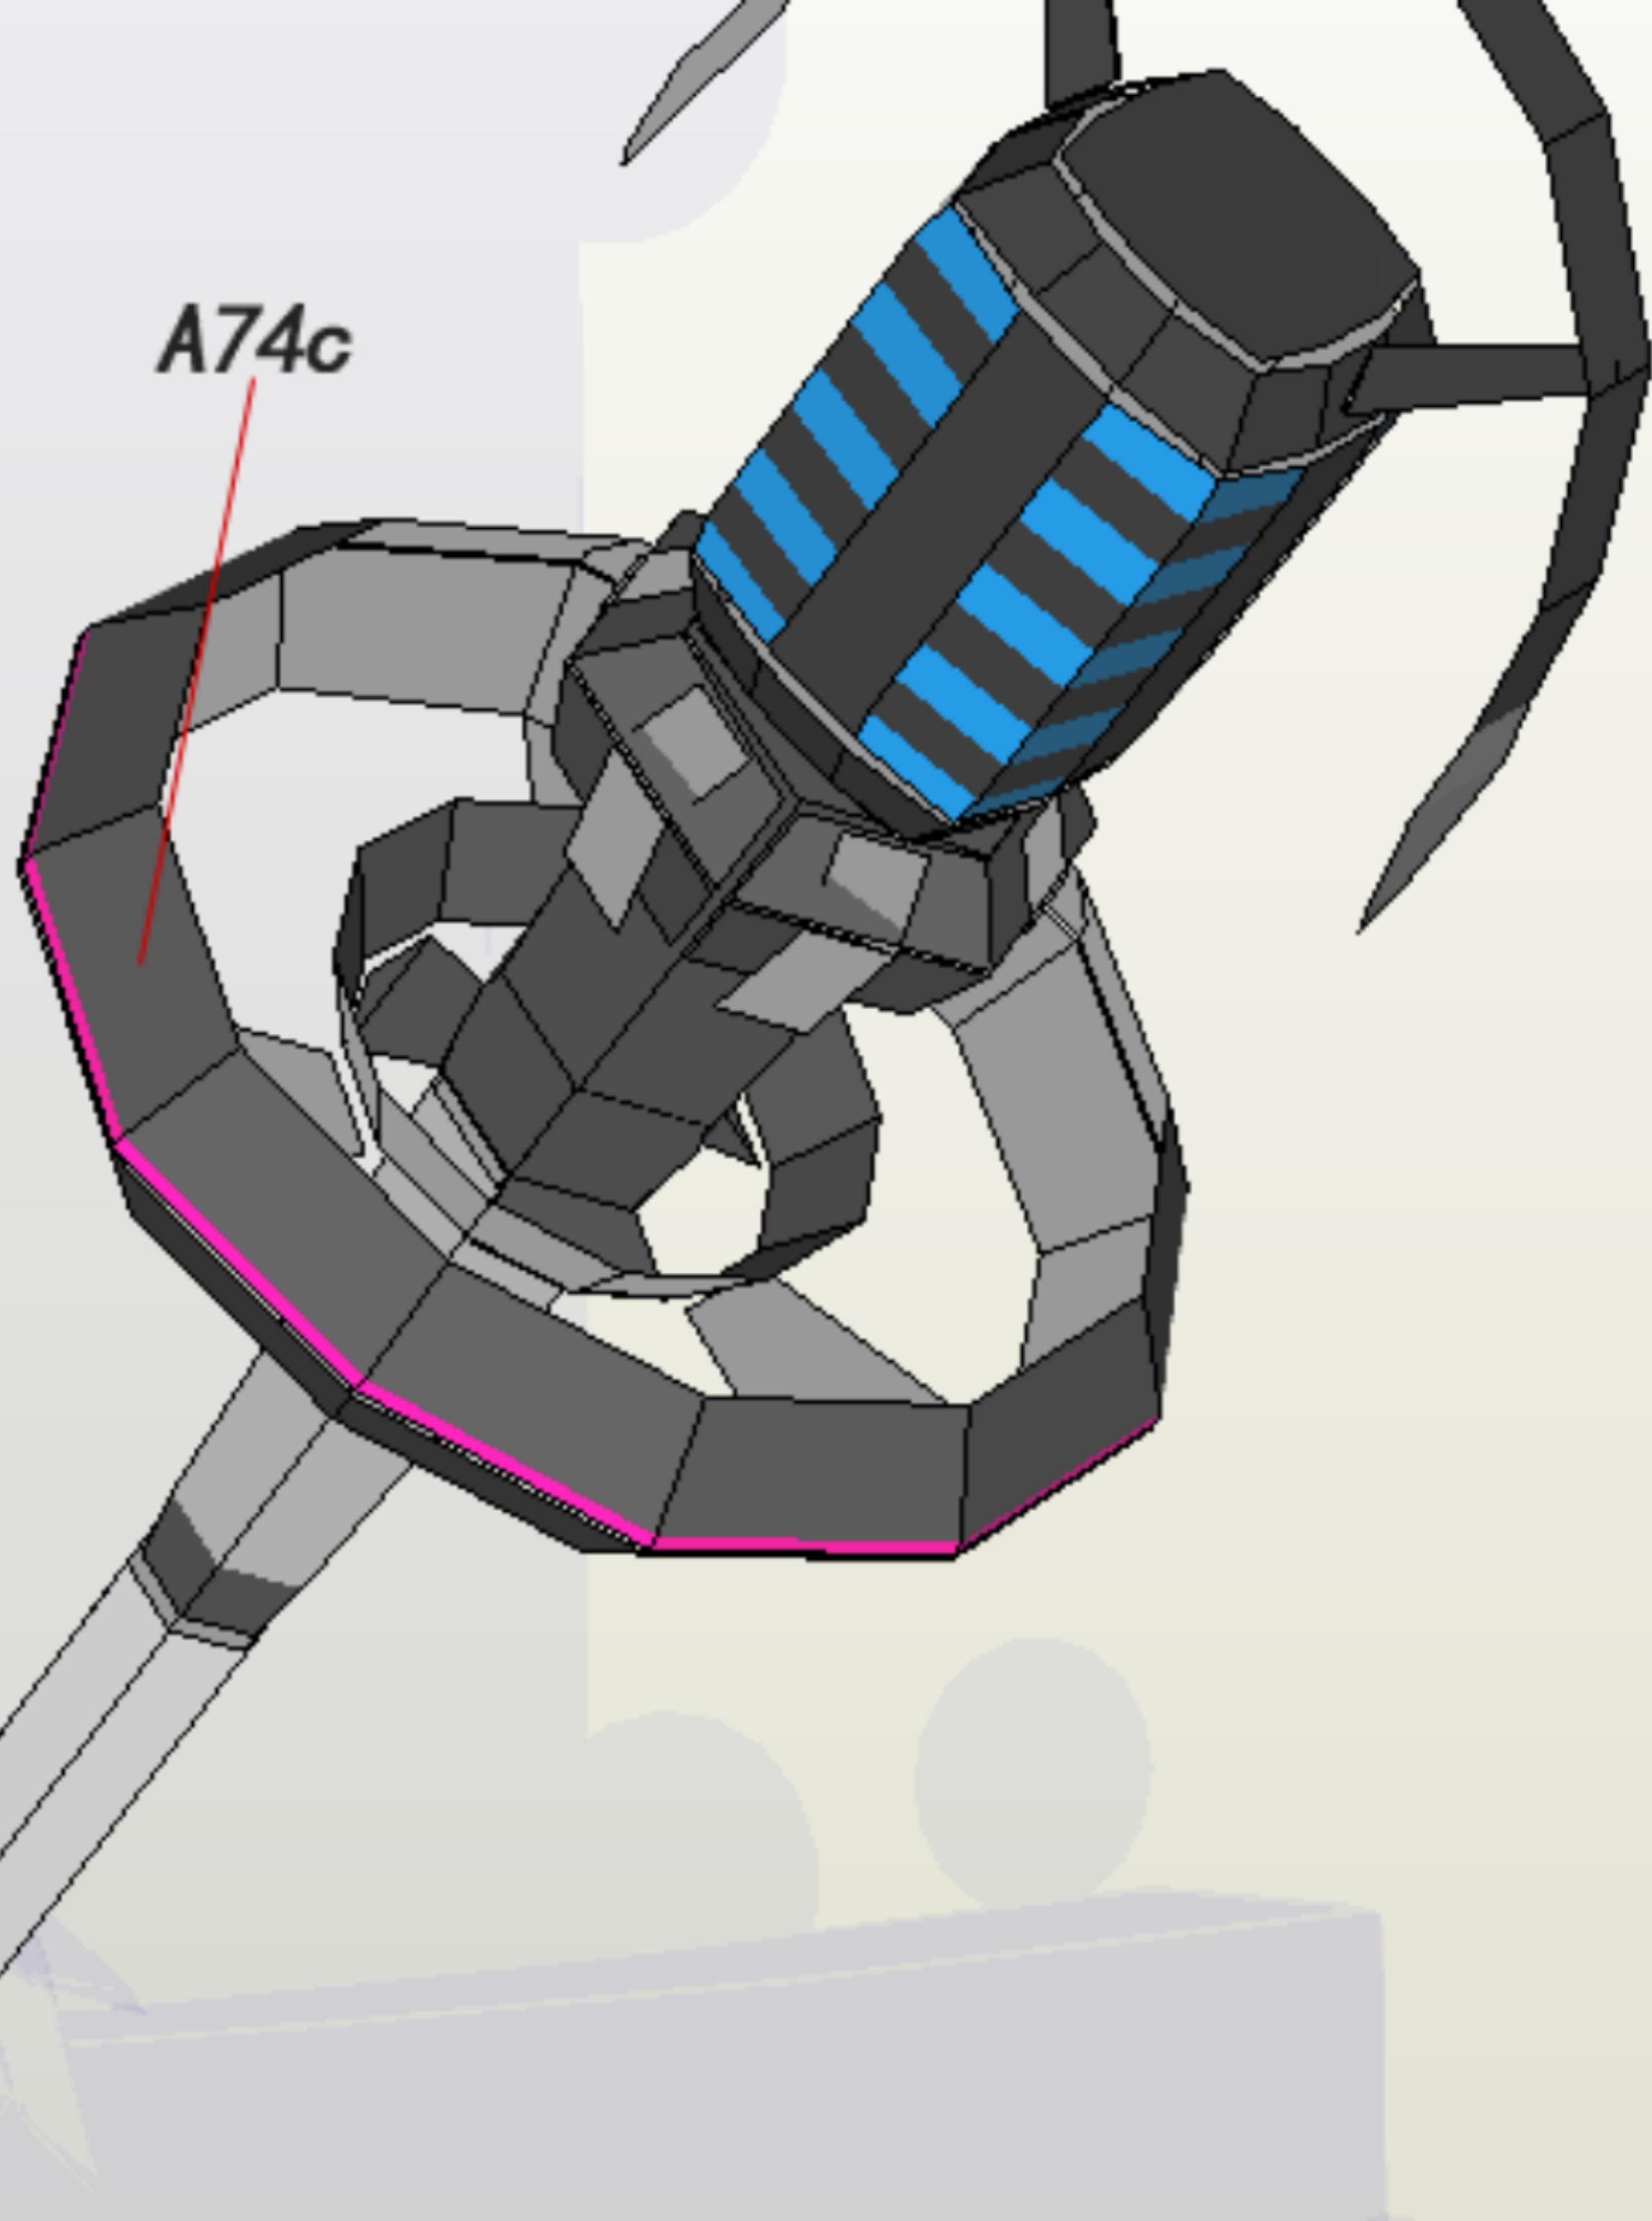

B75


B77

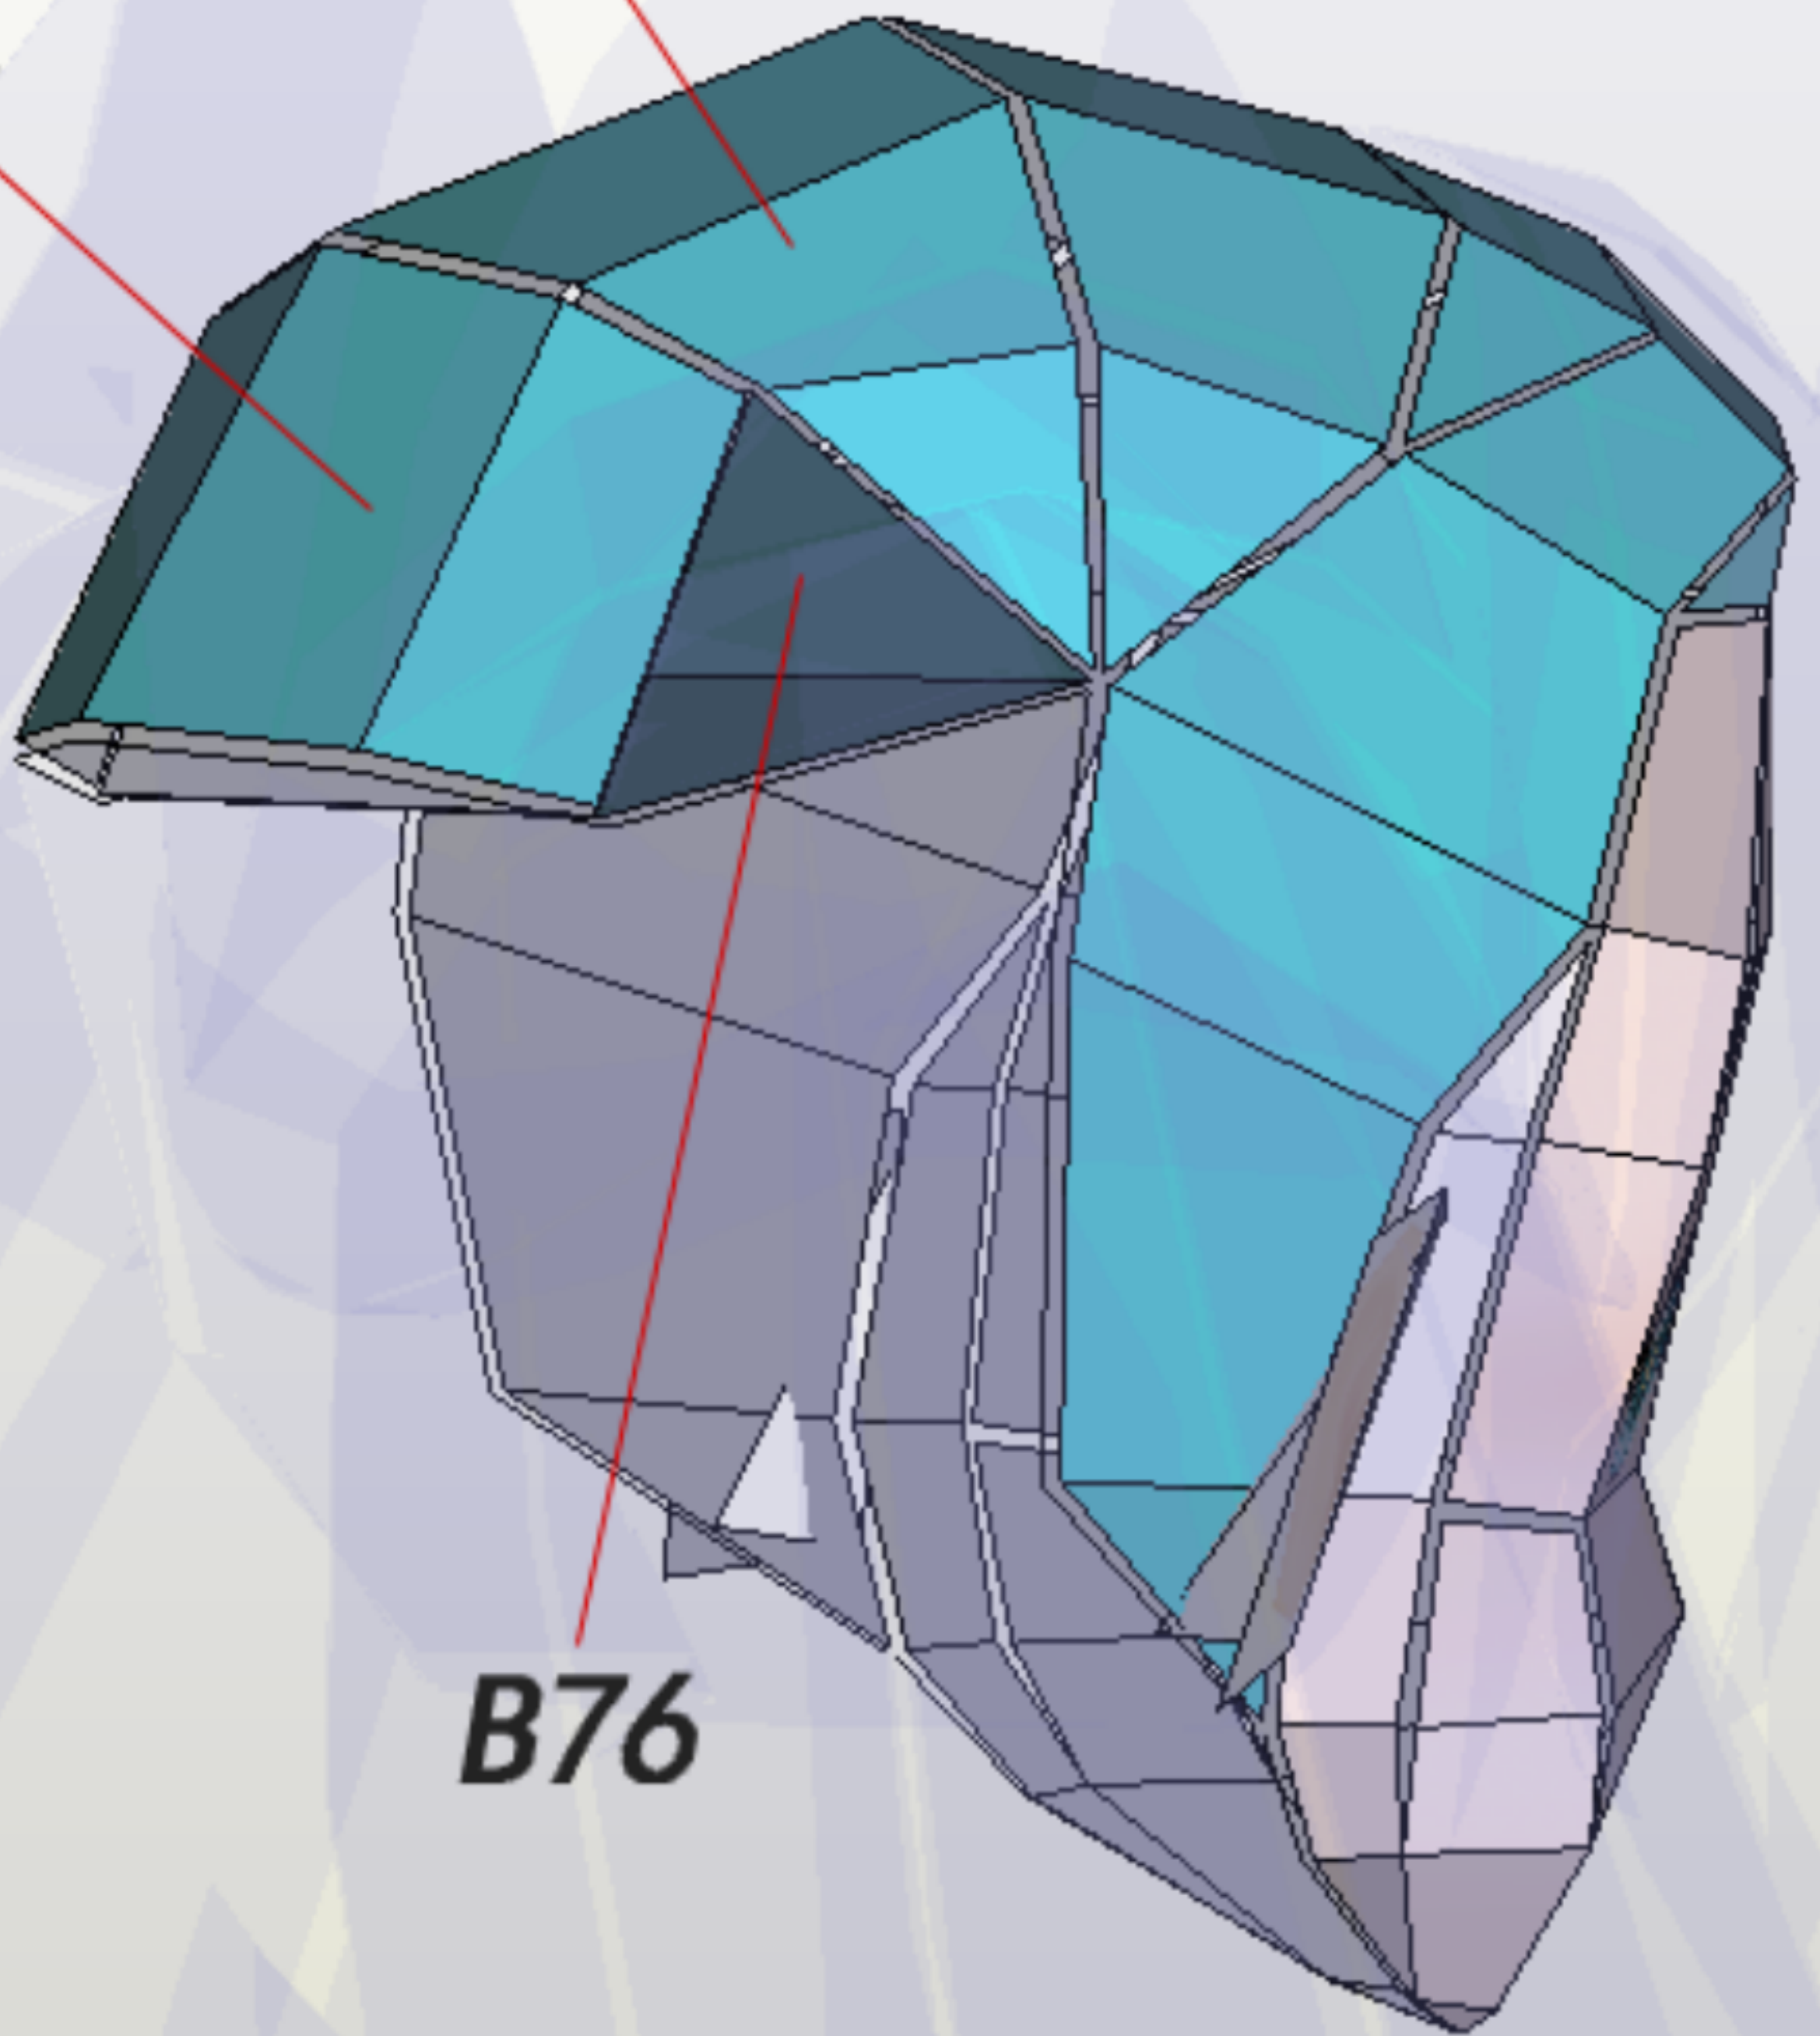

B76

脸部制作教程在新手必读中


B70

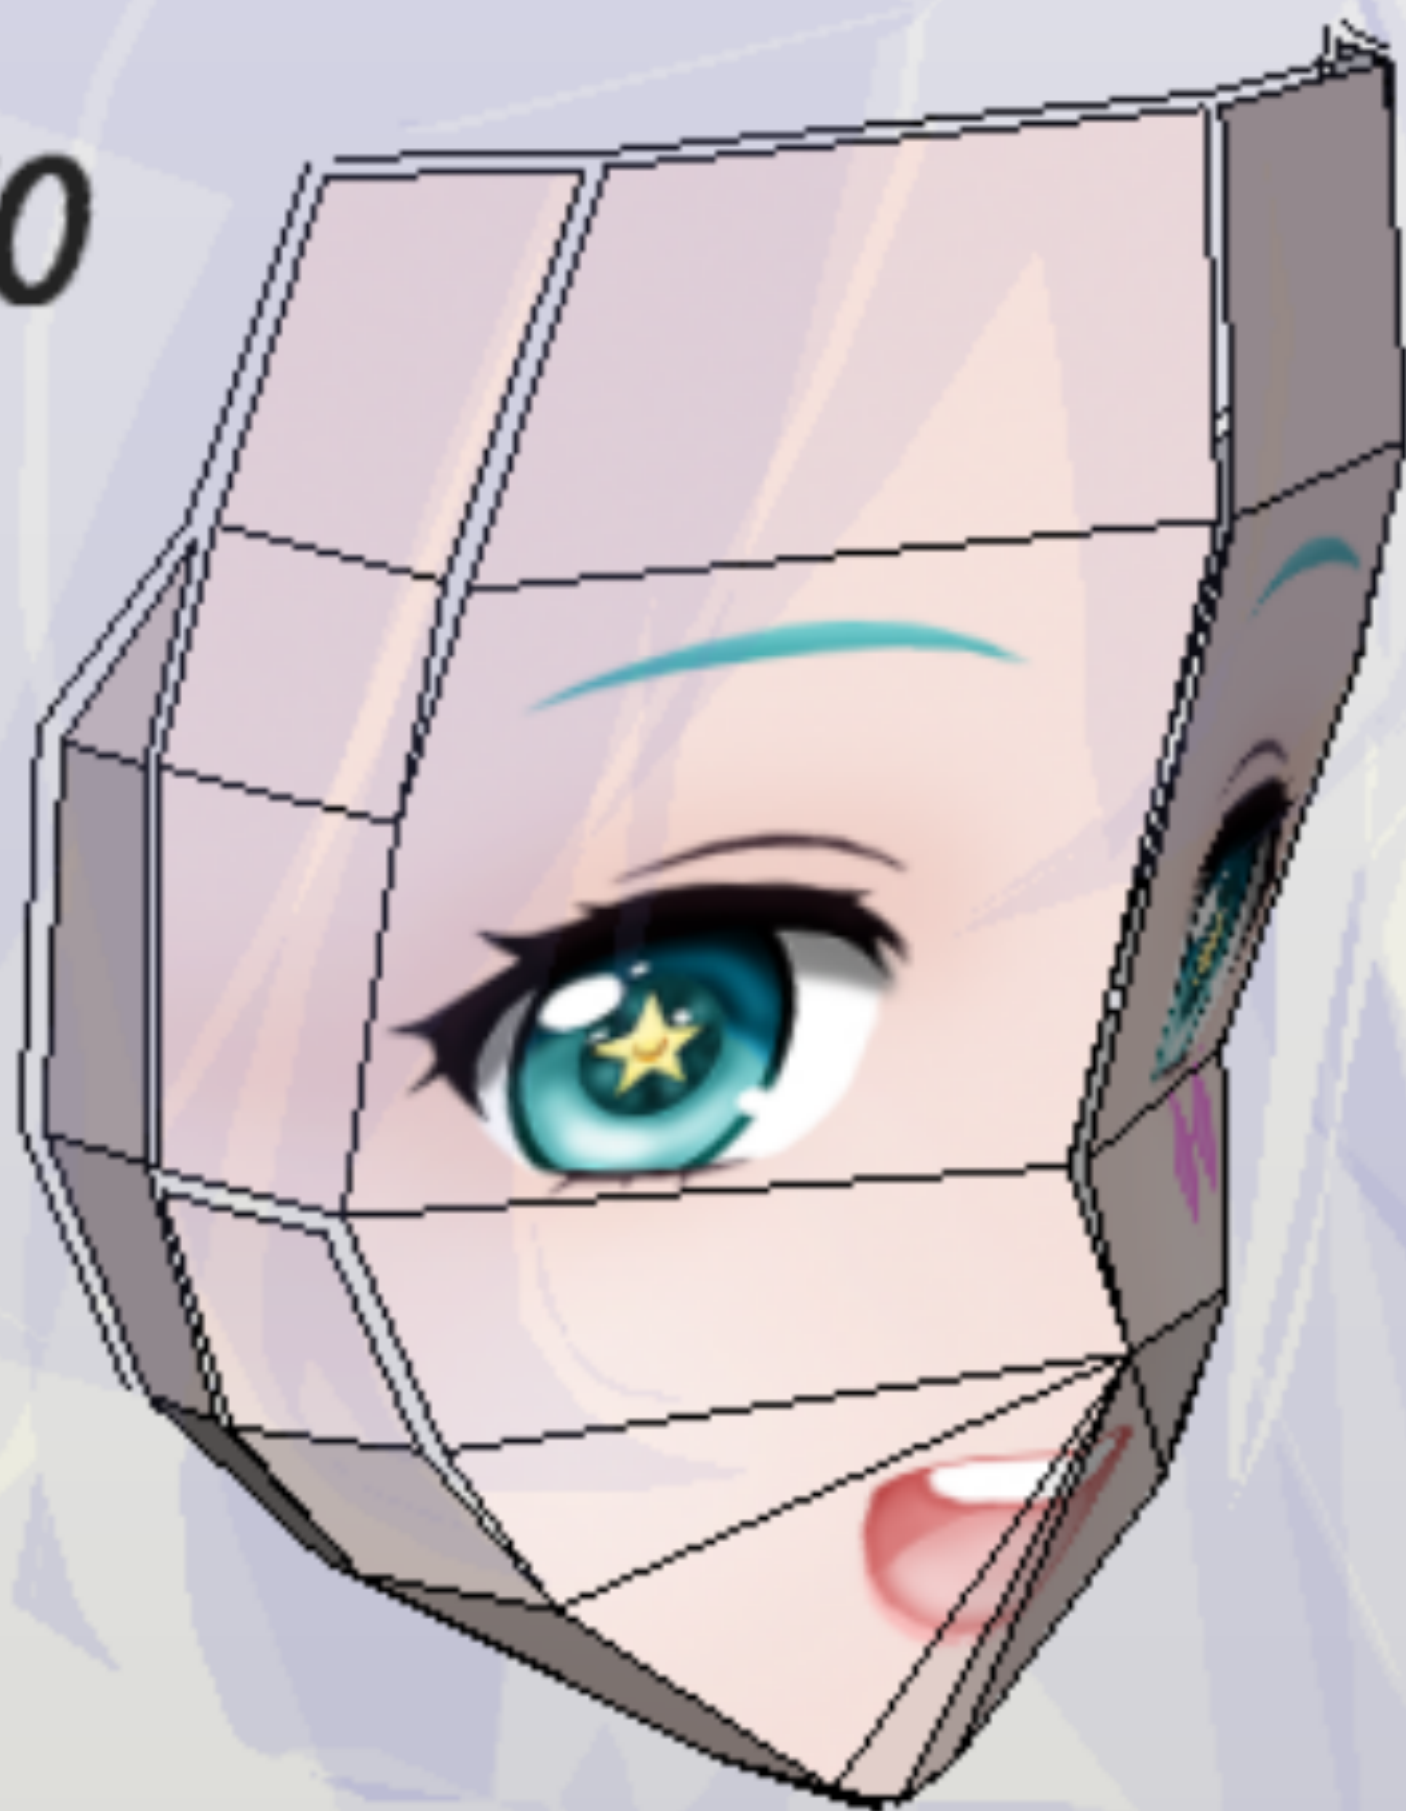



B77


B78


B72

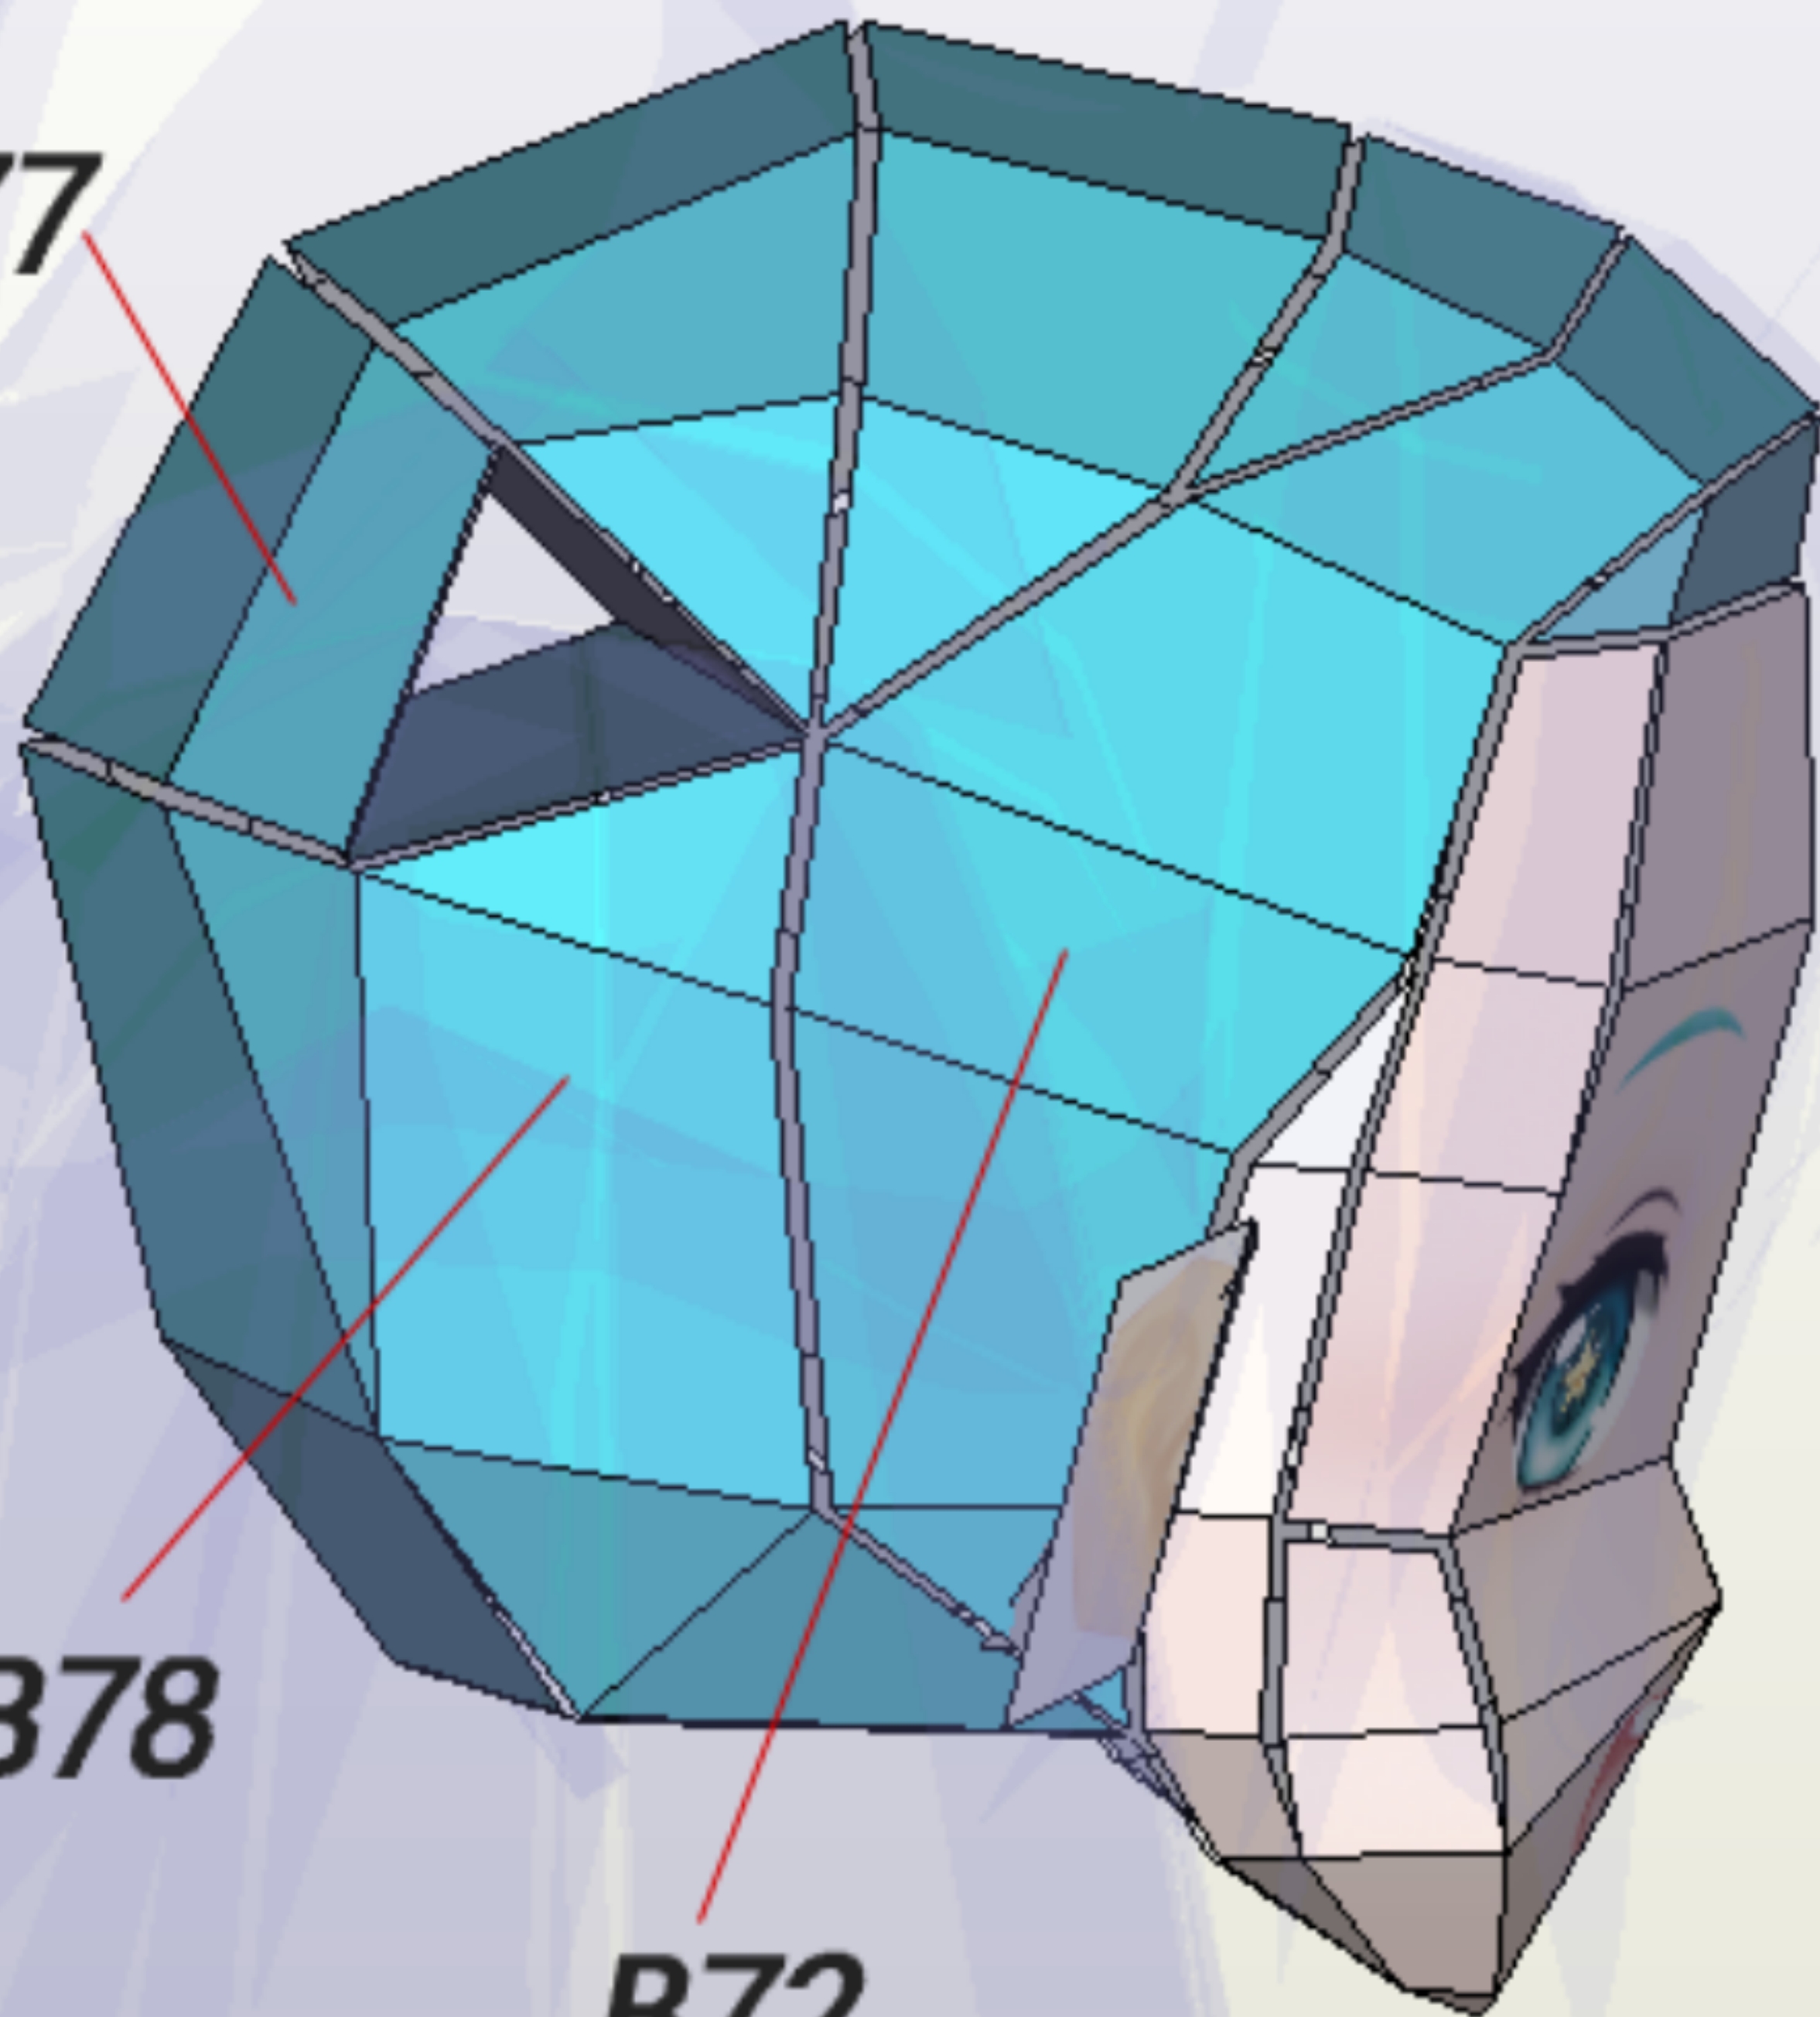

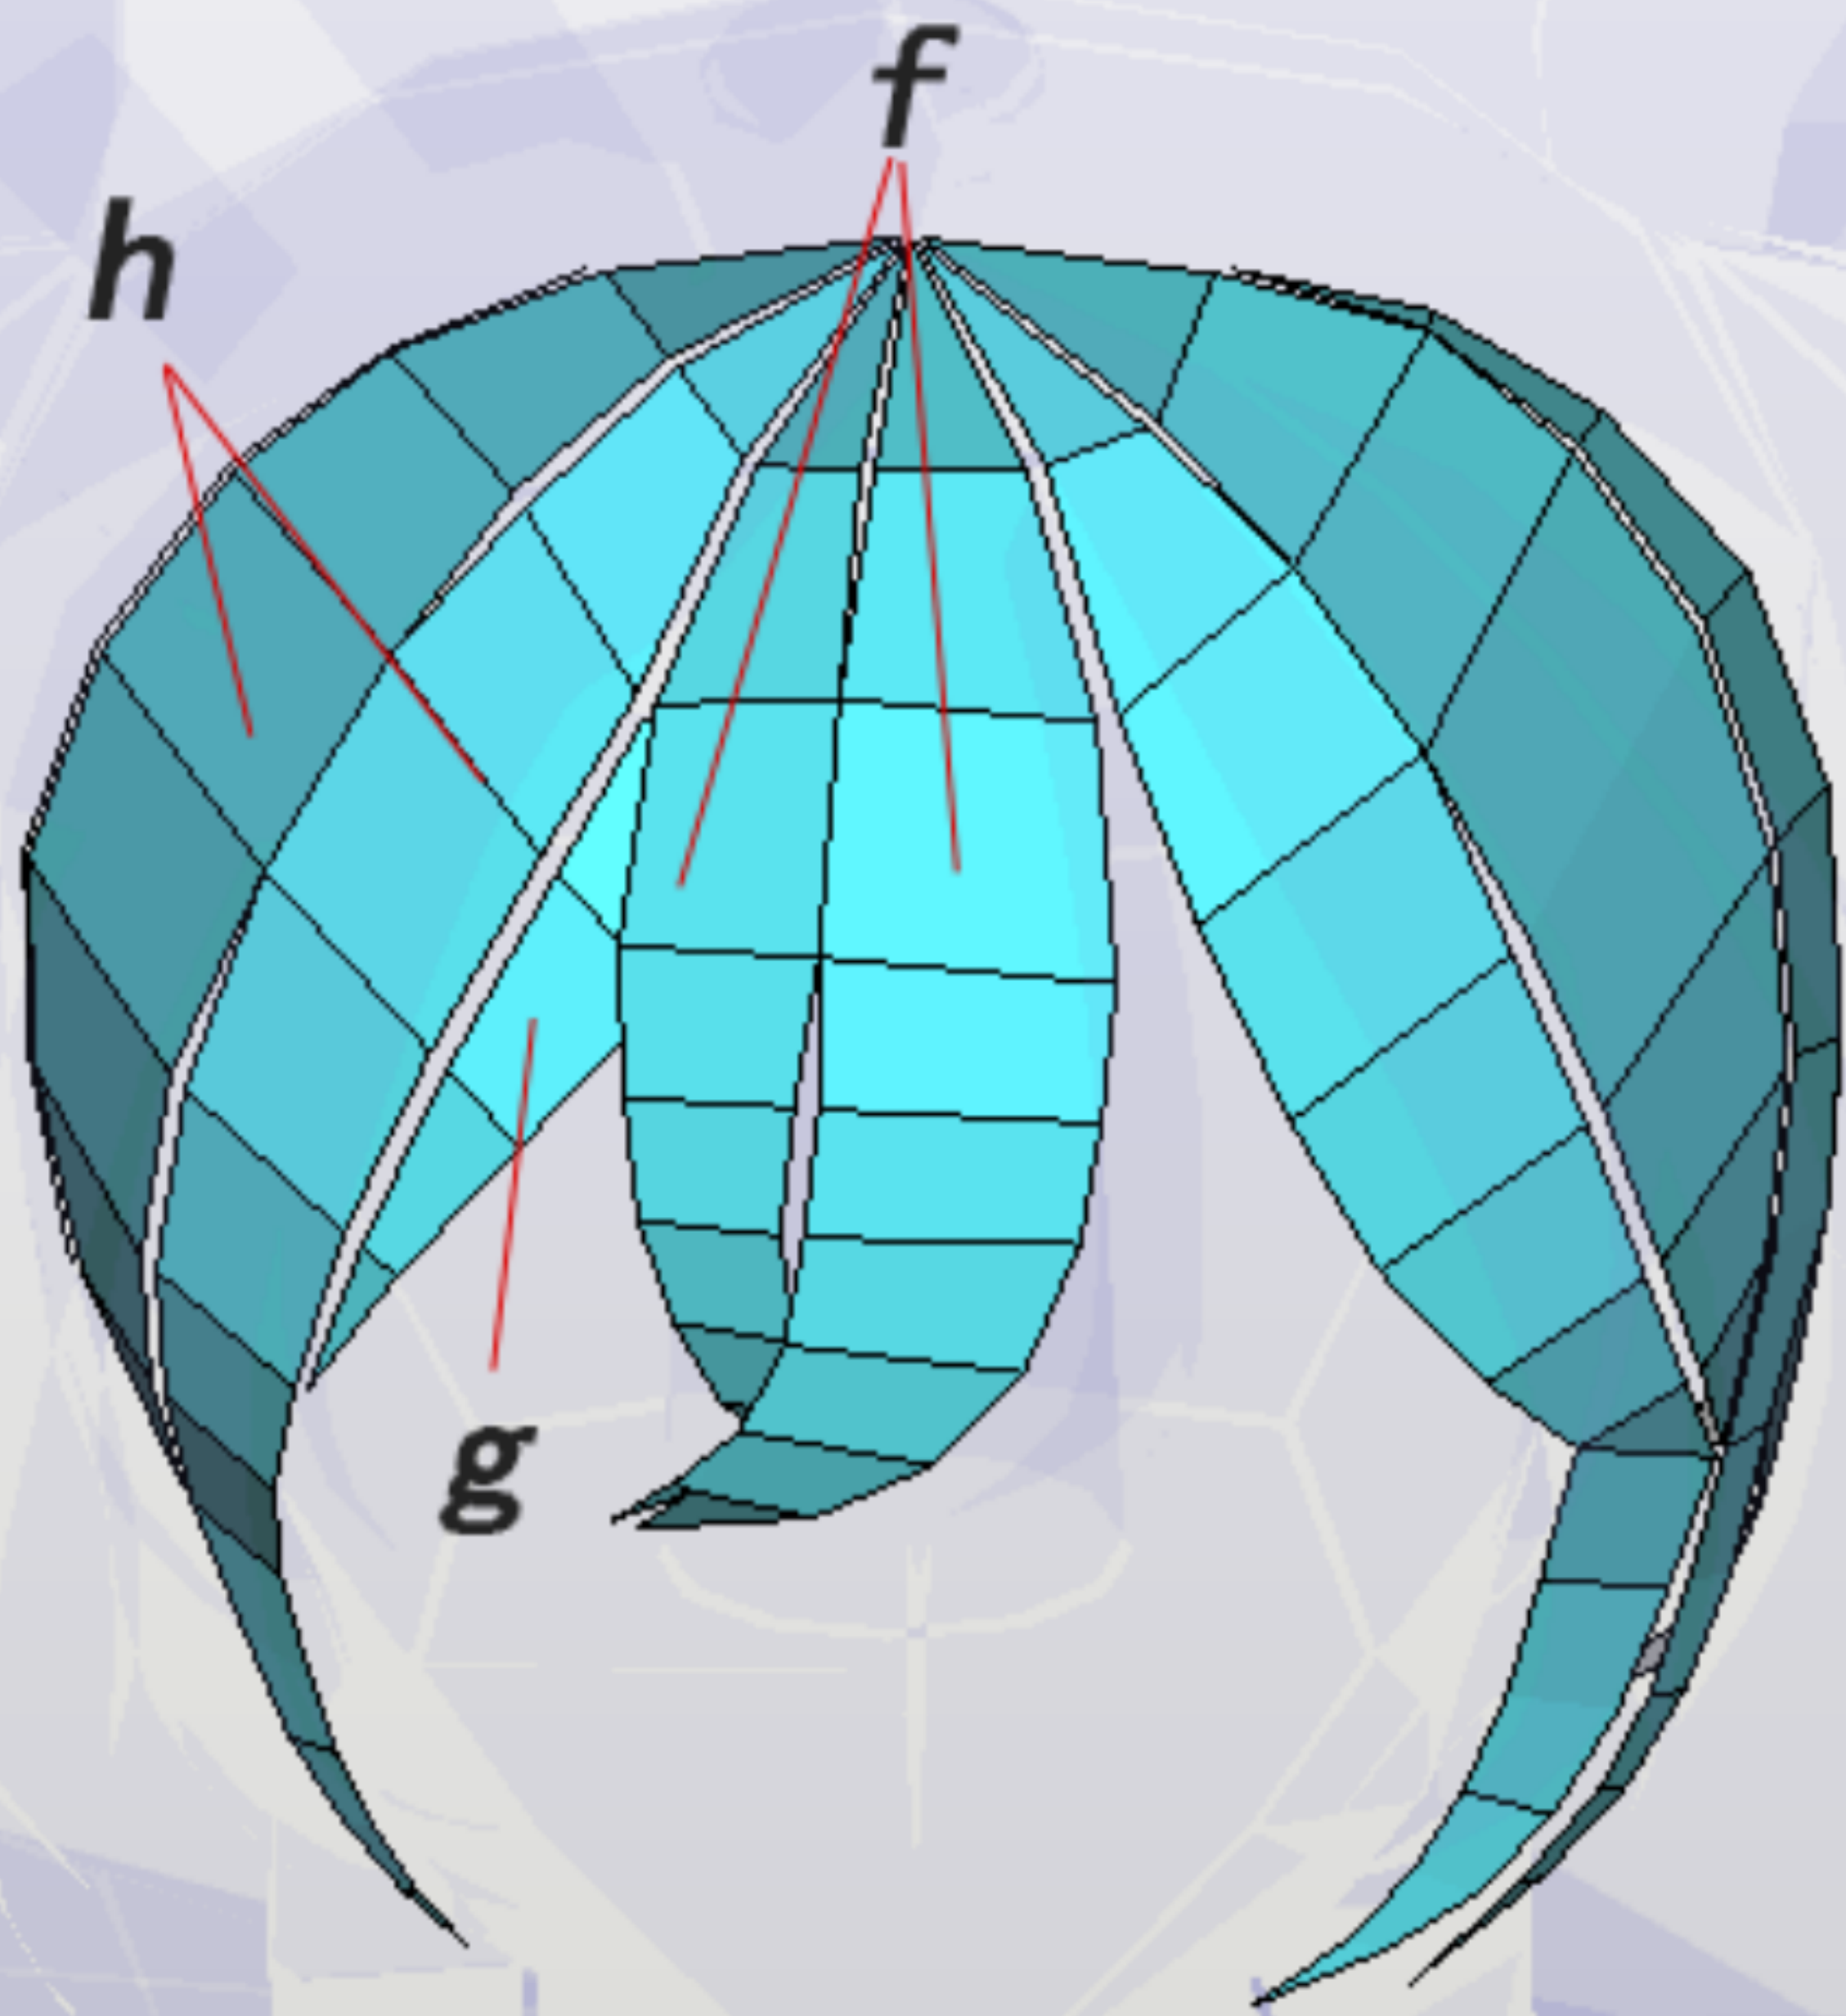

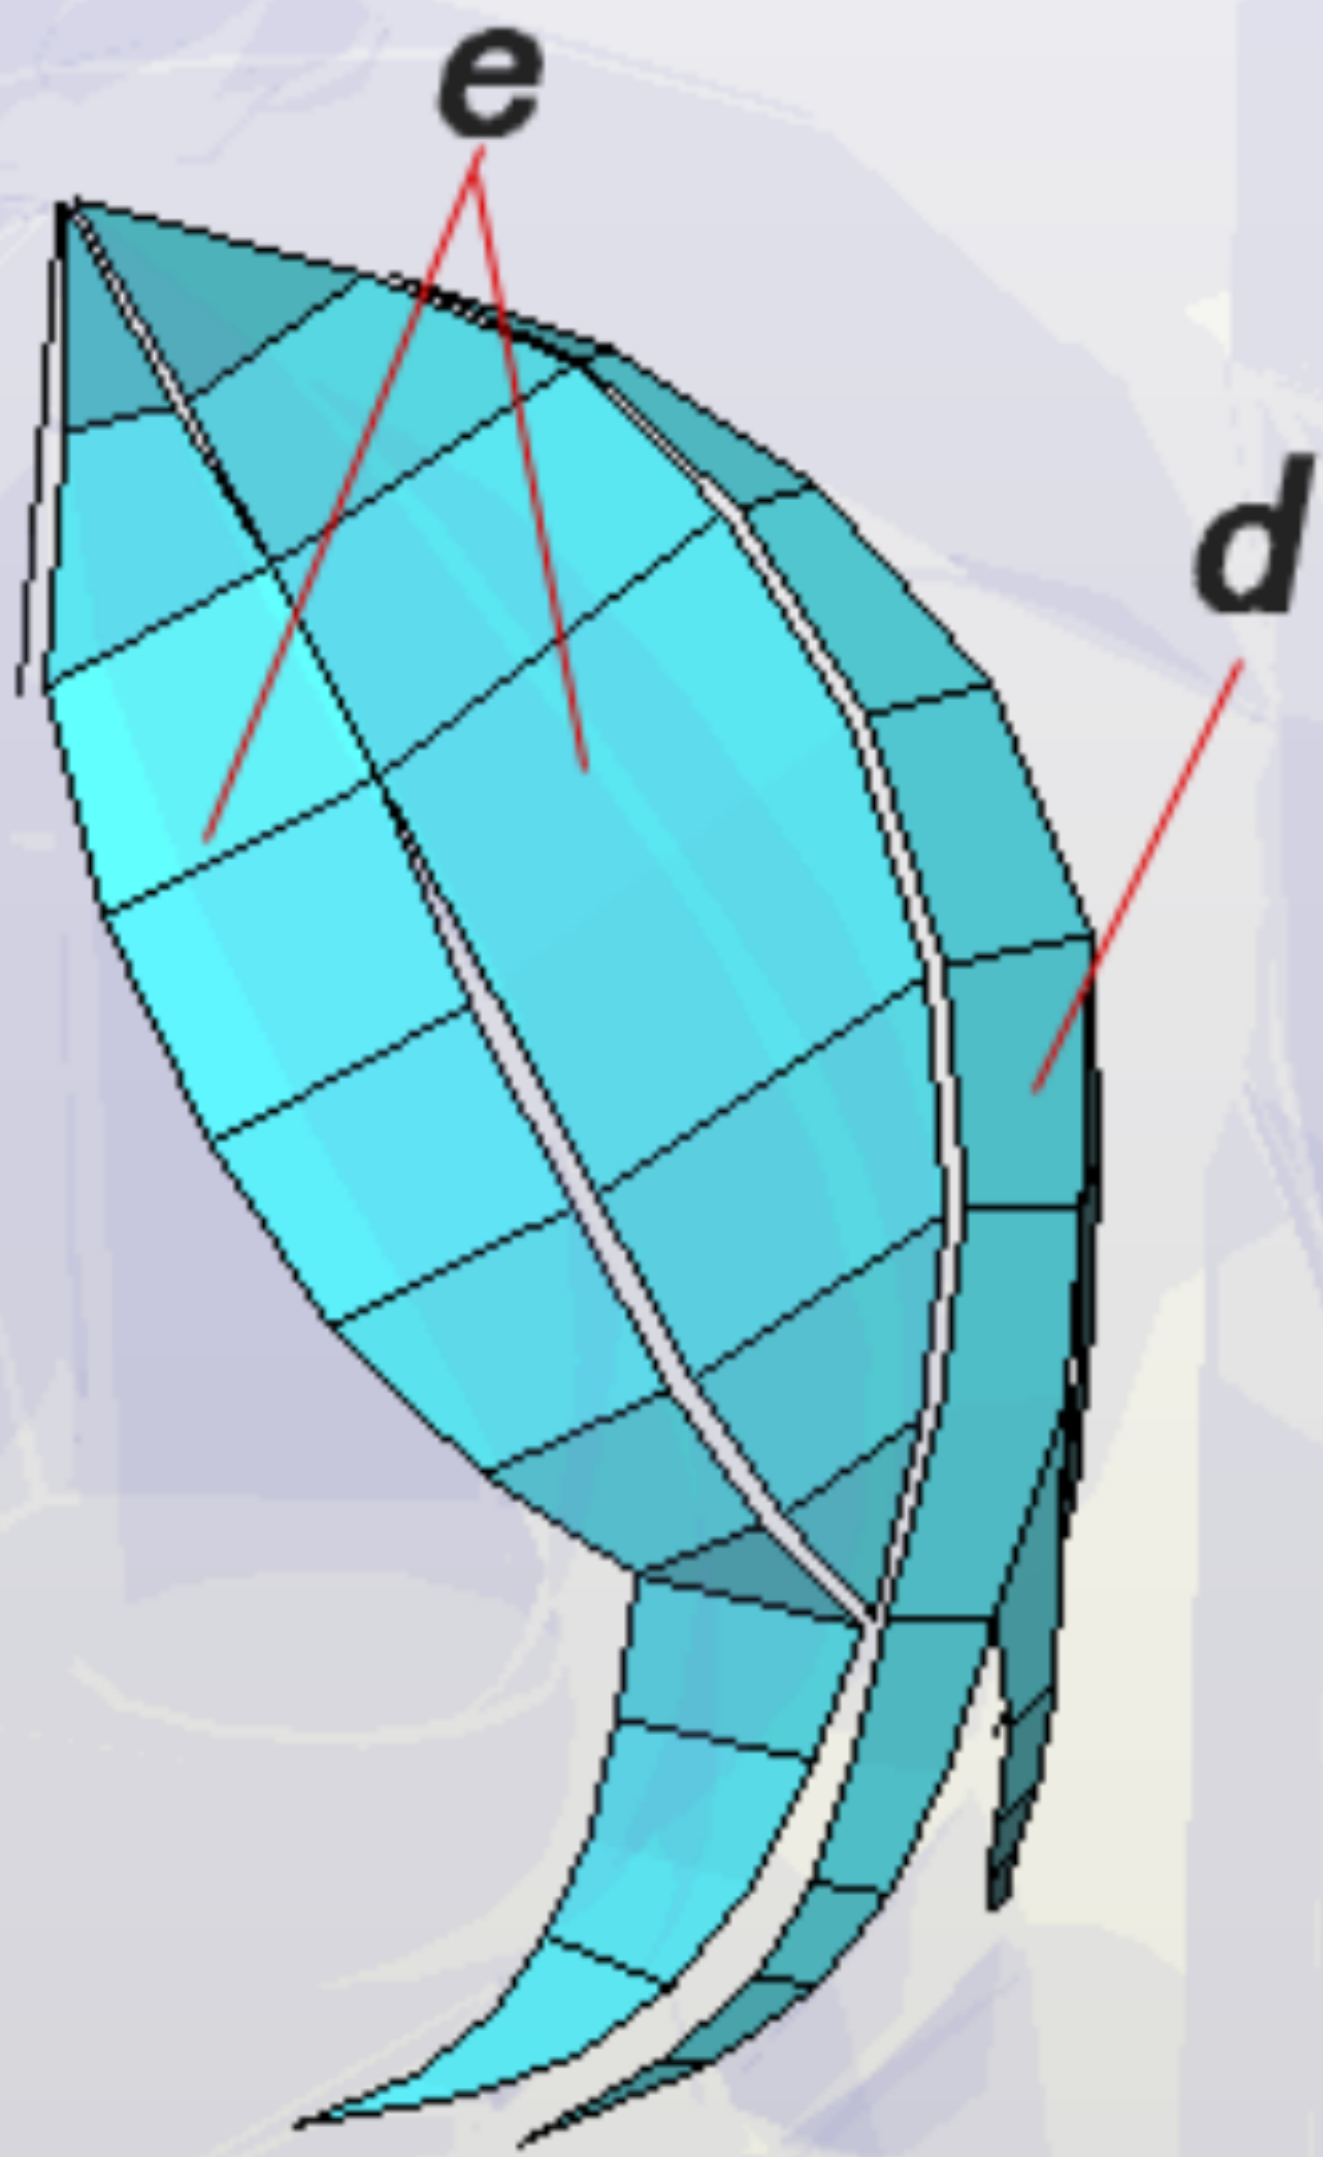

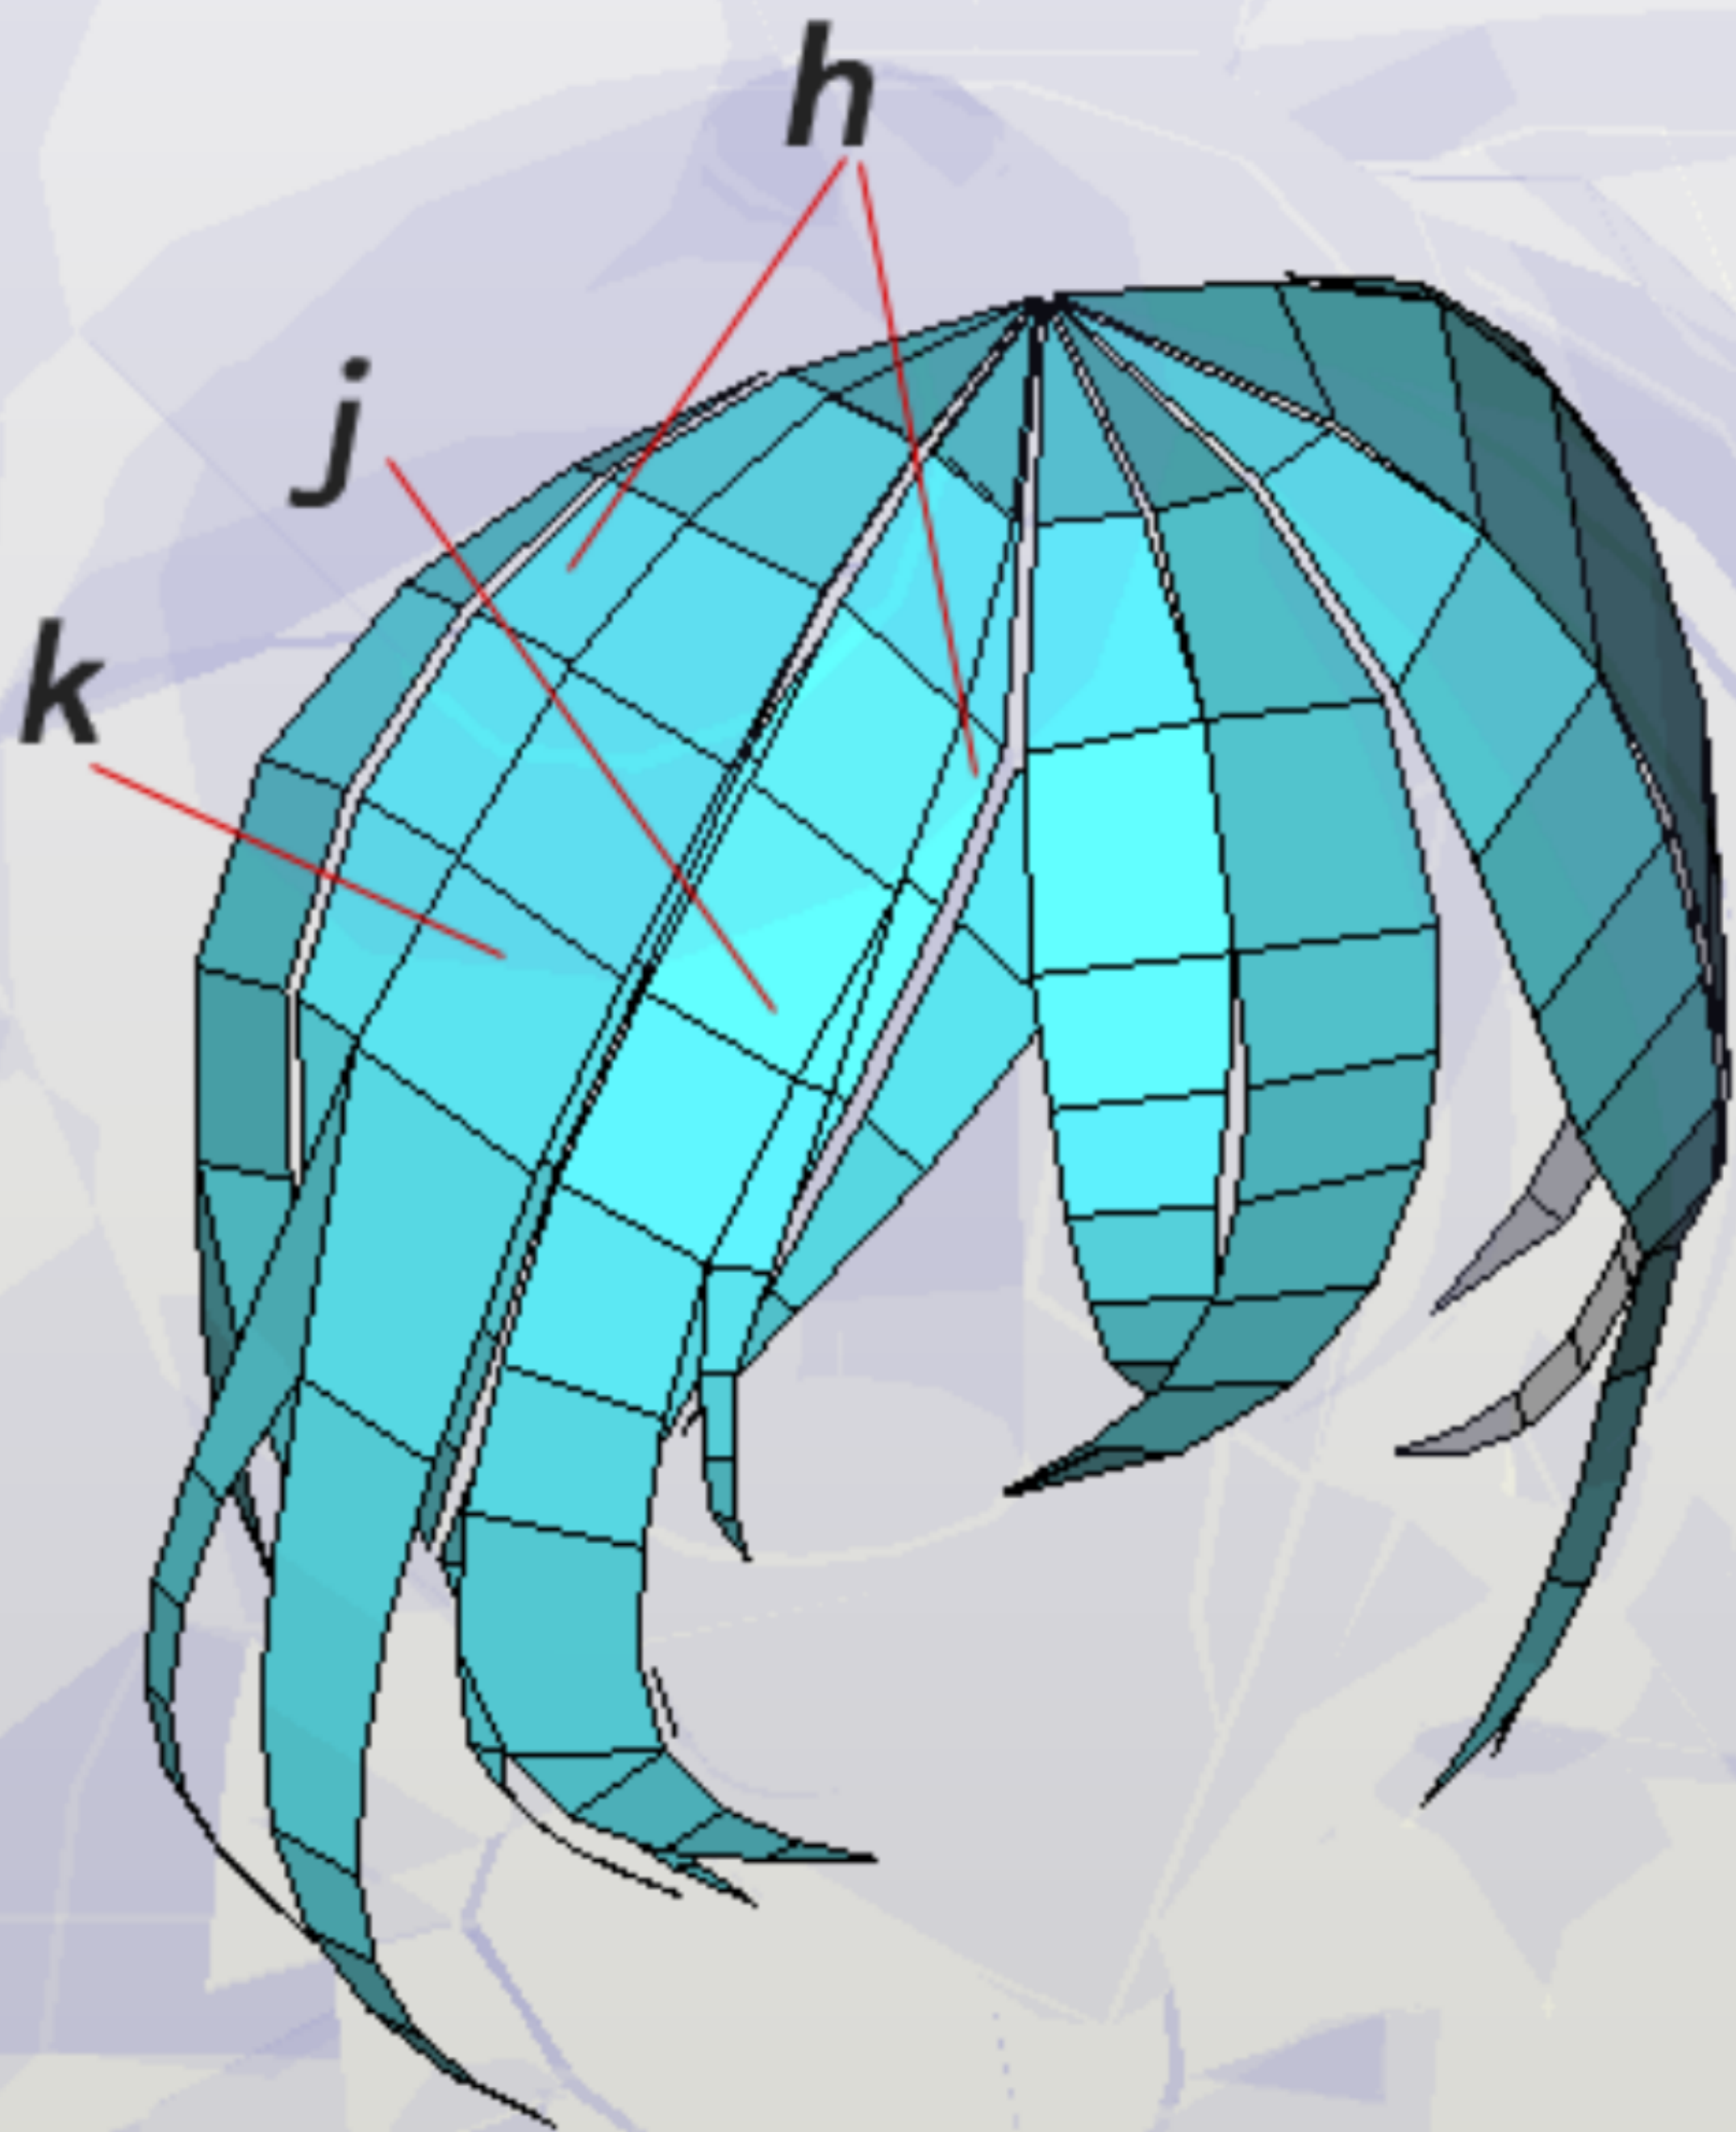

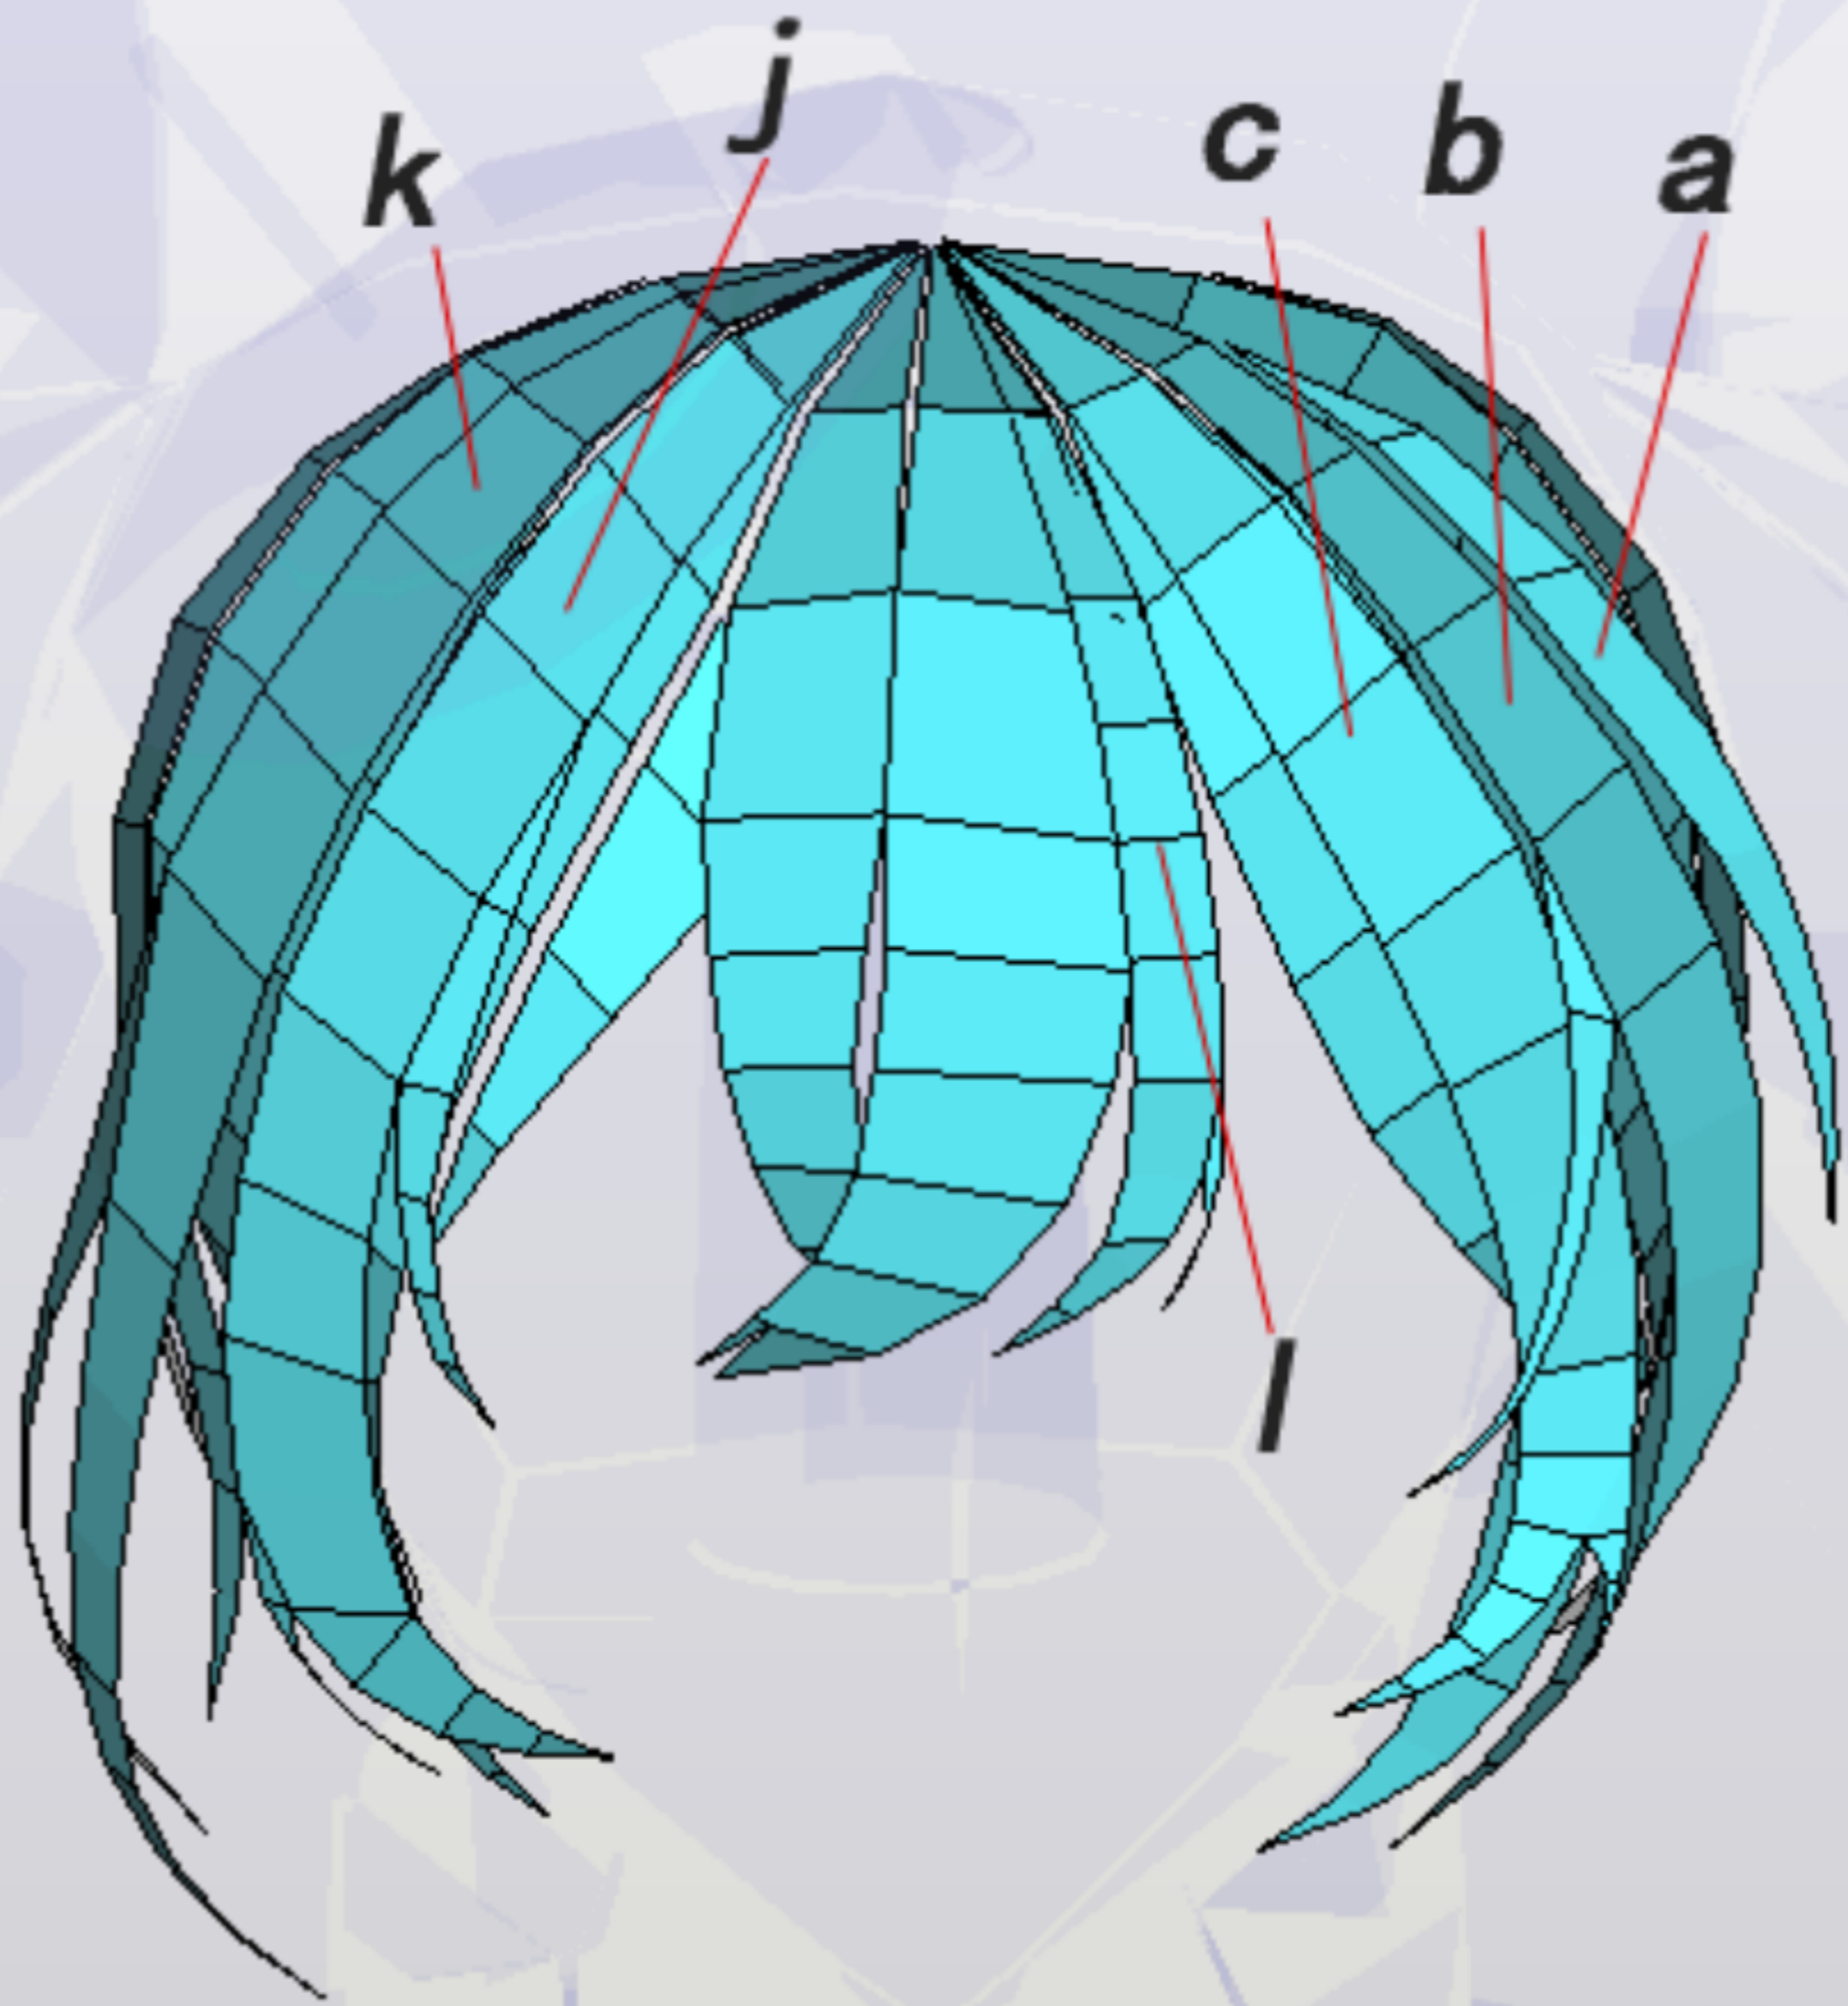



B83


B82






B84


B85

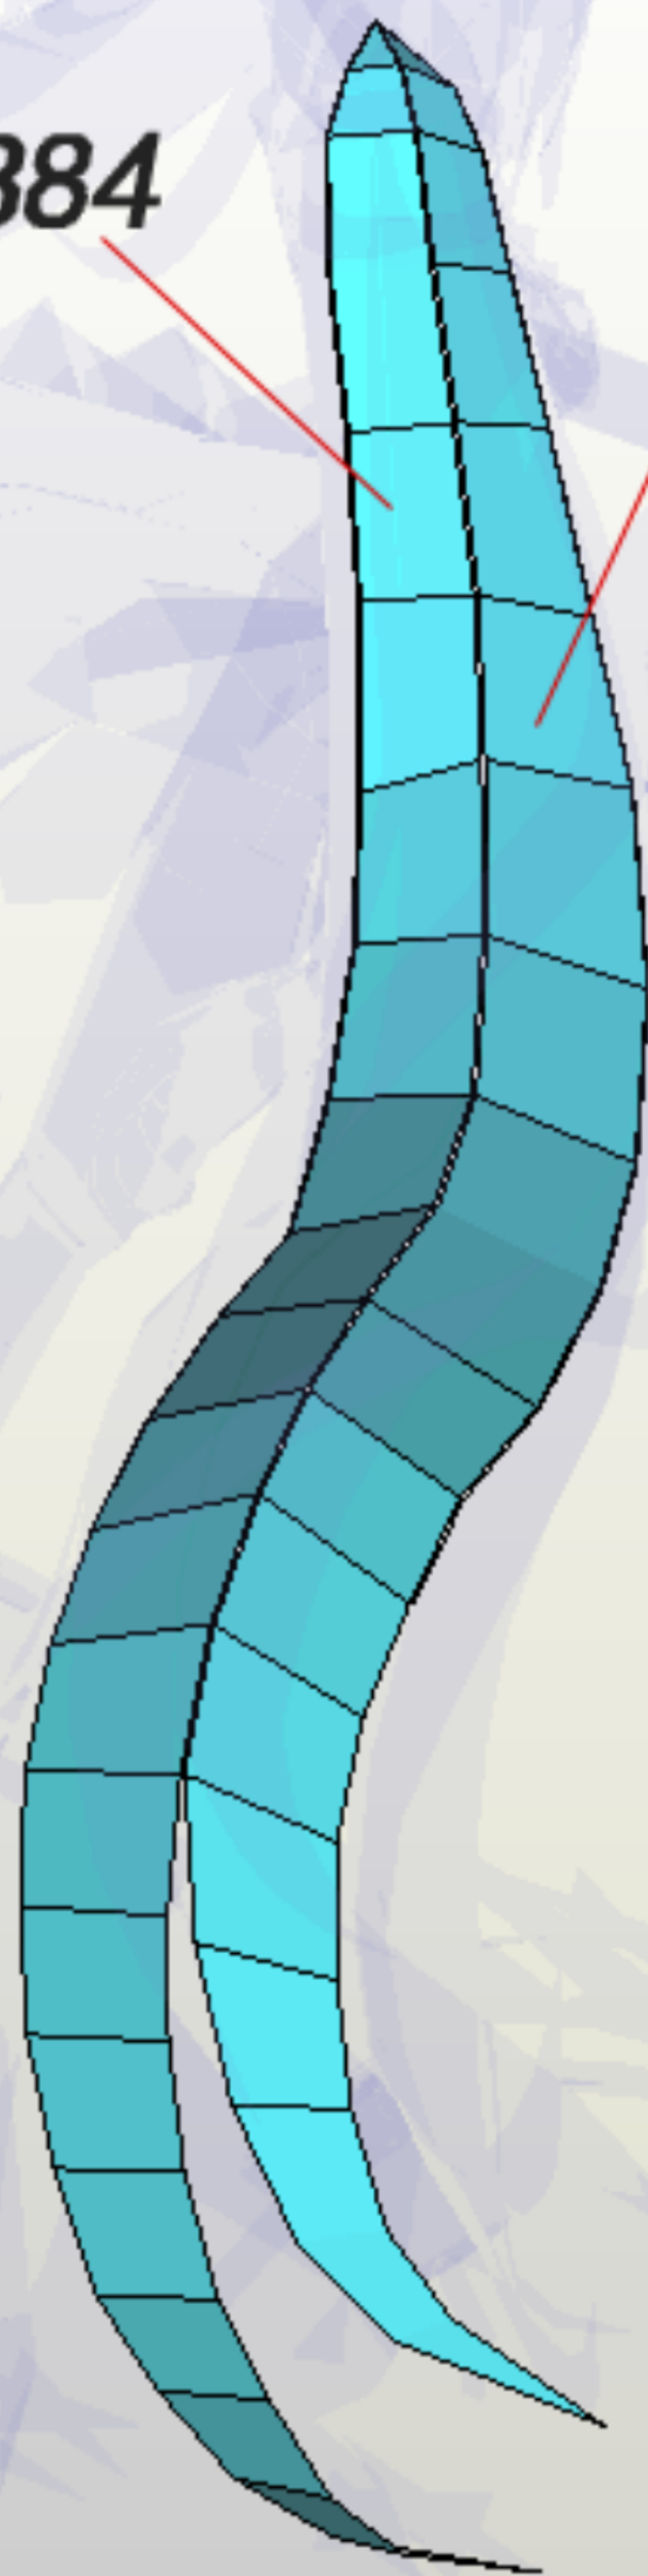

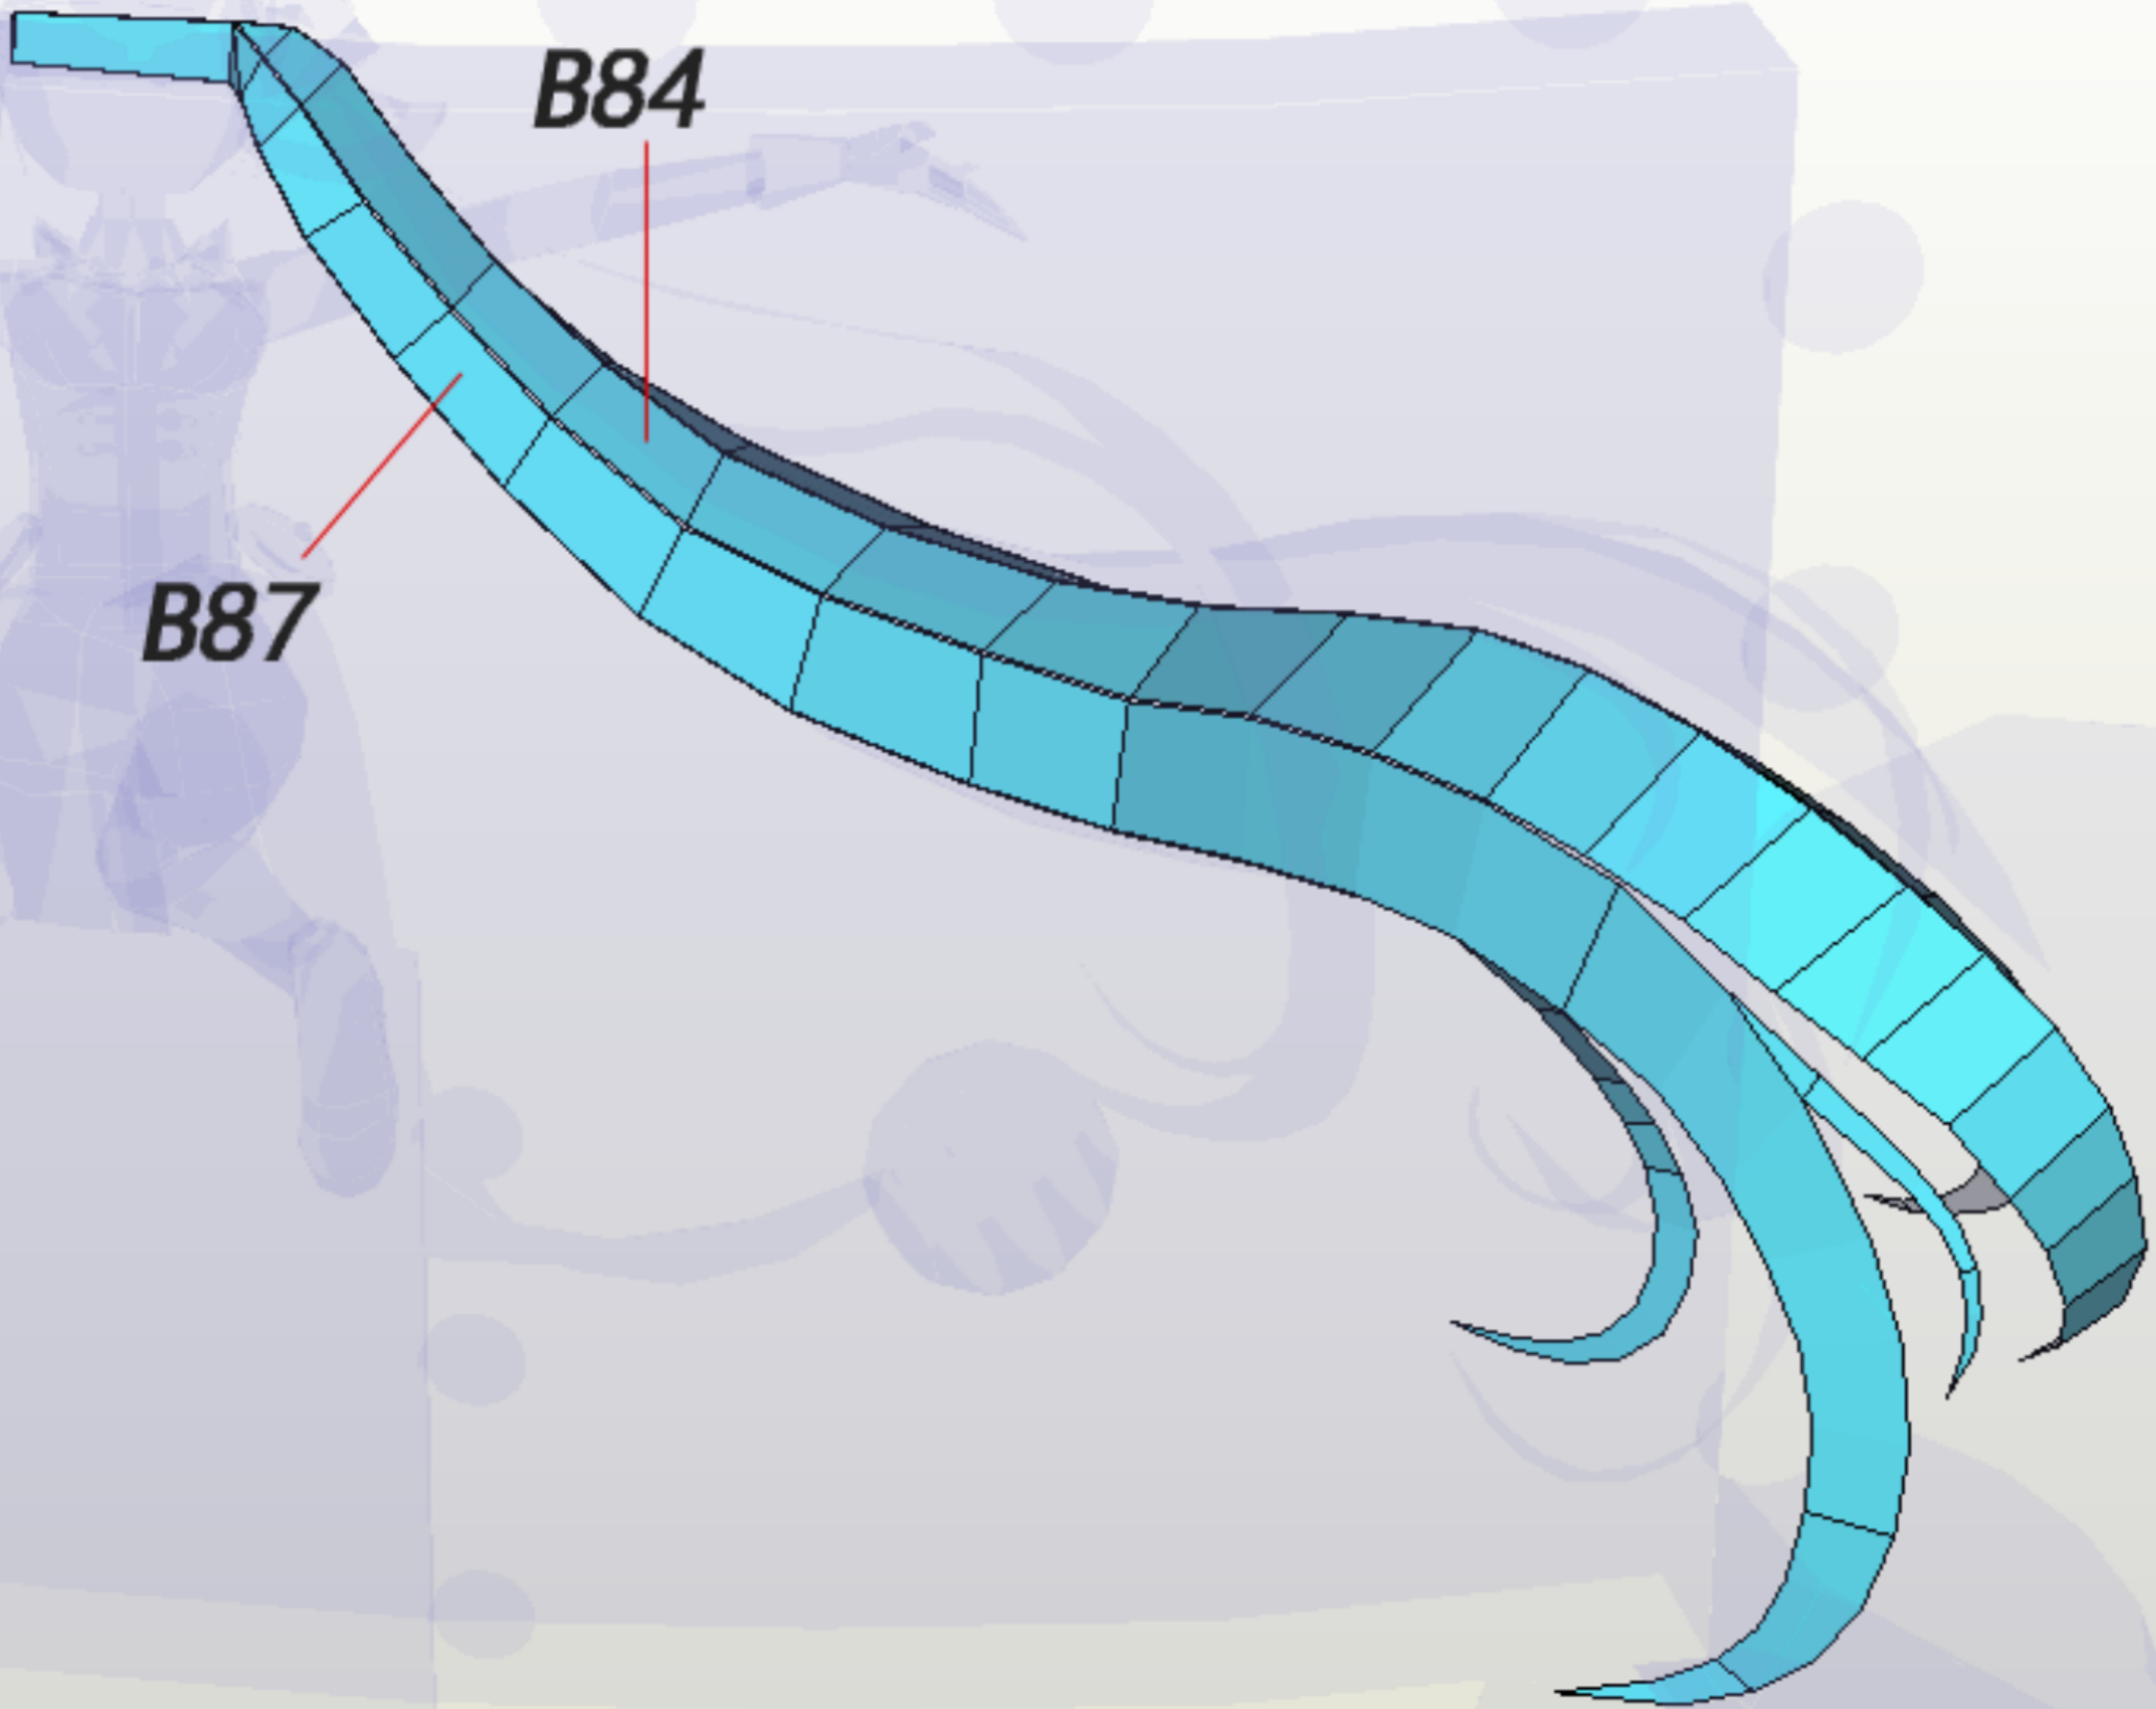

B84

B87

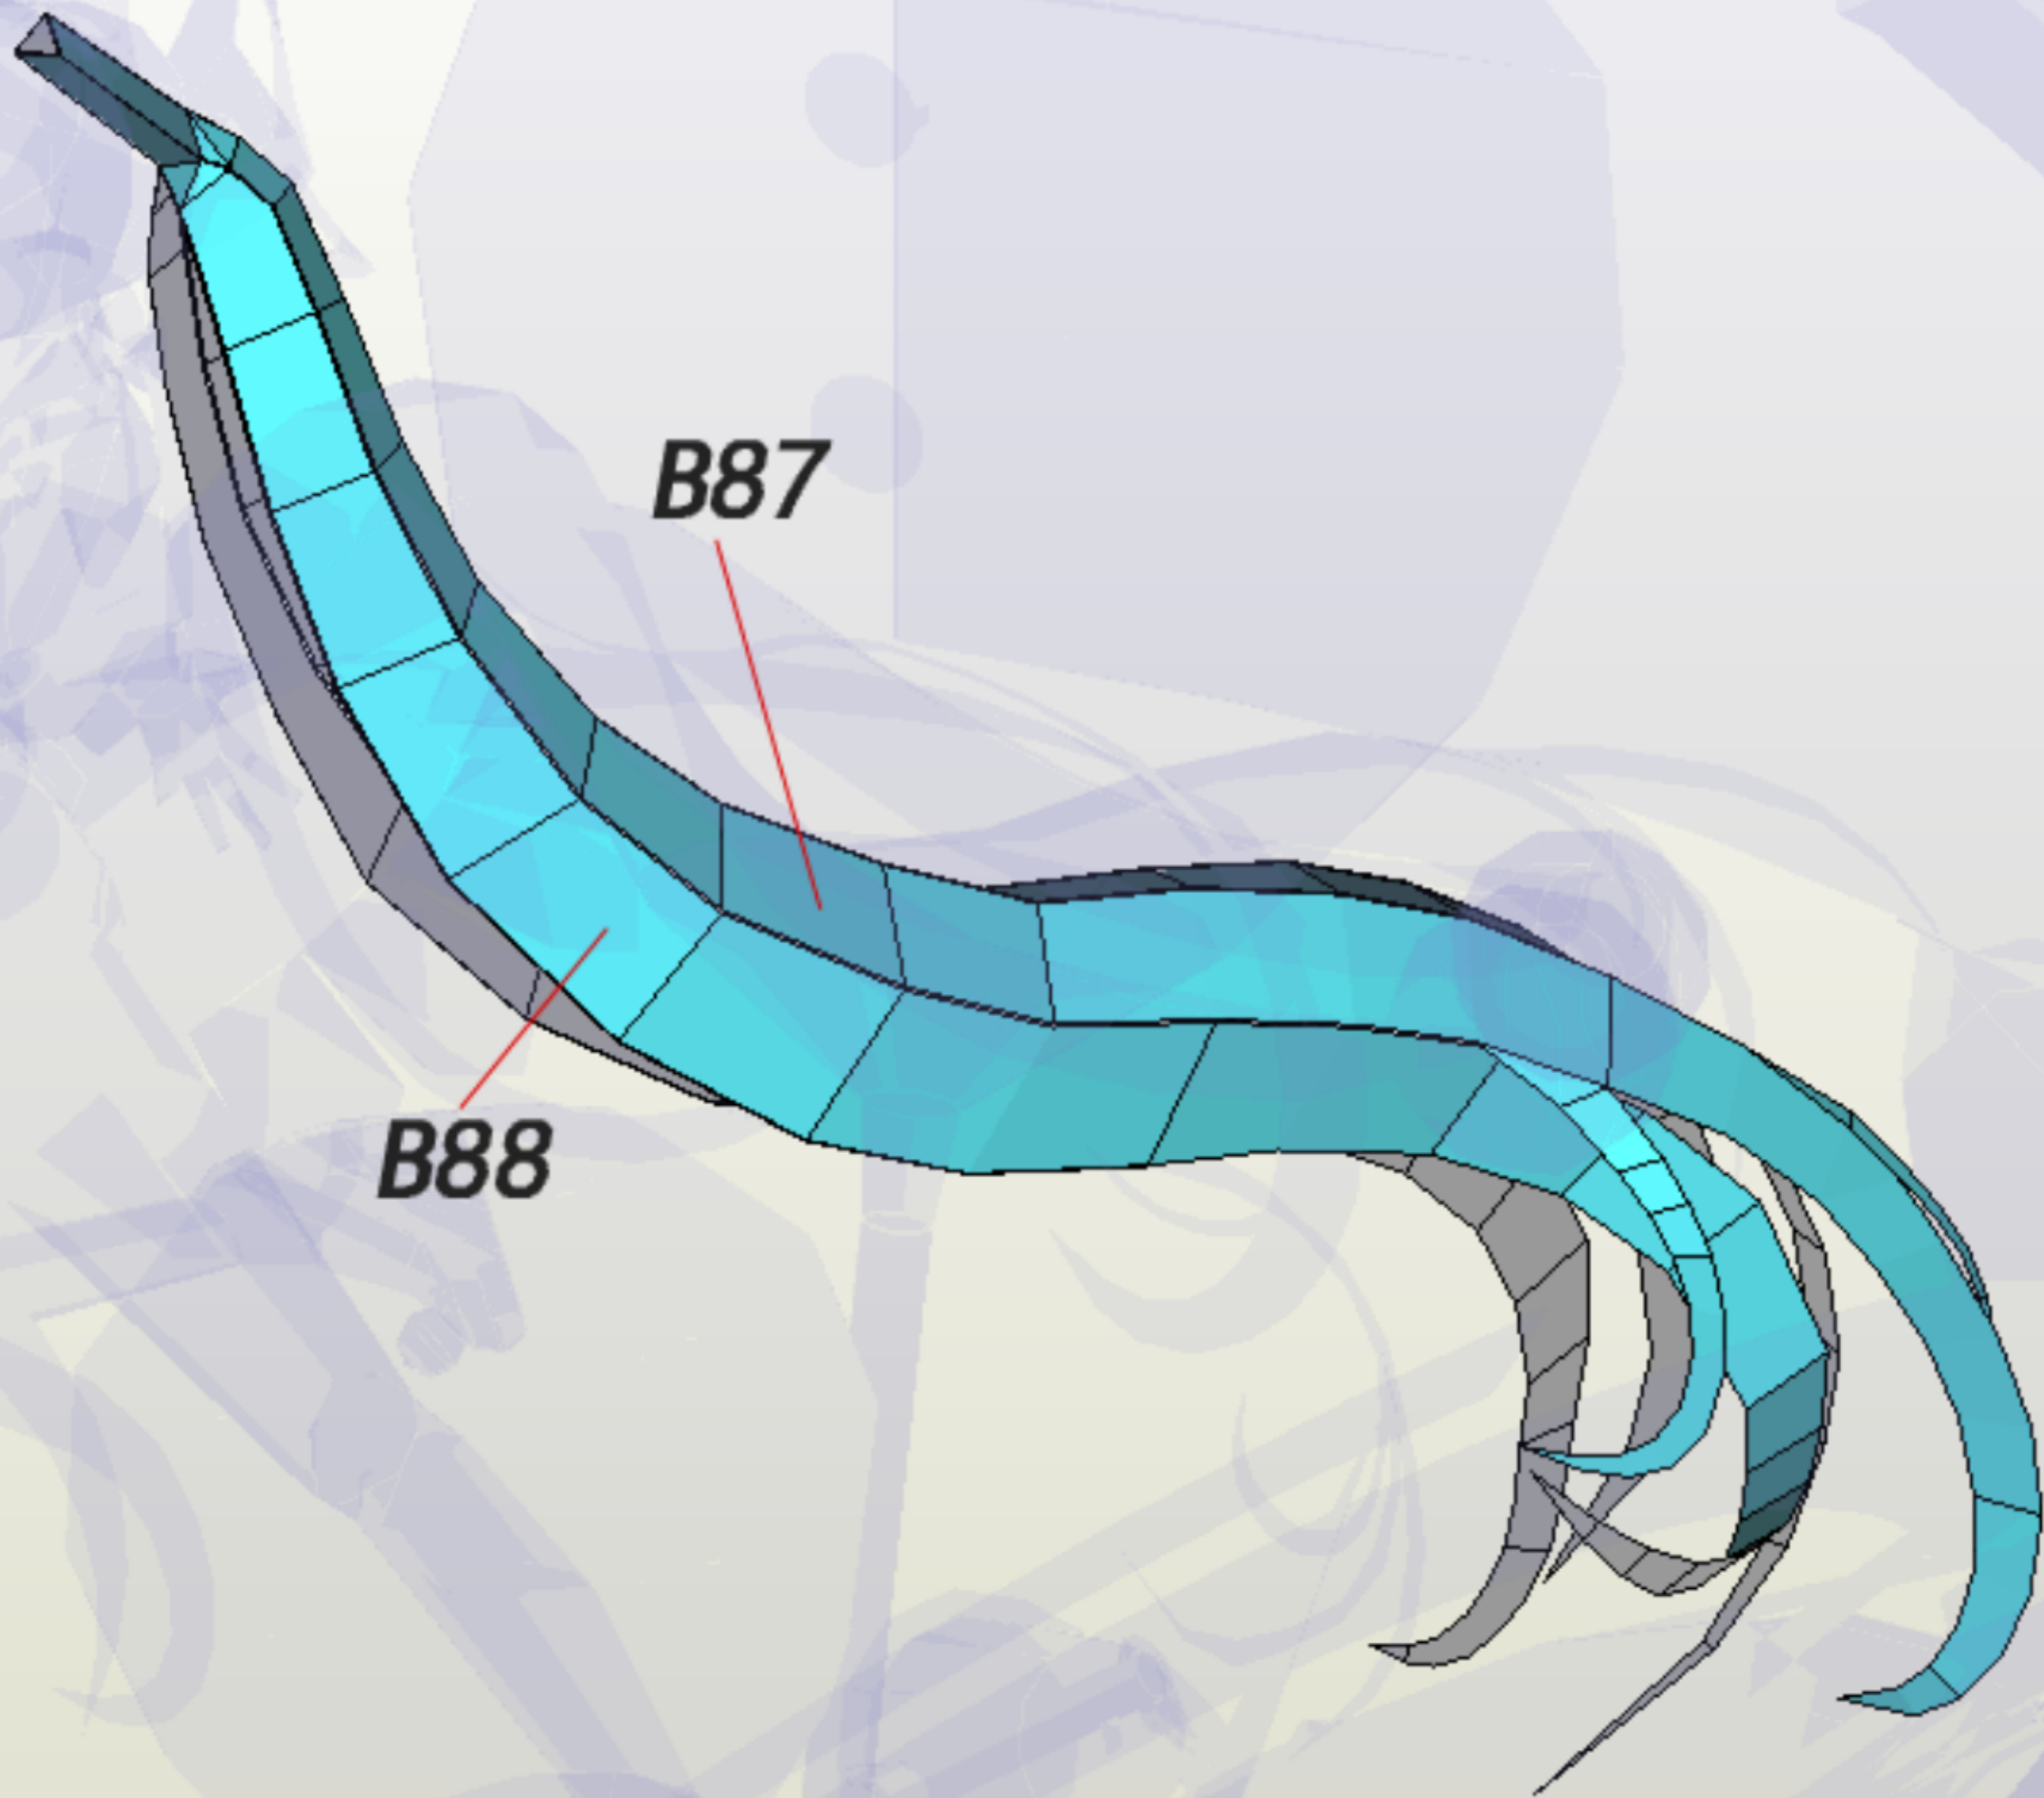

B87


B88


沾B89时最好
B84和B88从上
往下同时沾

B84

B88

B89

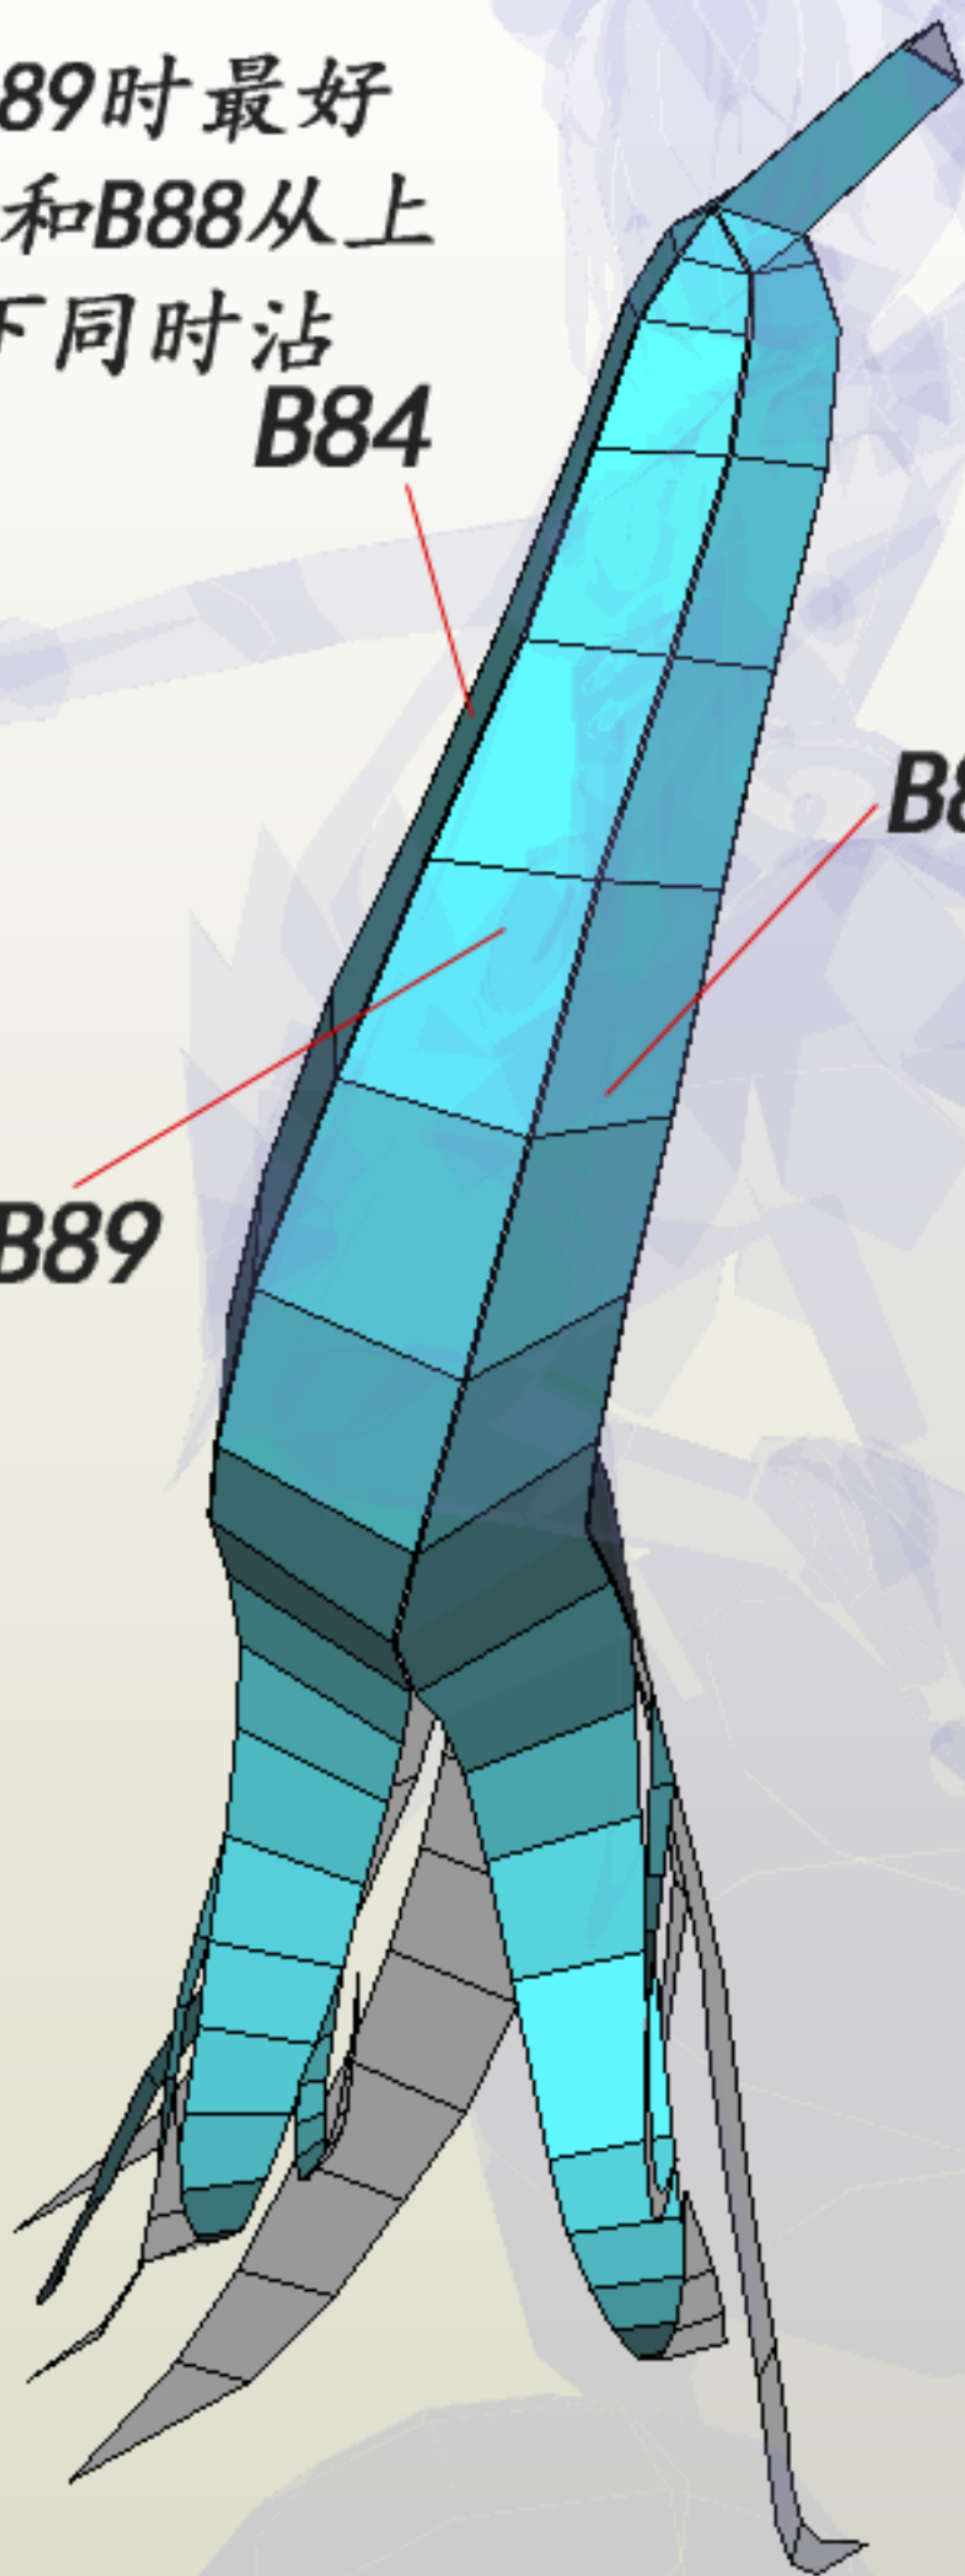

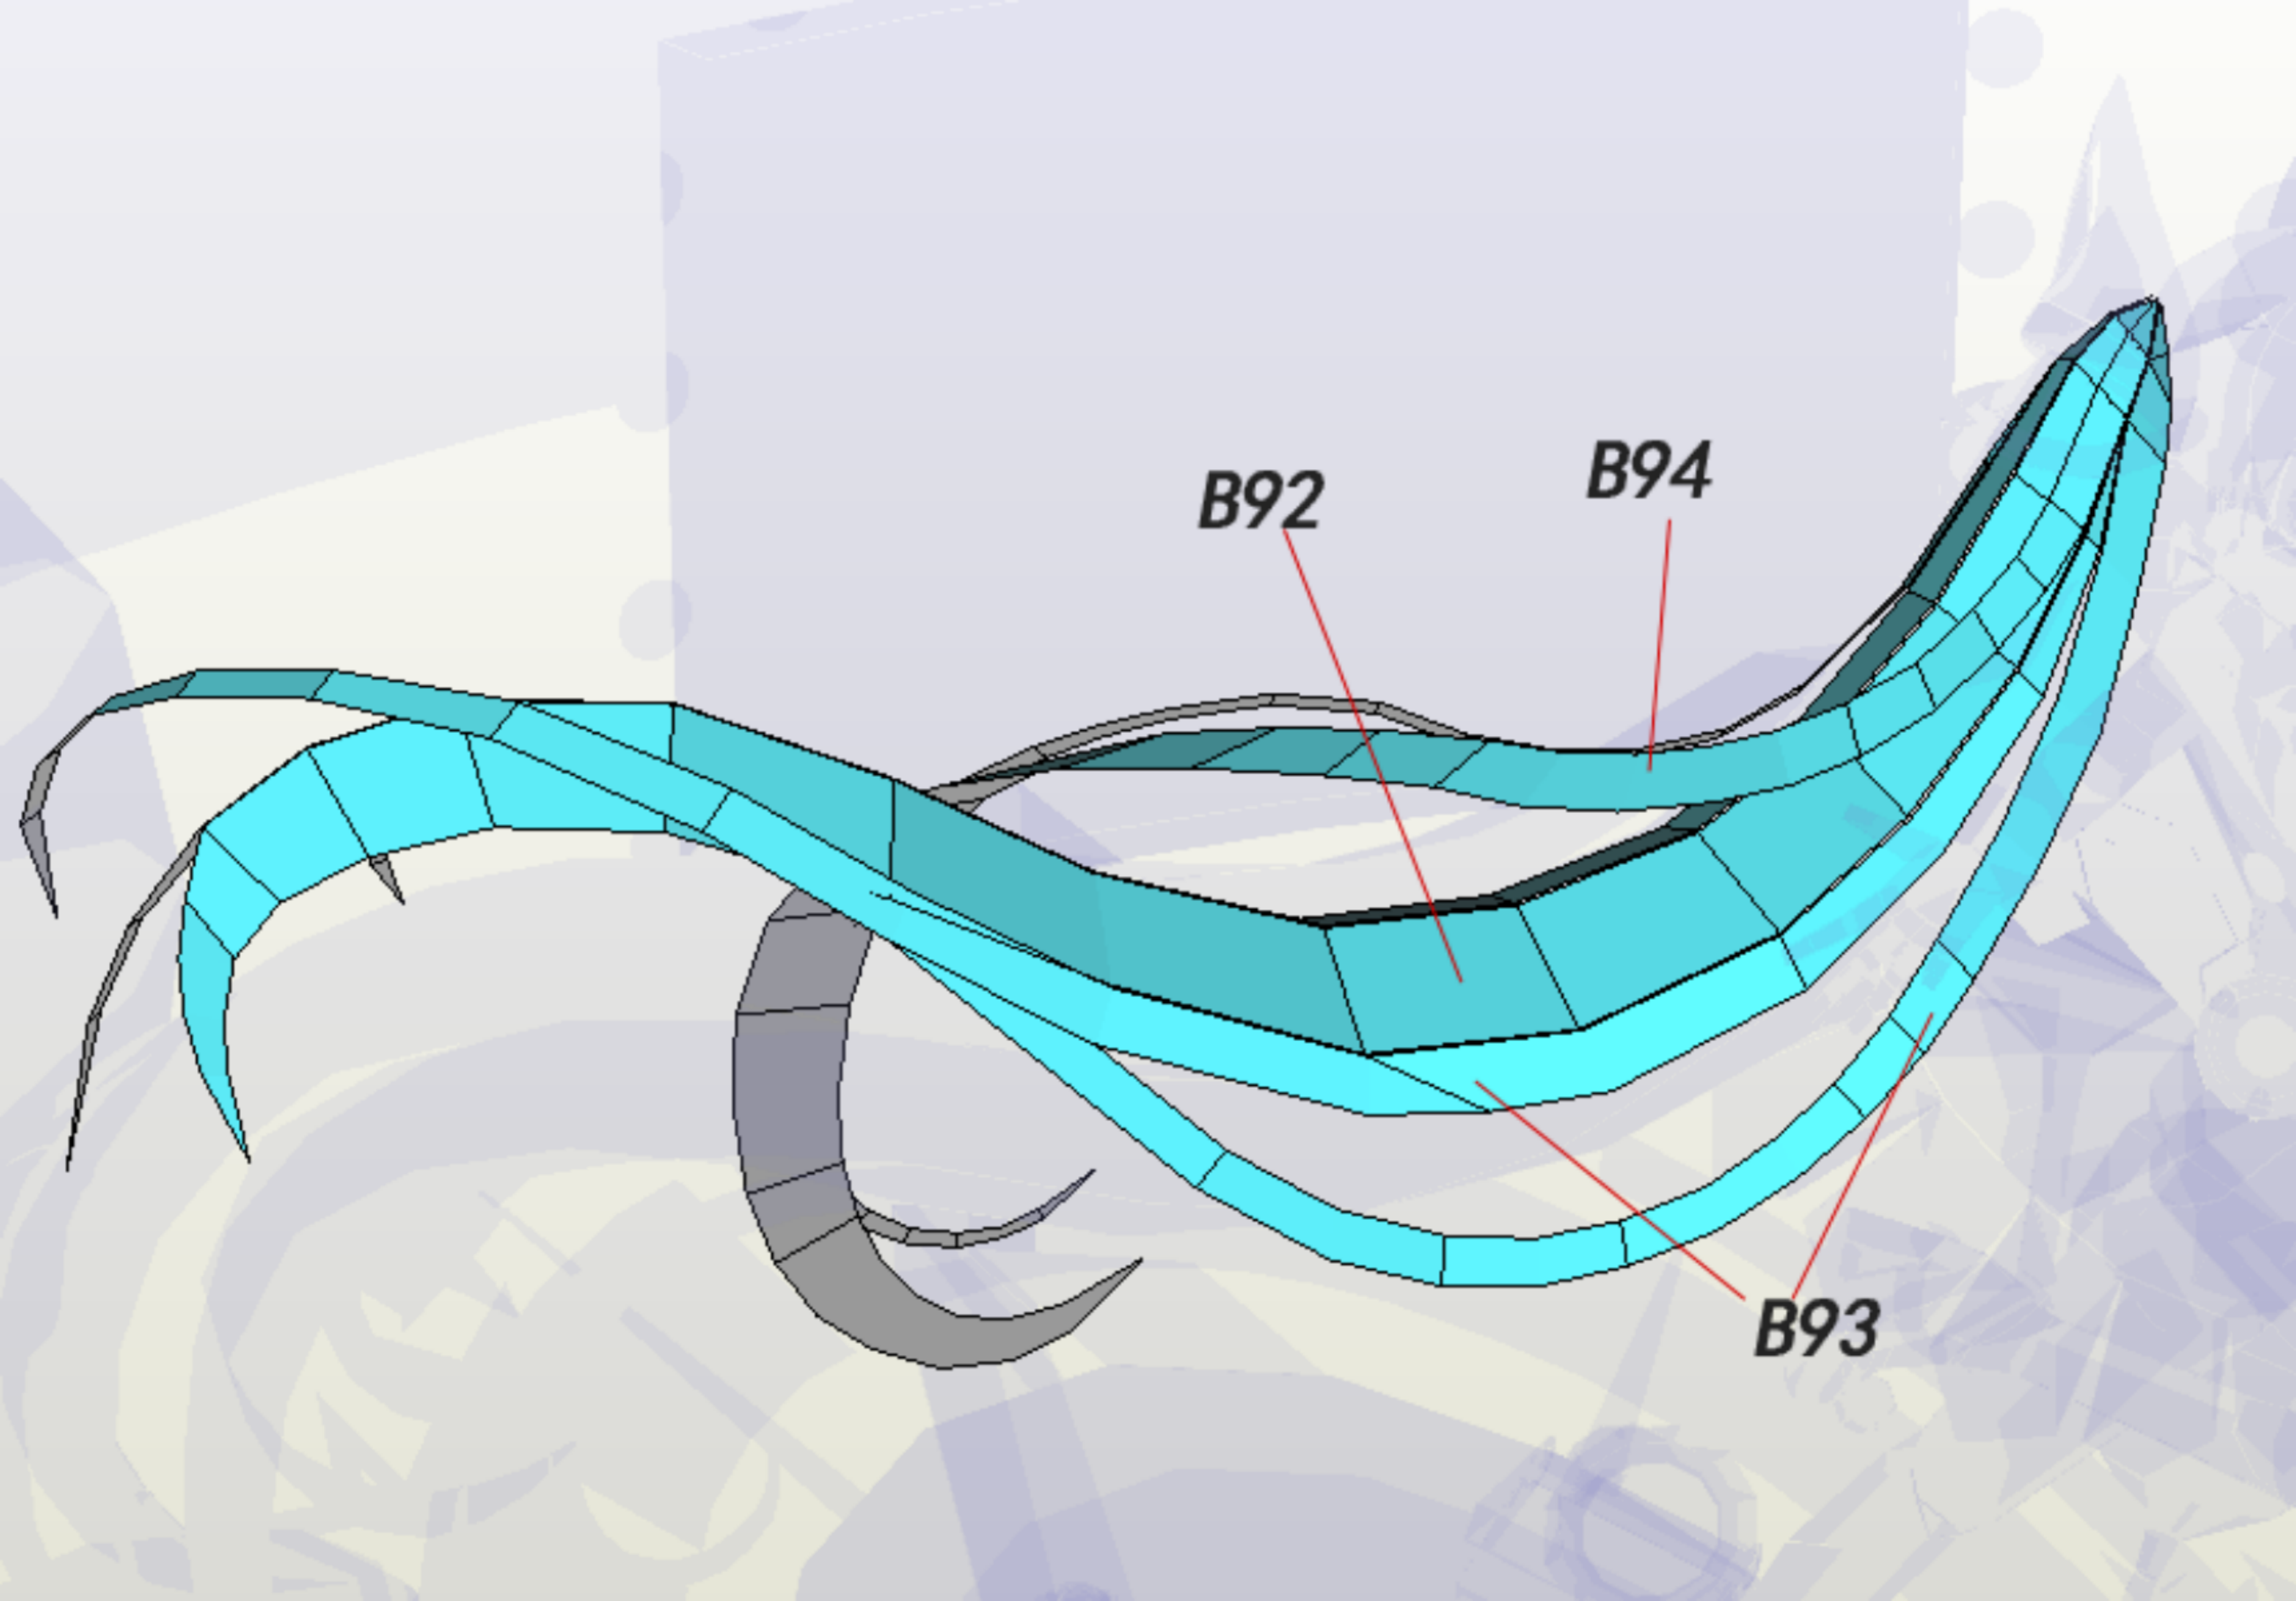

B92

B94


B93

B92沾B85上面
B91沾B84上面


B85

B92


B86

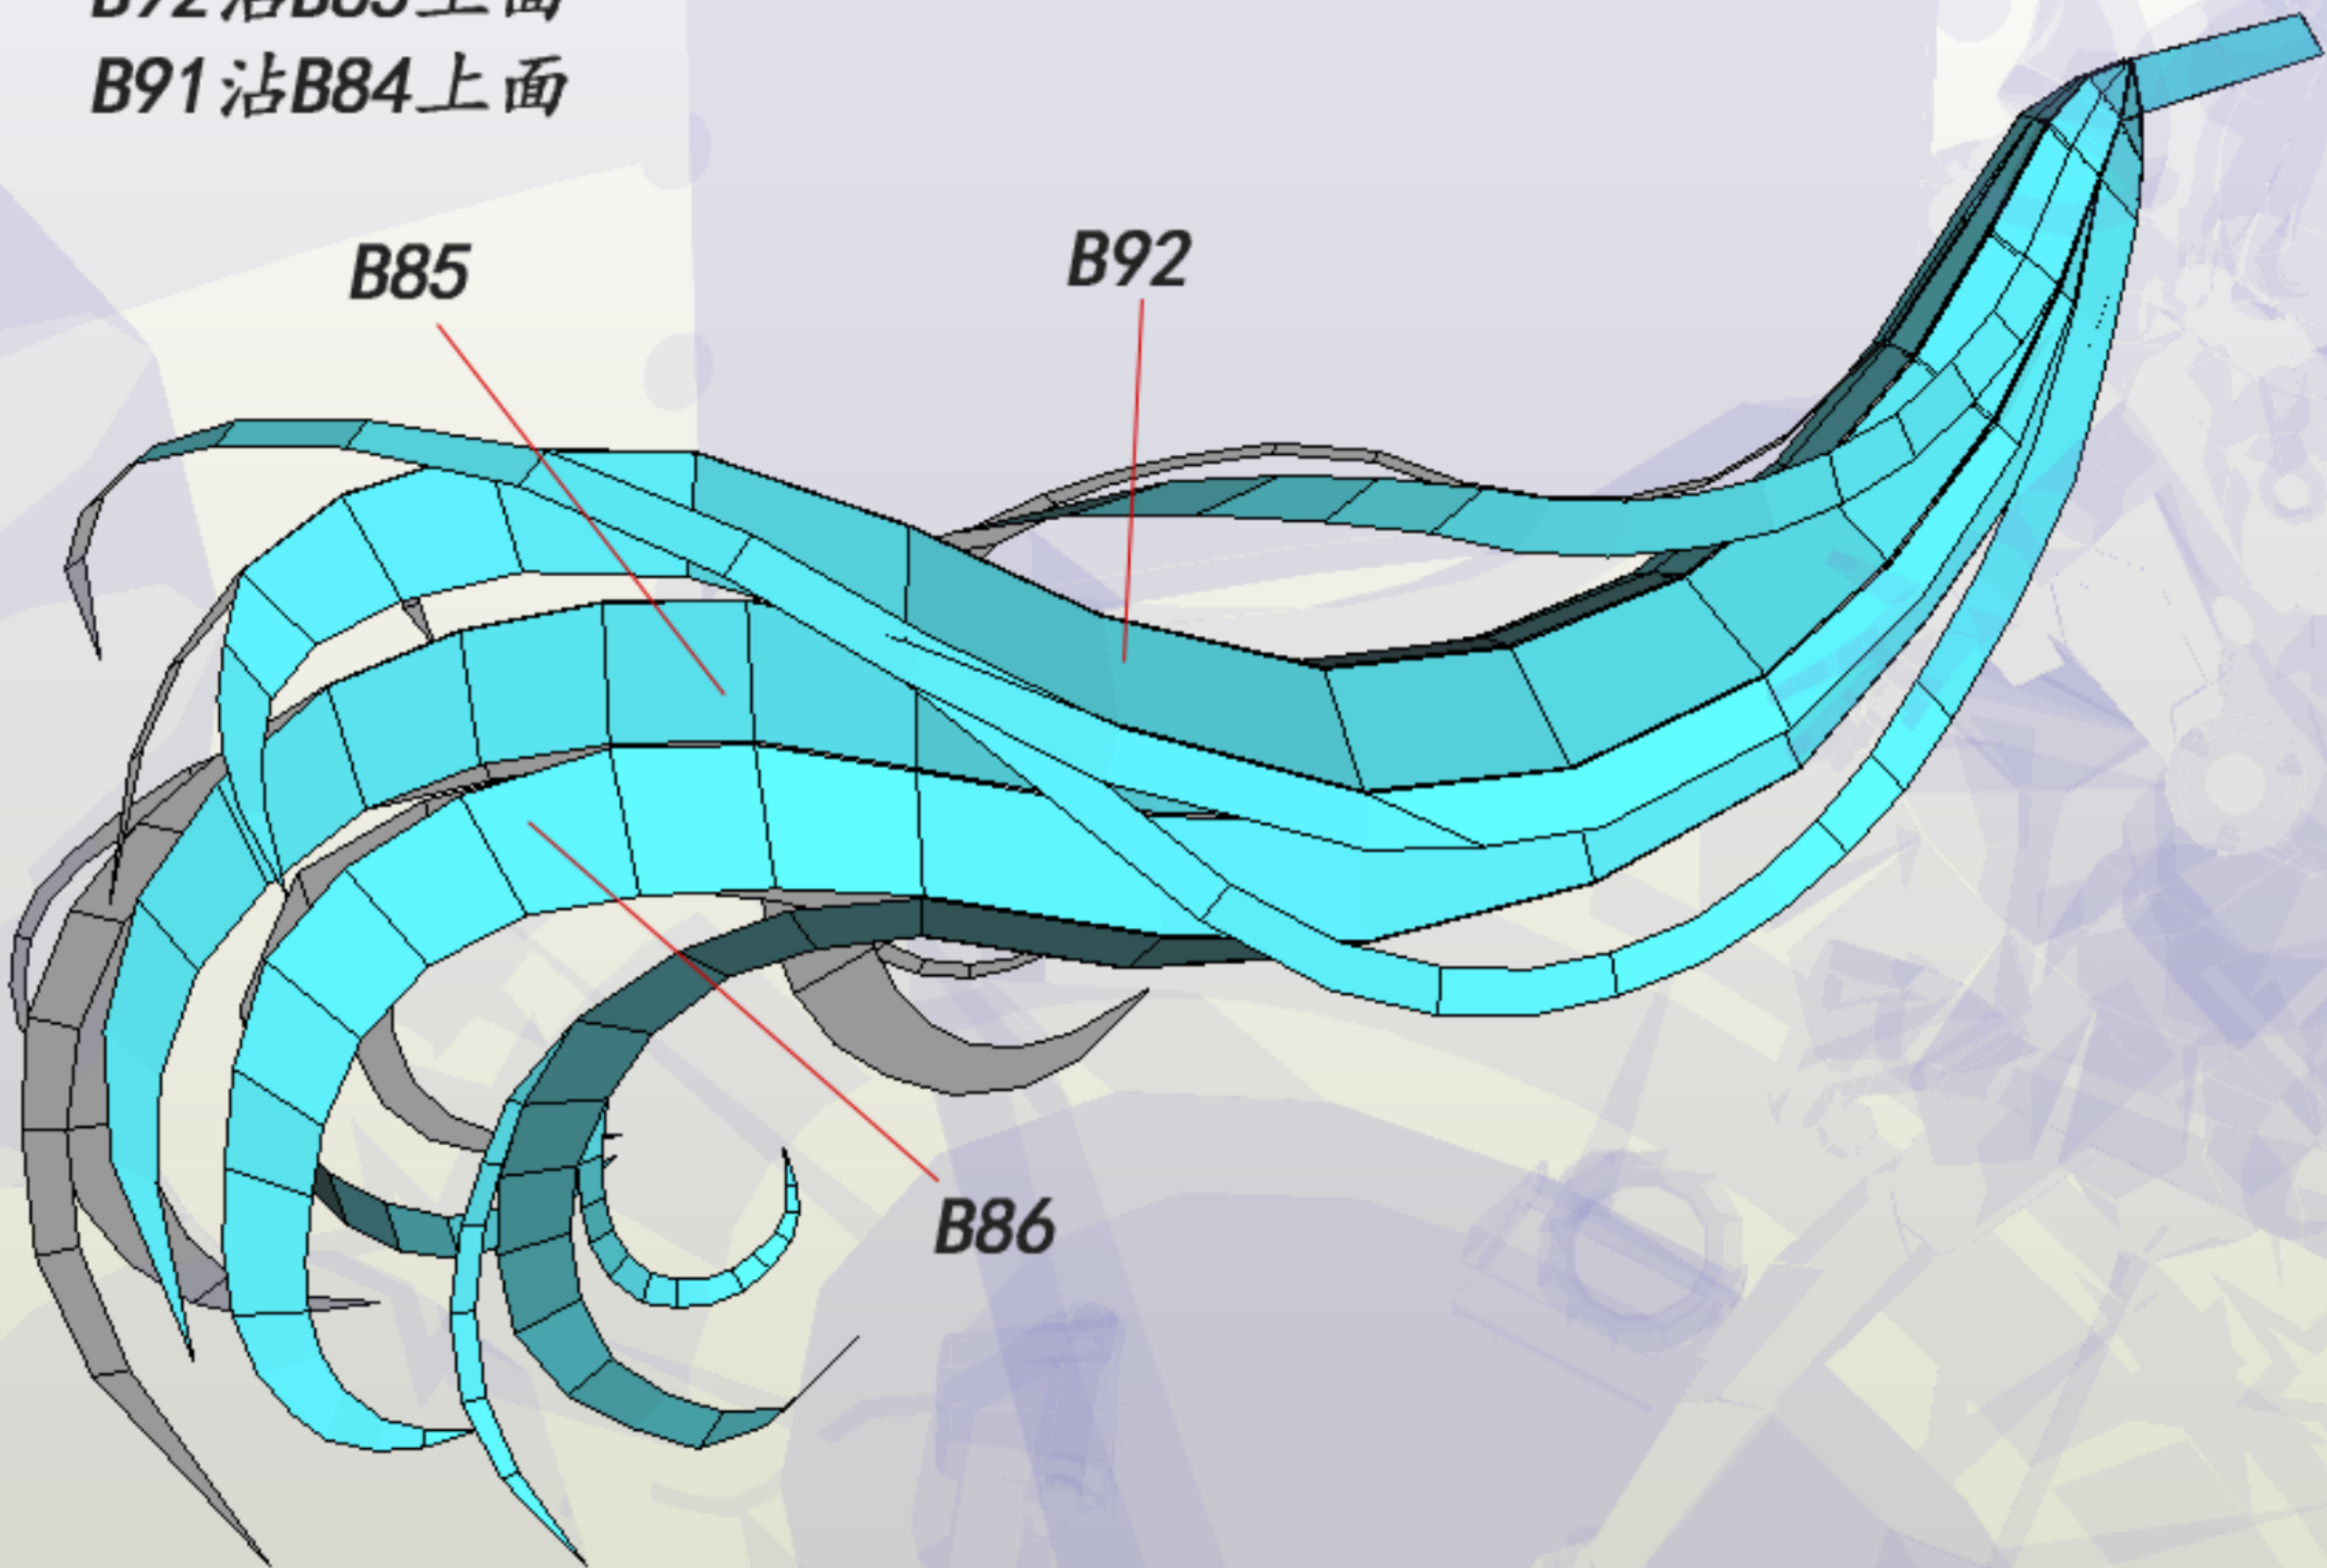


顶视图

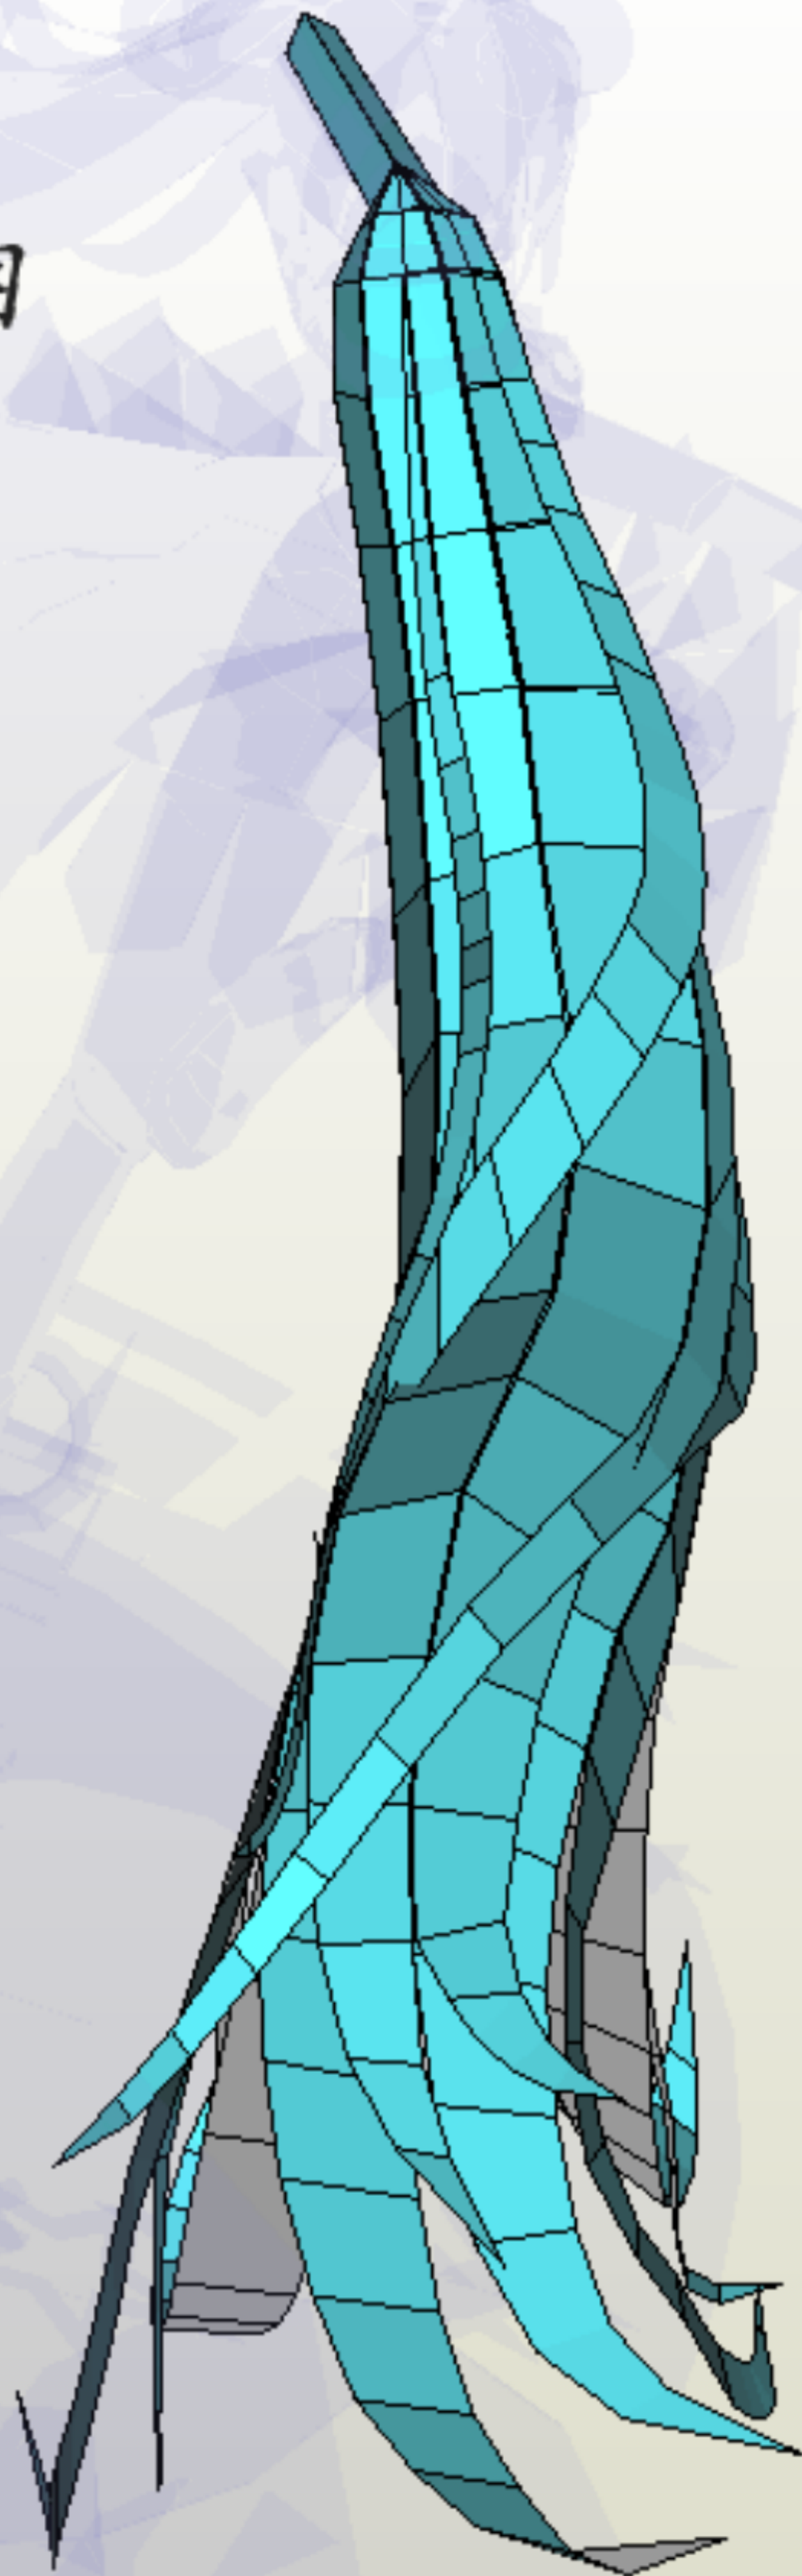

后视图

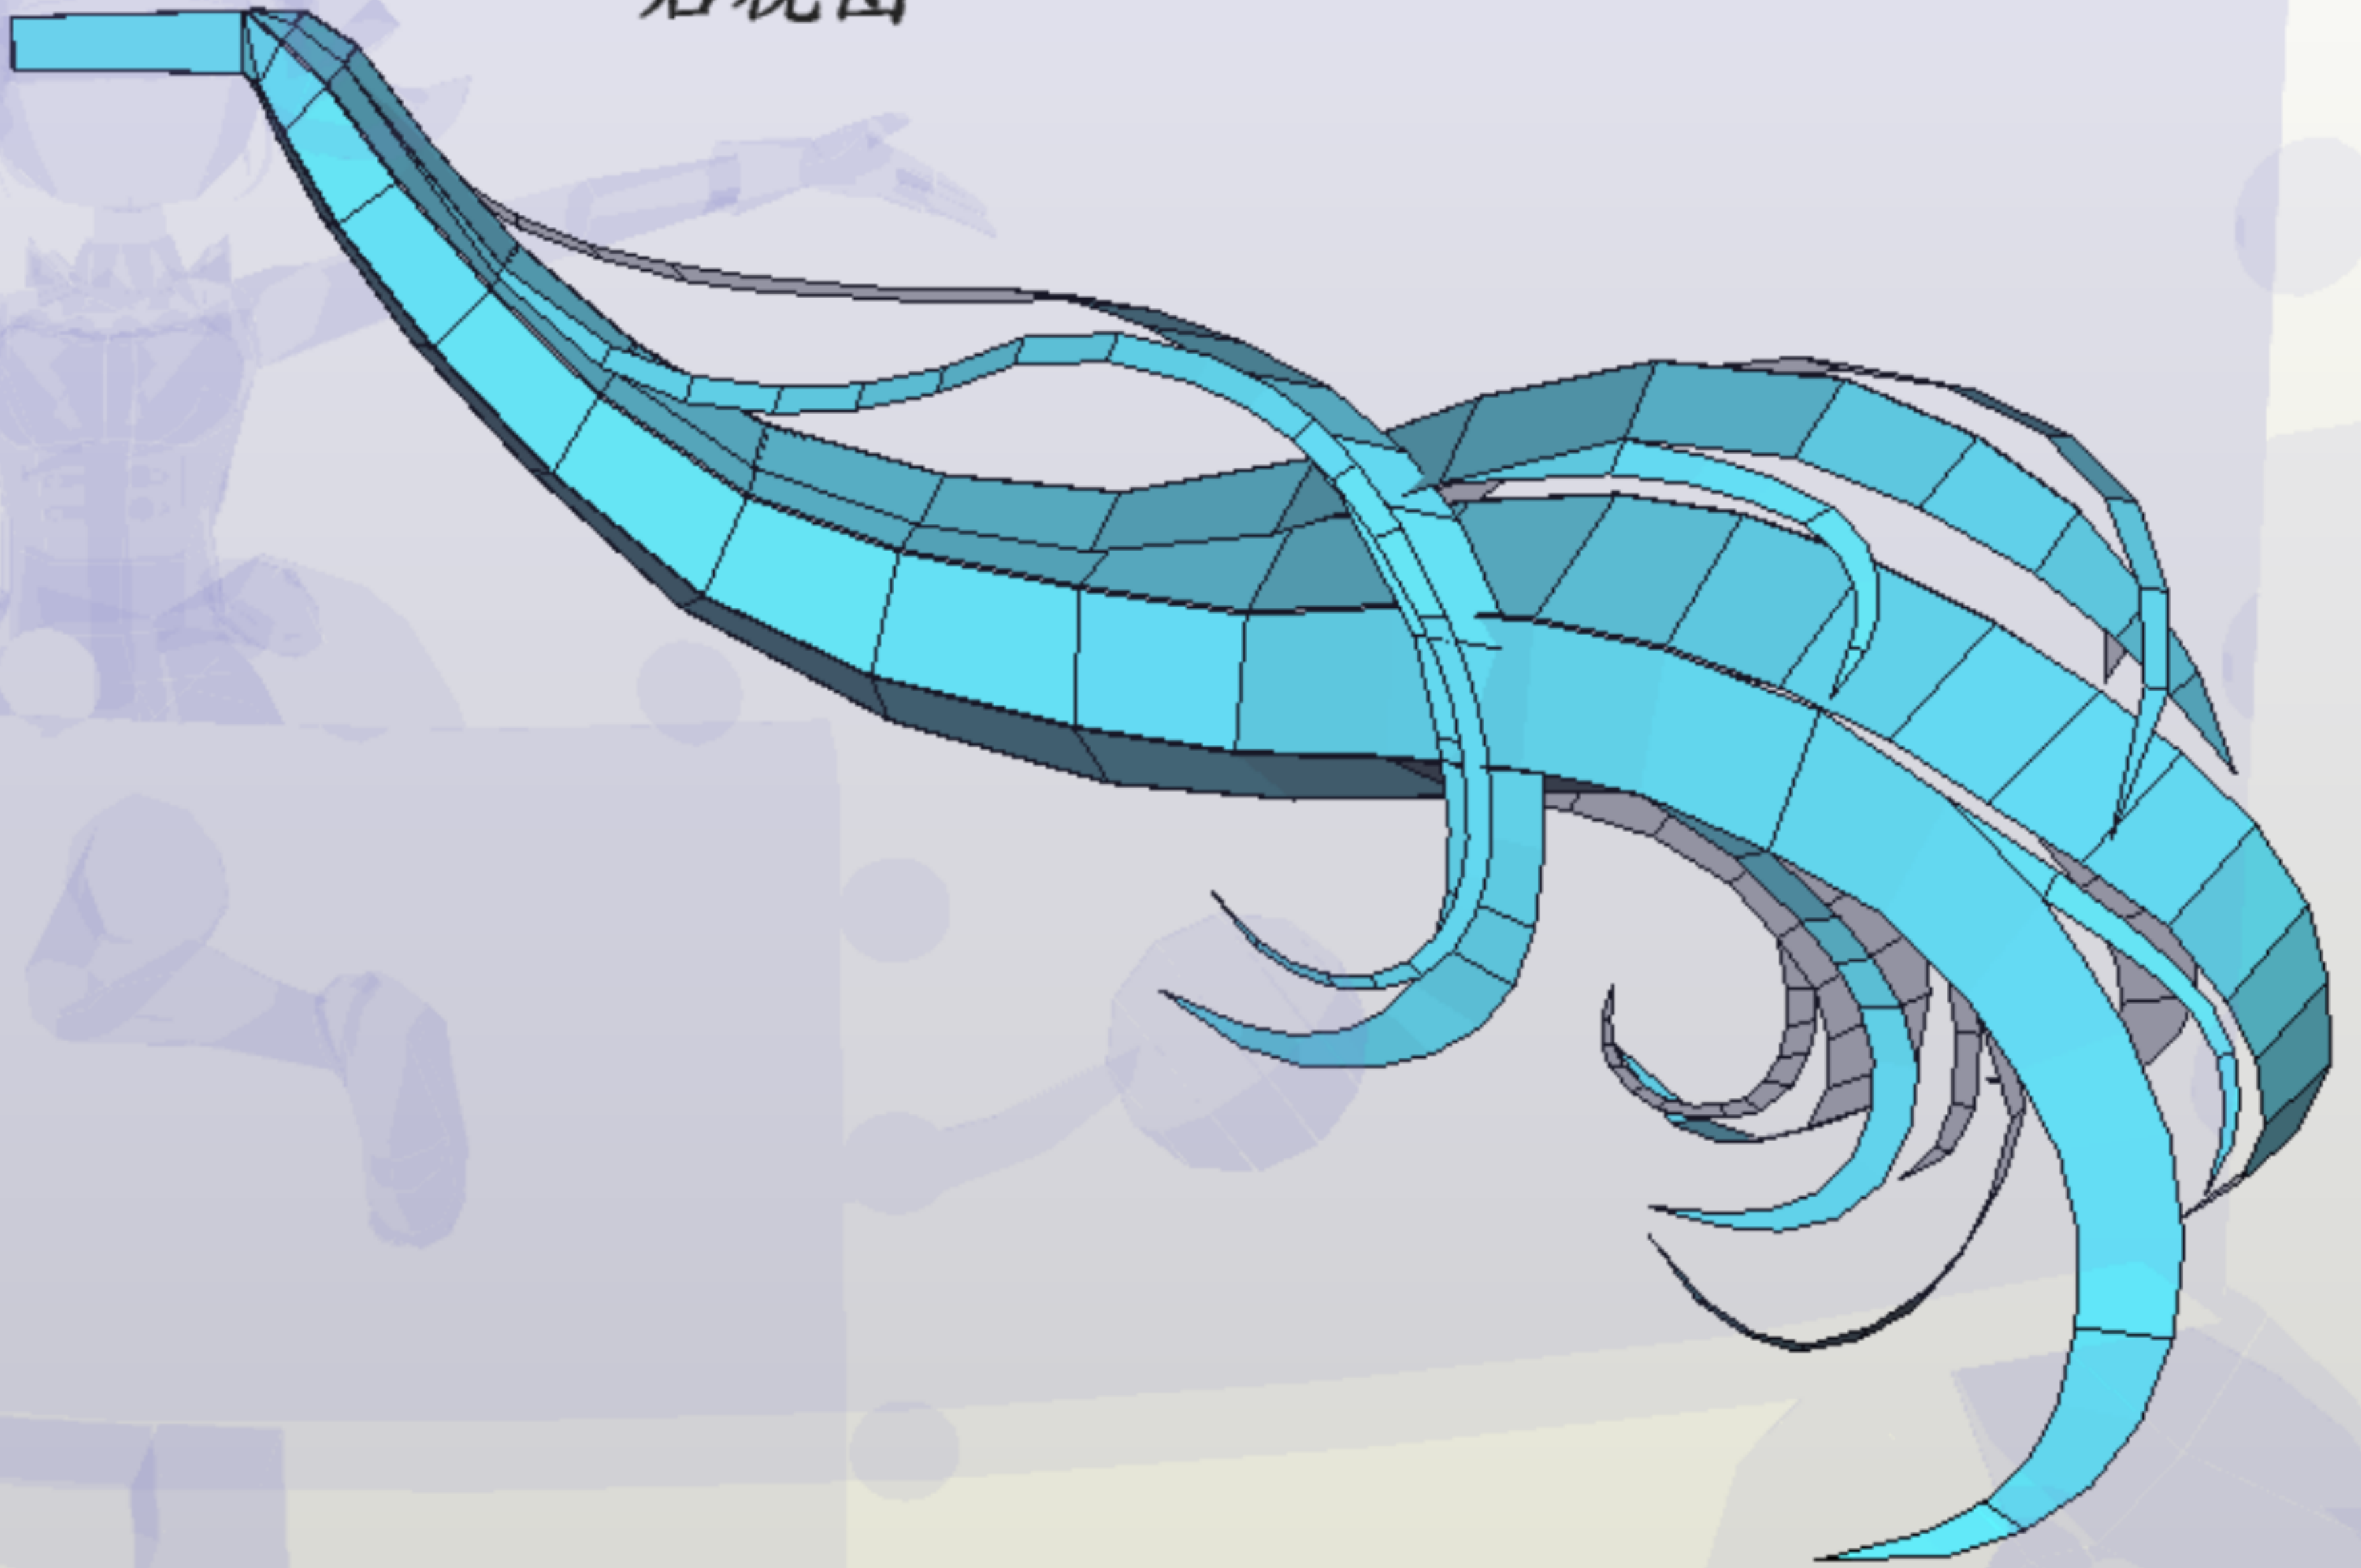


B94

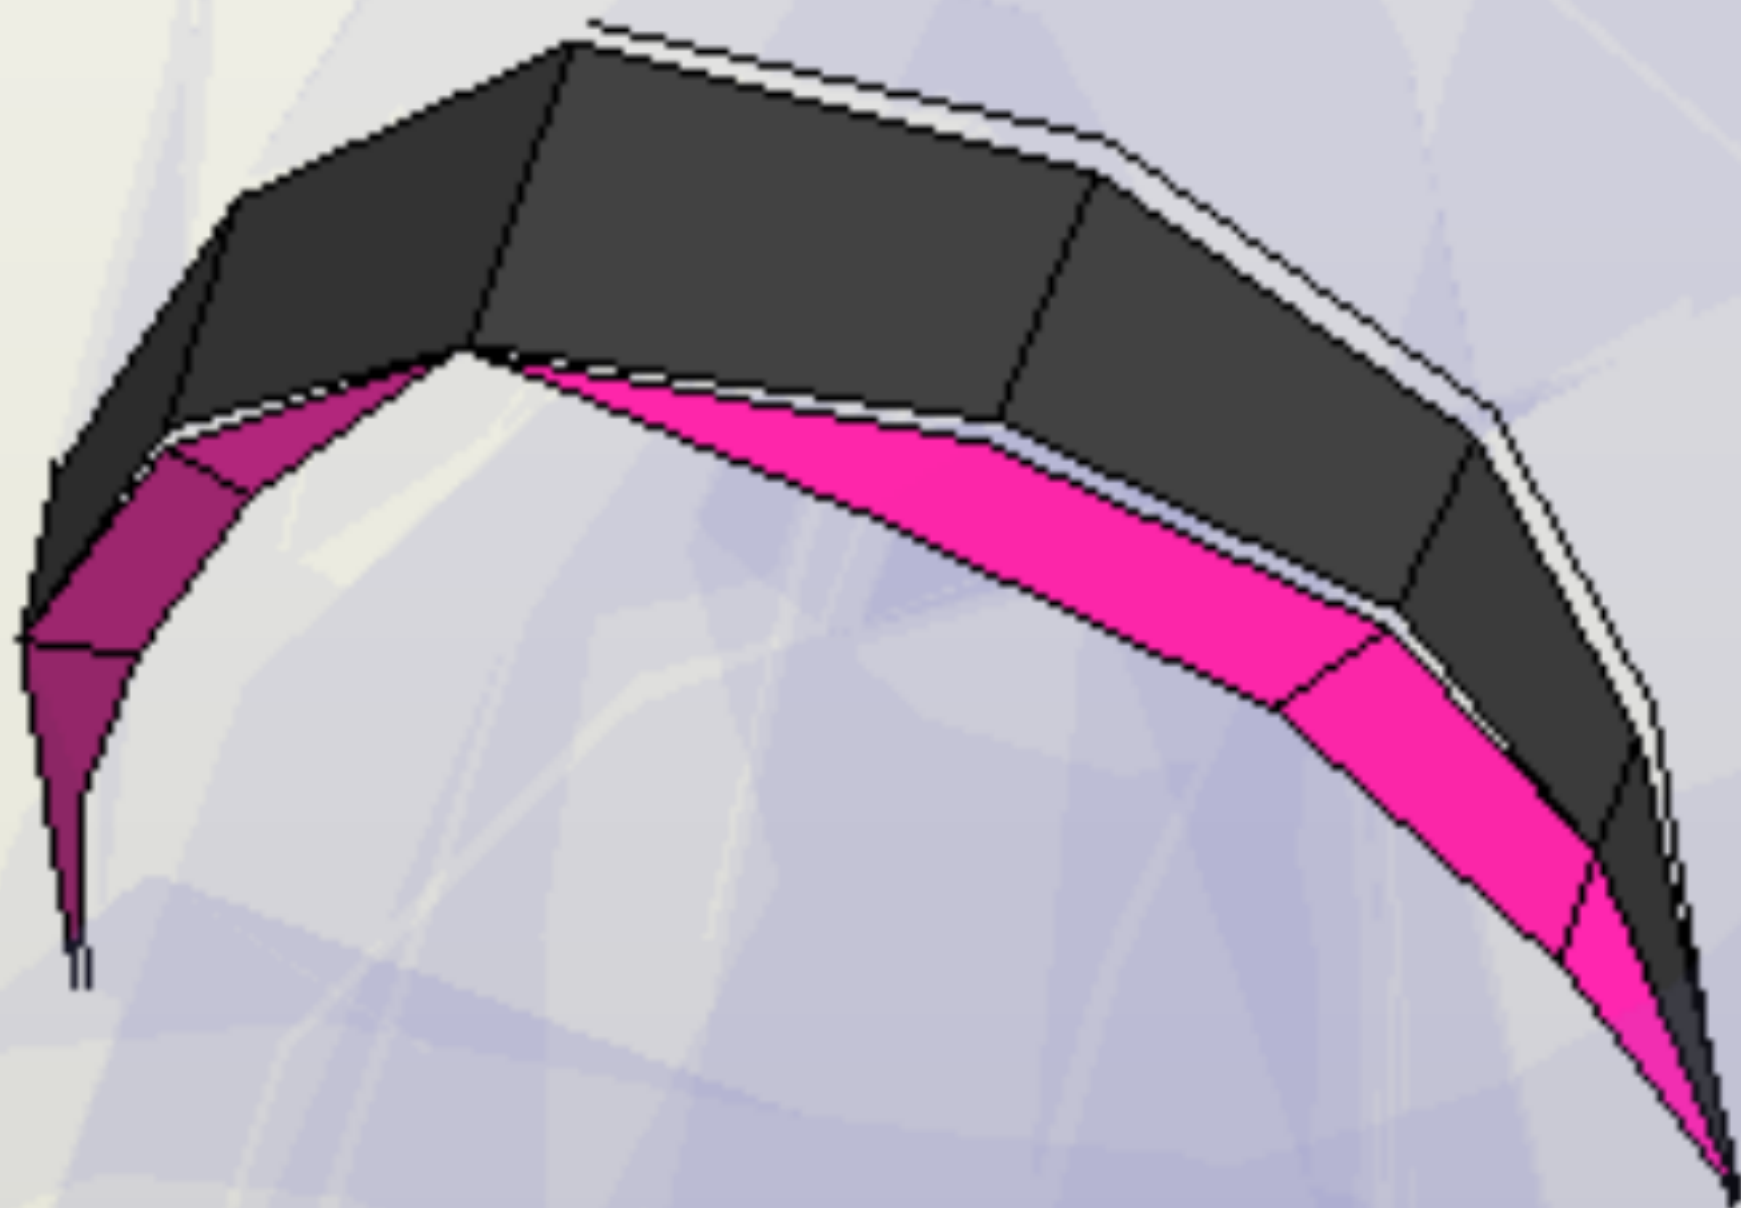



B96a


B96


B96b

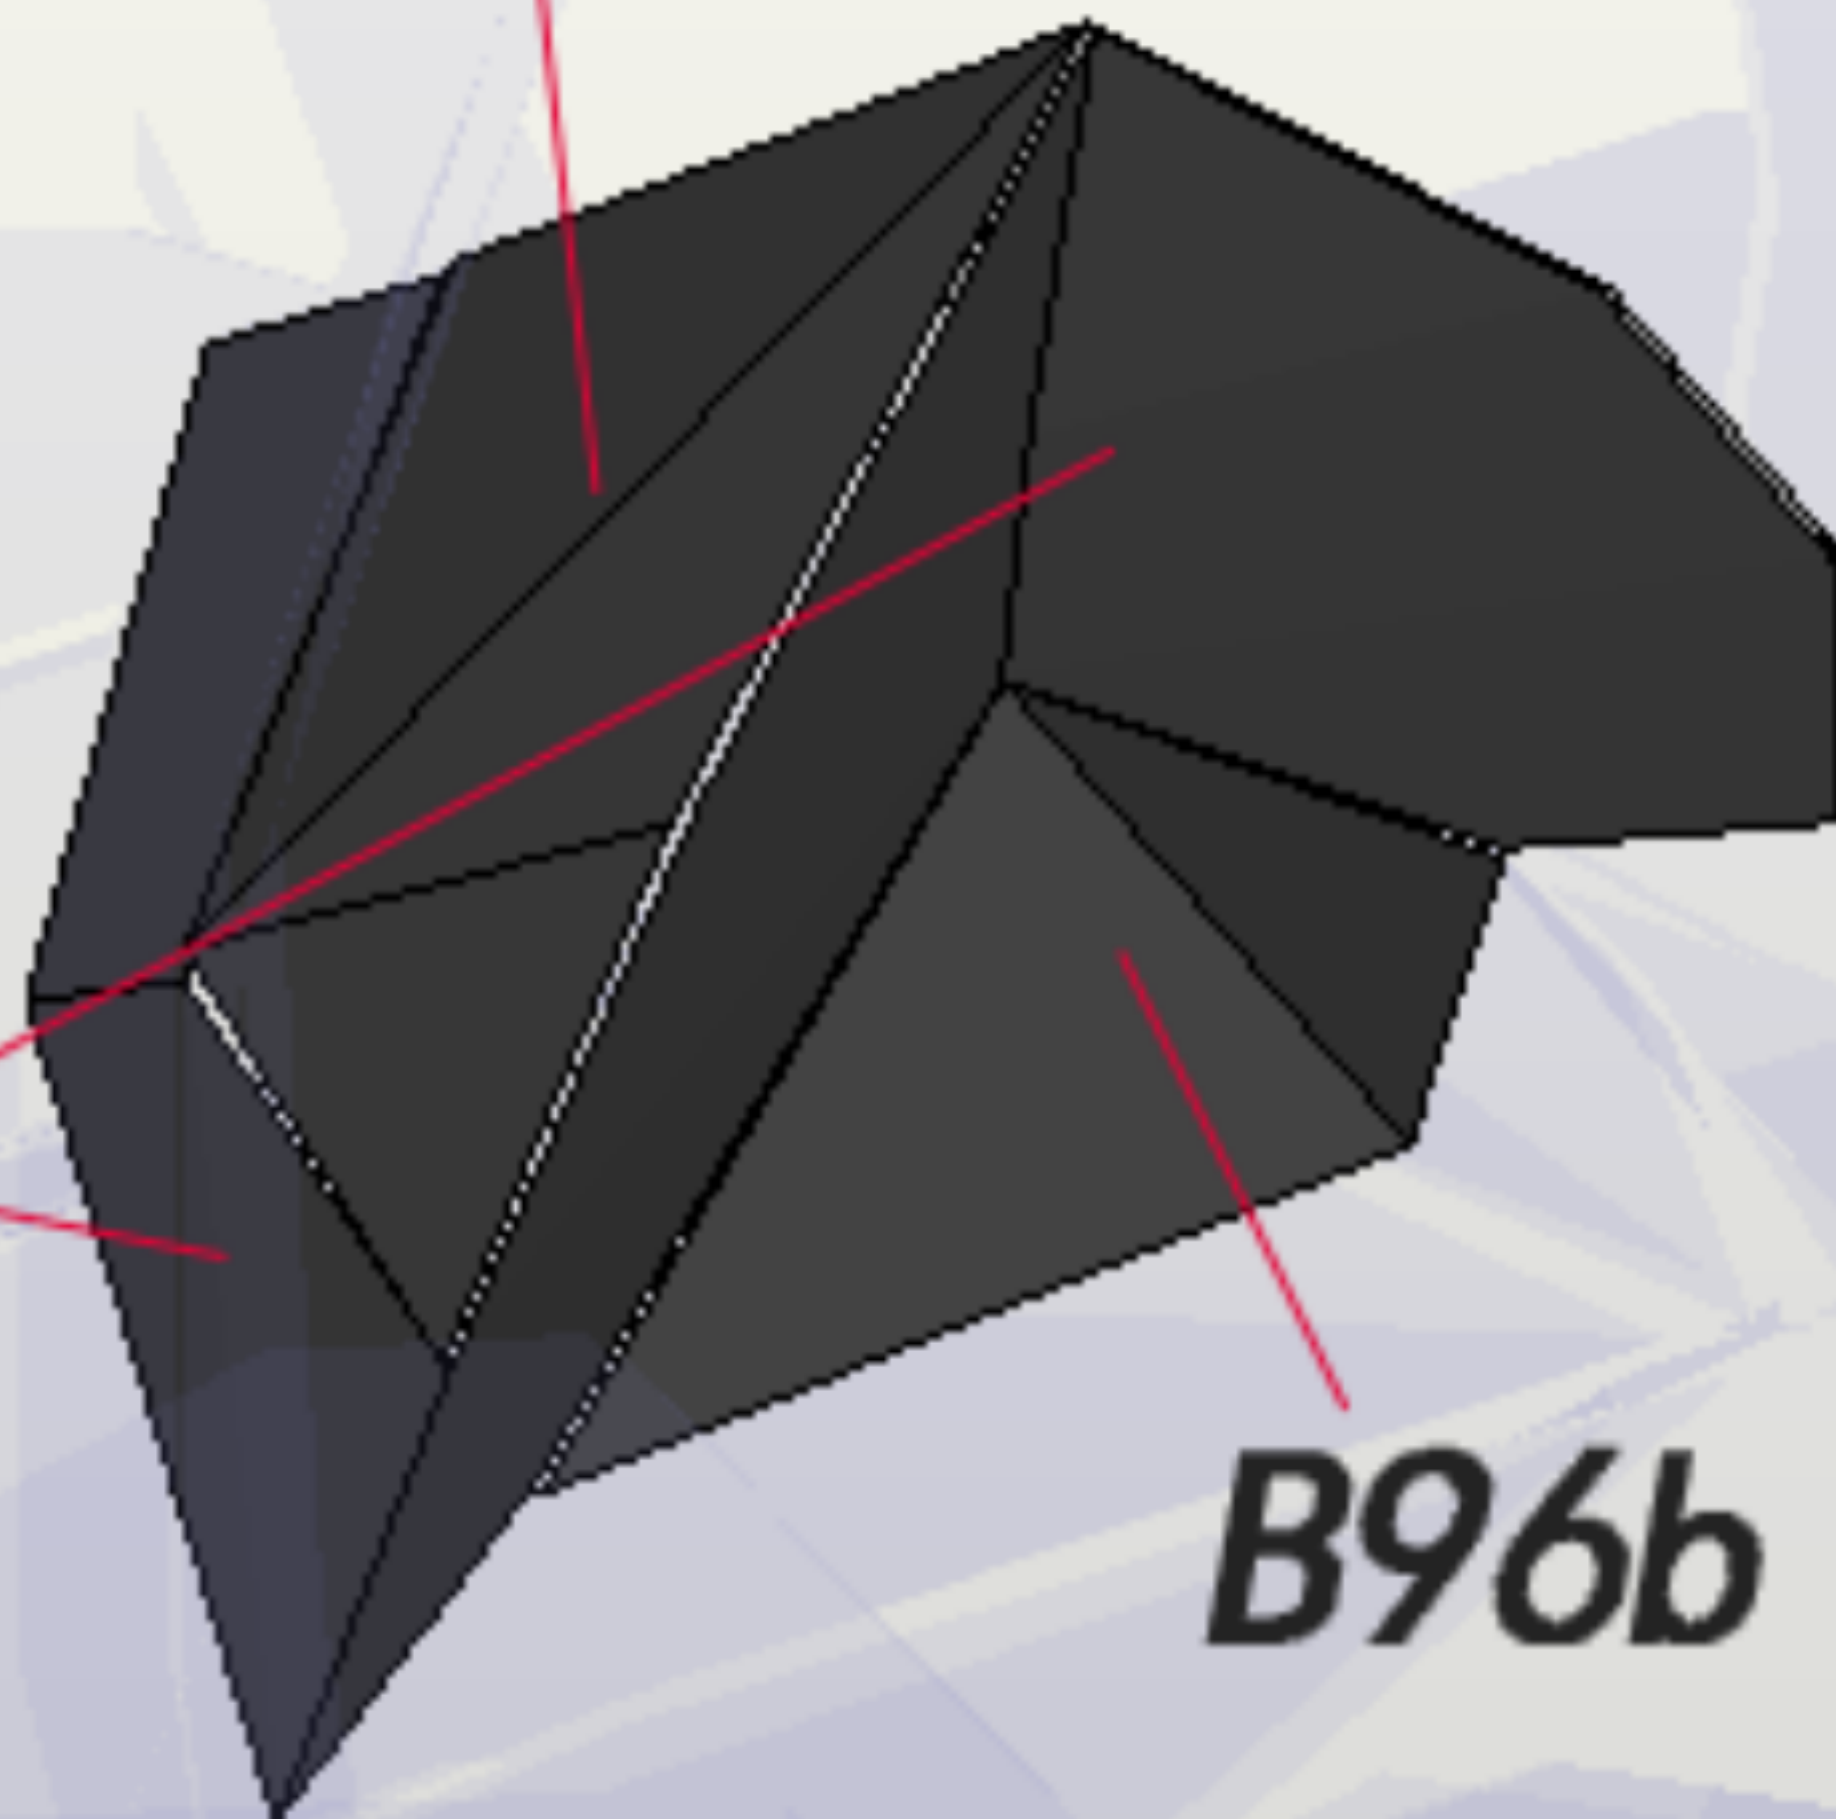

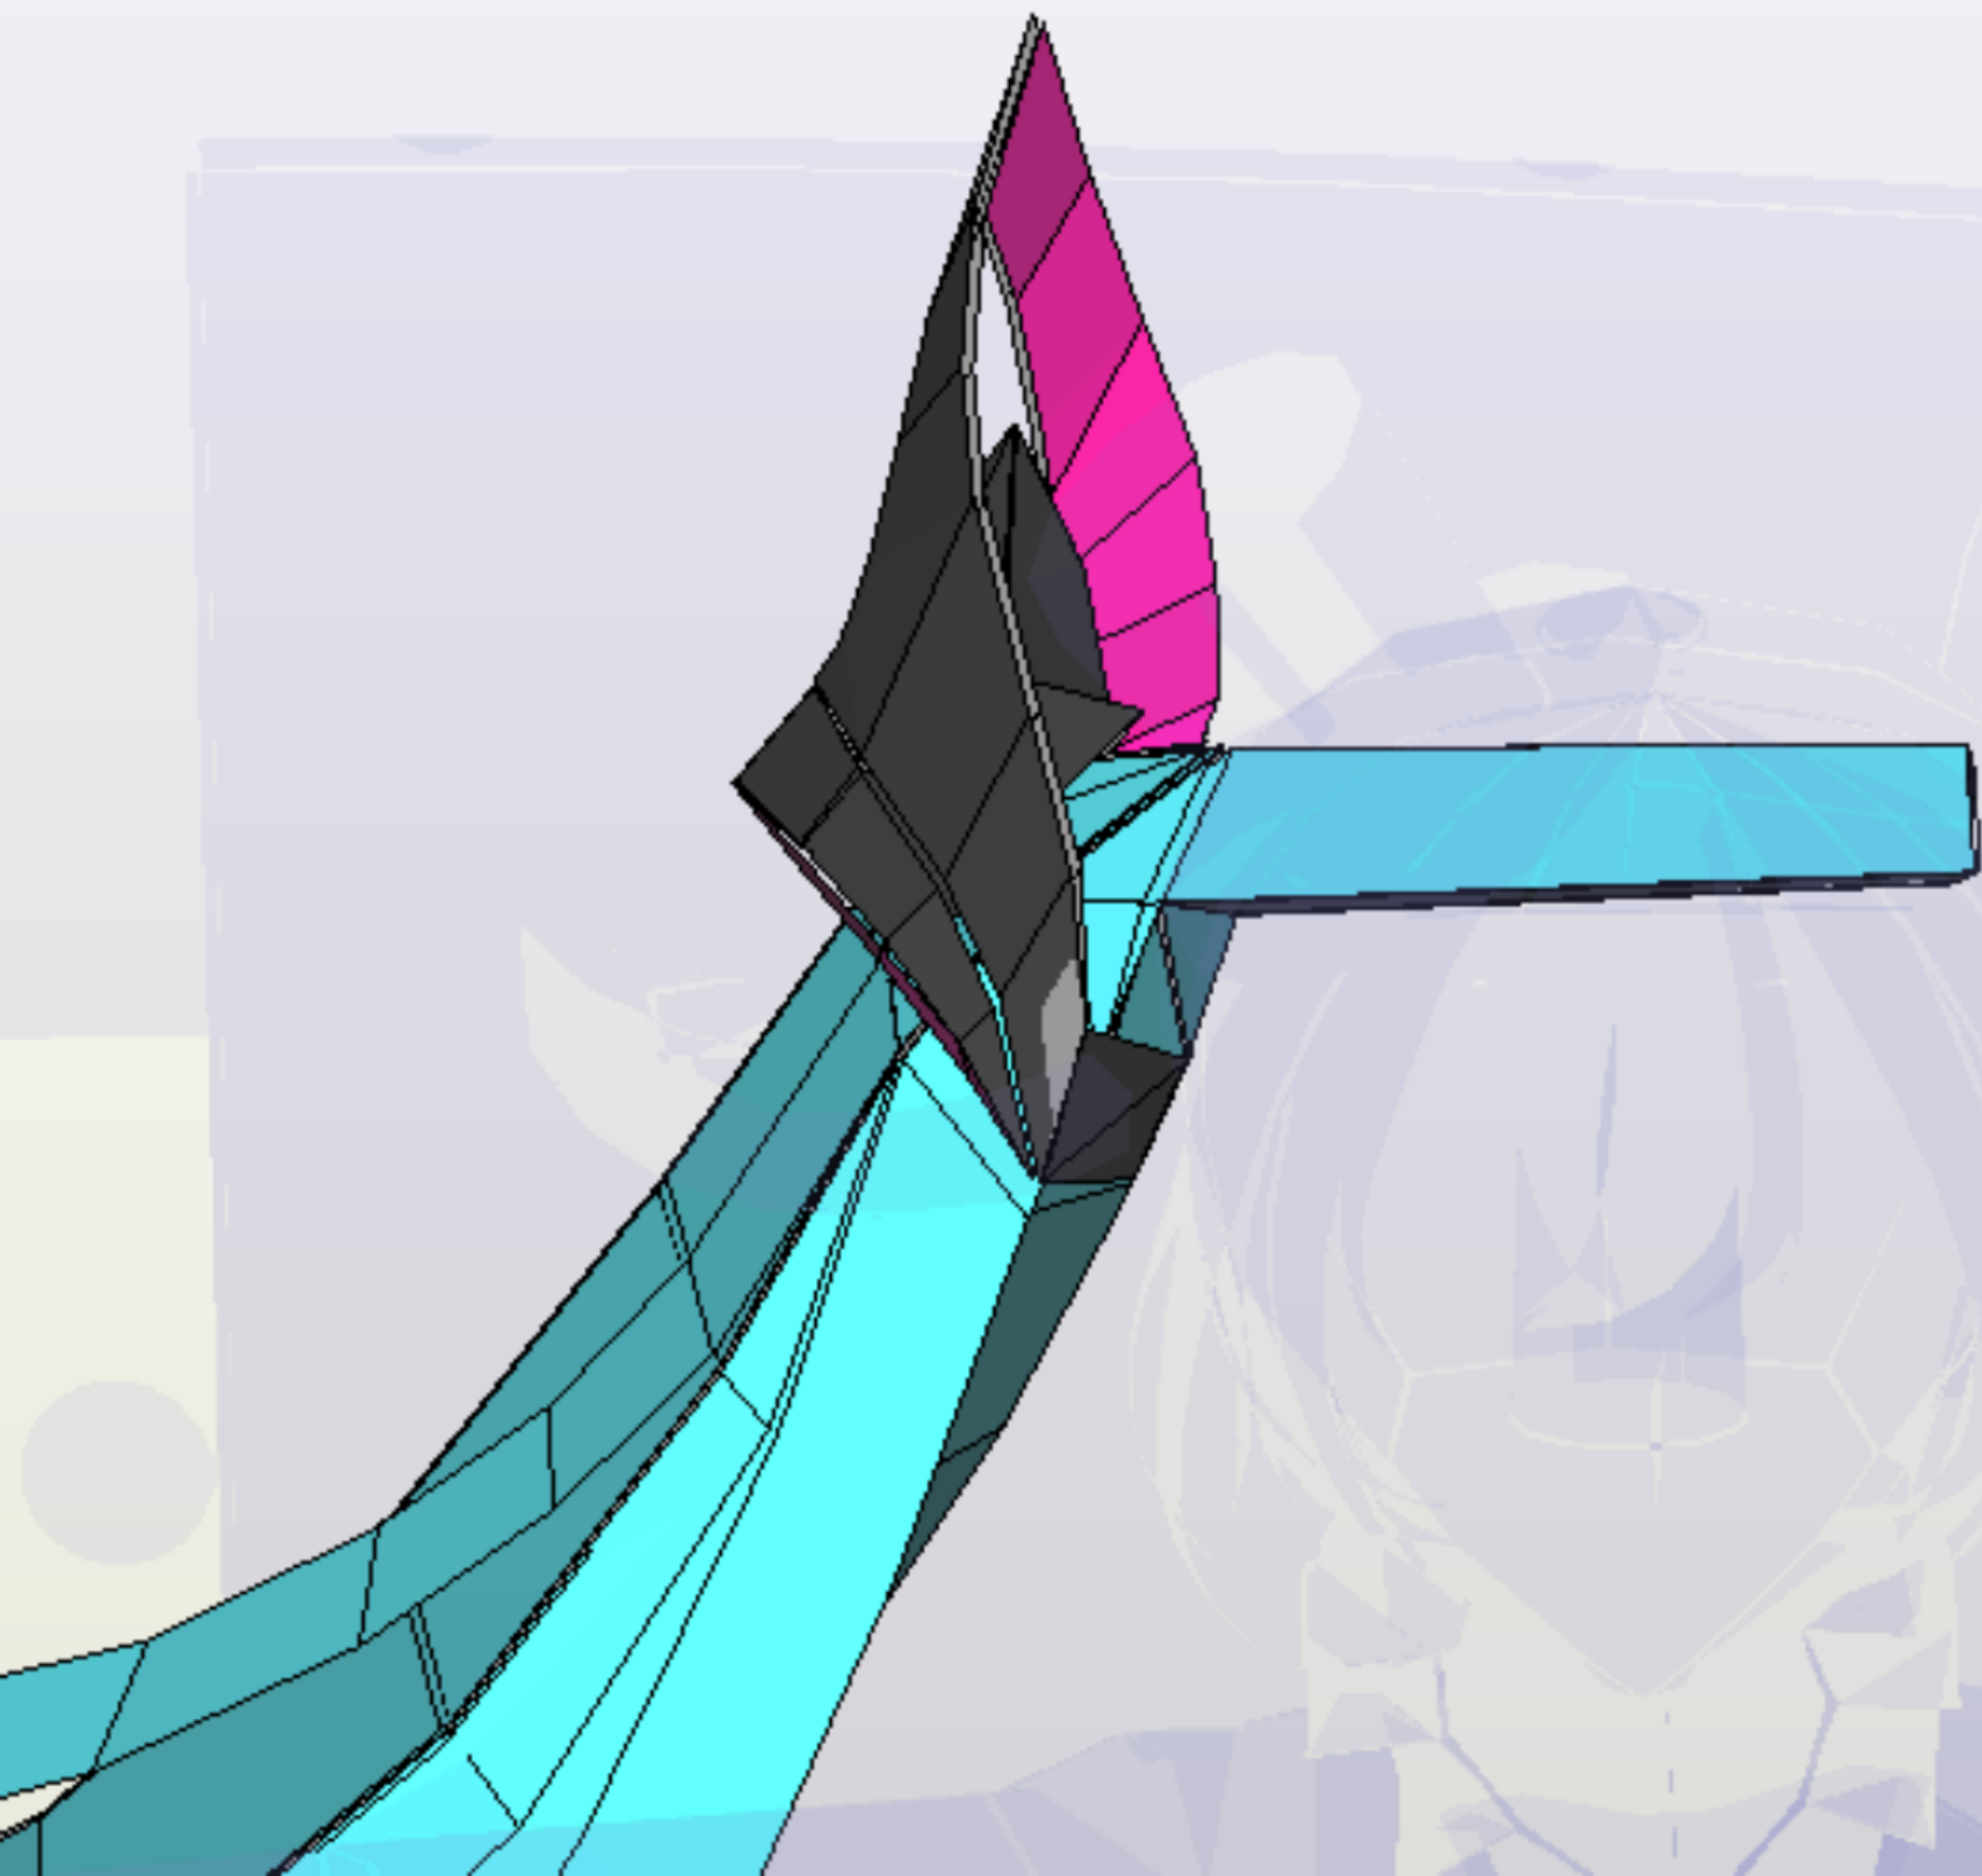

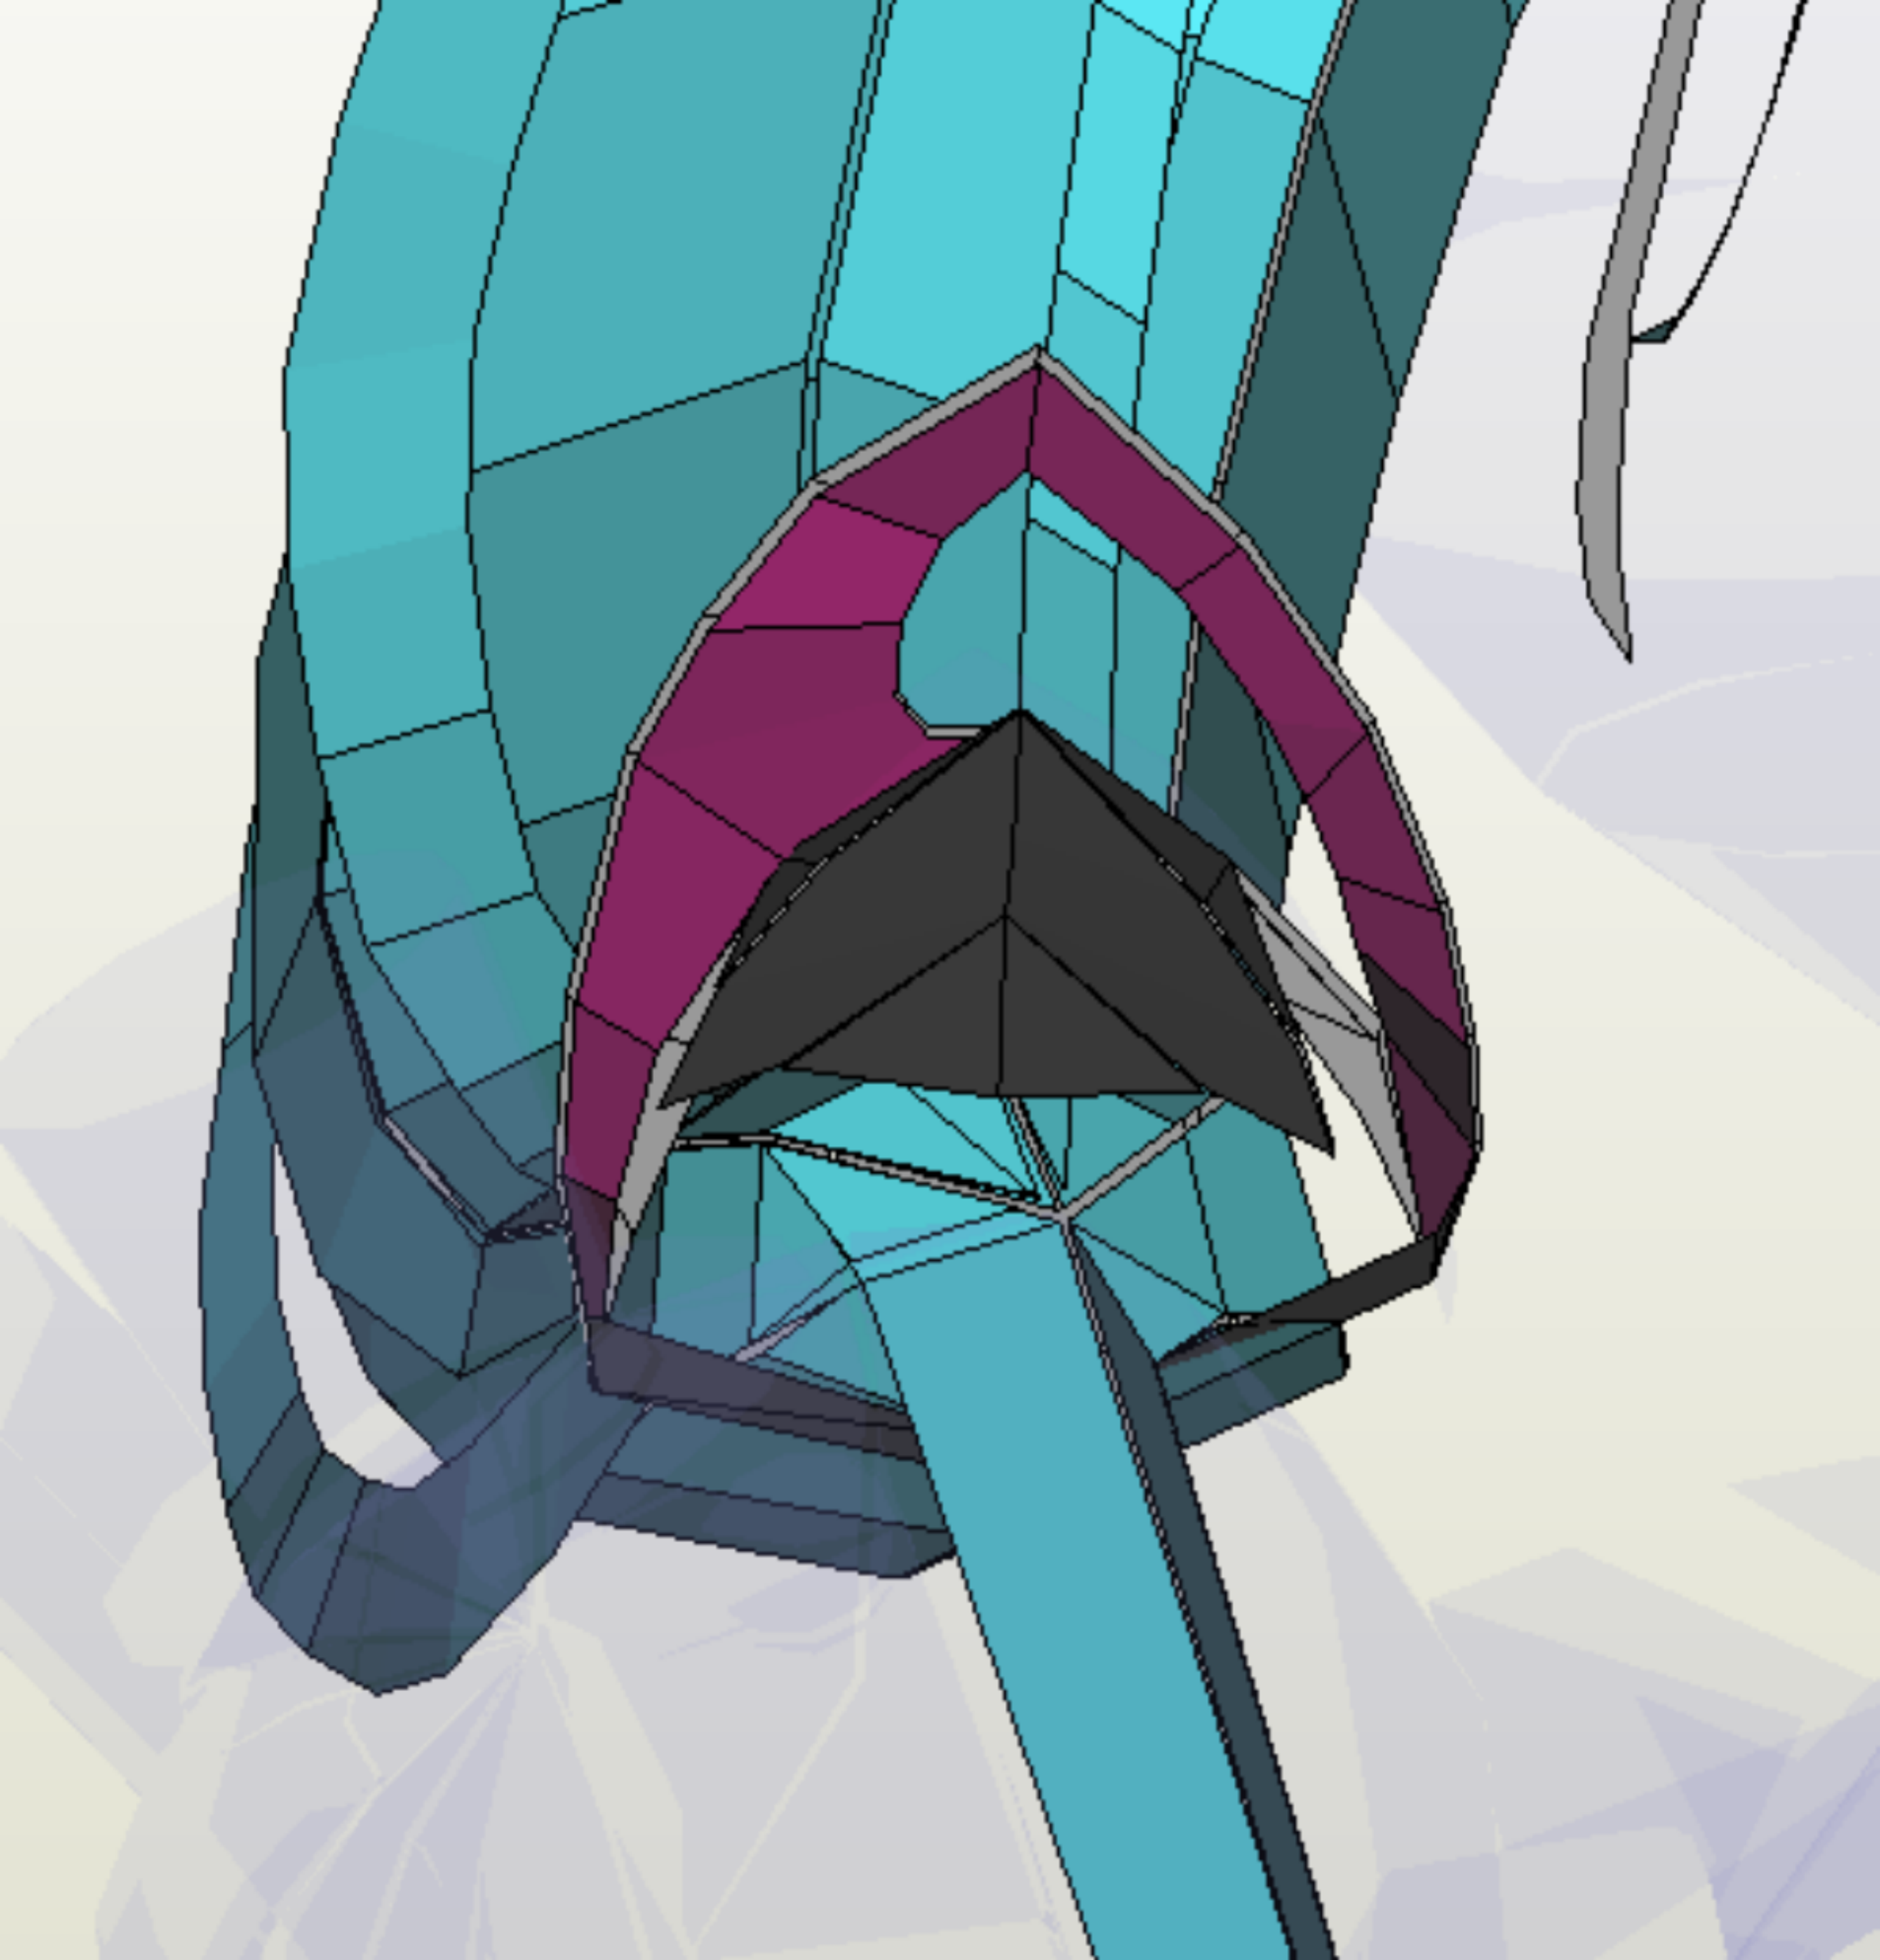


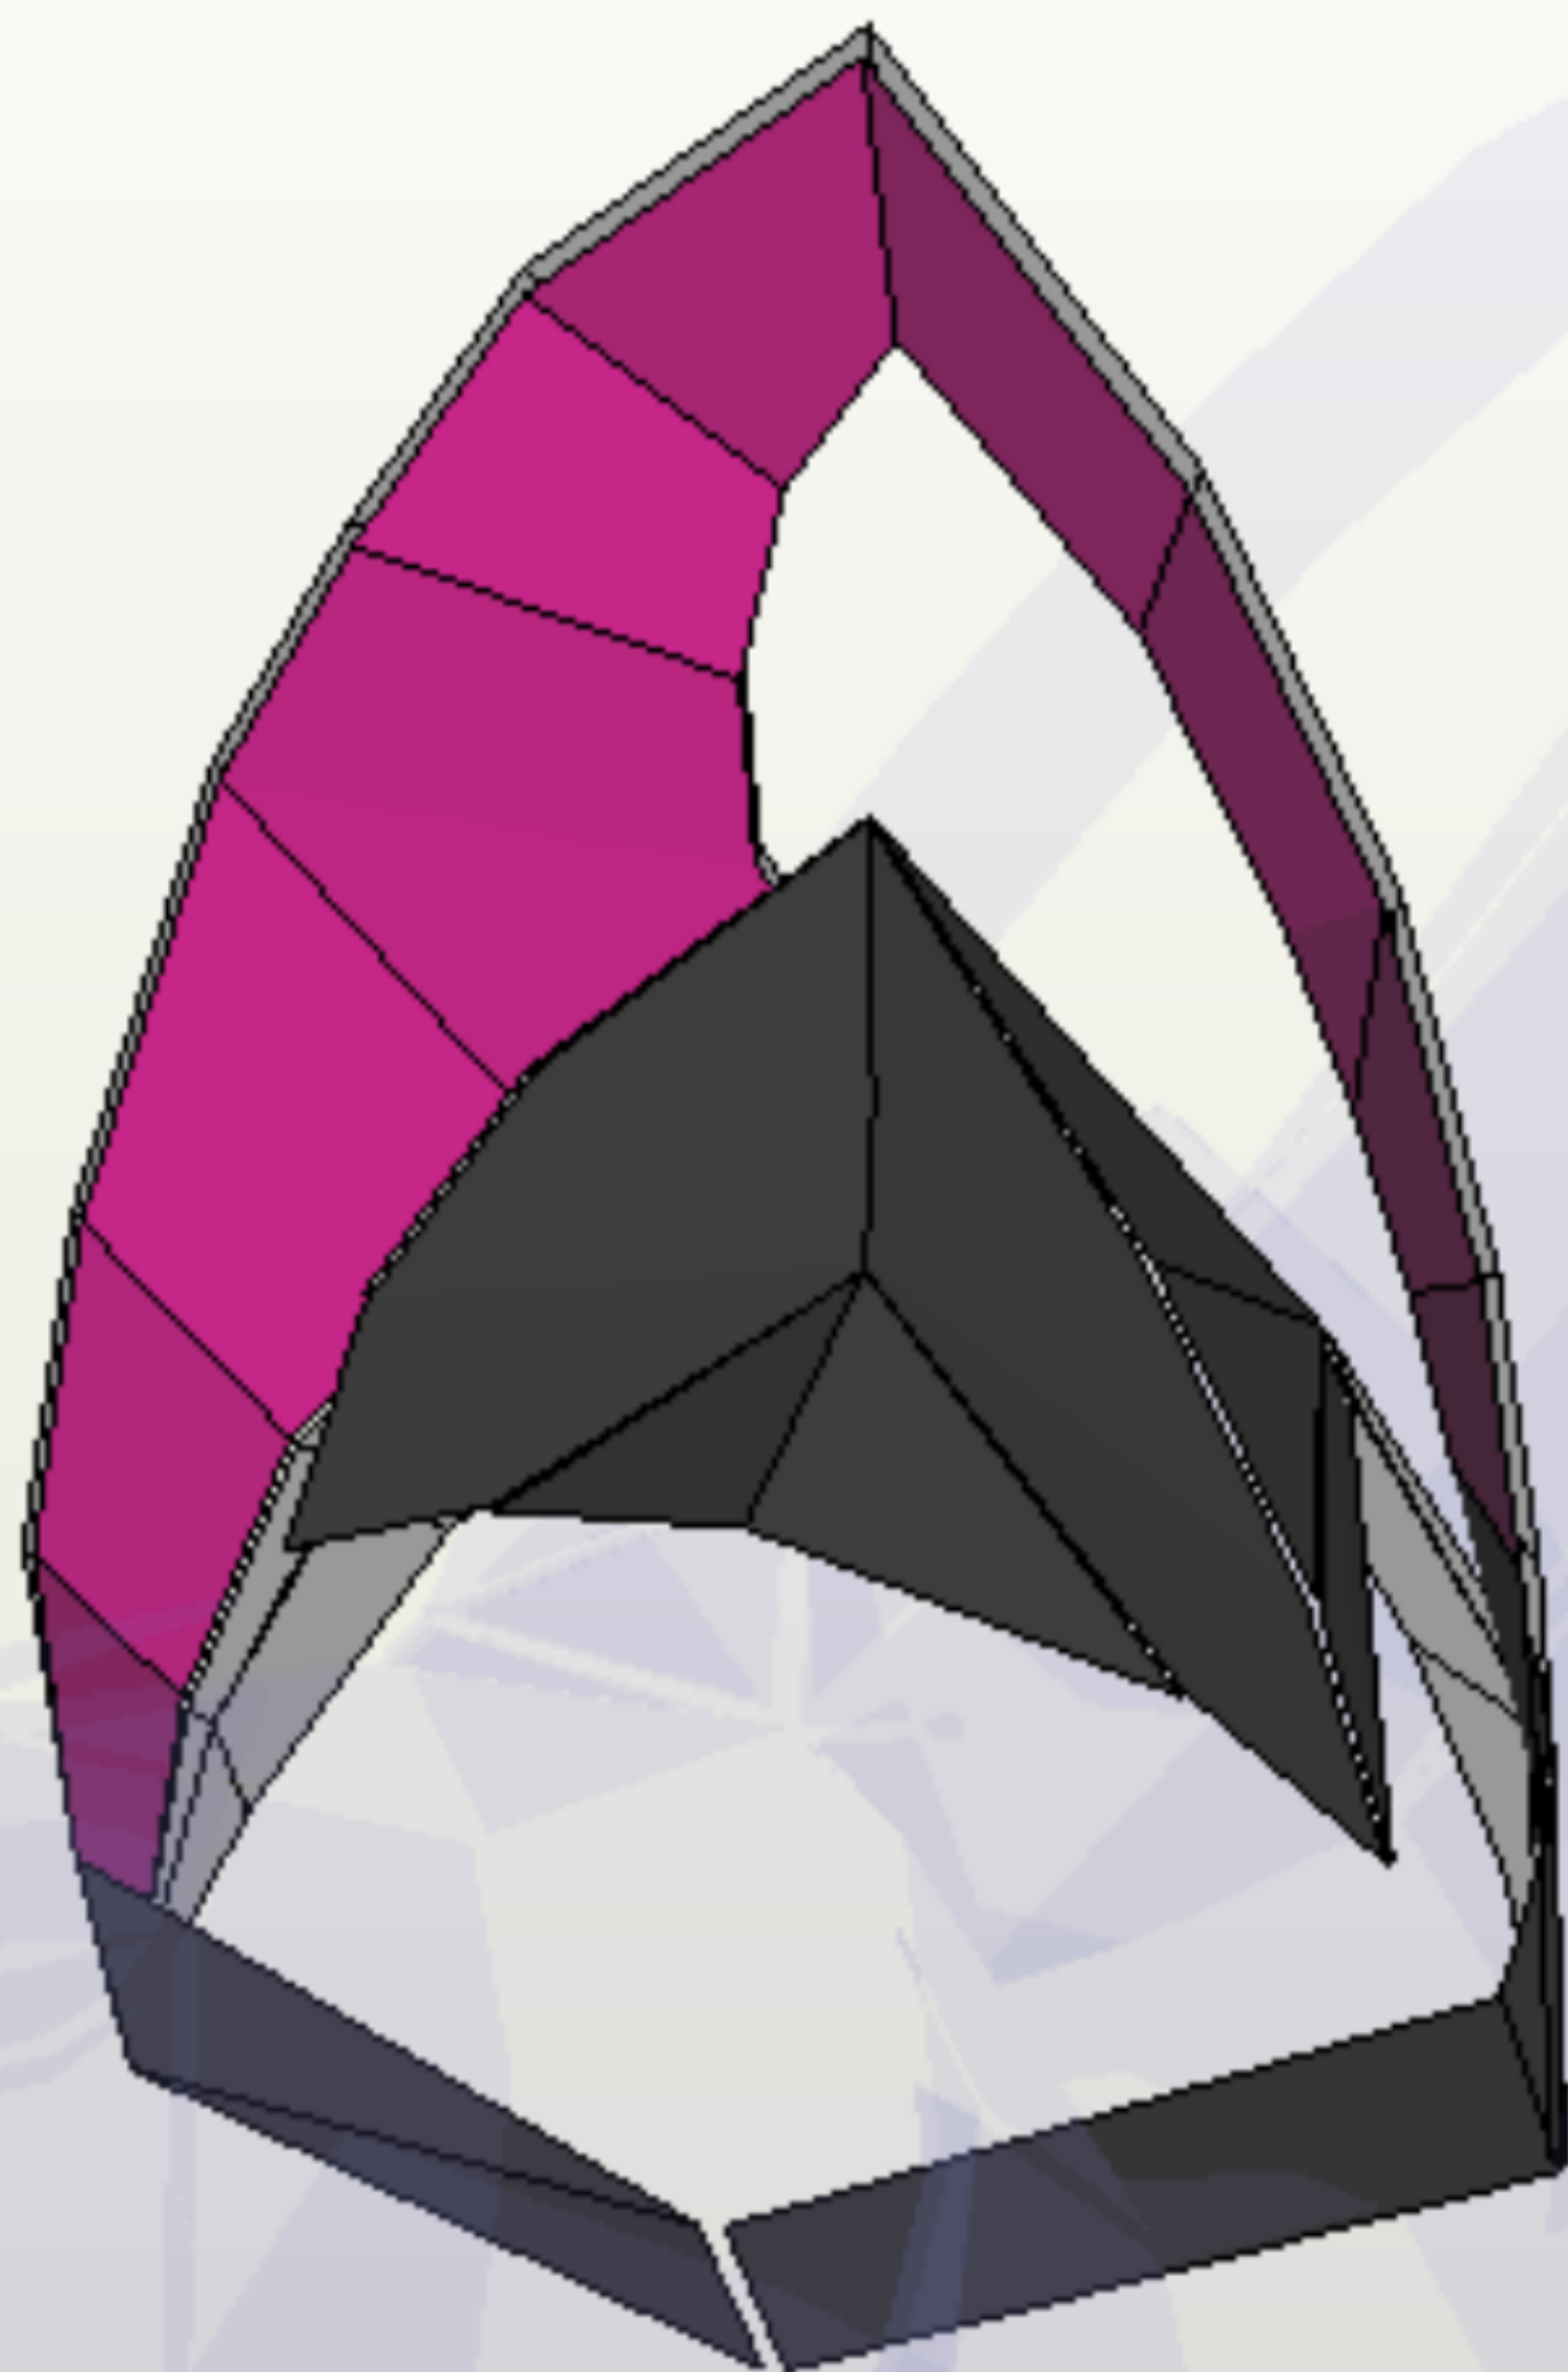

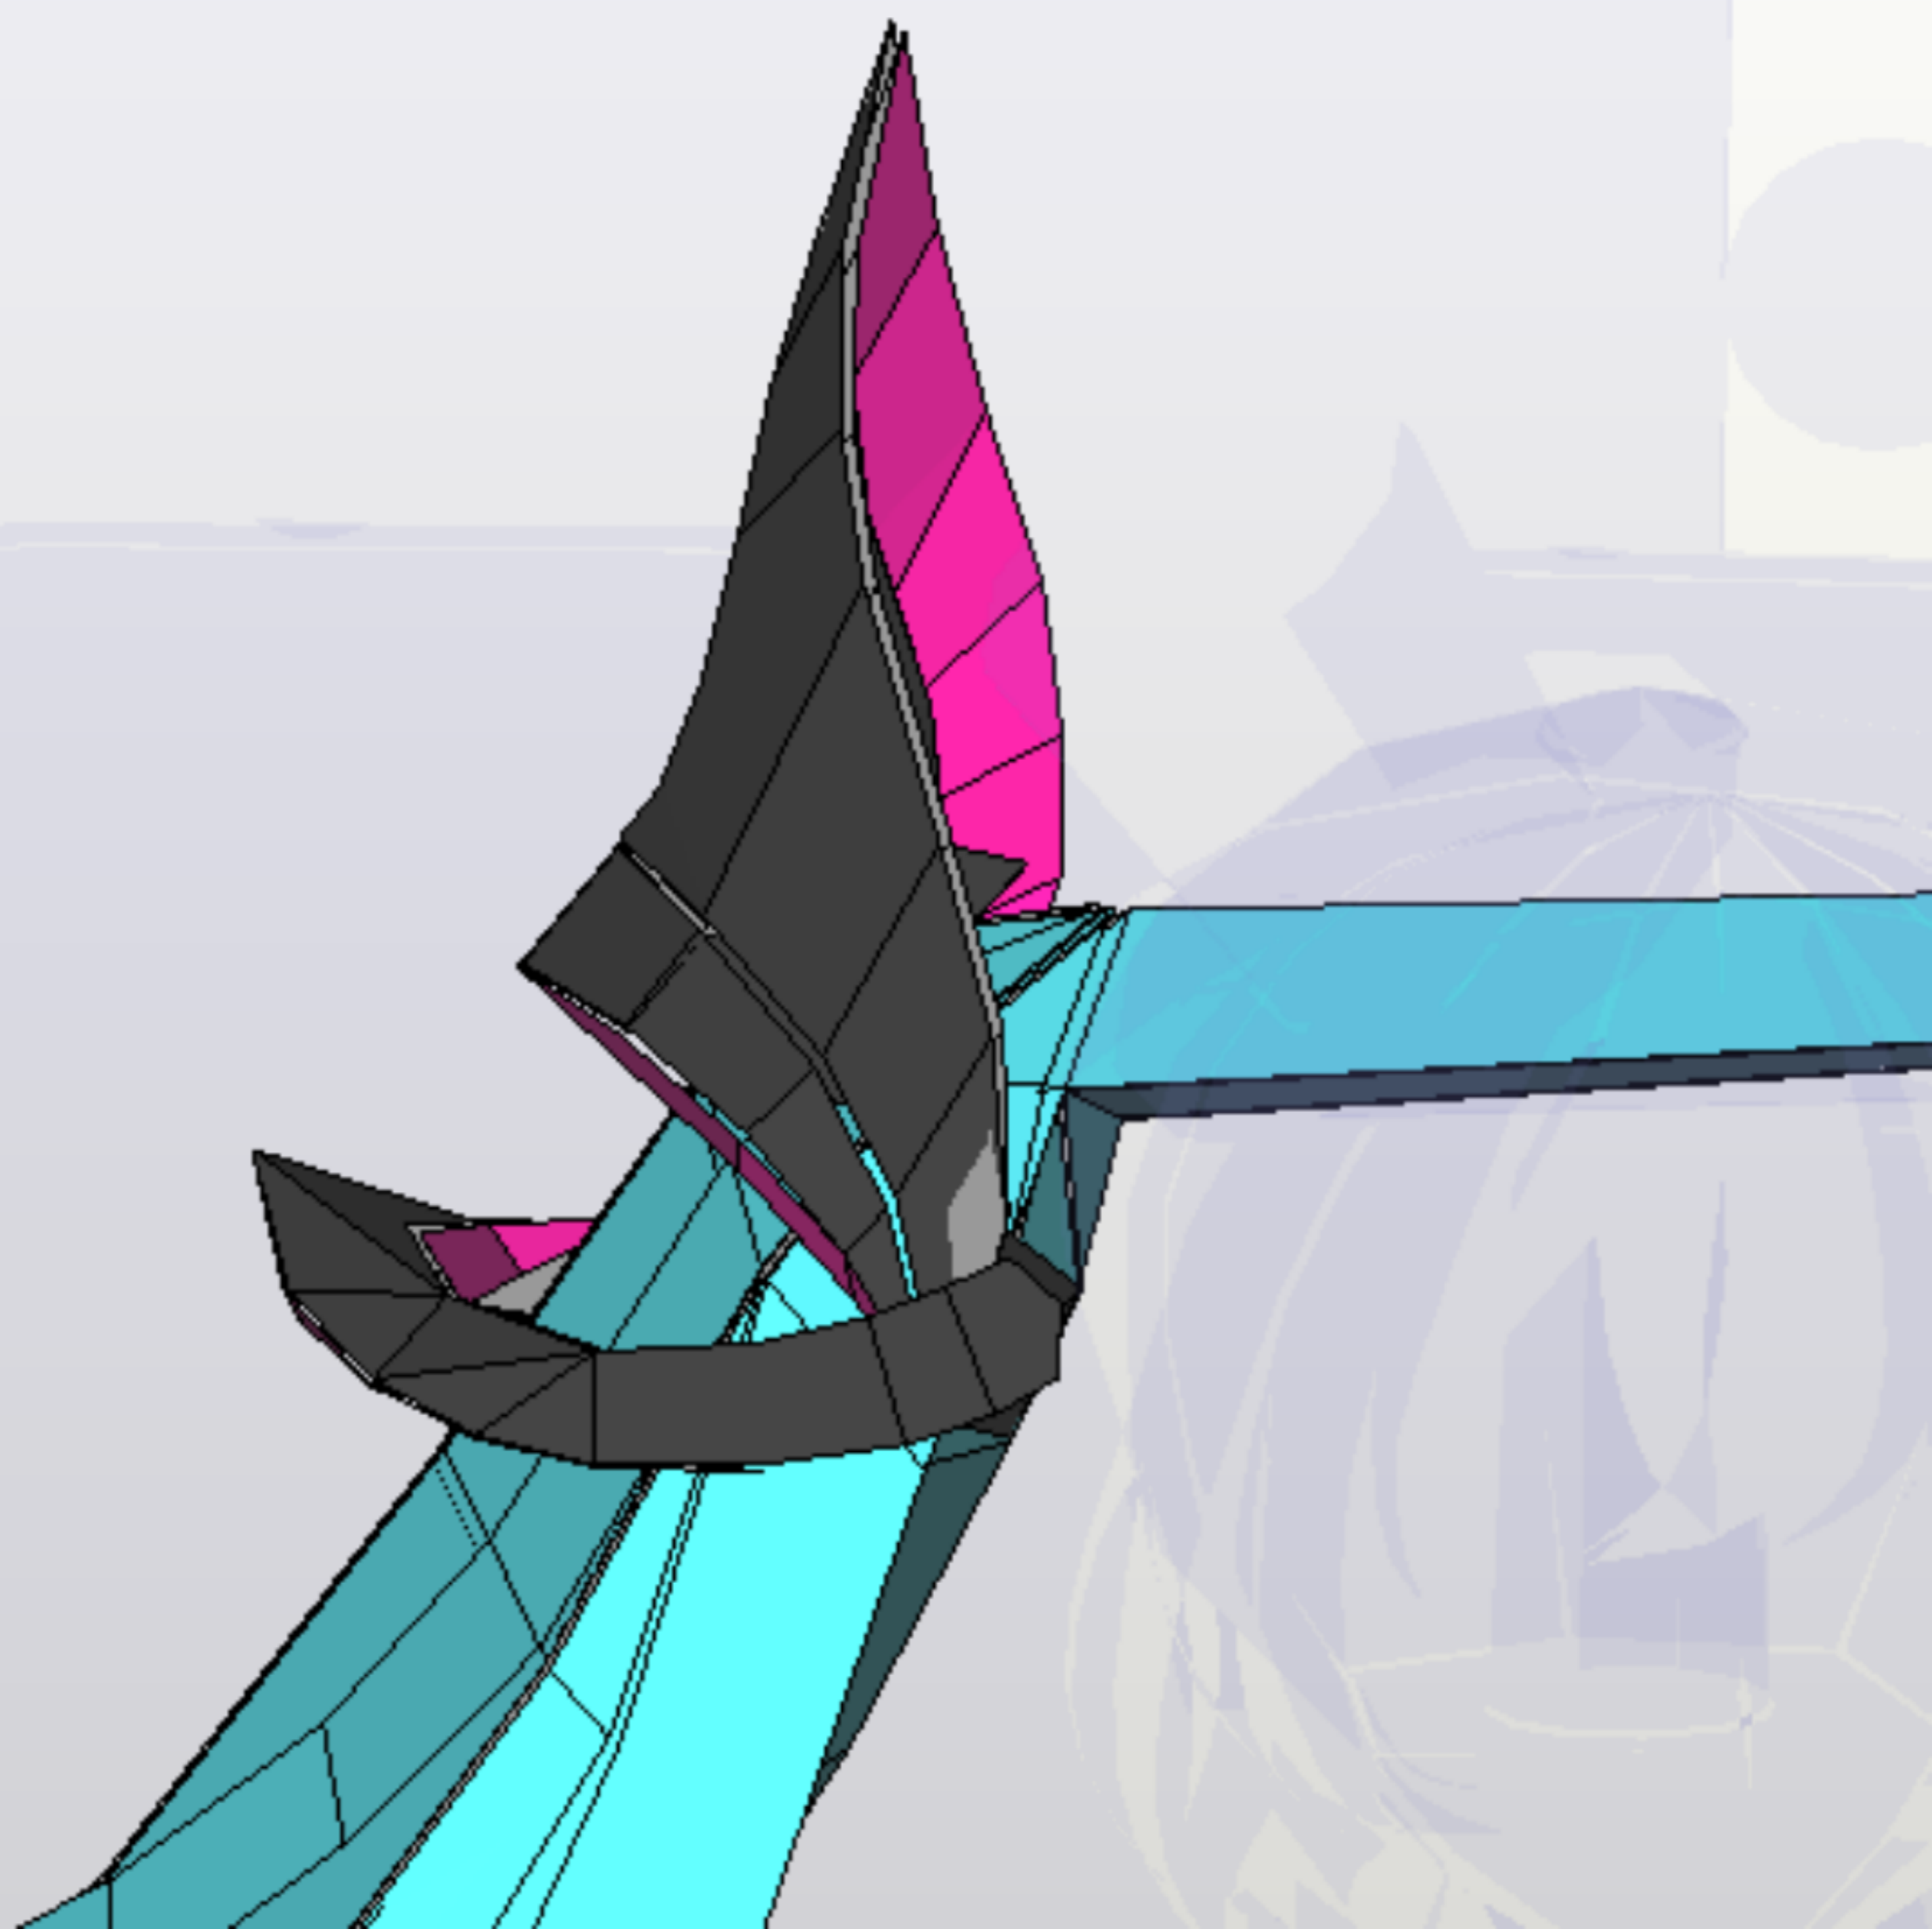


B97



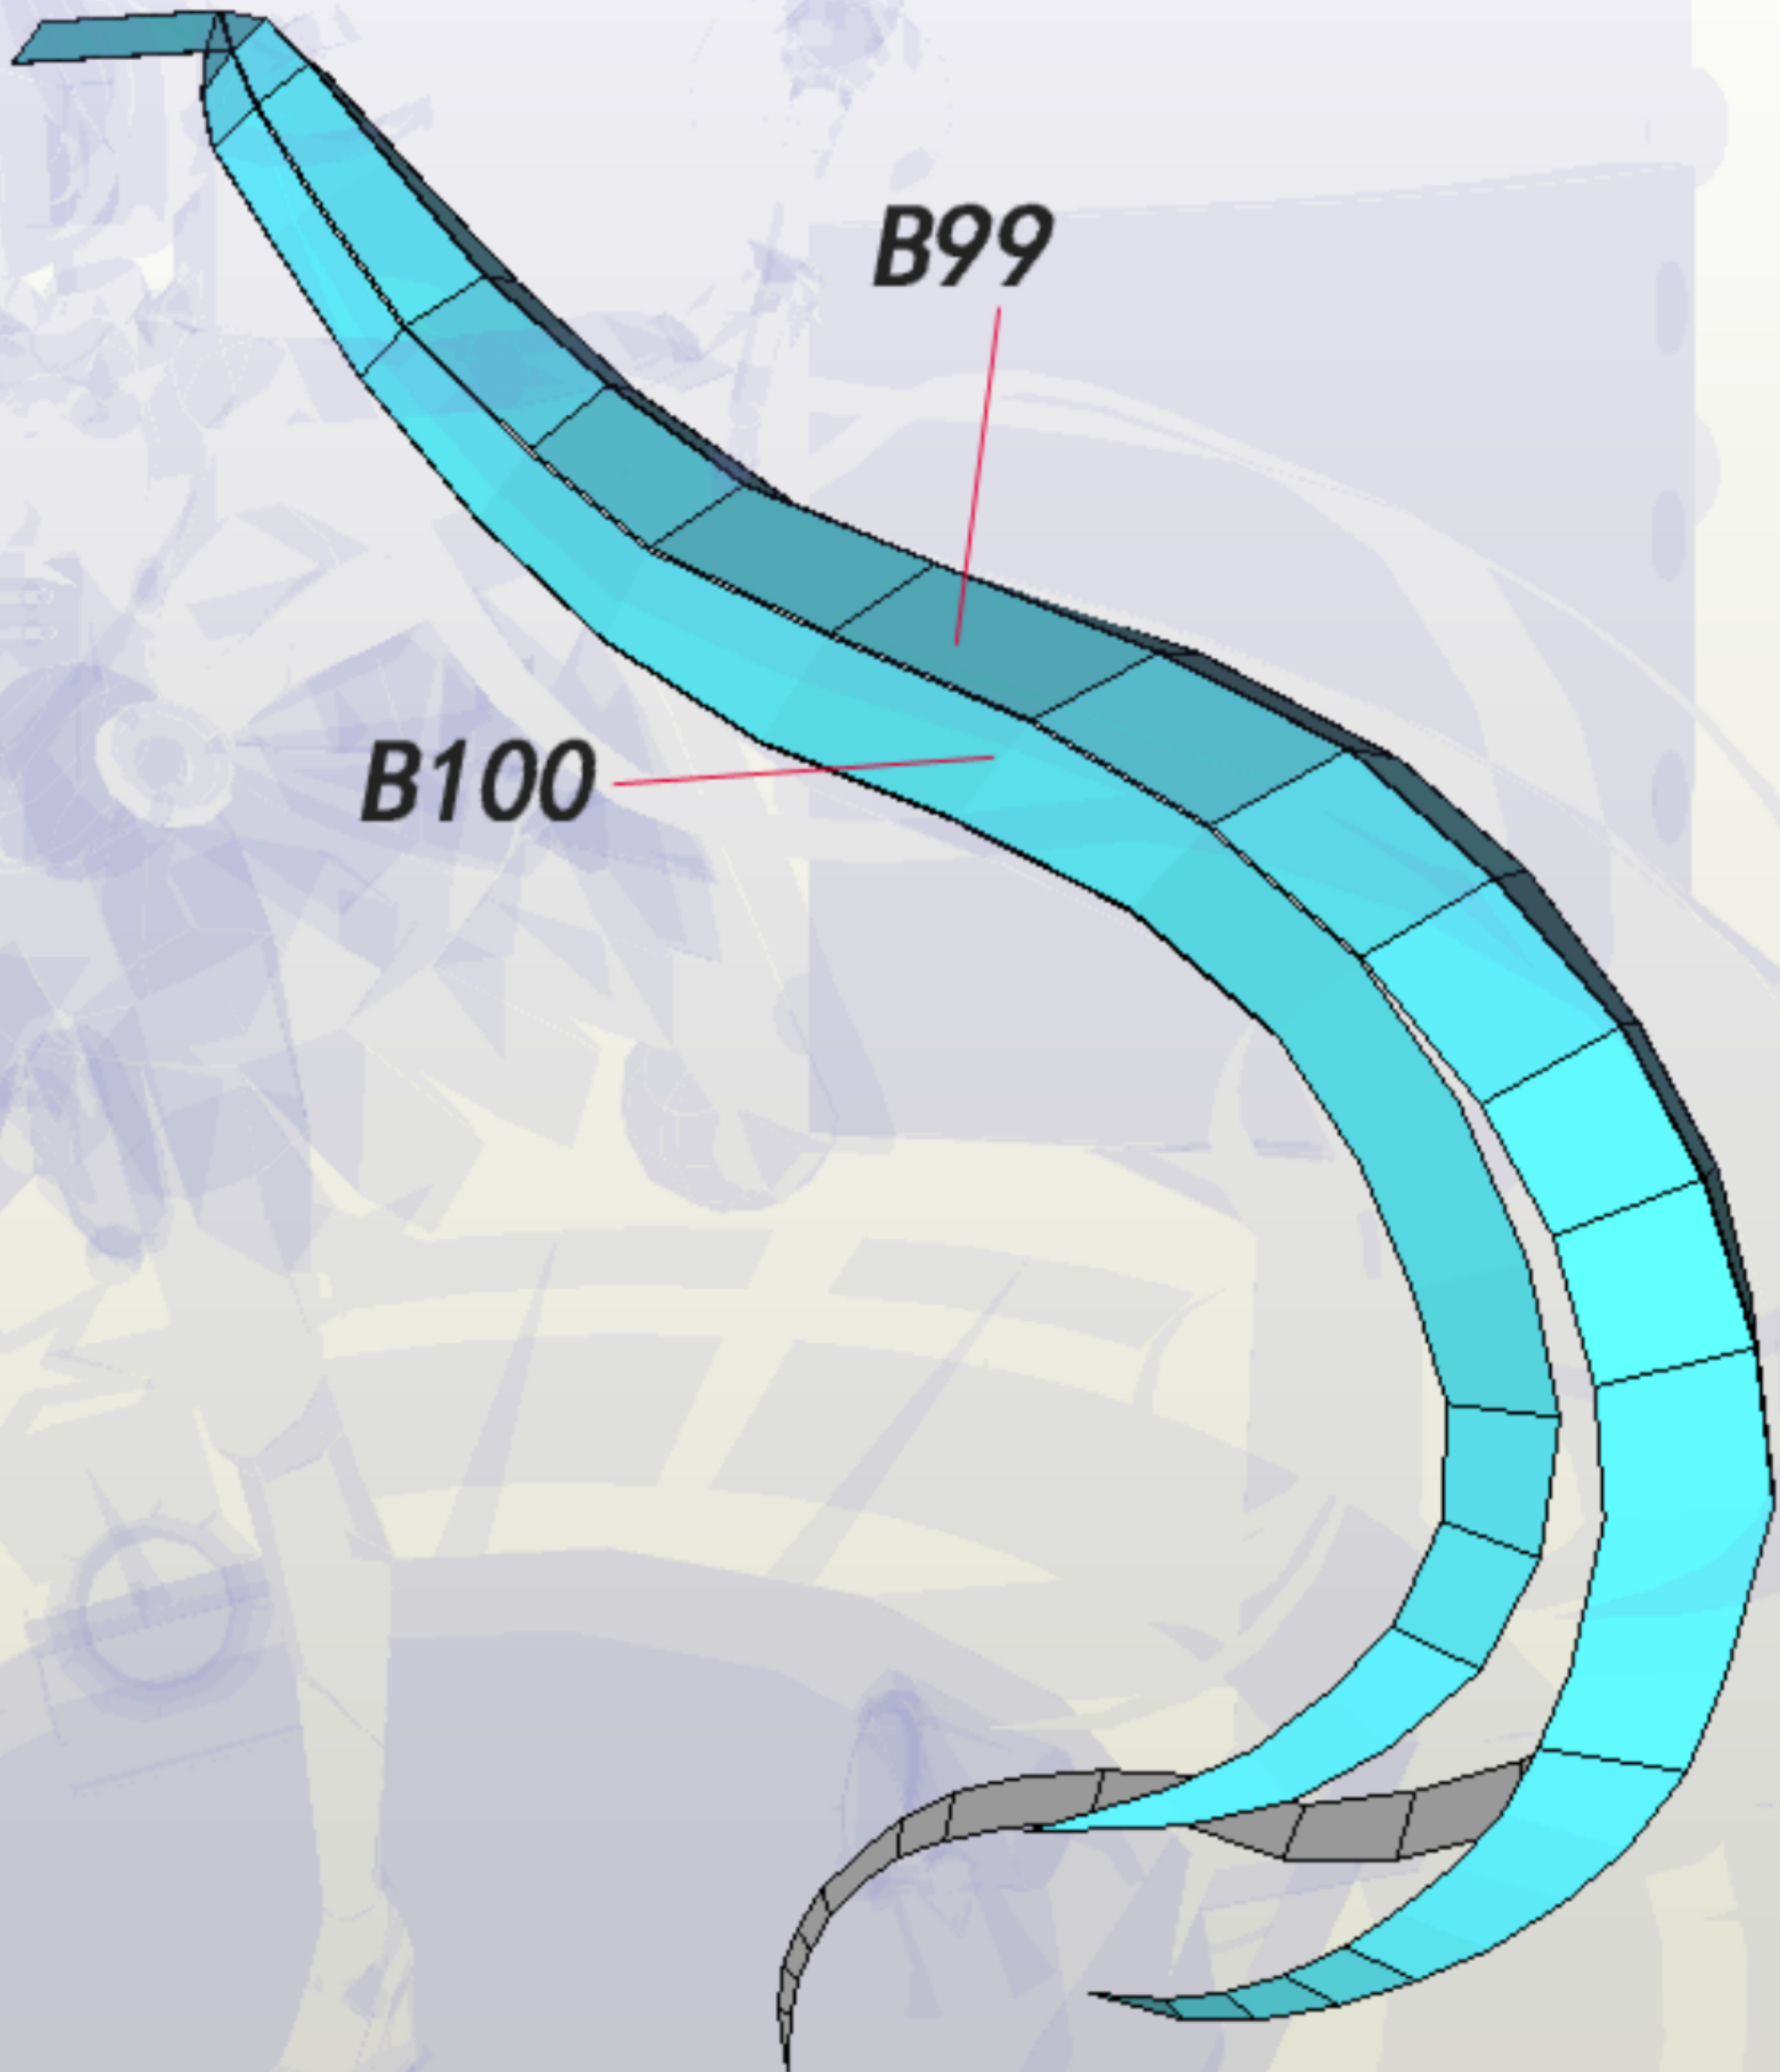


B99

B100

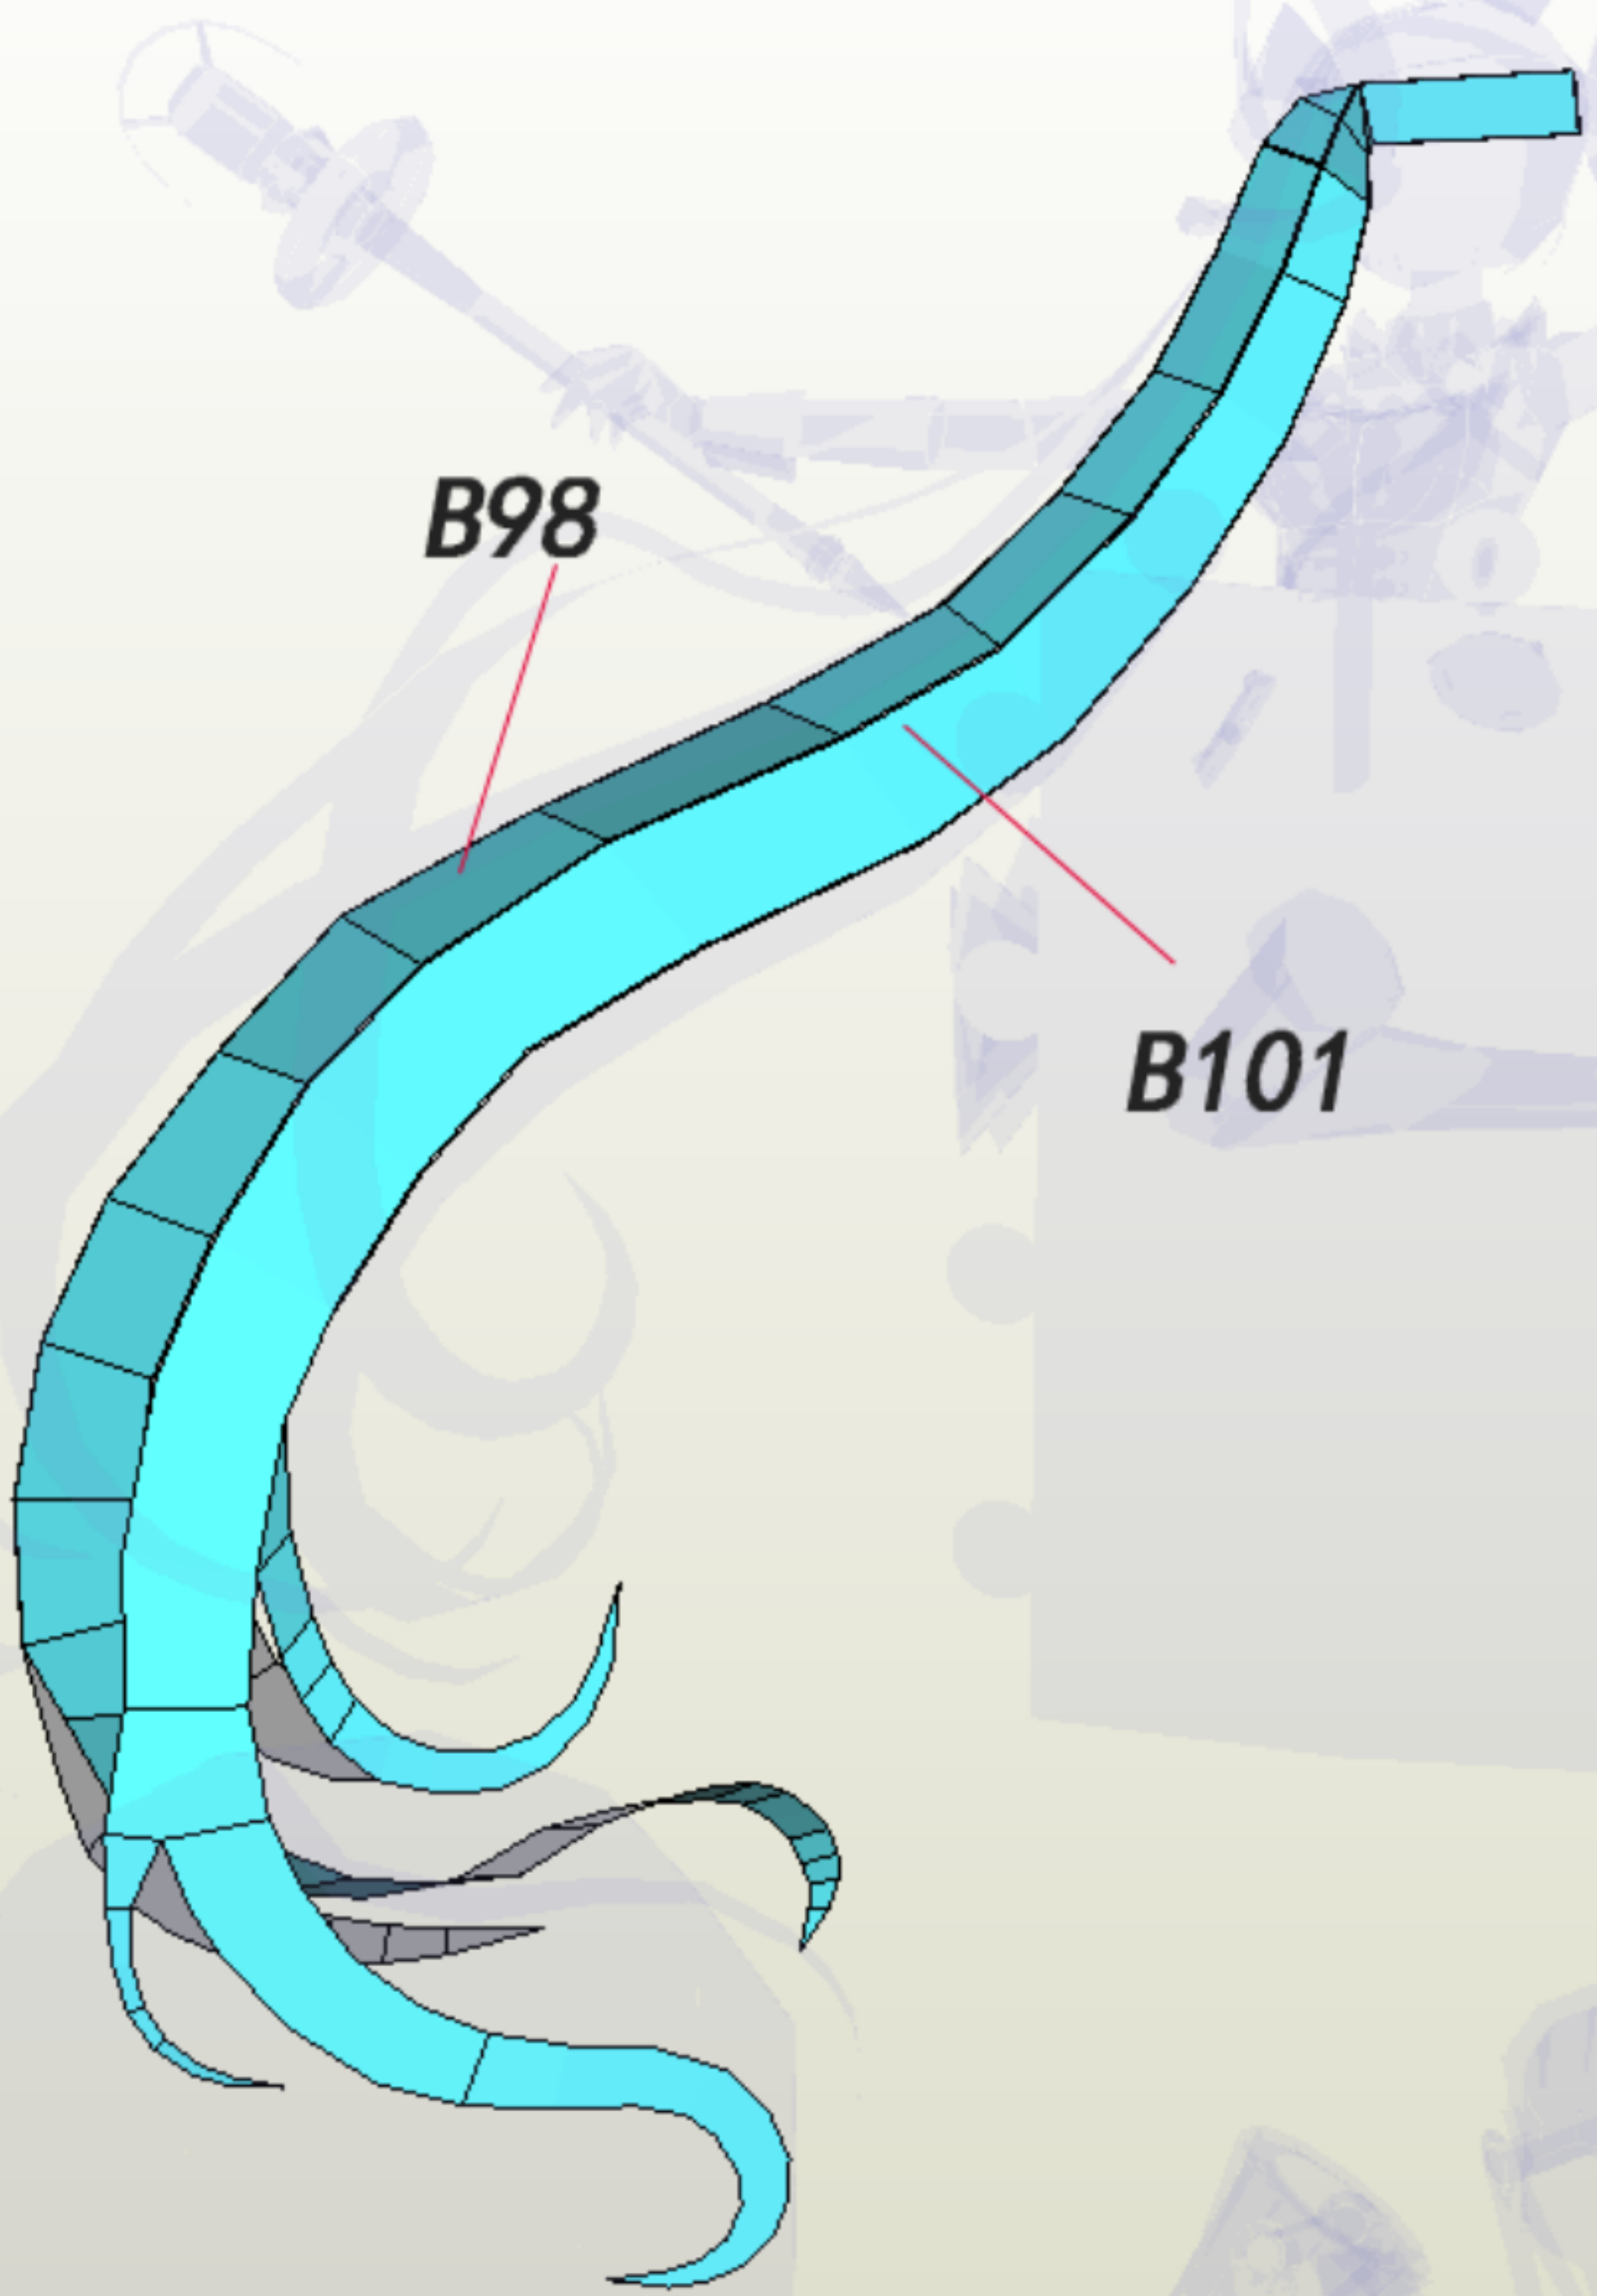

B98

B101

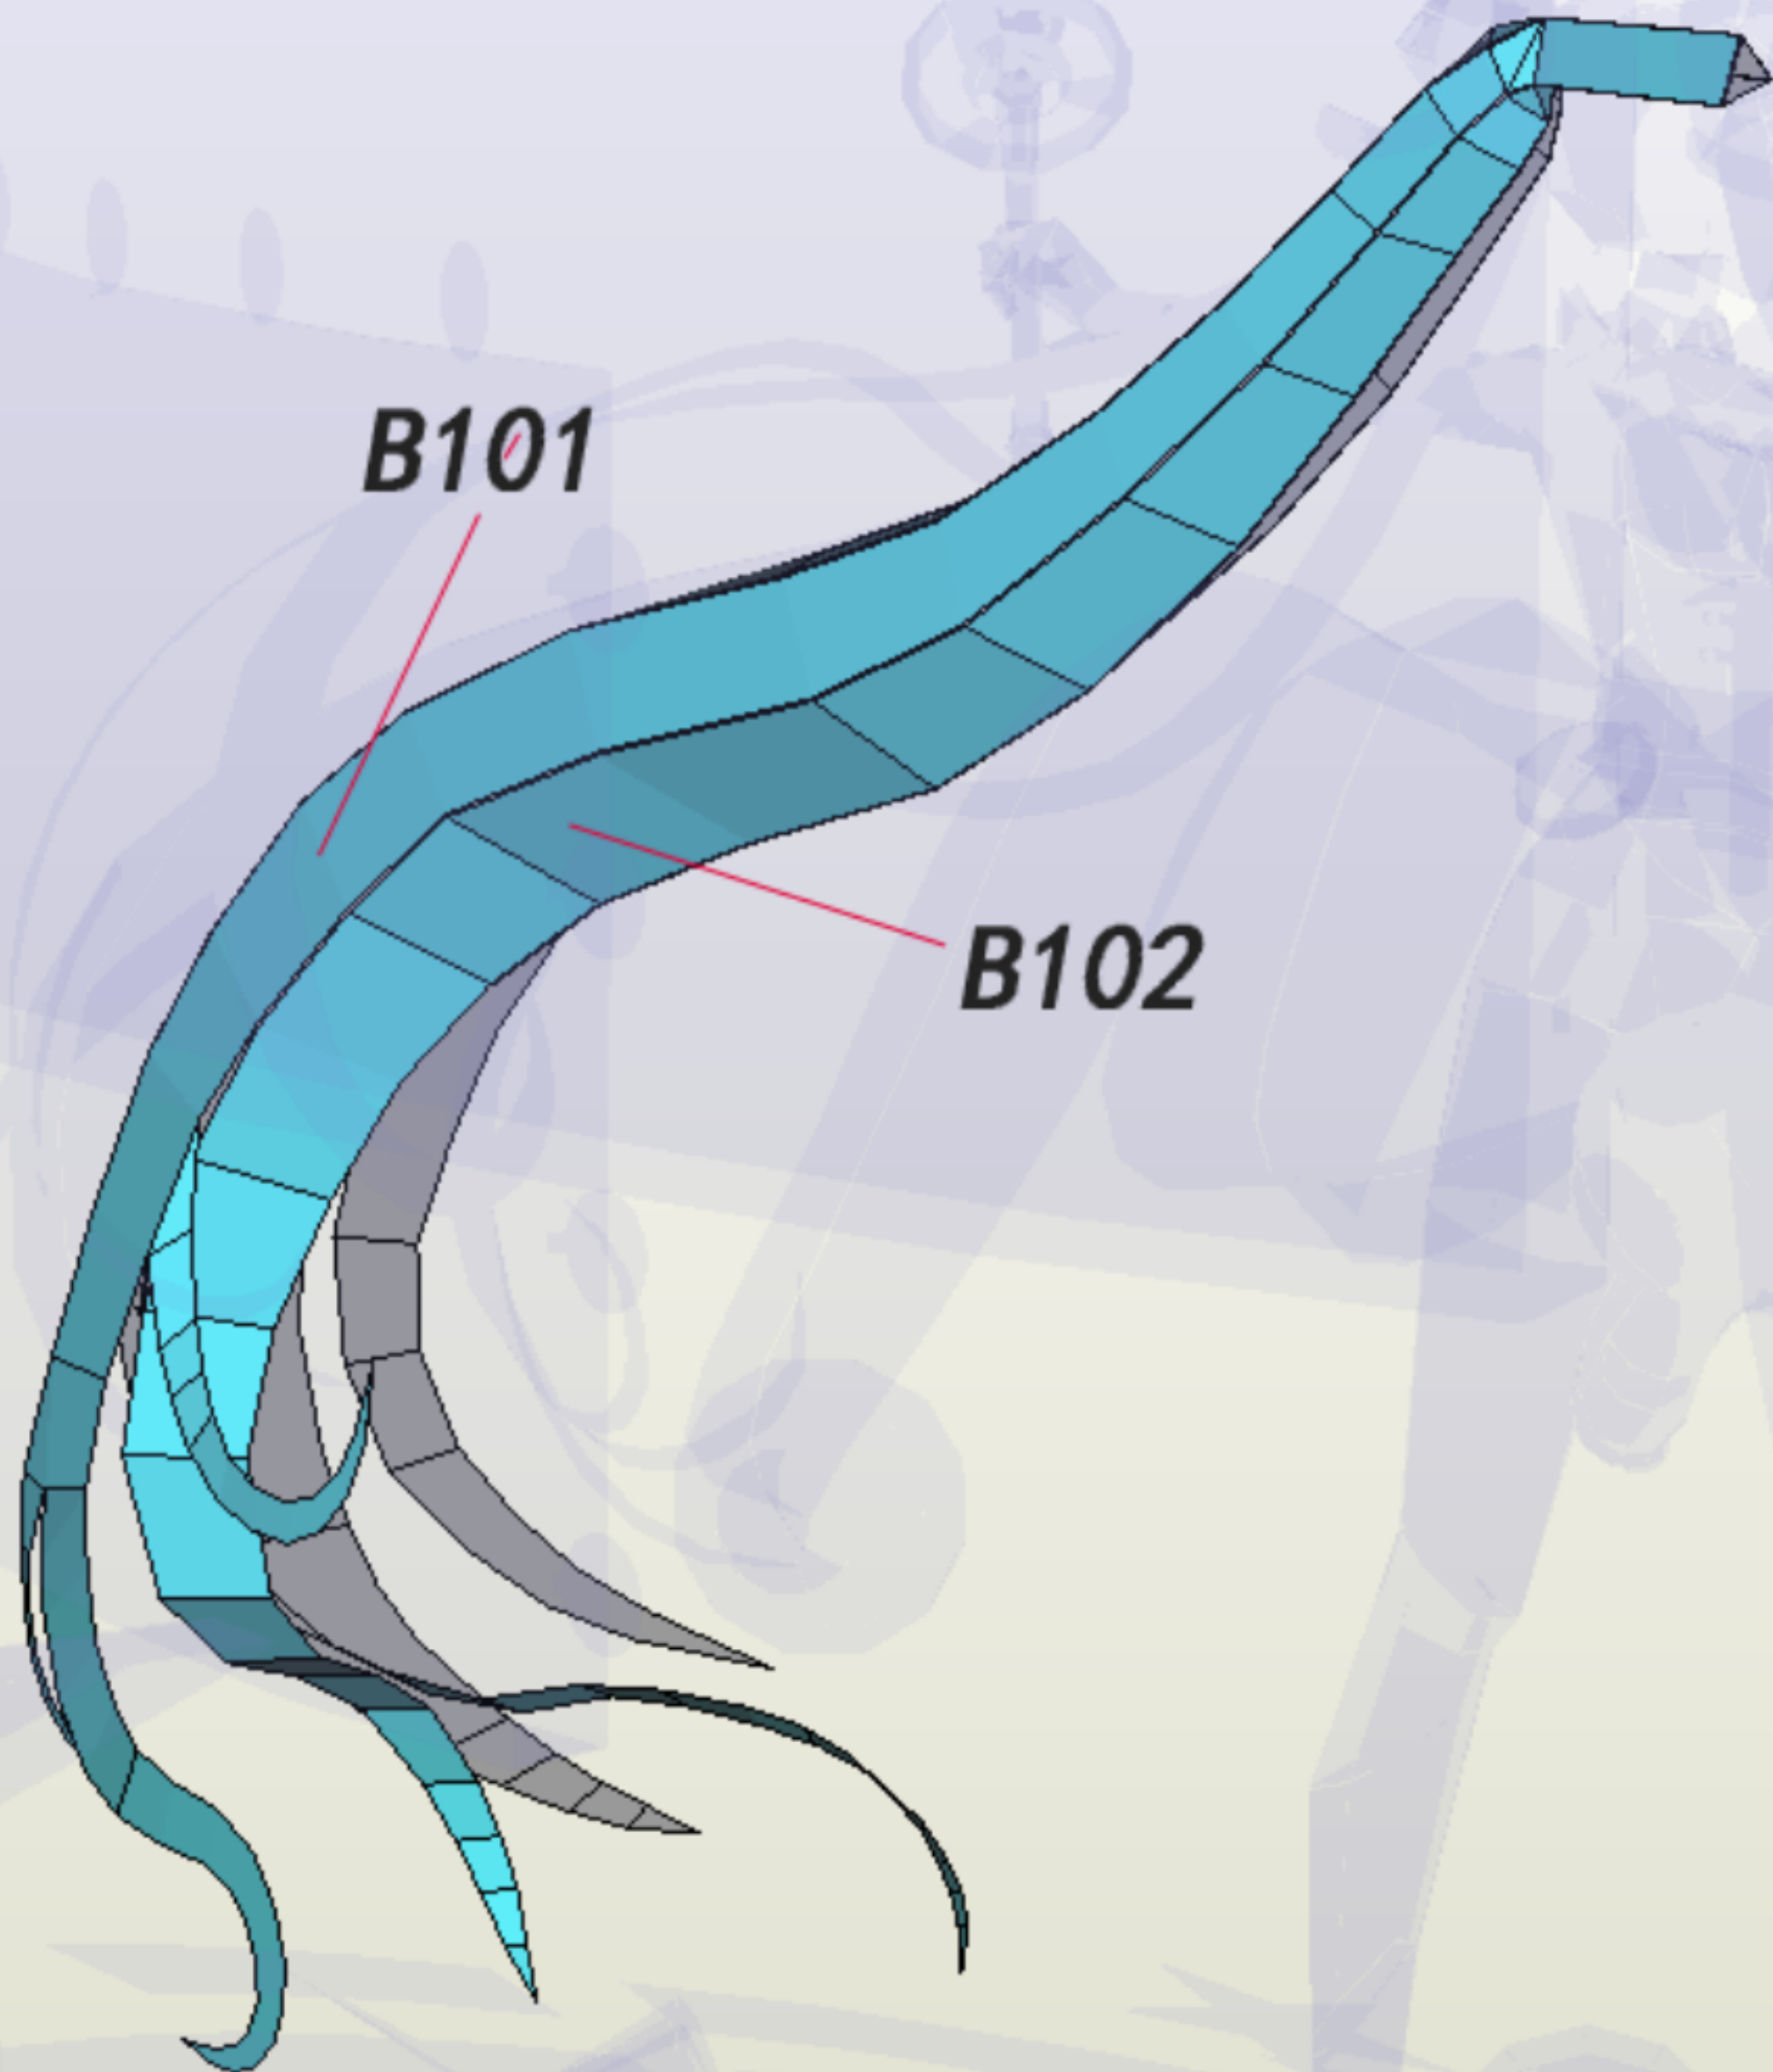



B101

B102

B102

B103

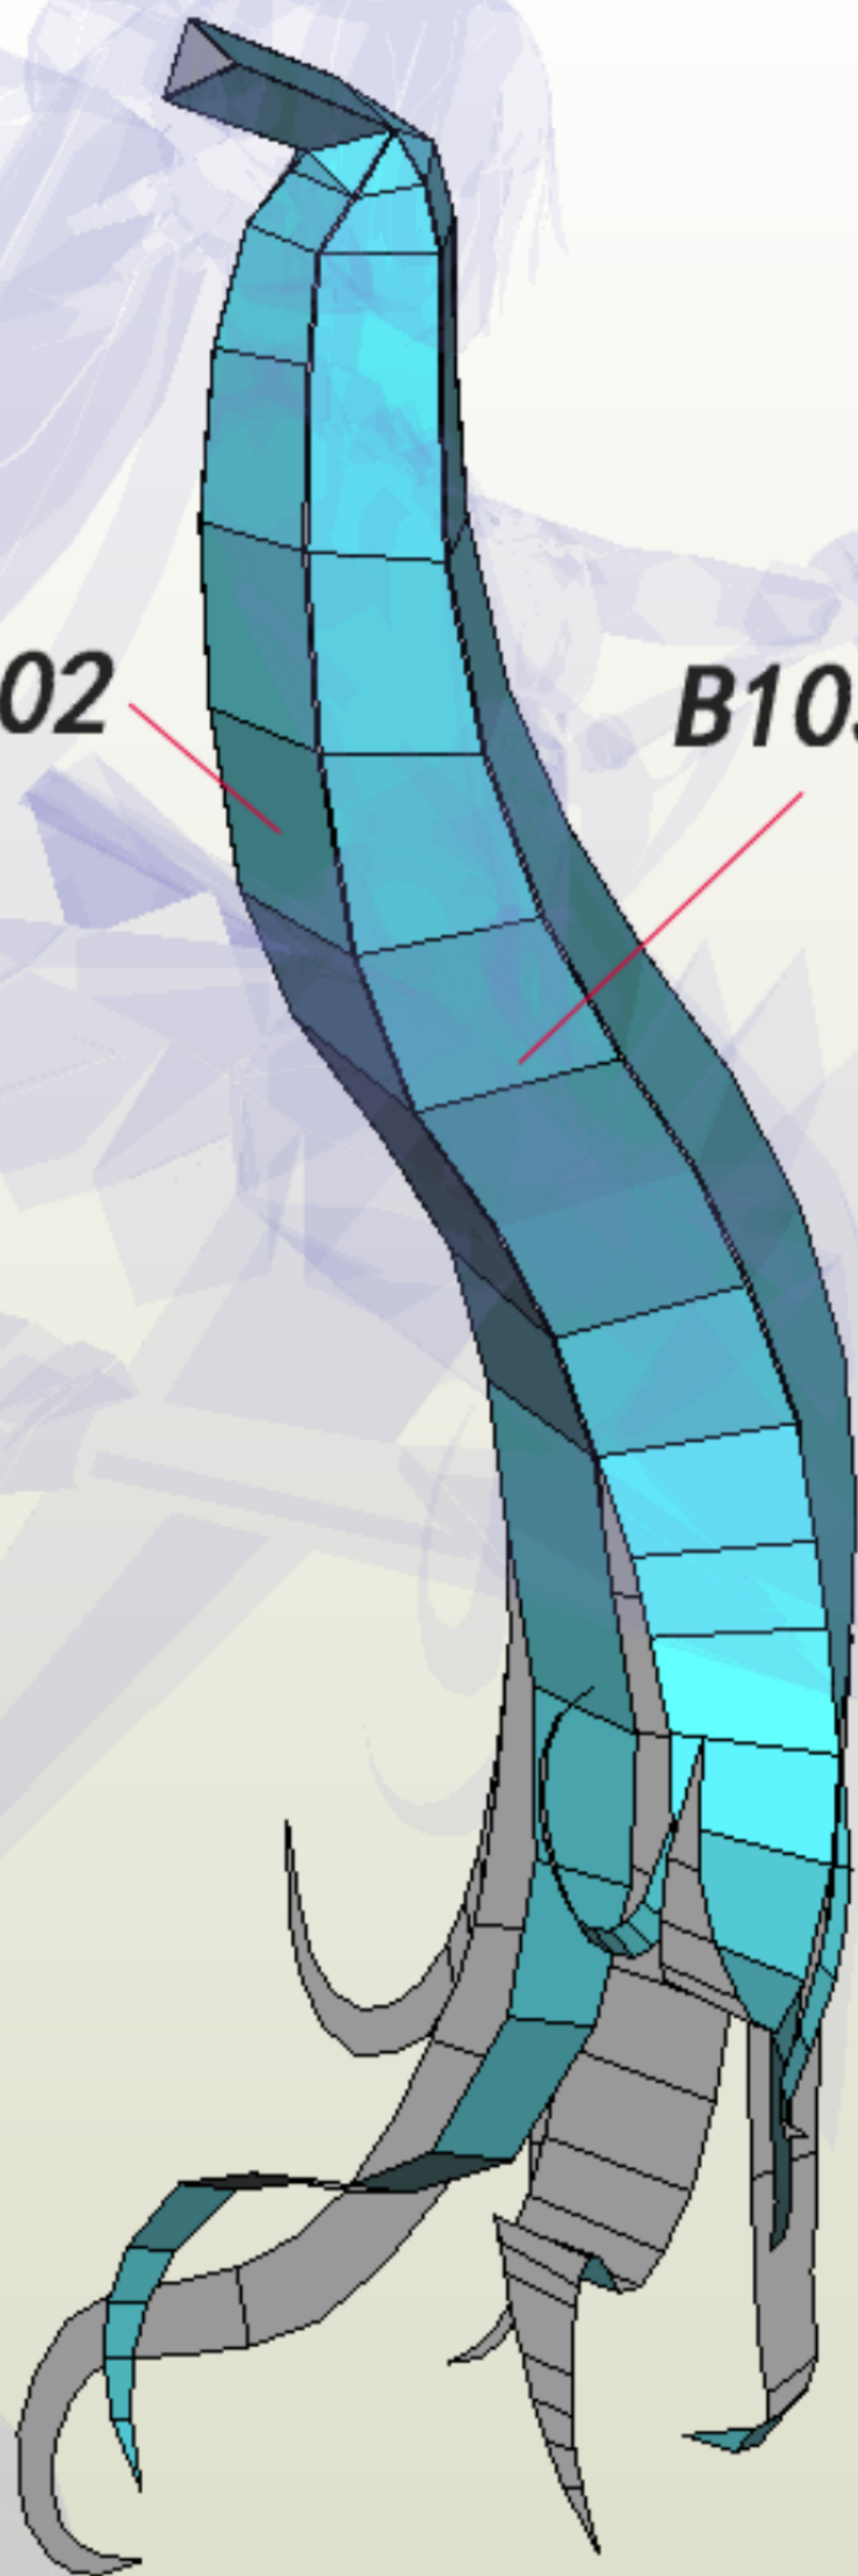

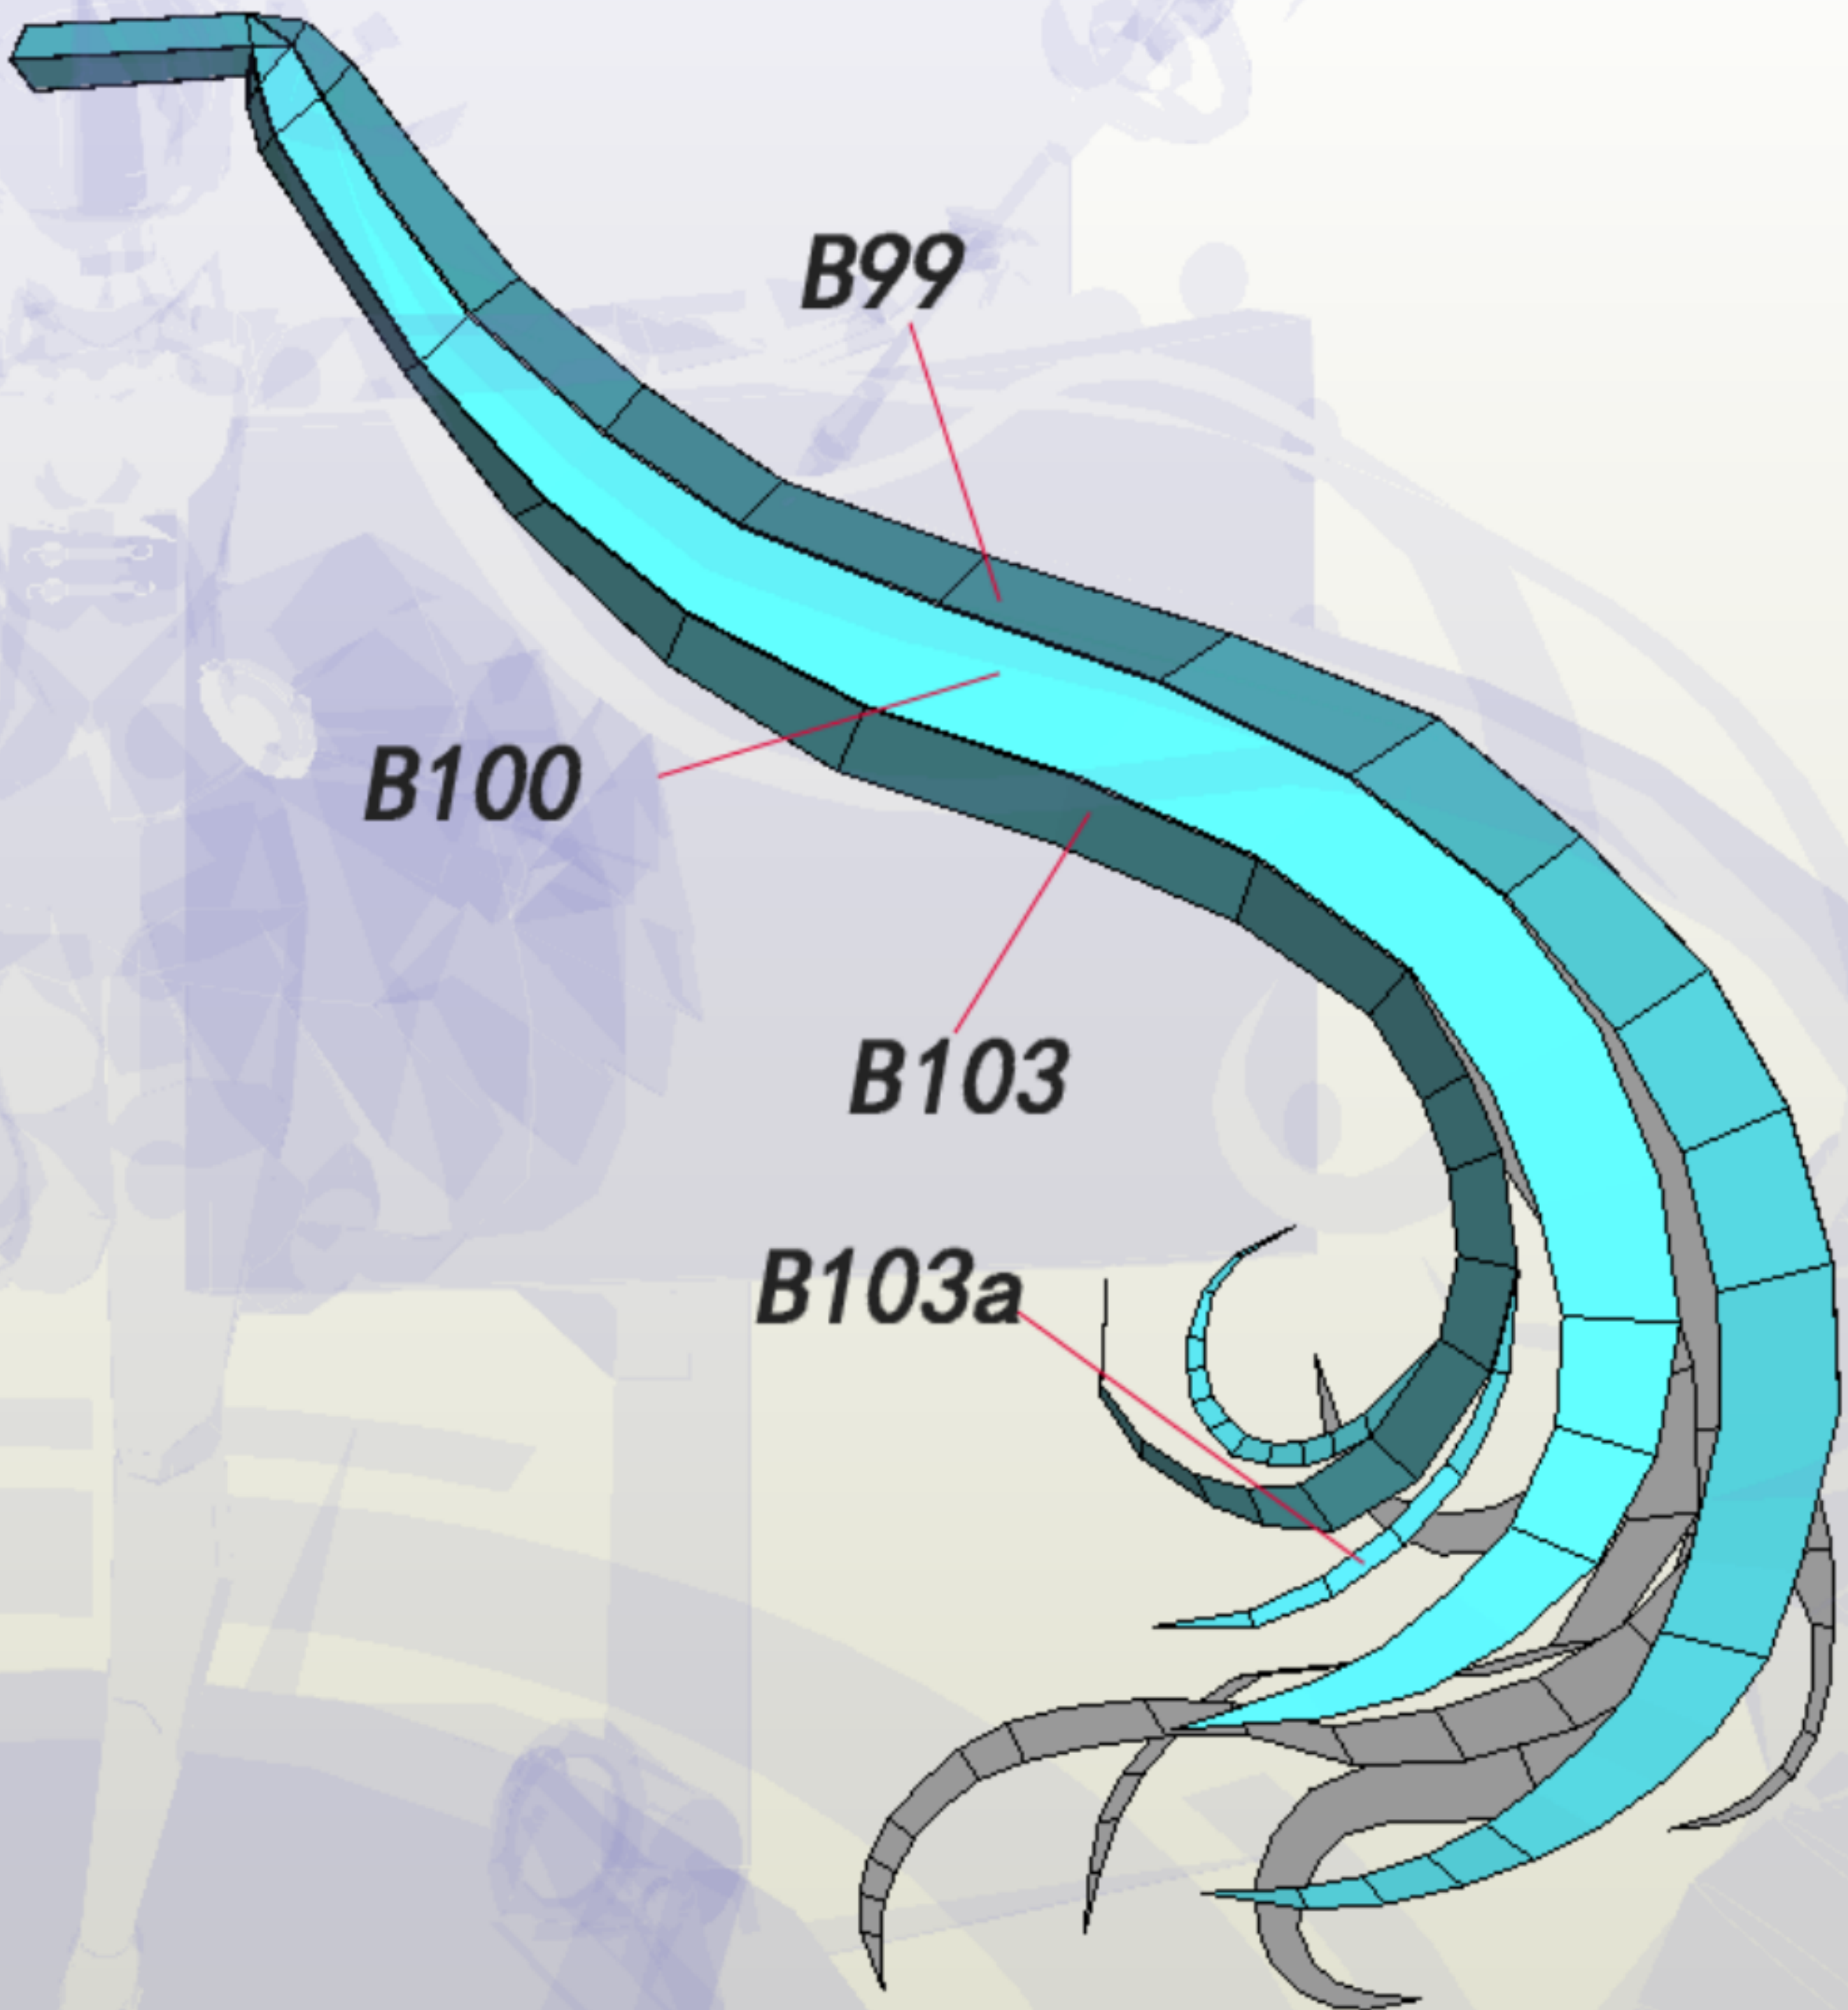


B99

B100

B103

B103a

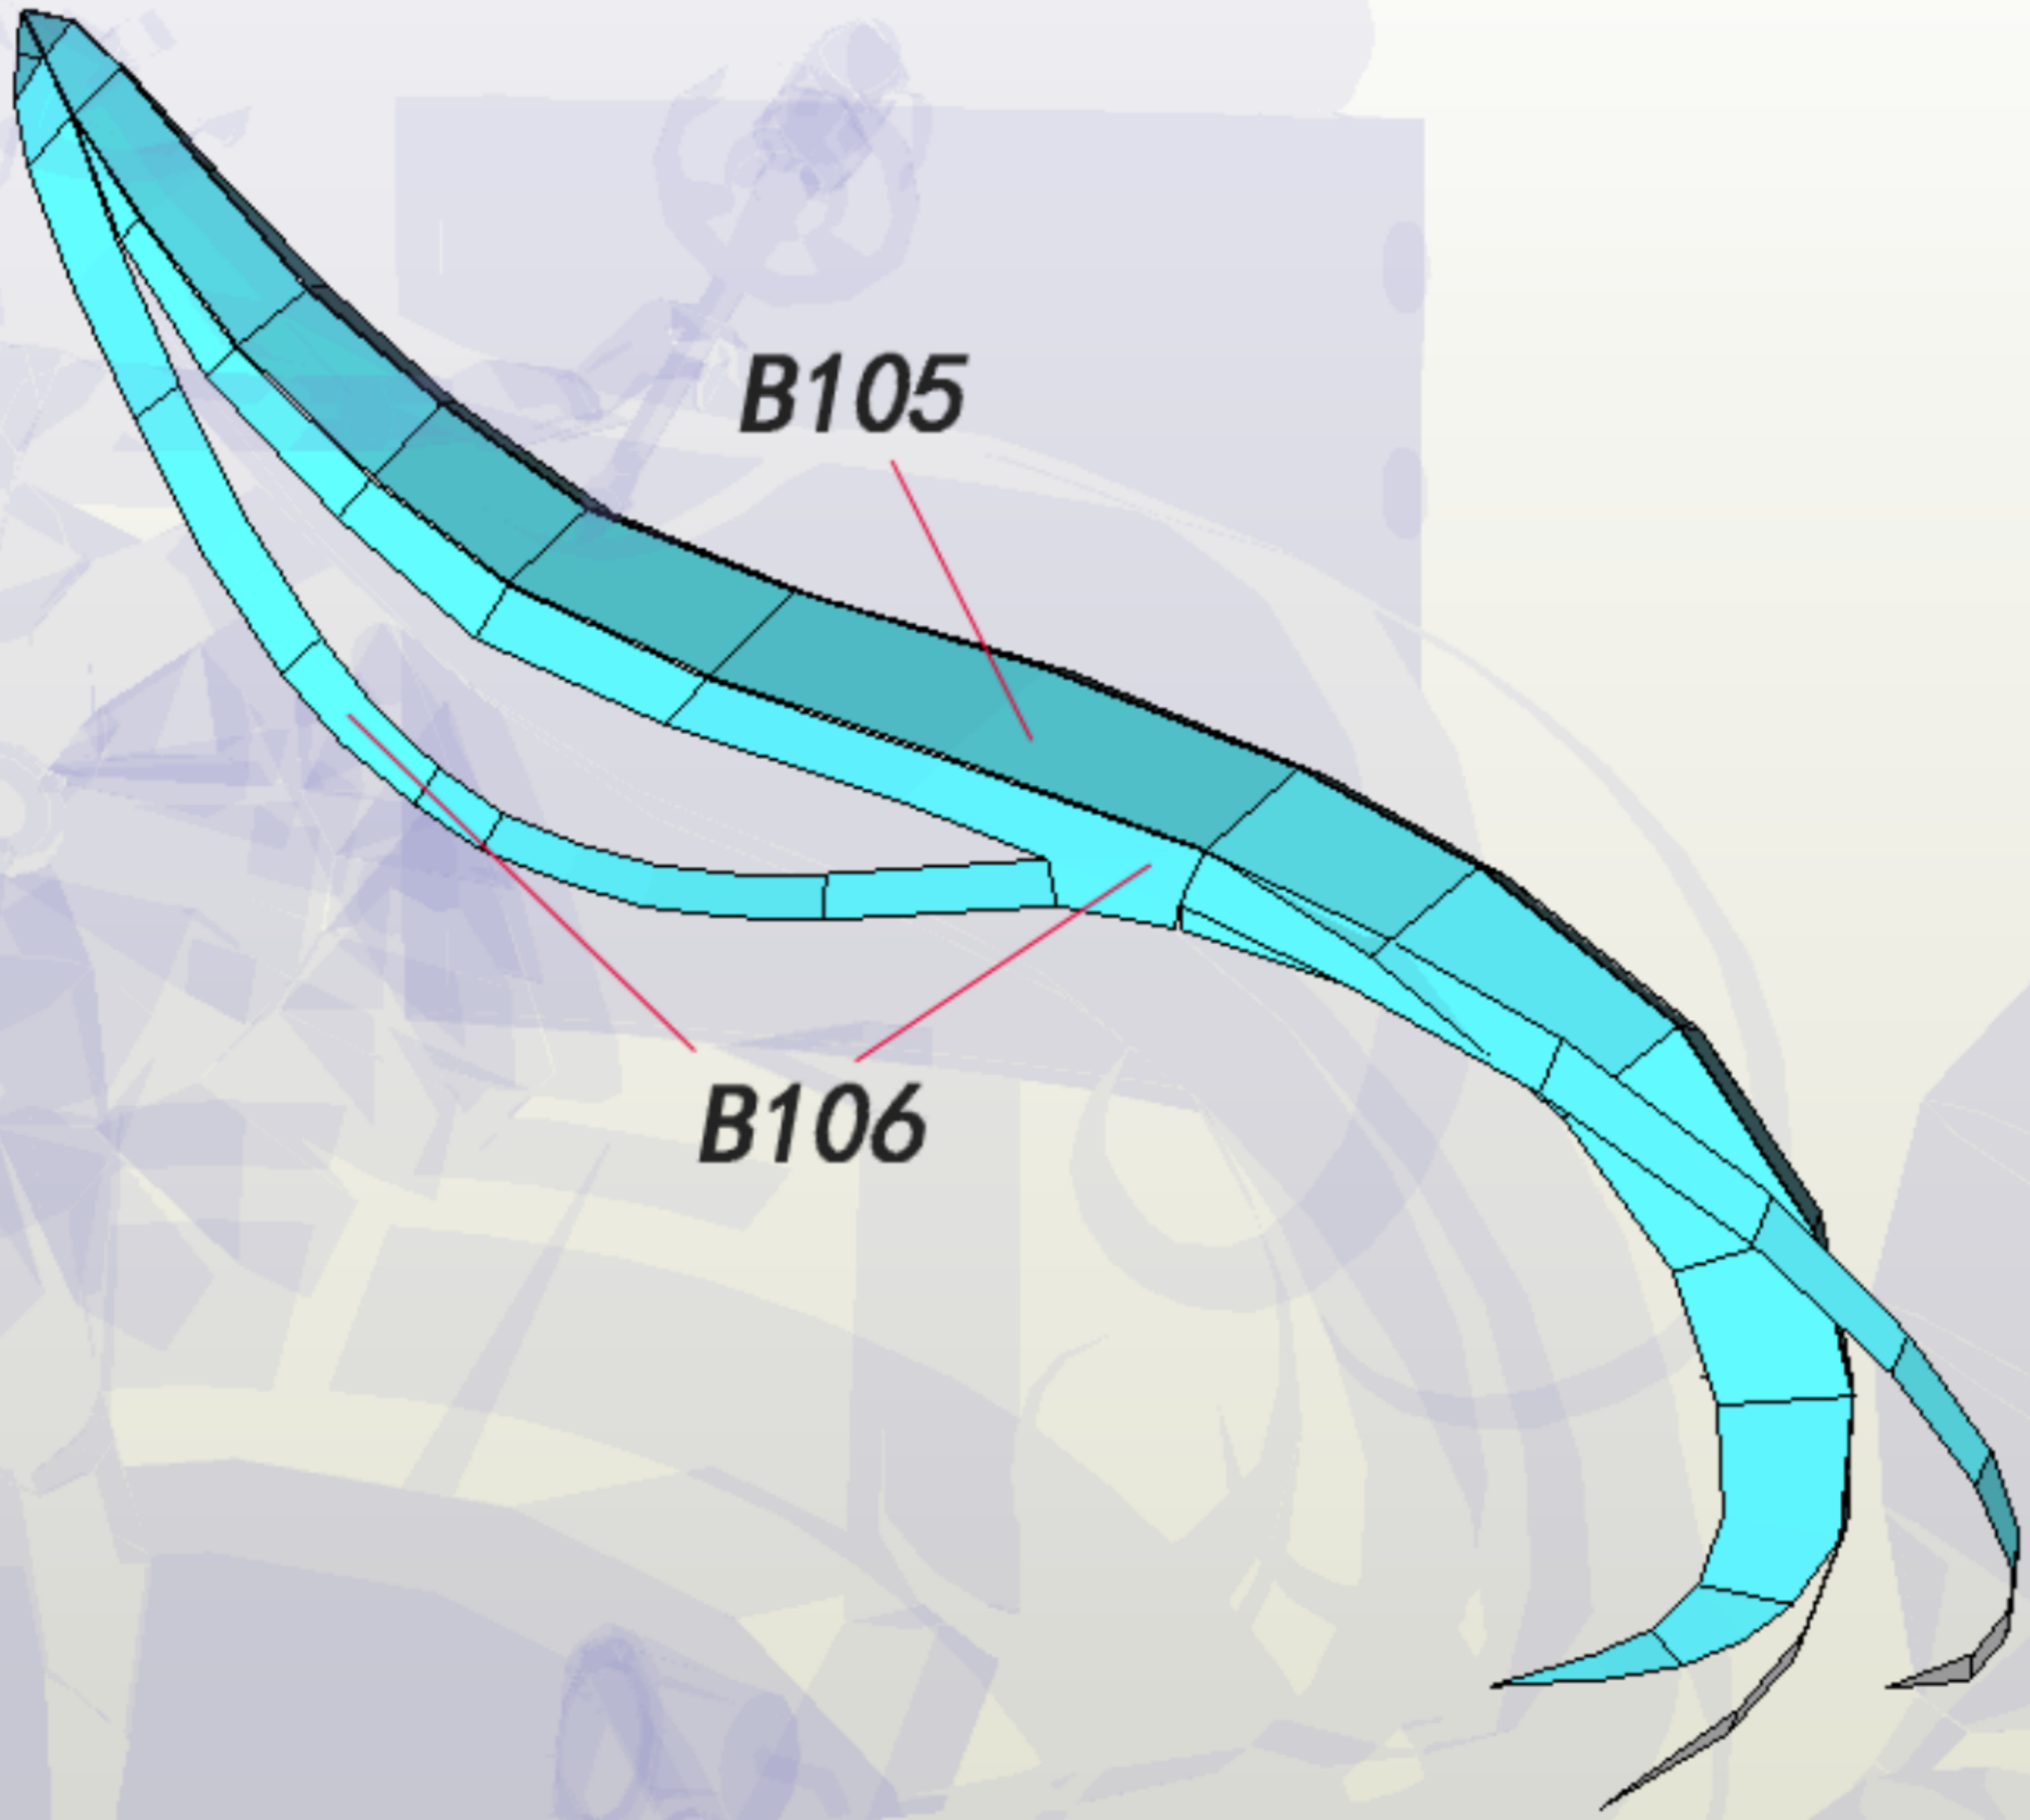

B105

B106


B105沾B99上面
B104沾B98上面

B105

B99

B106

B100

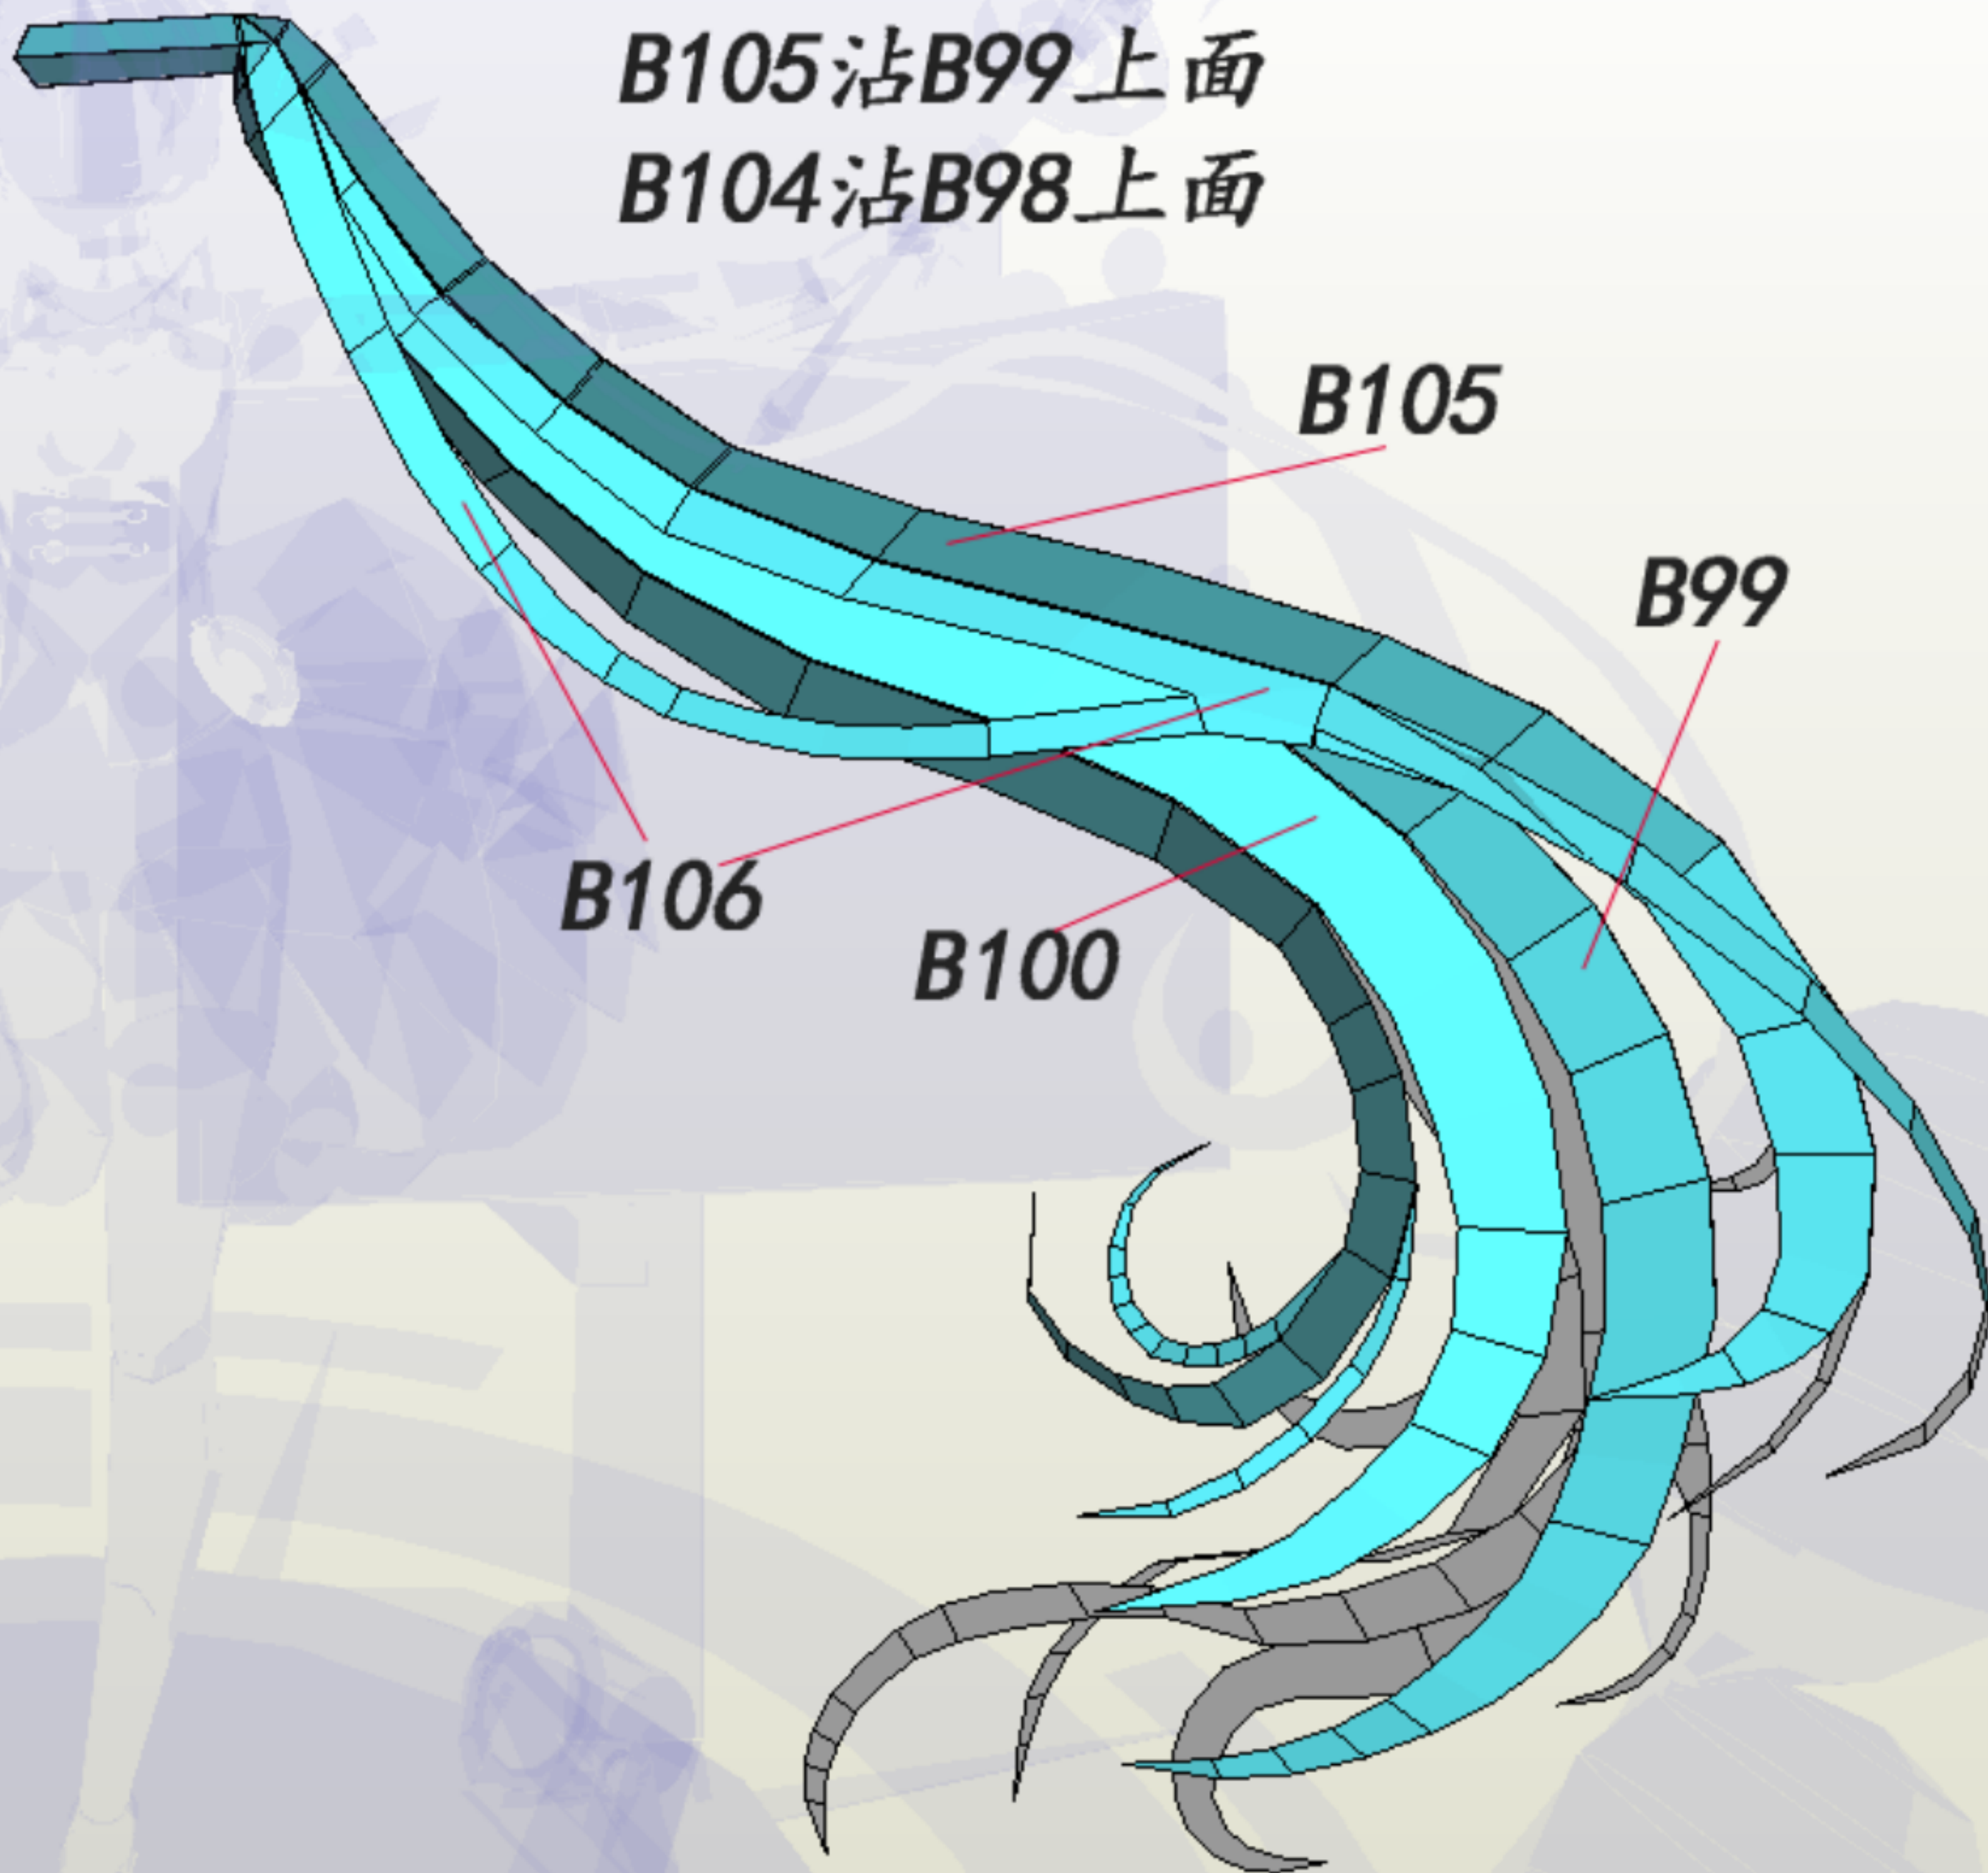






黑球底部
划一刀裙摆
插进去即可

B63a

B64a

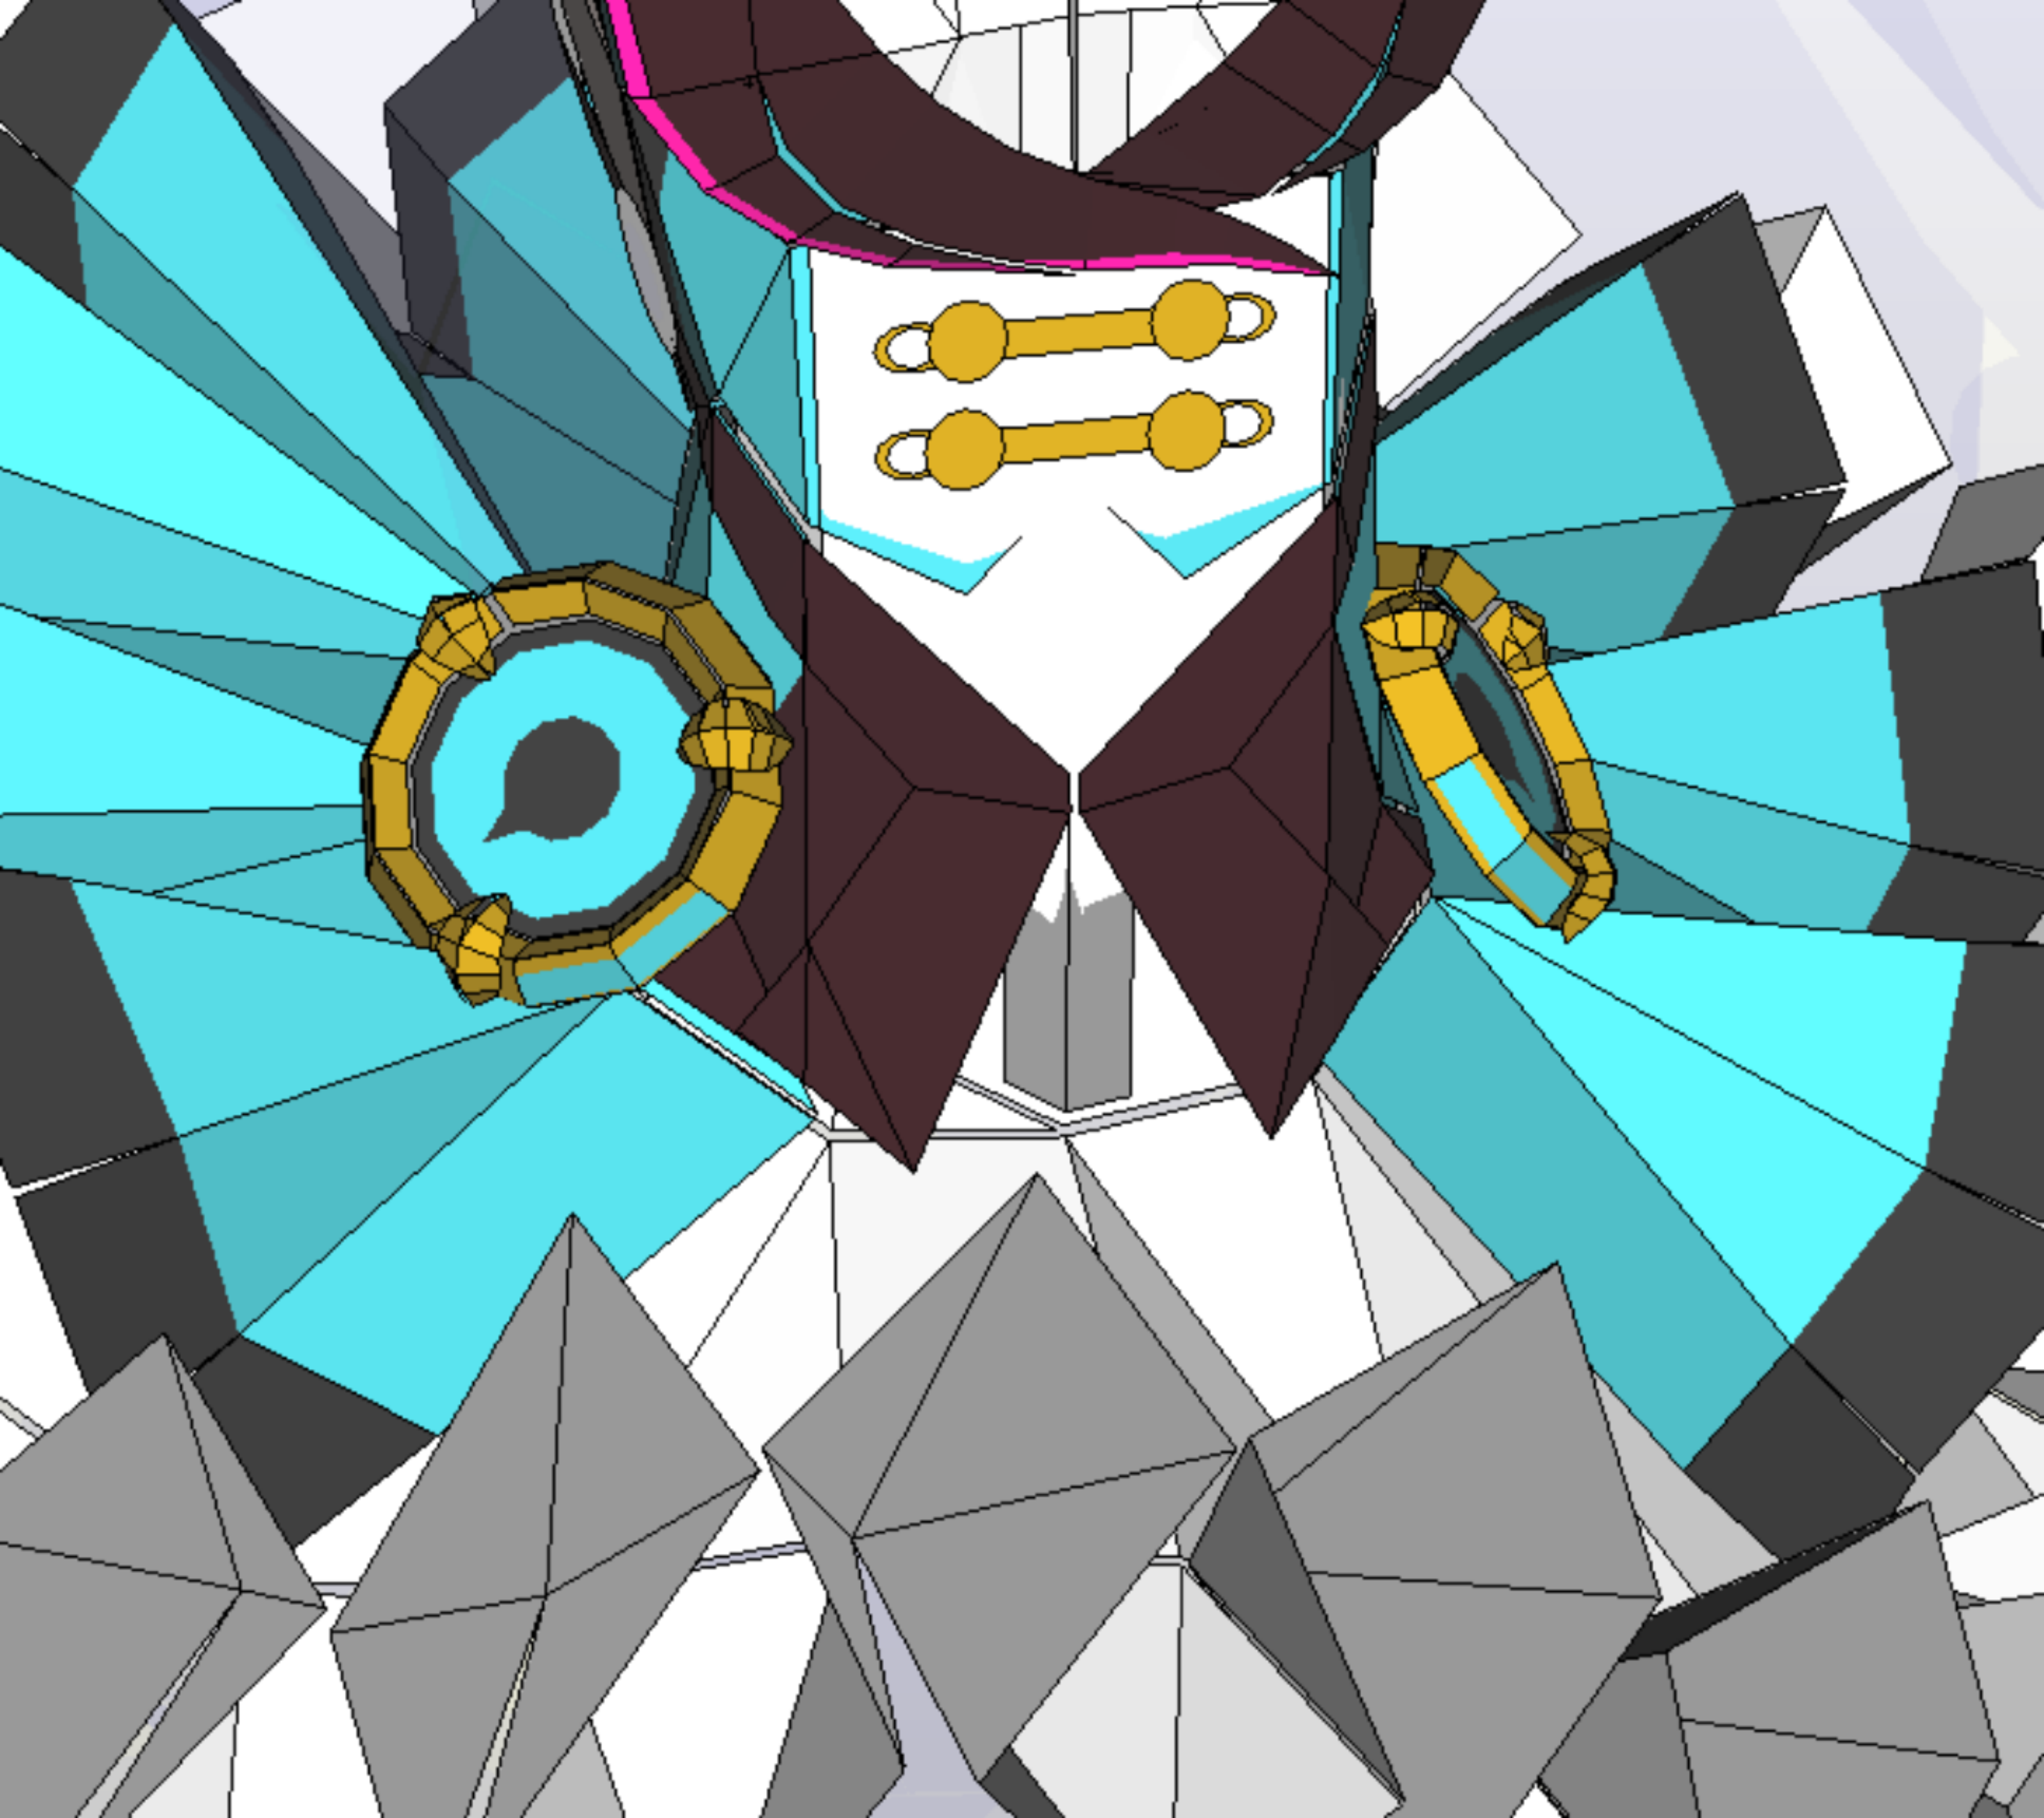

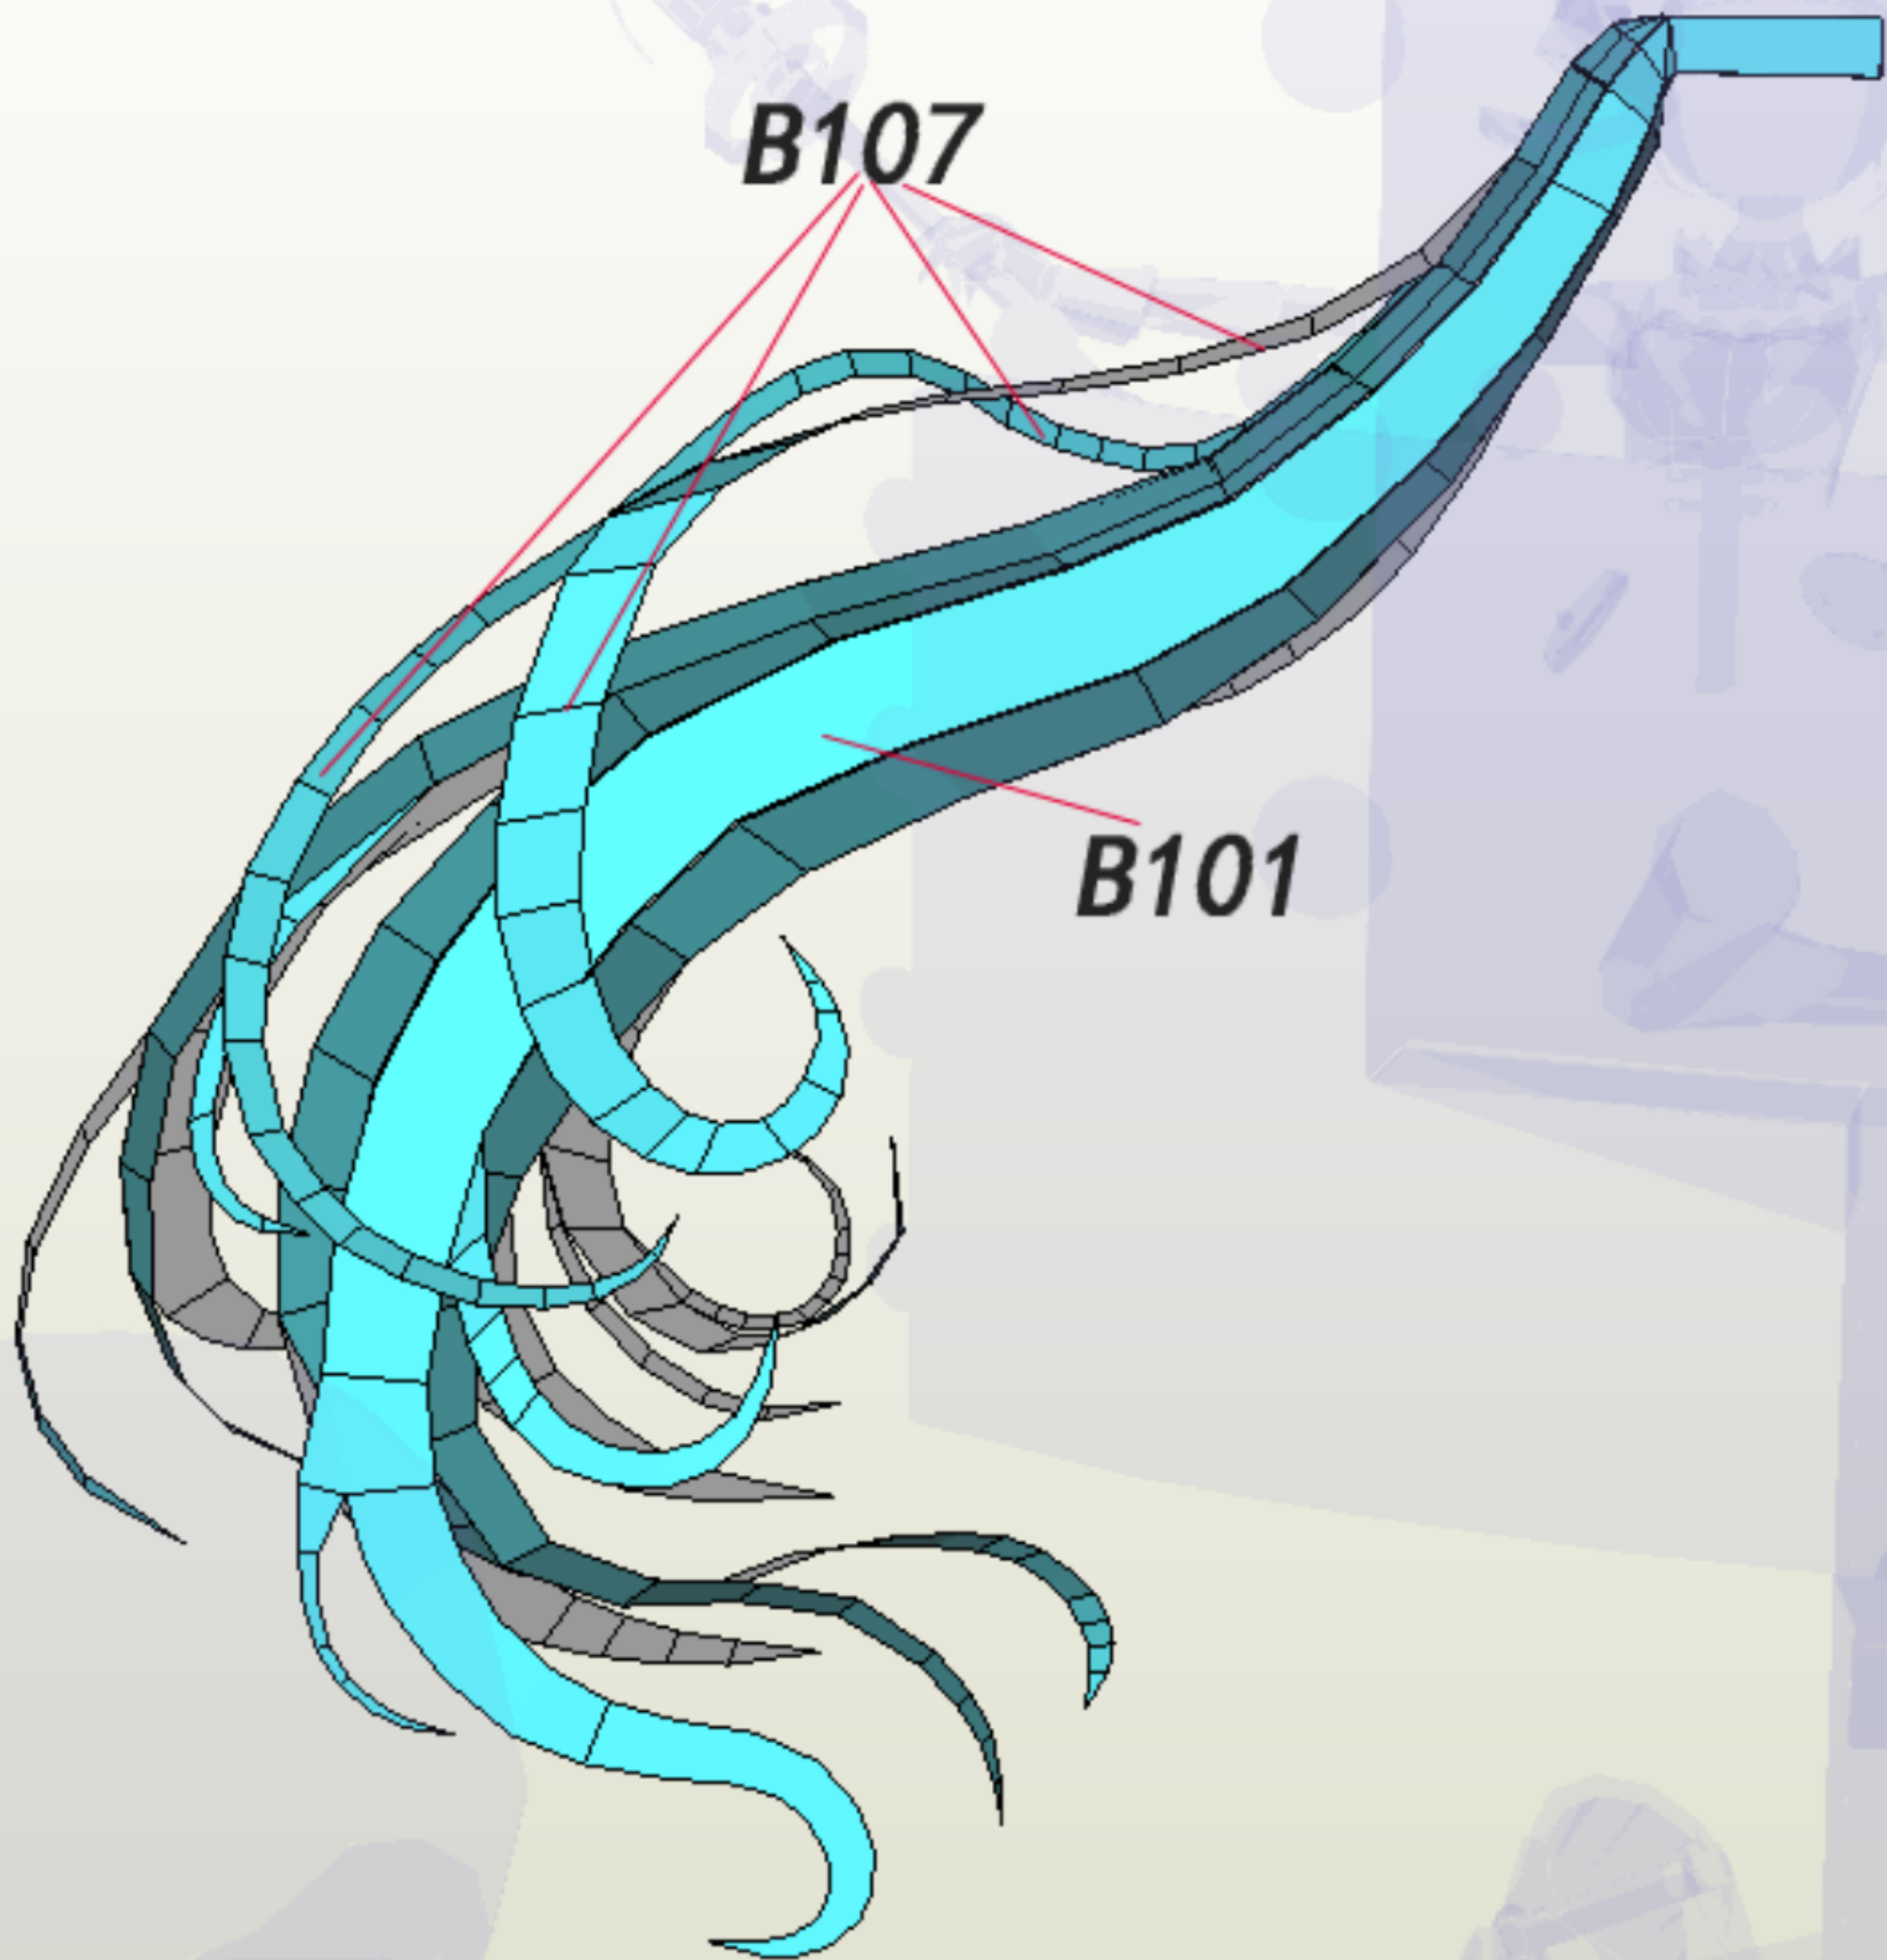

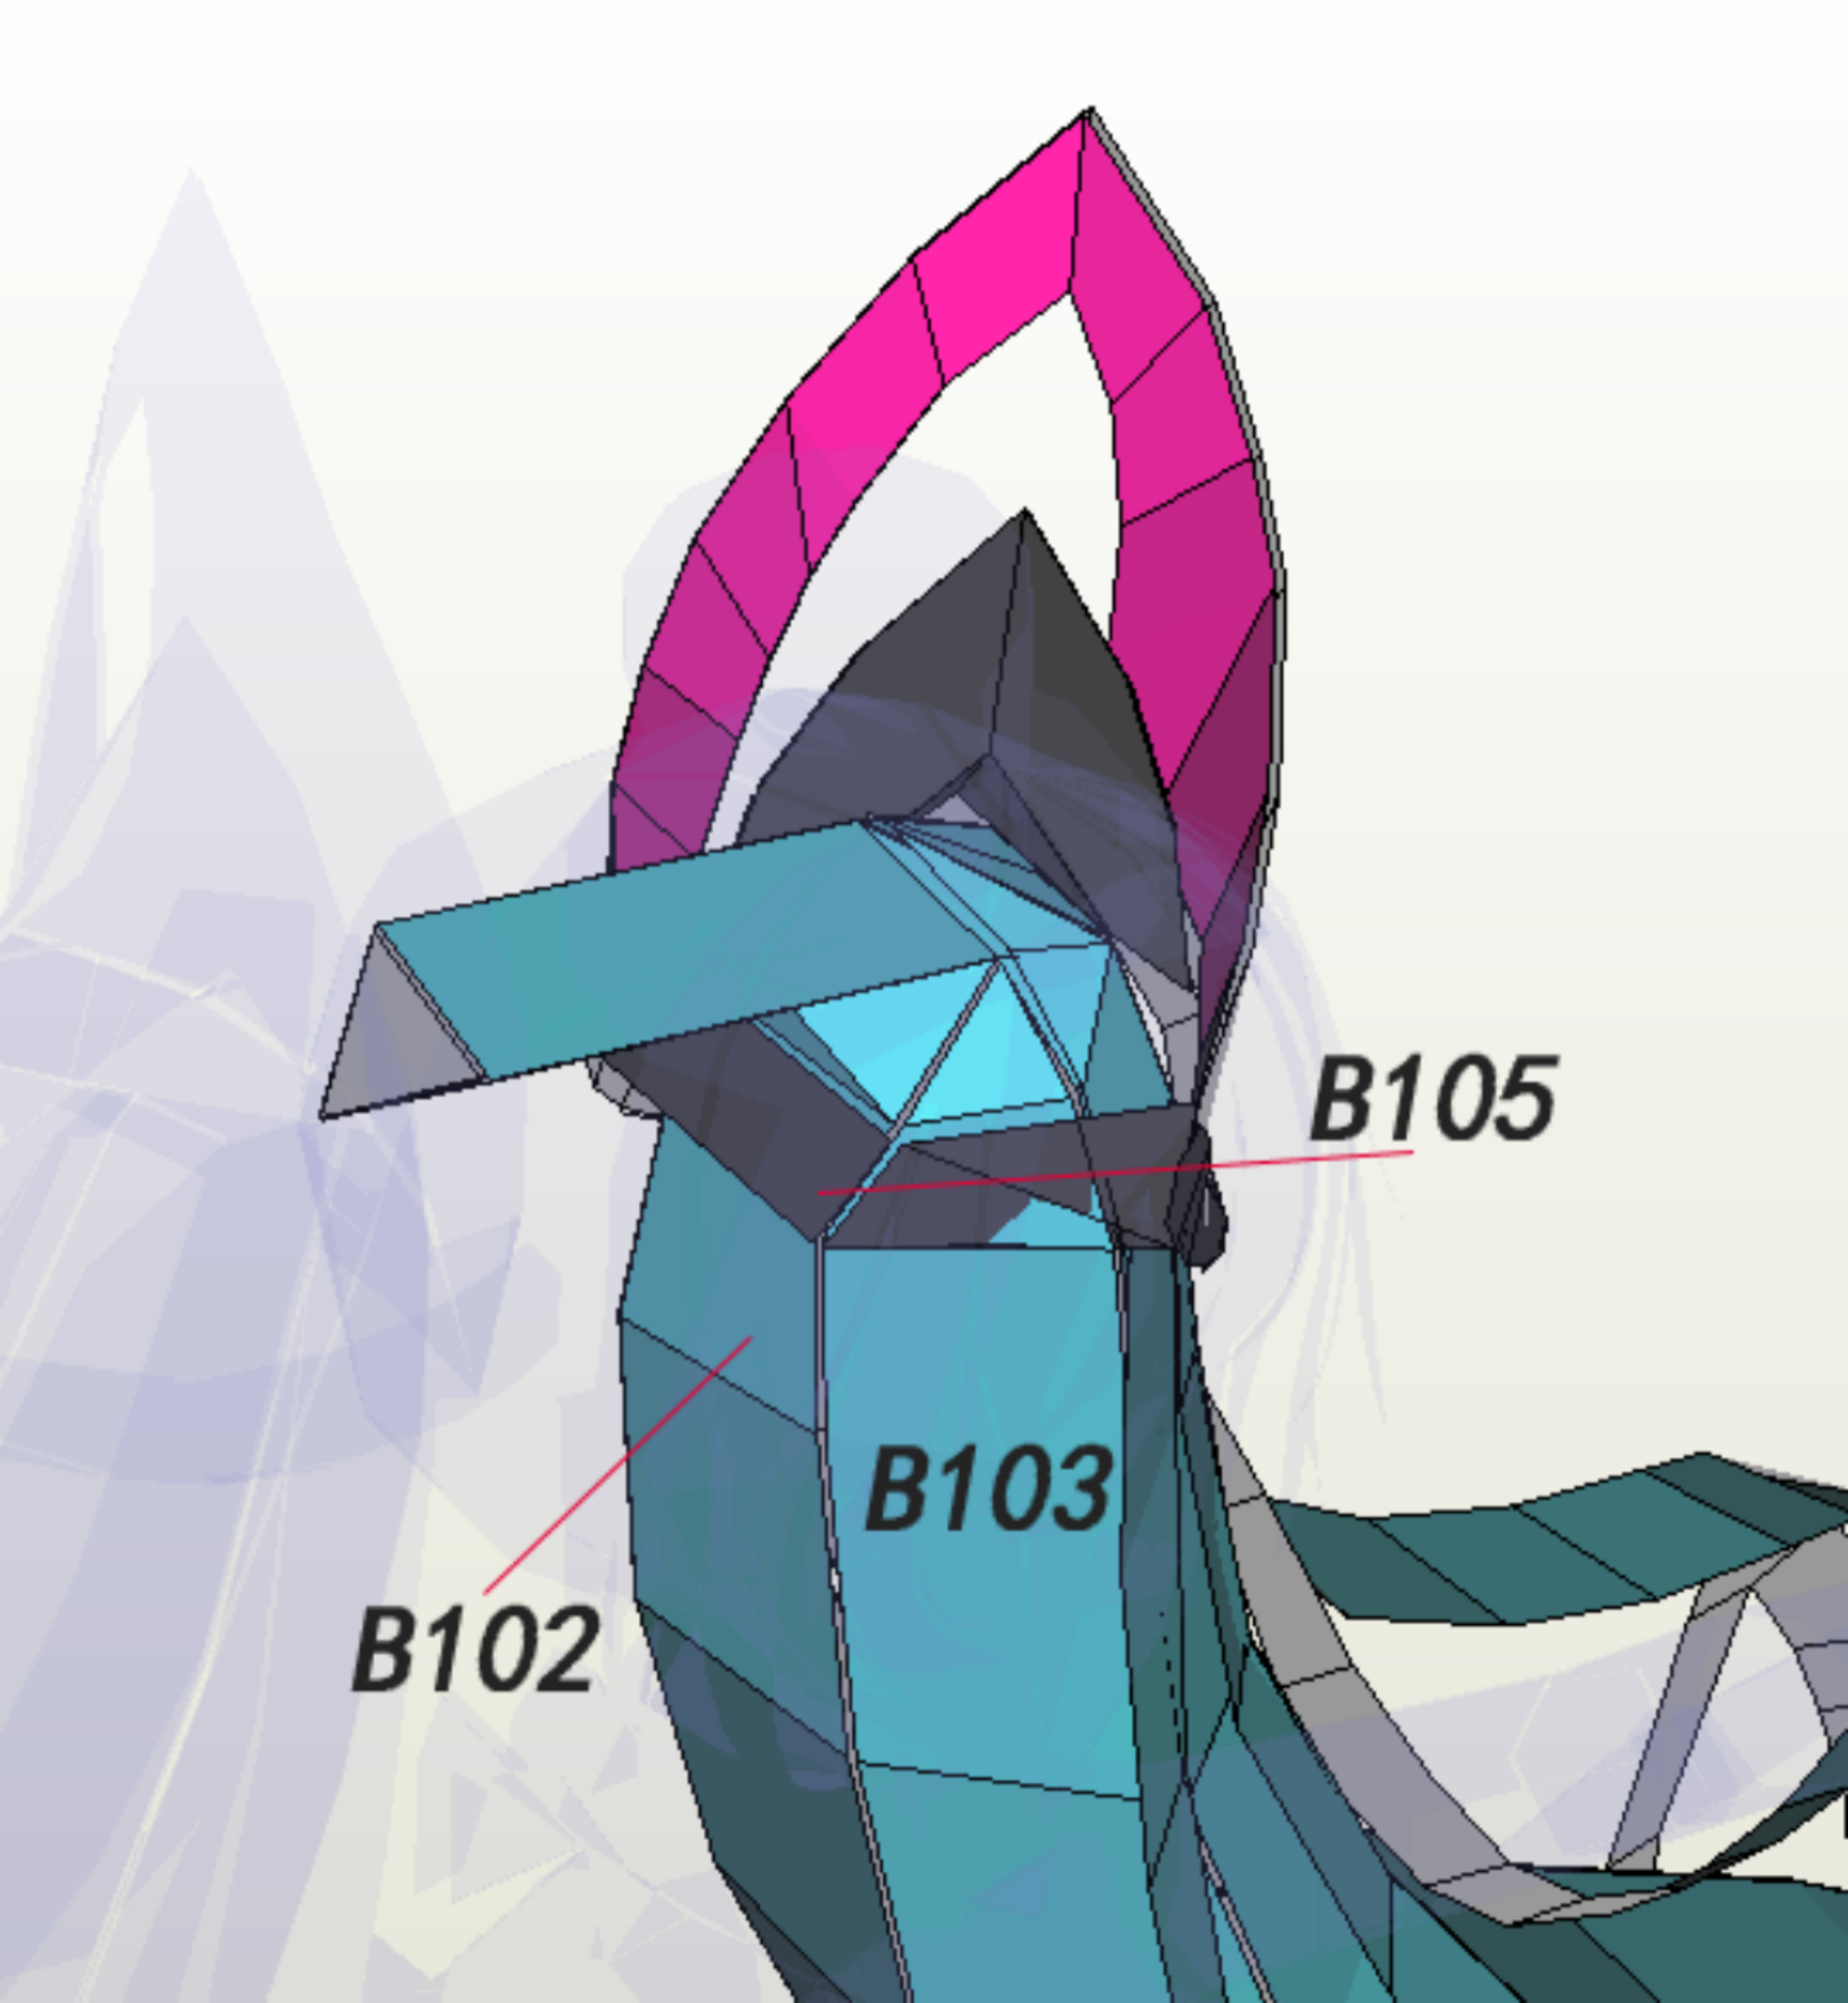

B102

B103


B105

B105a

B105

b104


B107

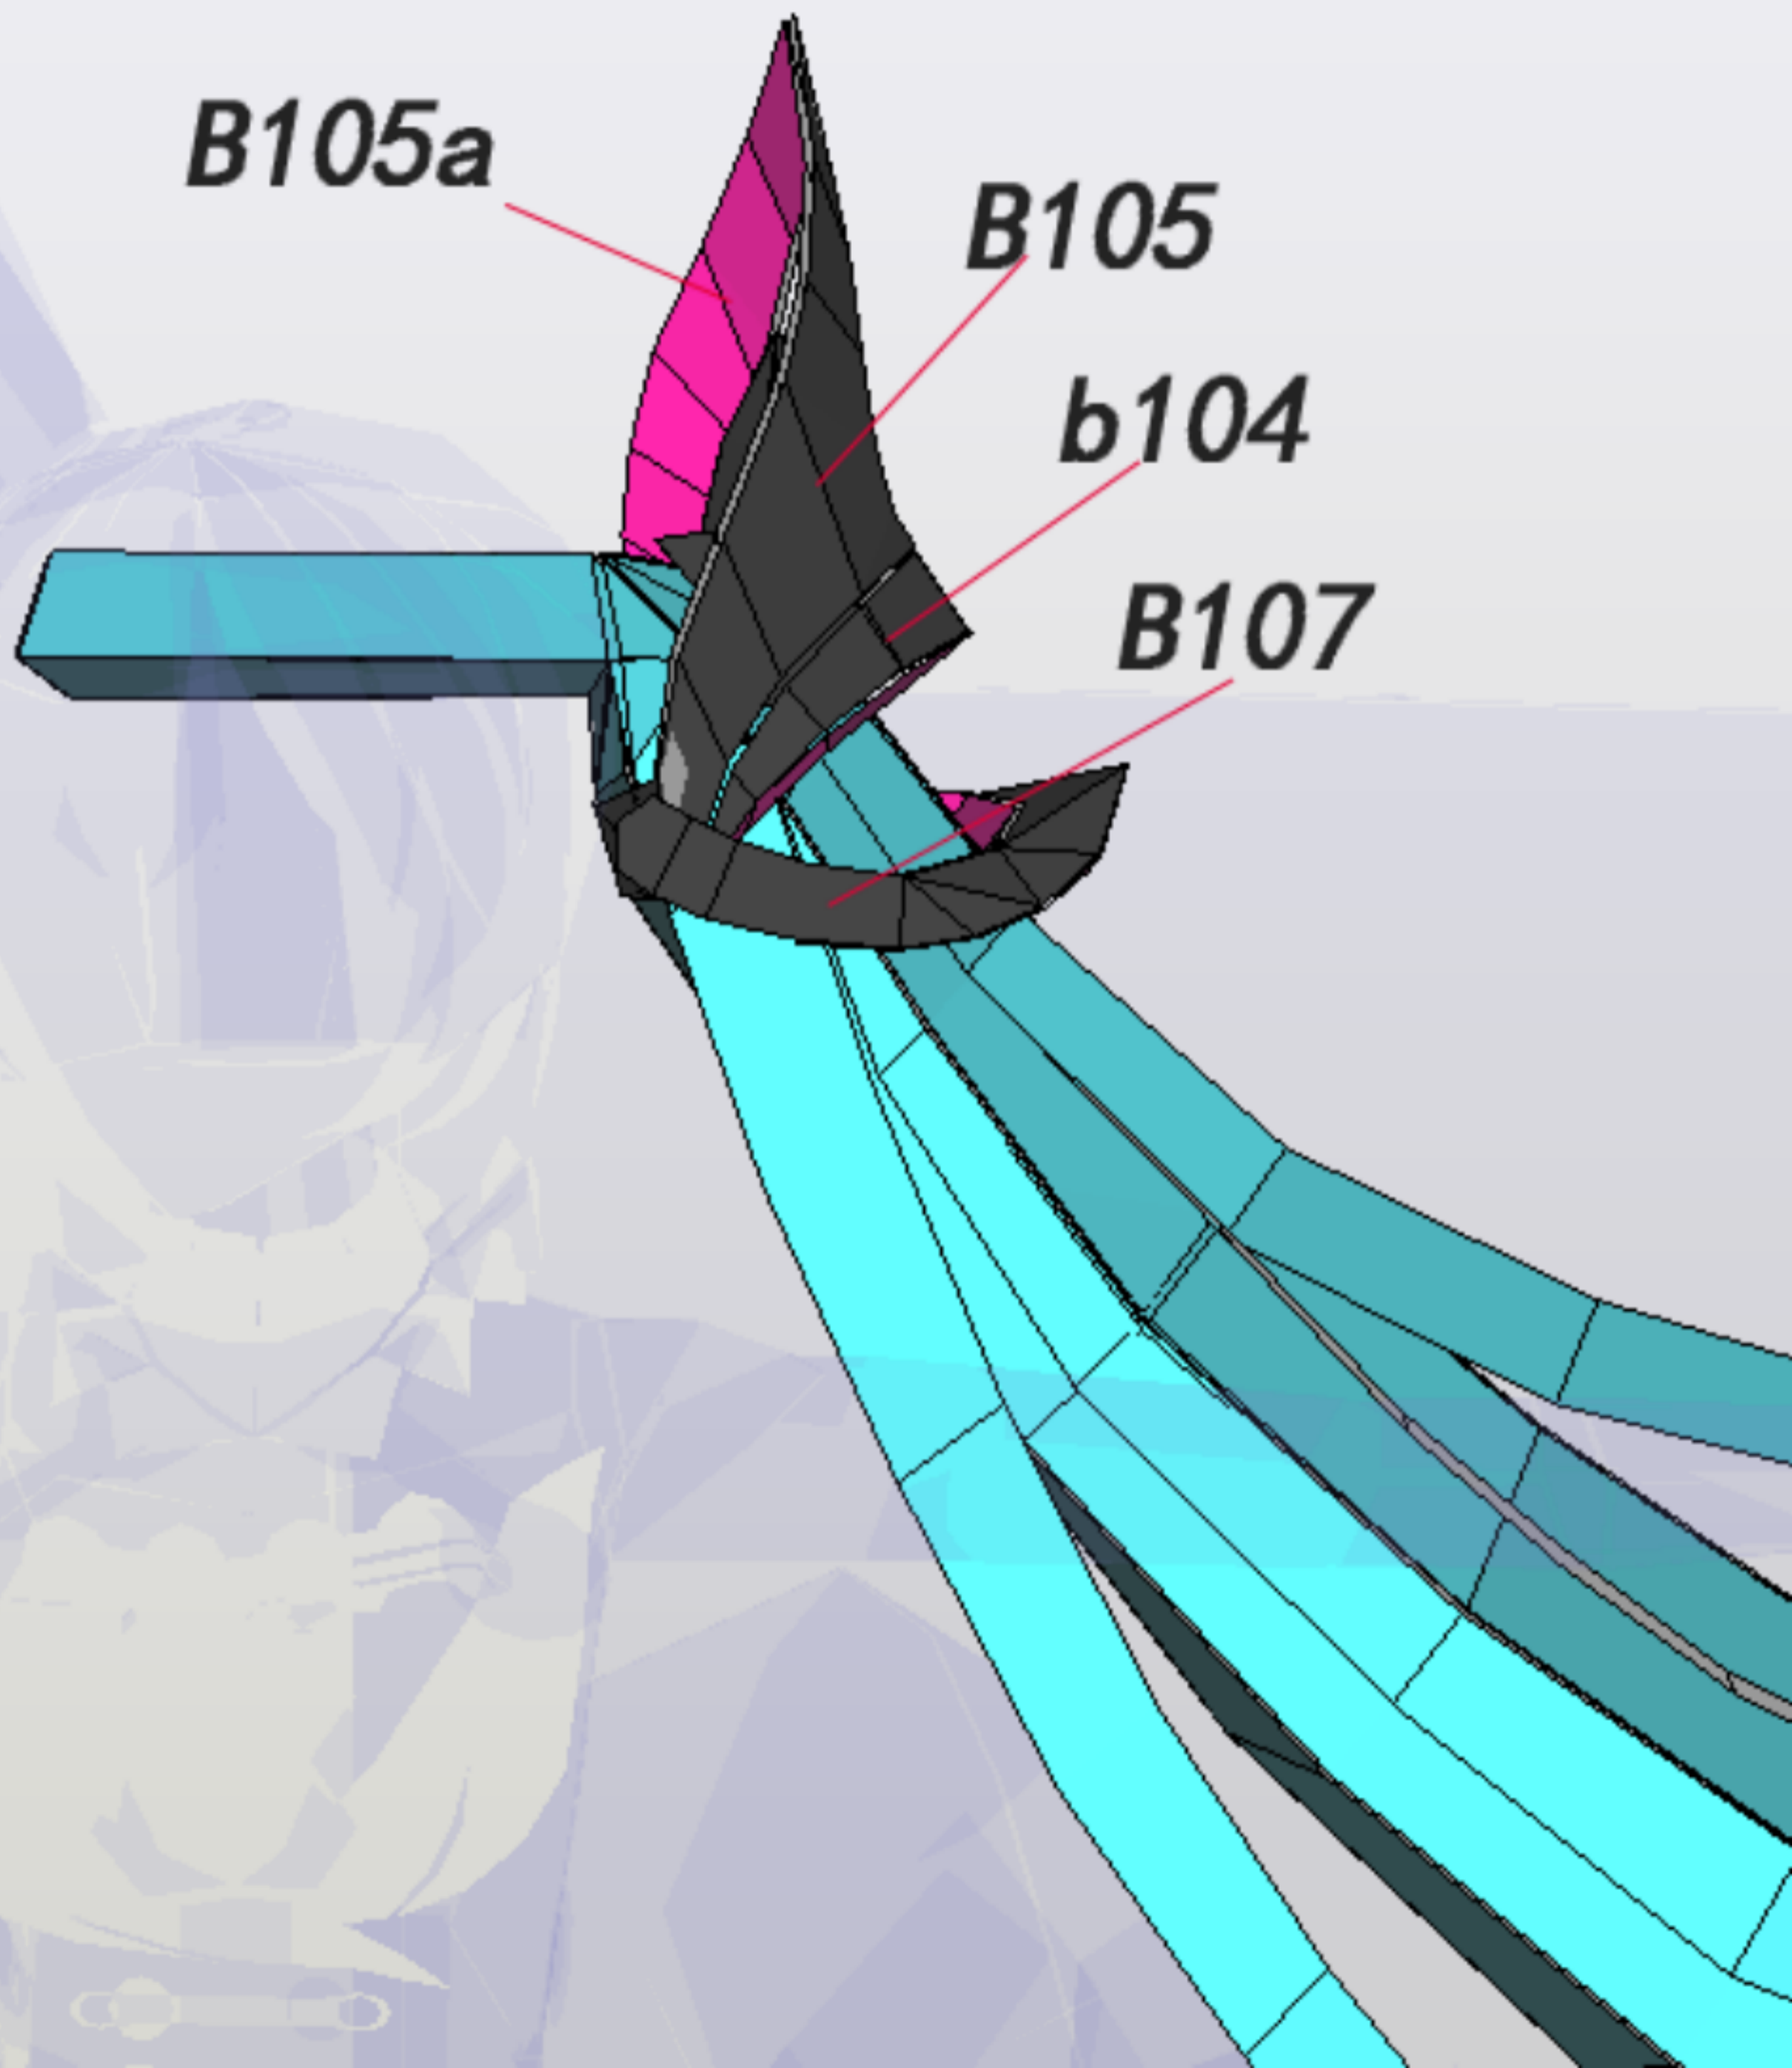





先把散热片固定在灯箱上，注意穿洞位置对齐



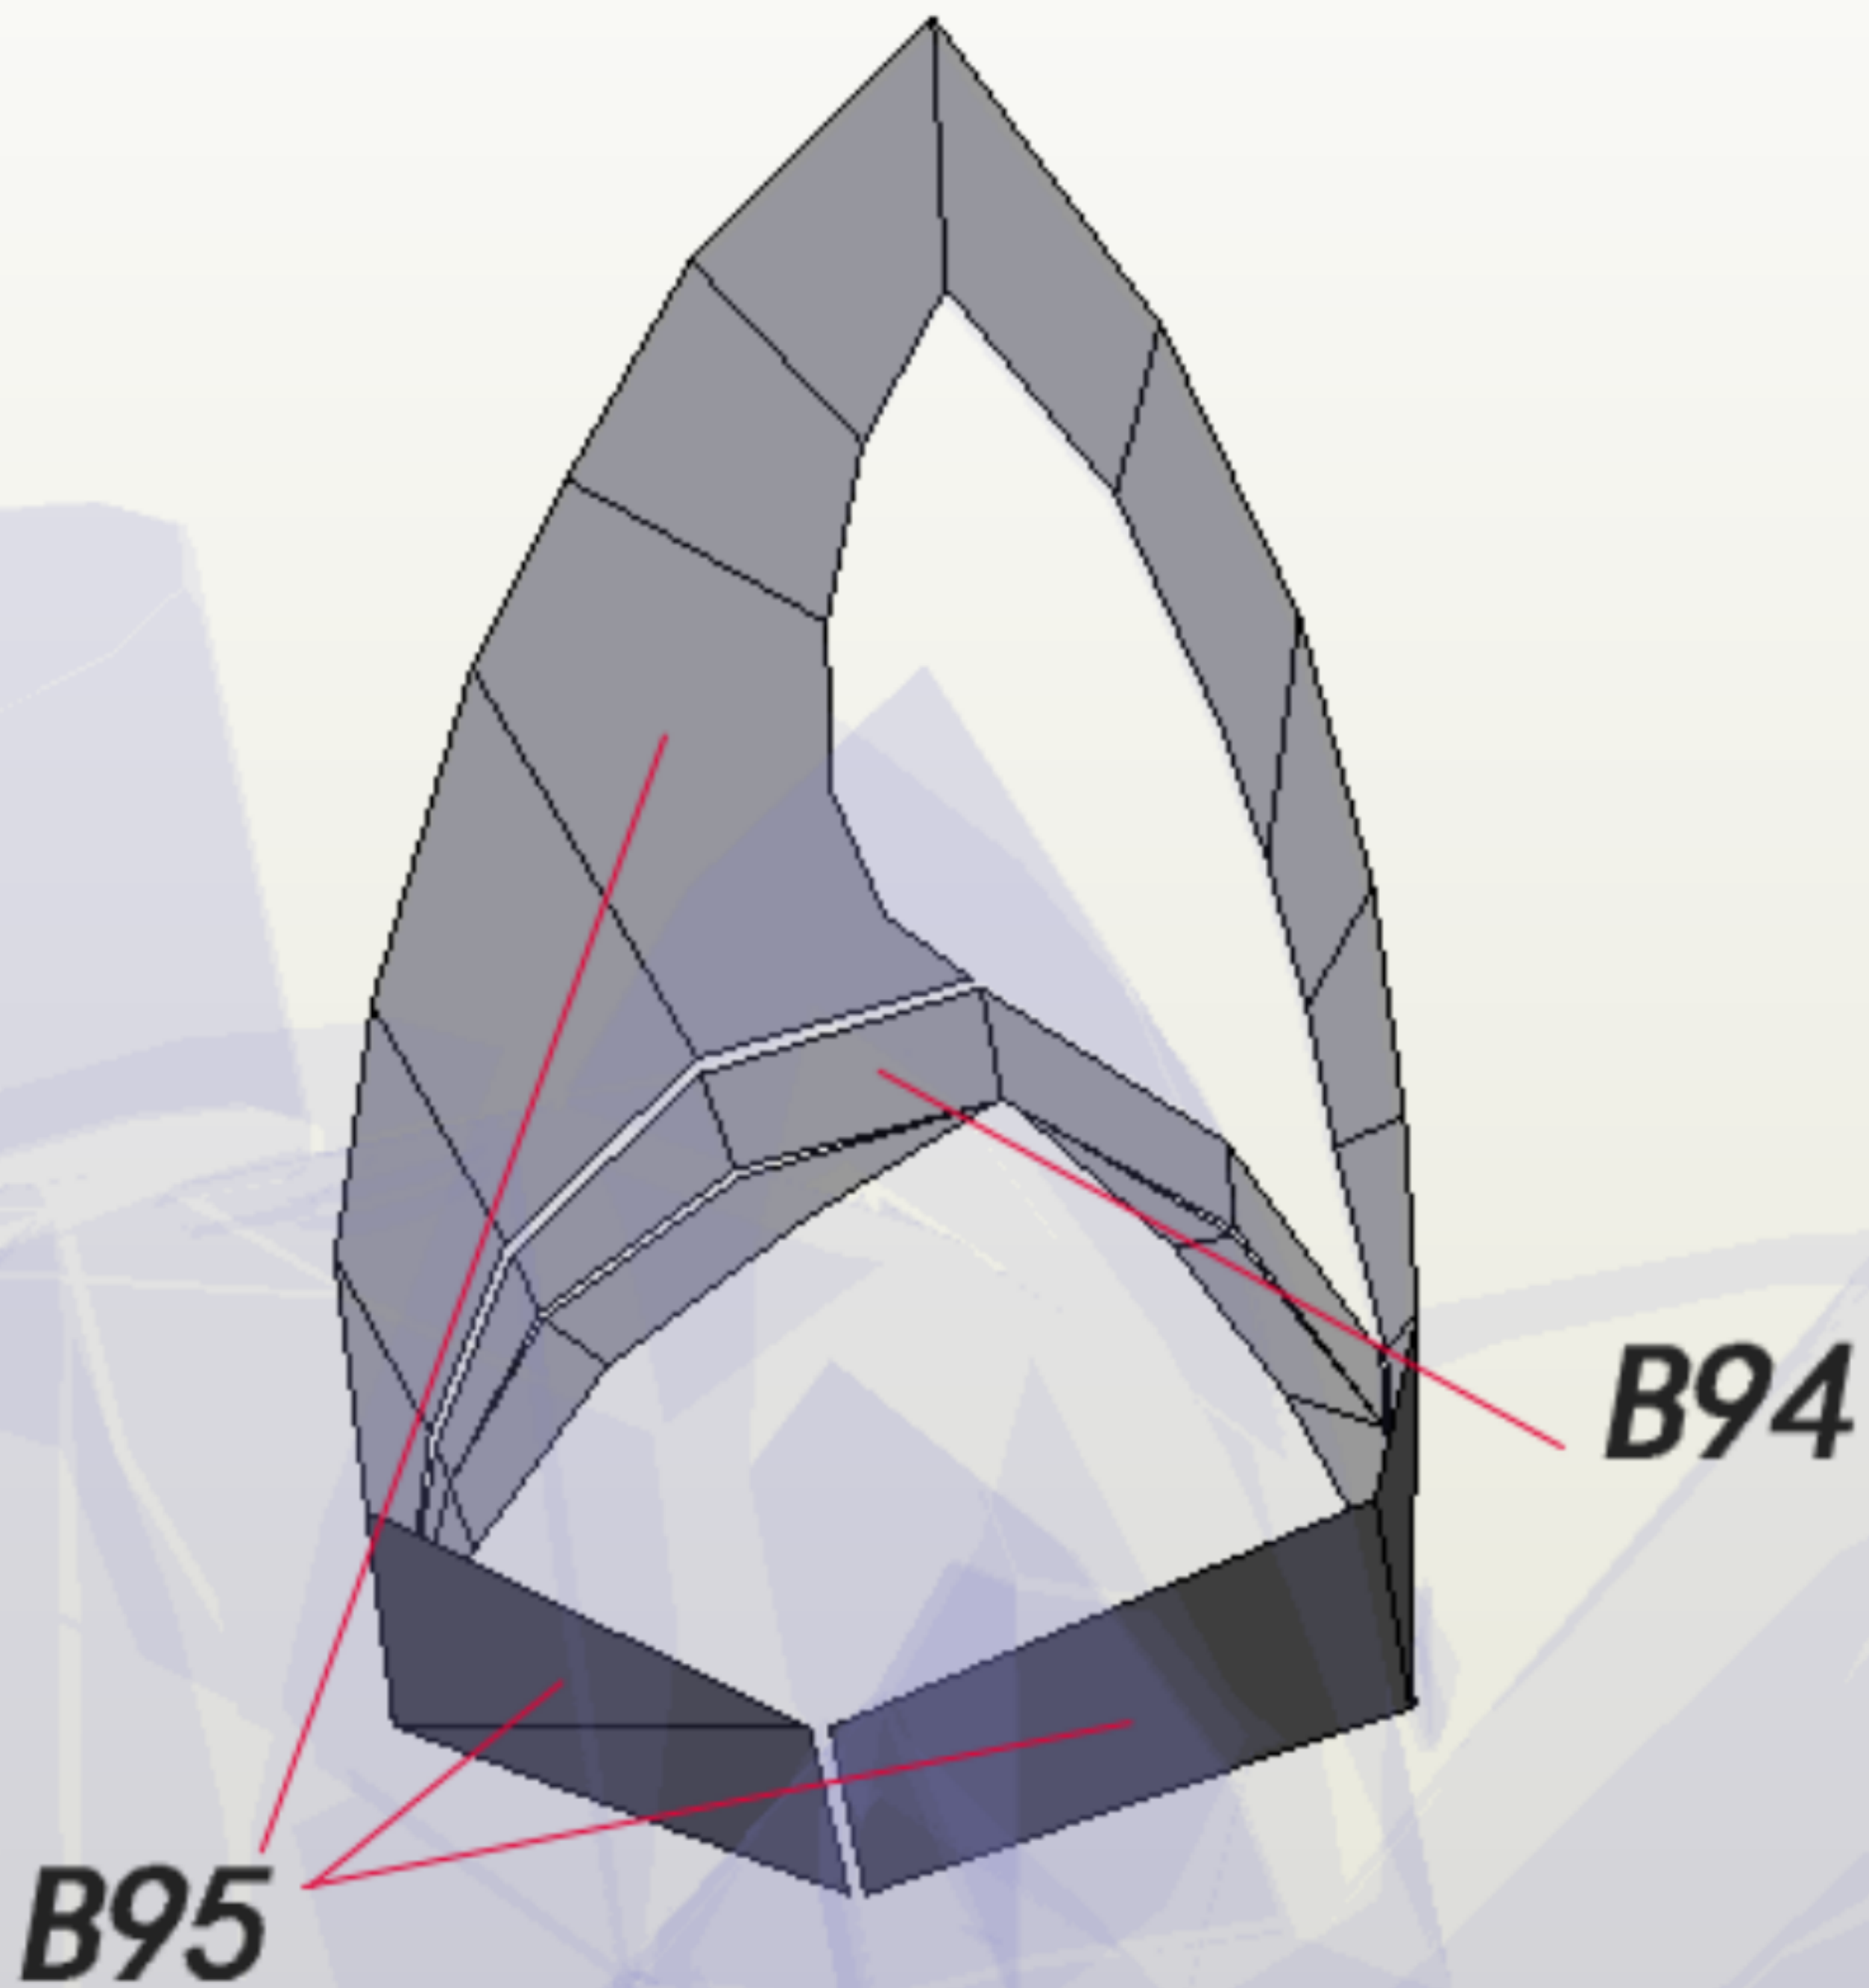

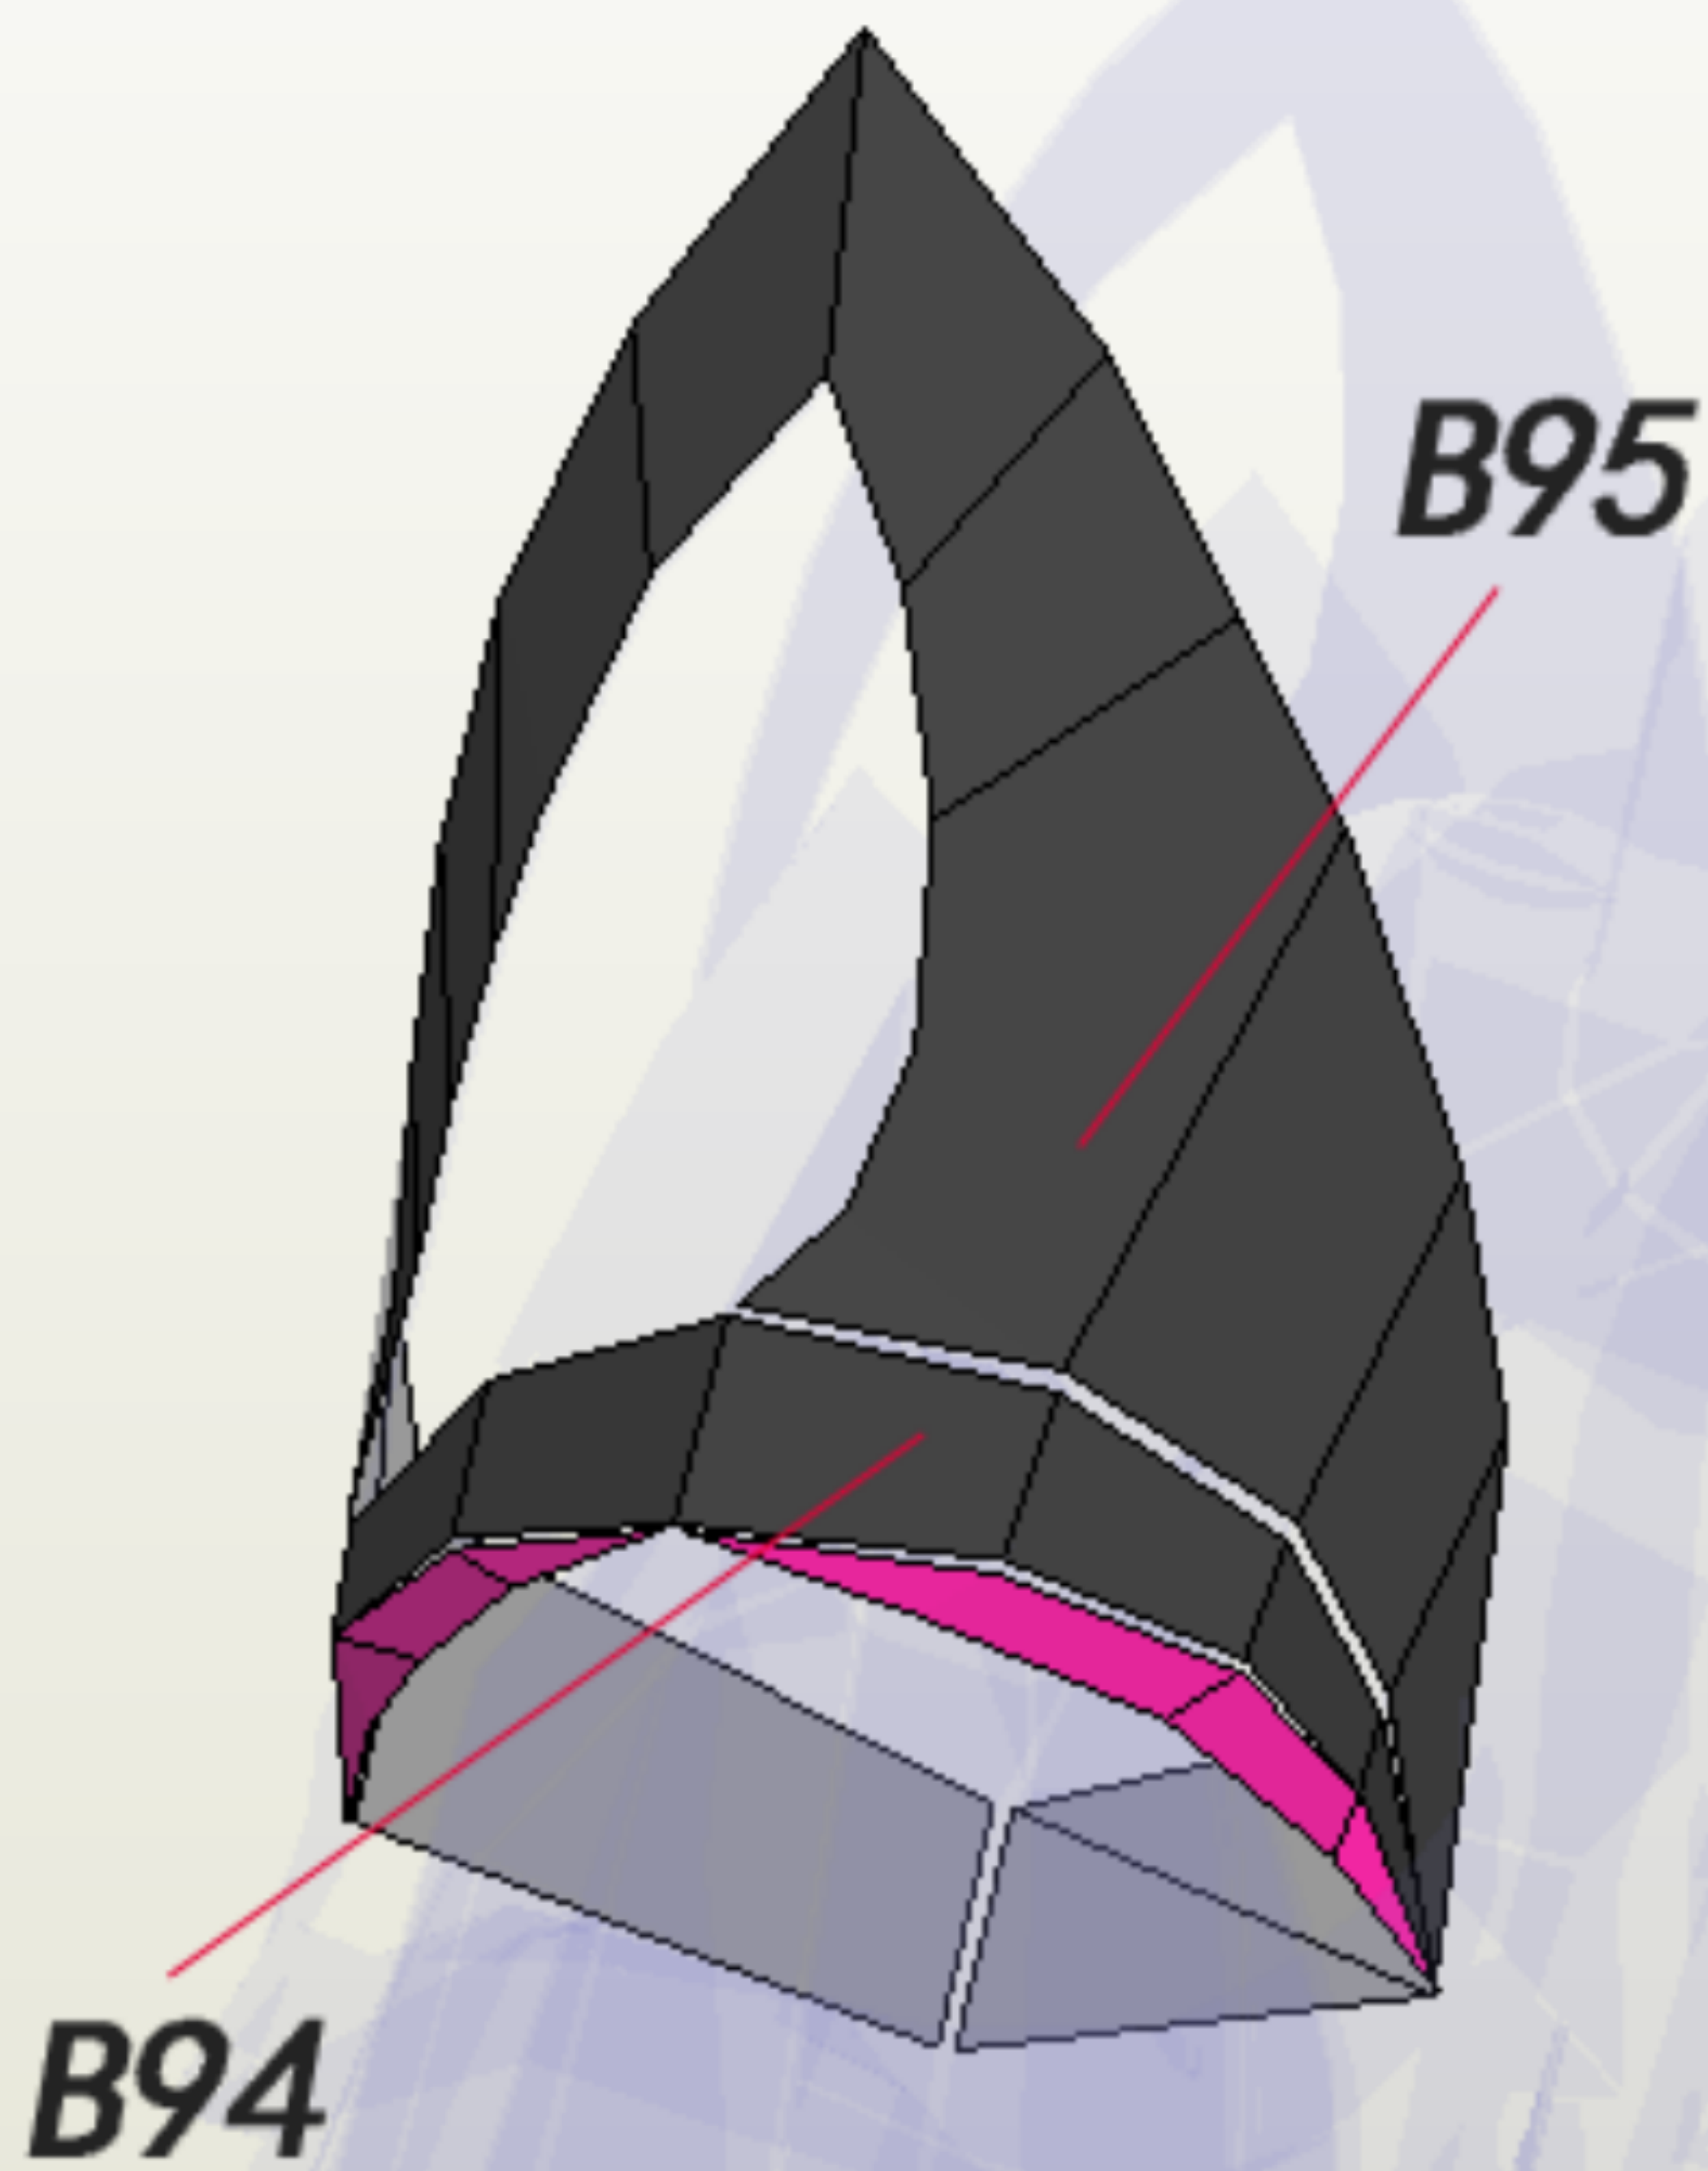

B96

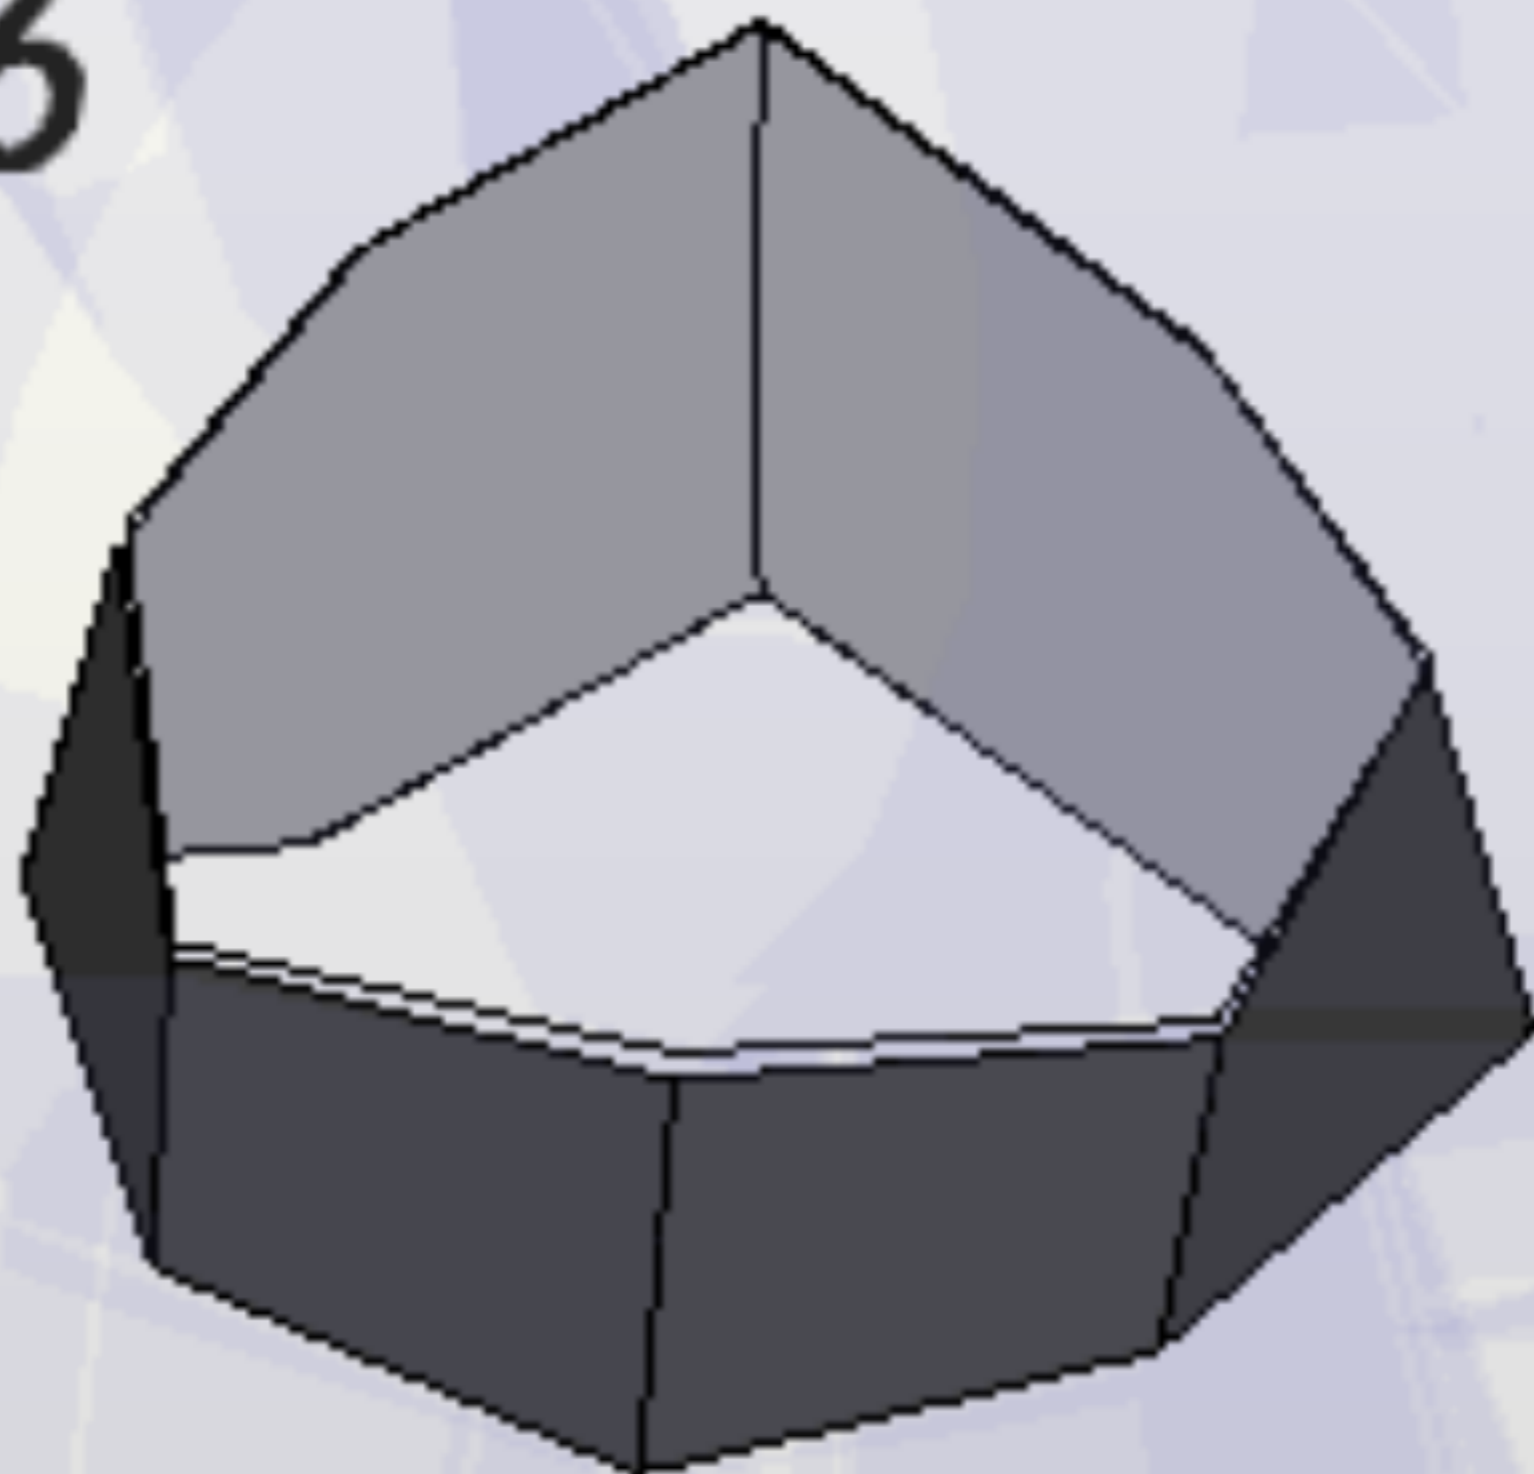

B95a

