


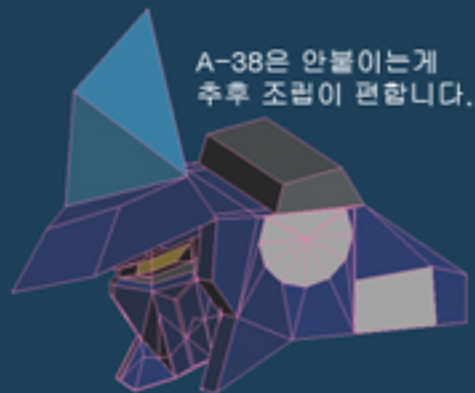
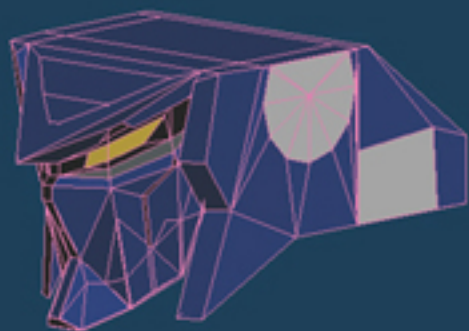


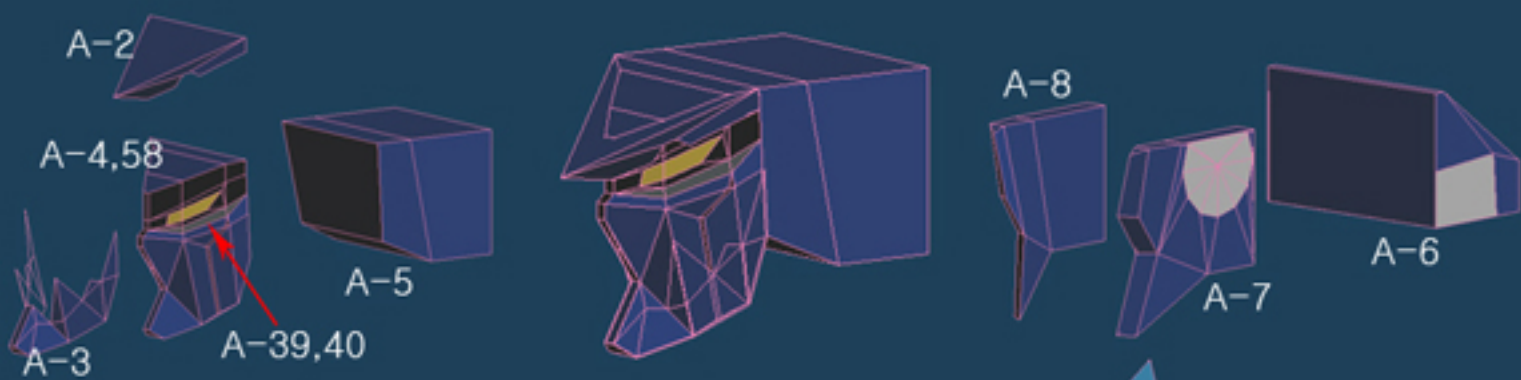

A-38은 안붙이는게
추후 조립이 편합니다.

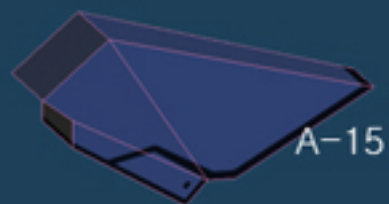


아래의 A-14부터 붙여야합니다
A-15는 아래그림의 위치를 참고하세요

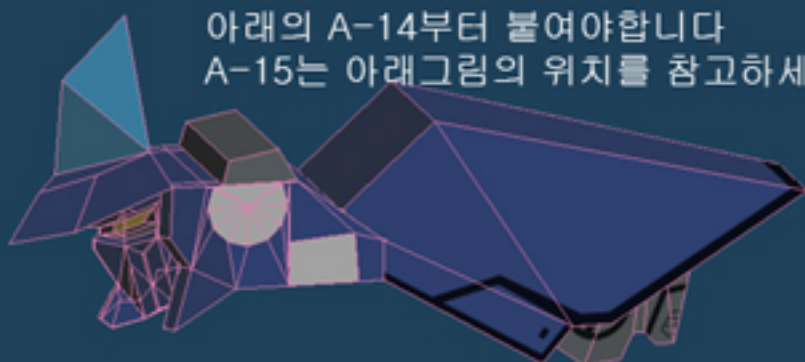




A-14

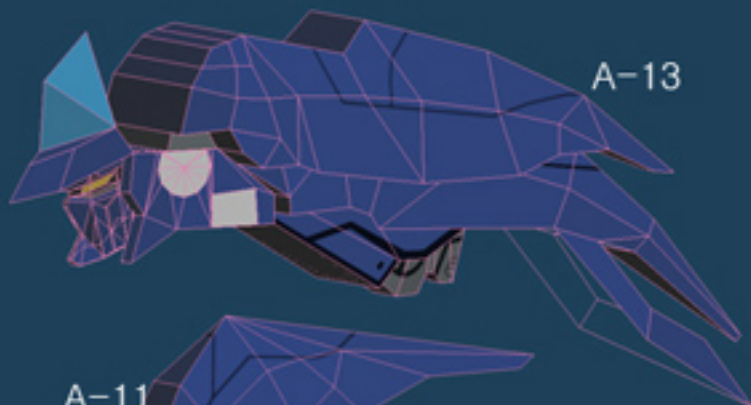

A-13




A-12

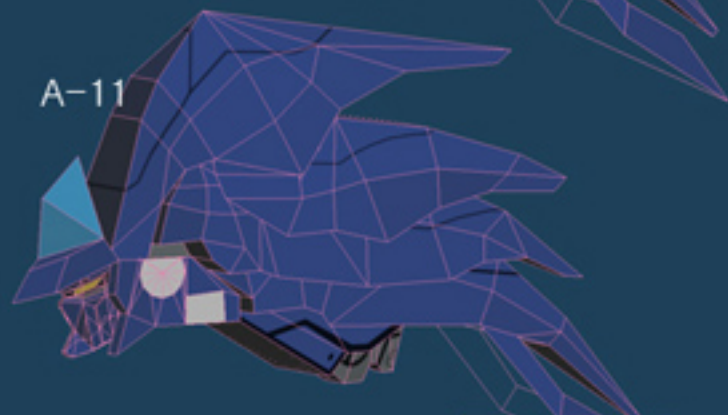

A-11



A-46



A-44

A-45

A-47




A-48

A-51

A-49

A-50

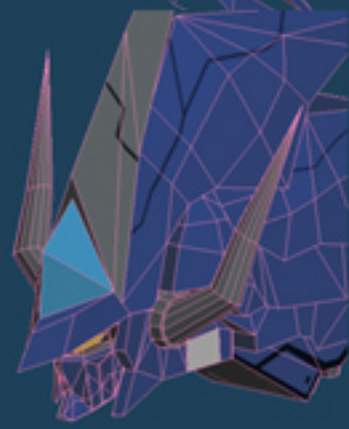

A-9

A-10

A-41

A-42

우측 그림의 빨간원
부분인 폴칠면을
기준으로 붙인다.

A-53

A-54


A-55


A-56

A-52





A-36





A-15~35
순서대로
붙이면 됩니다.
(참고로 부품에
써있는 1~21의
숫자를 순서대로
붙이면 됩니다.)

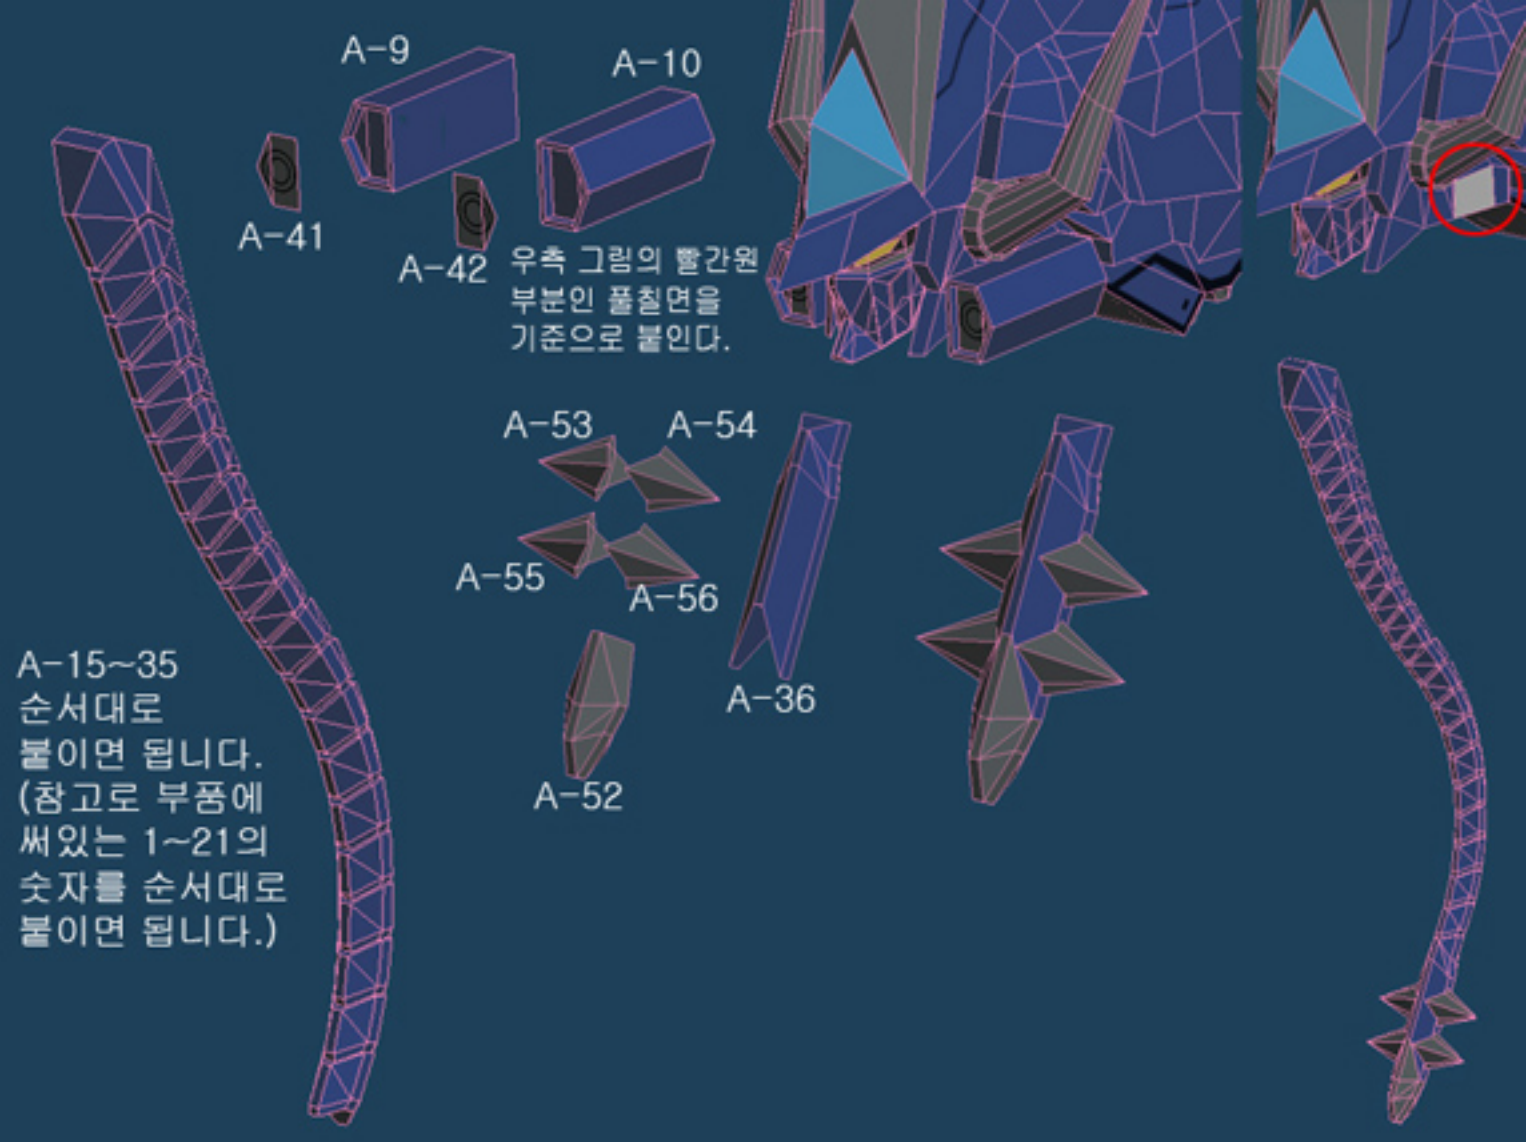




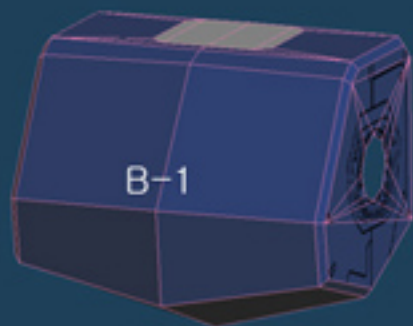


B-1안쪽은
우측 그림
참고

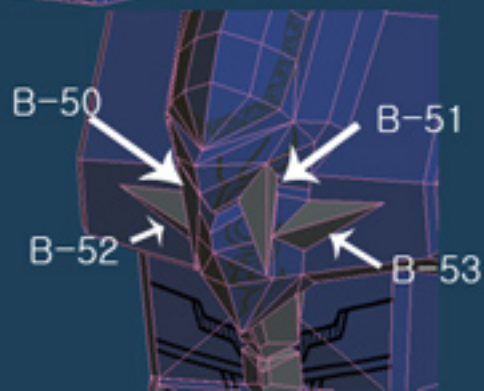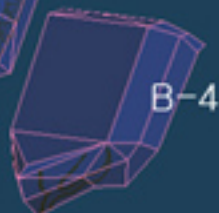

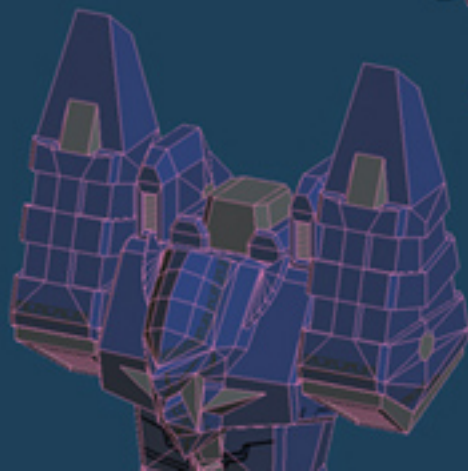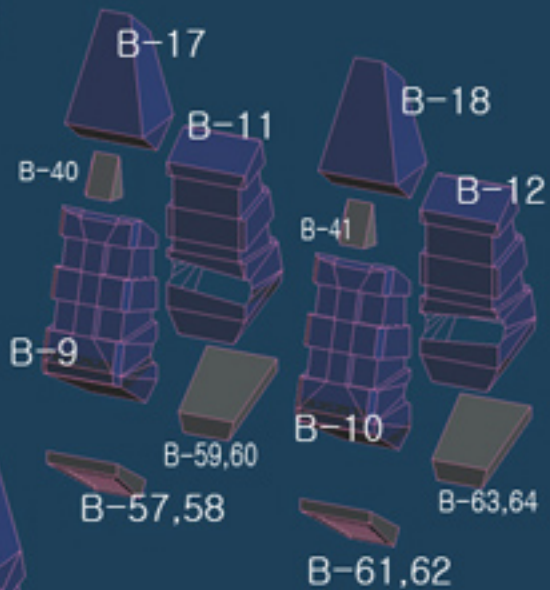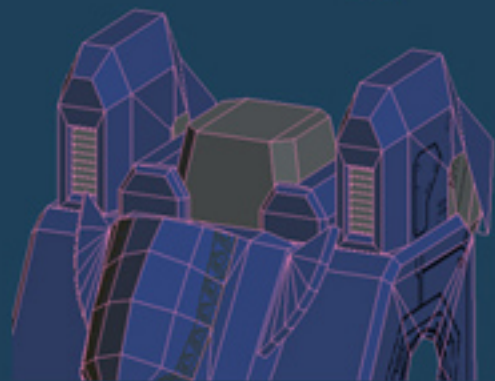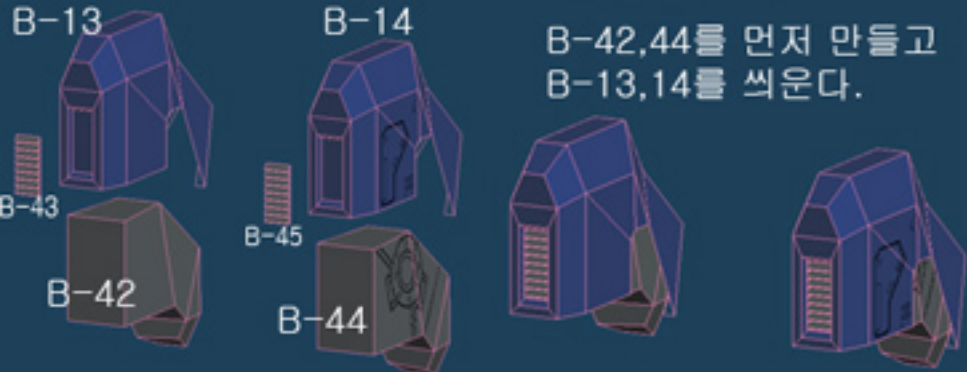

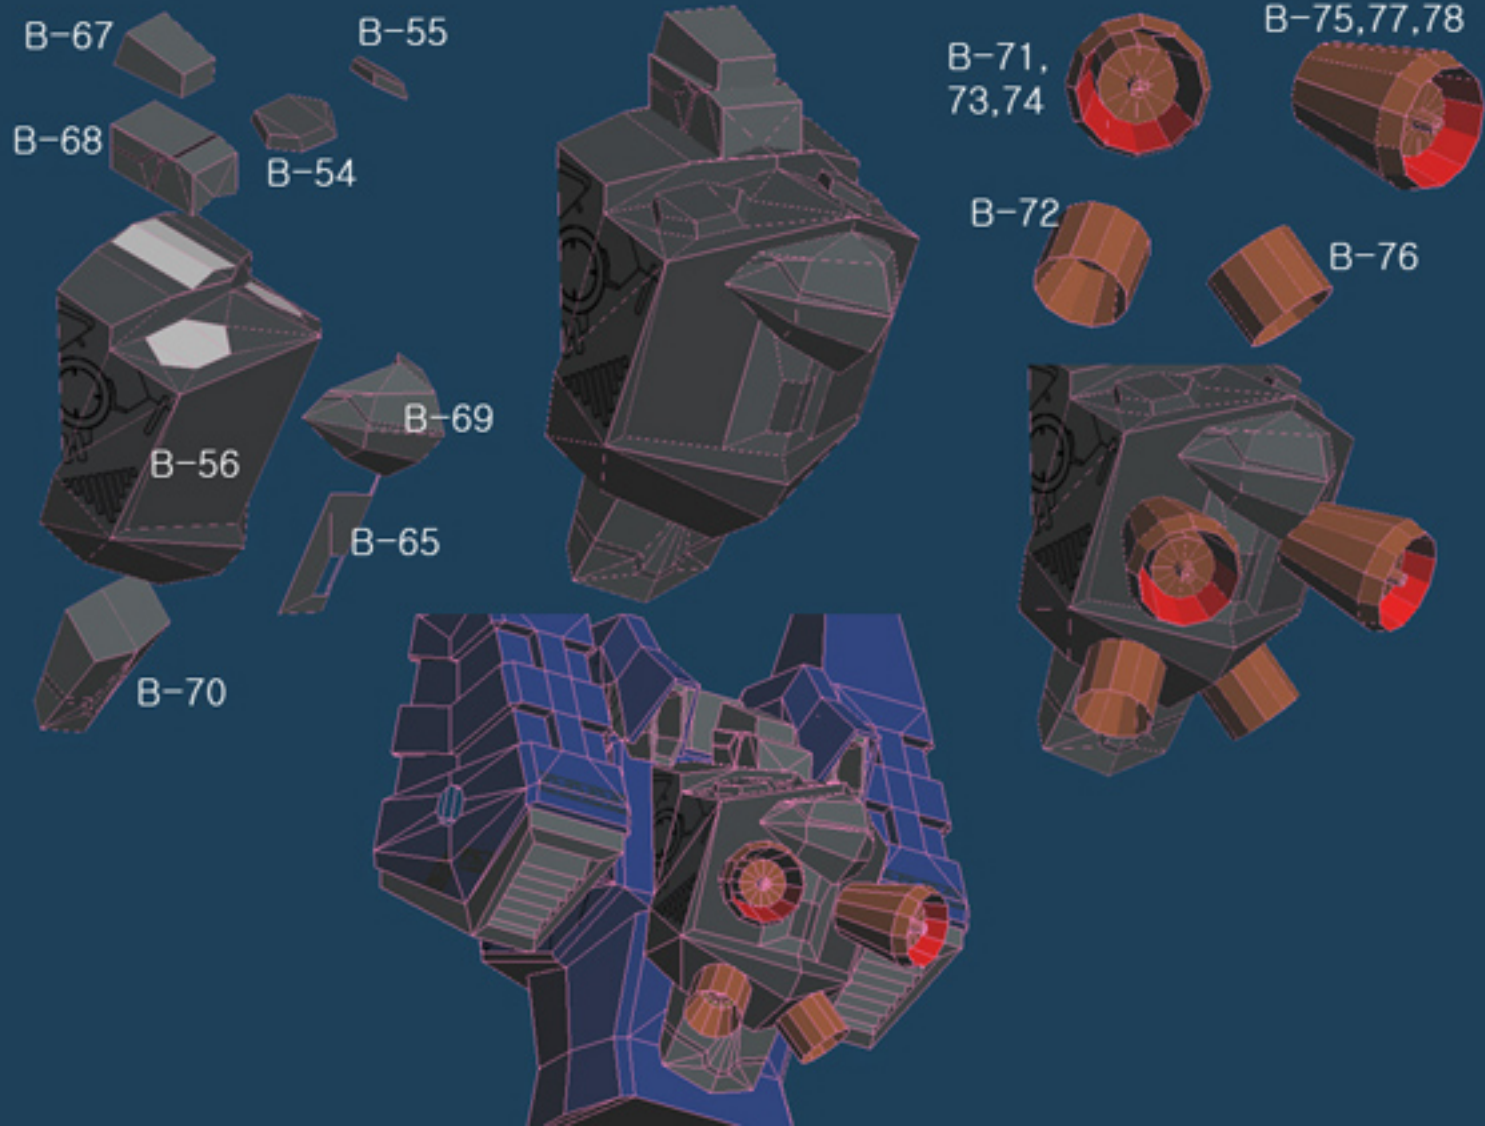

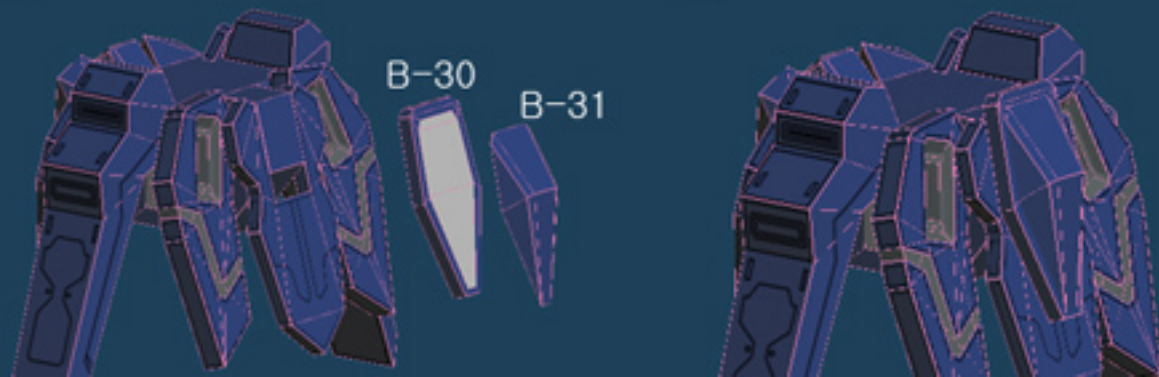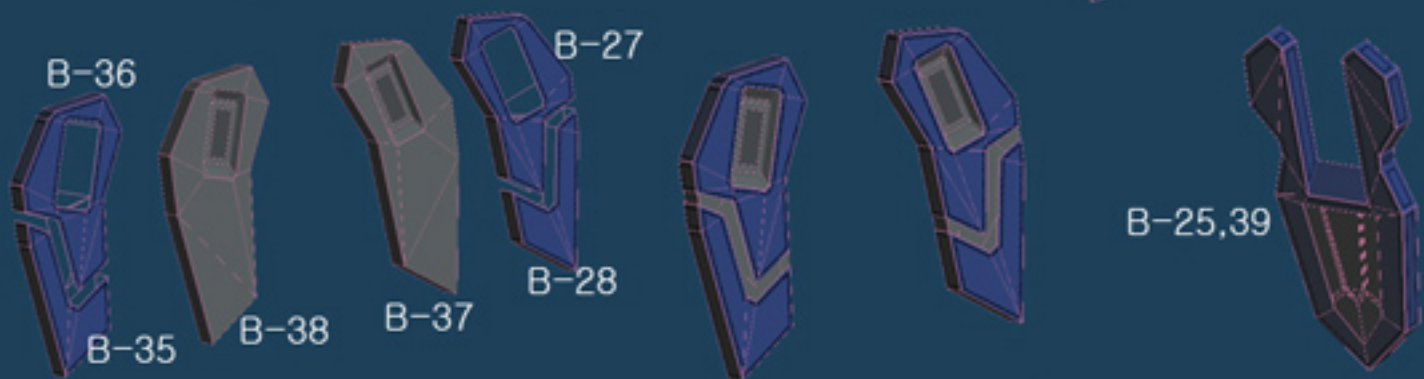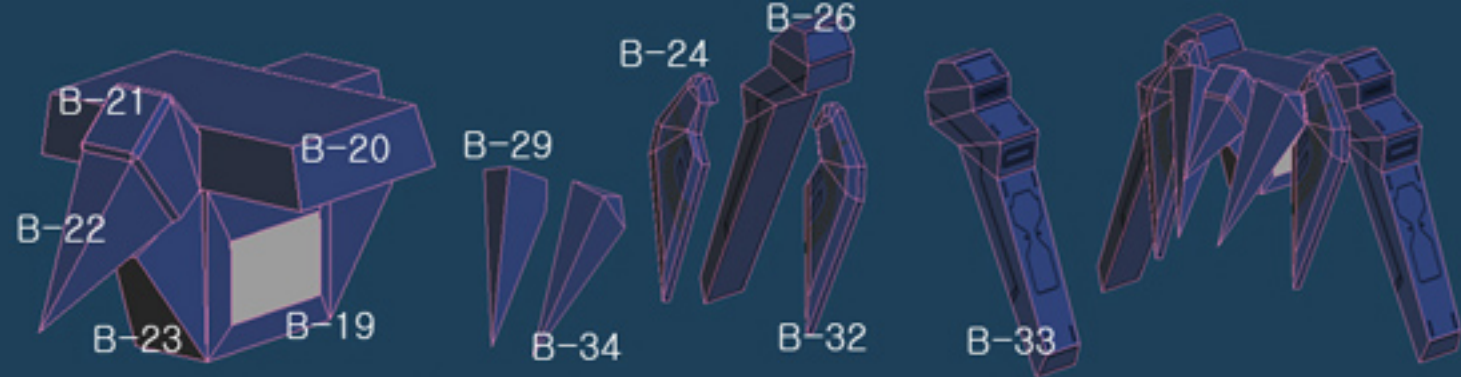

C-21



C-1



C-2



C-22



C-34
C-35




C-23



C-24



C-3

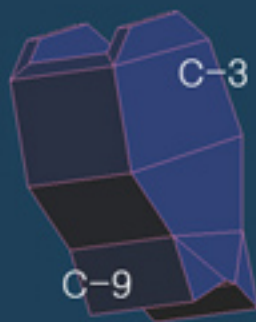


C-5



C-4



C-9

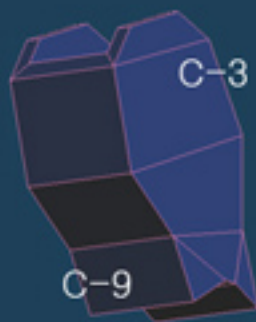


C-8



C-7



C-14

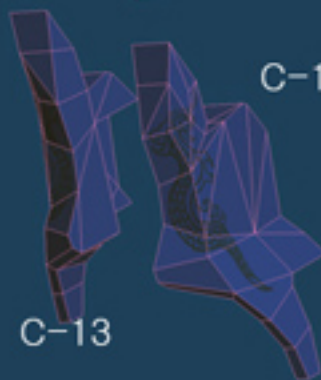


C-13







C-6




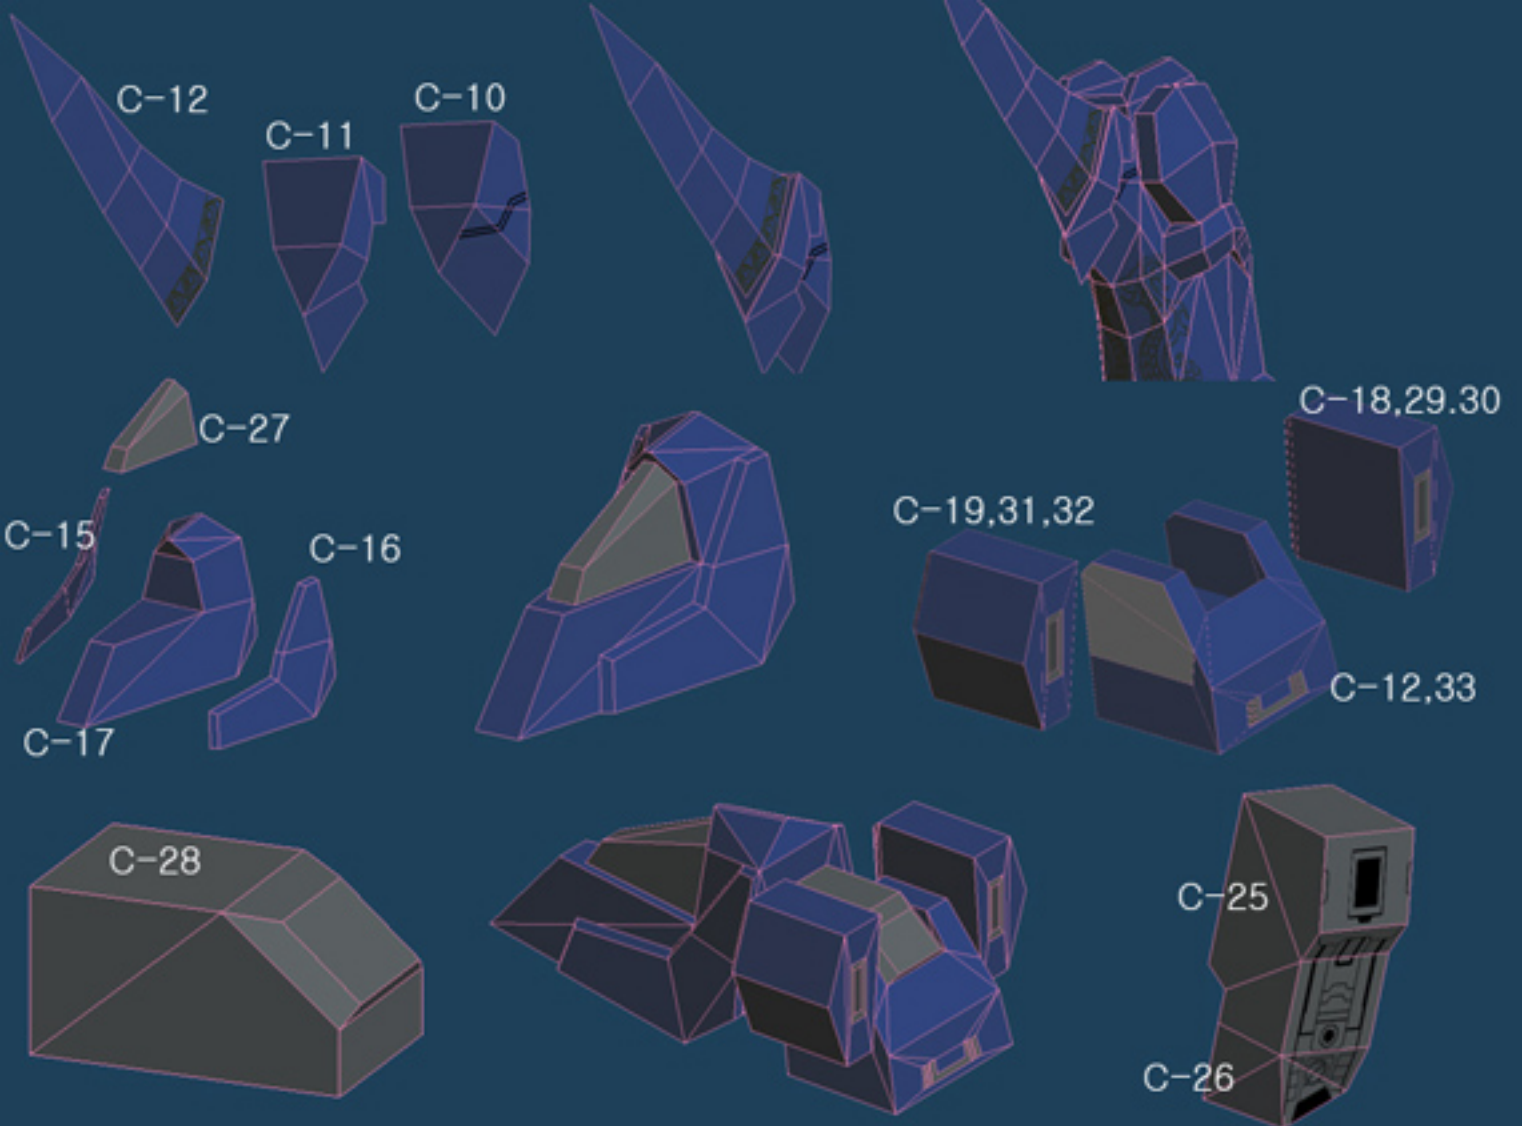

오른 다리는 C를 D로
바꿔서 제작하면 됩니다
단 대칭임을 생각하셔야
합니다.

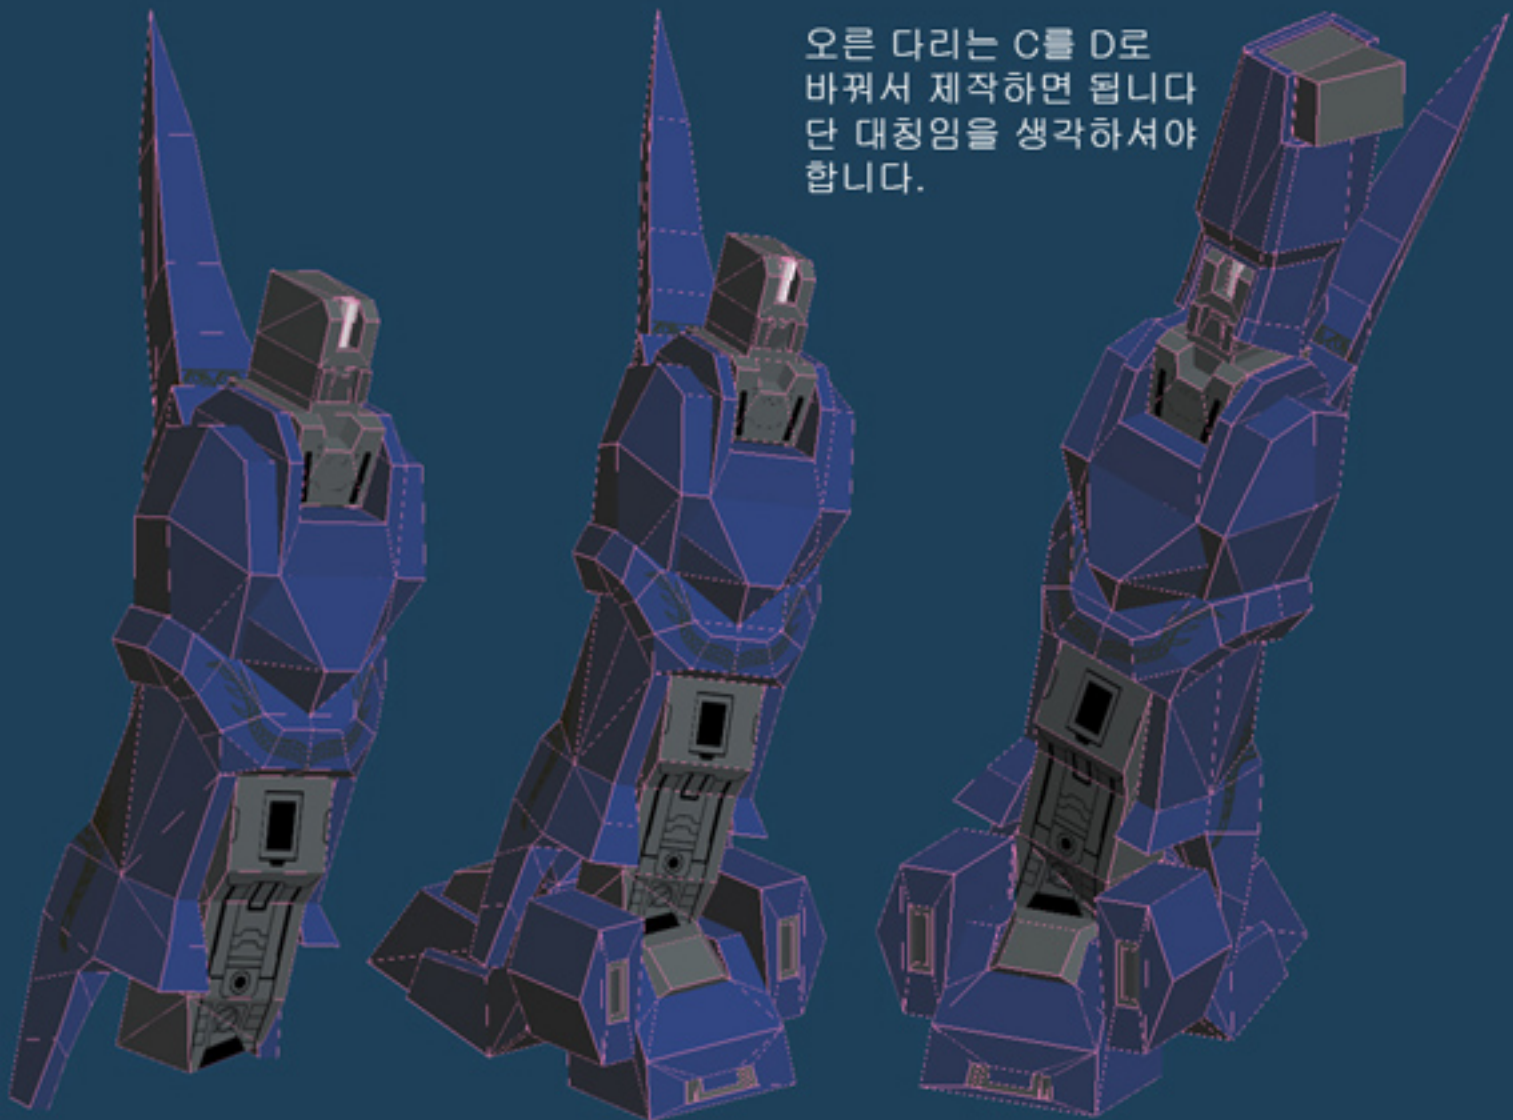

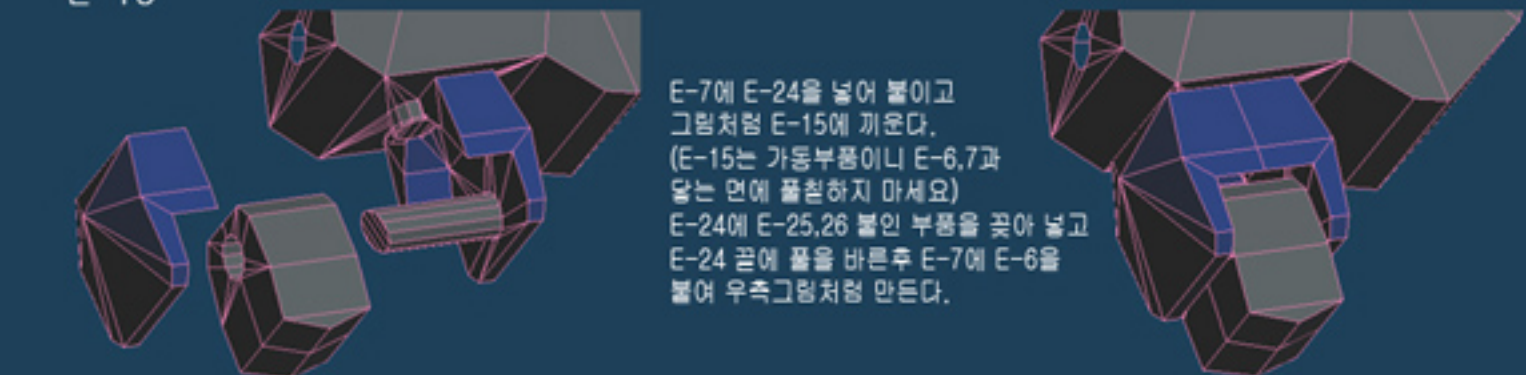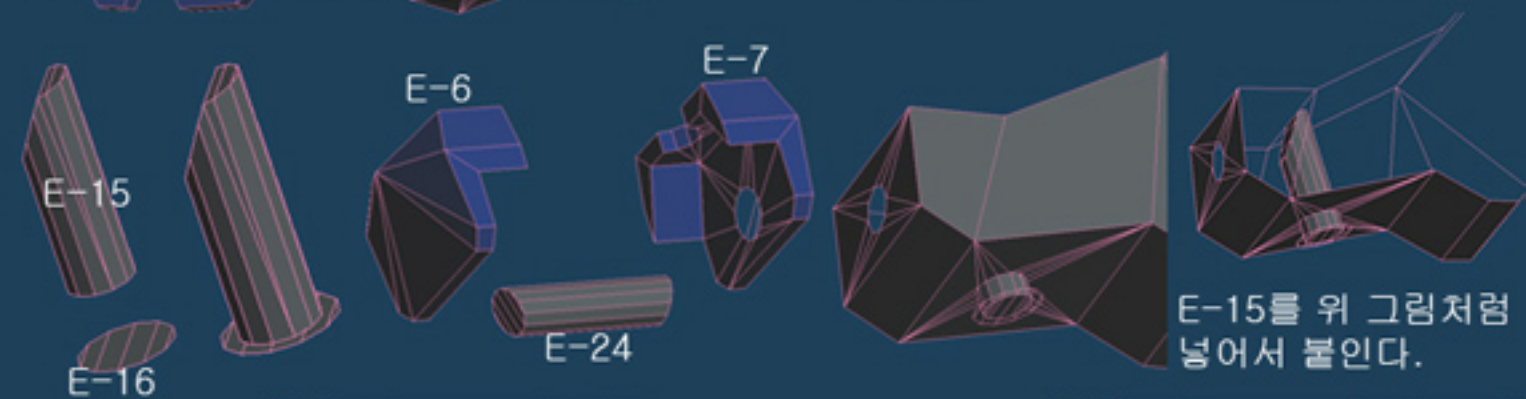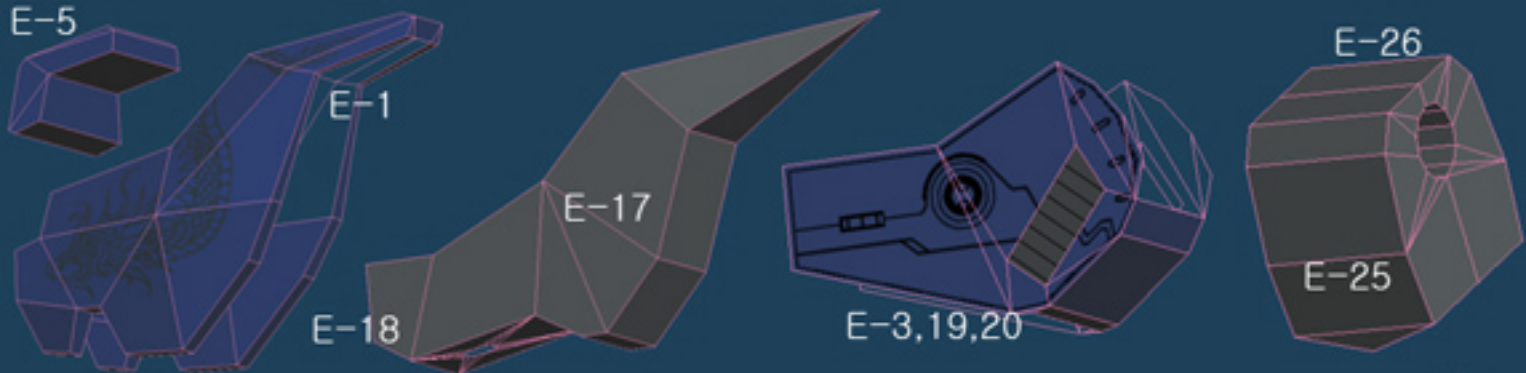

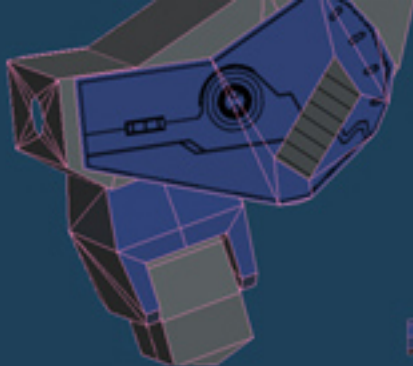

E-2는 E-18의 구멍에 넣어
아래 그림처럼 붙인다.

